

PRE-ASSEMBLY TIPS

- 1. Read this manual carefully before starting assembly. Read each step completely before beginning each step.
- 2. Some smaller parts may be shipped inside larger parts. Check inside all parts and cartons before assembling or ordering parts.
- 3. To make assembly easier, use the Parts List and Hardware Identifier on pages 3 & 4 to identify and sort all components. Check all cartons for kits. All hardware may not be located in one kit.
- 4. Do not tighten until instructed to do so. If parts are tightened too soon, parts may not easily fit together. Leave nuts slightly loose until you are instructed to tighten them.
- 6. Save these instructions and your proof of purchase (receipt) in the event that the manufacturer has to be contacted for replacement parts.

ESCALADE[®] S P O R T S

Please Do Not Return This Product To The Store!

Contact Escalade[®] Sports customer service department at: Phone: 1-800-GO-SWING or 1-800-467-1421

Escalade Sports

 
Physical Location:	Mailing Address: (Correspondence Only)
817 Maxwell Ave.	PO Box 889
Evansville, IN 47711	Evansville, IN 47706

Please visit our Website at: www.escaladesports.com


ON-LINE TROUBLE SHOOTING TECHNICAL ASSISTANCE ON-LINE PARTS REQUESTS FREQUENTLY ASKED QUESTIONS ADDITIONAL ESCALADE® SPORTS PRODUCT INFORMATION




PARTS LIST (NOT ACTUAL SIZE)




2x8 Leg PG-28-0011 QTY.4

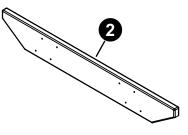


2x8 Bottom Support PG-28-0012 QTY.2

 



2x4 Rec Table Cross Support PG-24-0121 QTY.2

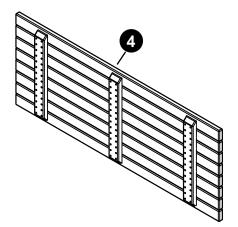

 Rec Picnic Table Top JJ-PIC-REC-TOP-CD QTY.1

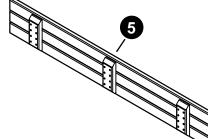



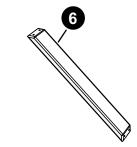


Seat Assembly JJ-PIC-REC-SEAT-CD QTY.2

2X4 Diagonal Support PG-2x4-0122 QTY.2

HARDWARE IDENTIFIER (ACTUAL SIZE)

 Allen Bolt M6X60mm QTY. **24**



M6X15mm NUT QTY. **24**



M4 X 60MM Phillips Flat Head Screw

QTY. **28**



M4 X 50MM Phillips Flat Head Screw

QTY. 8

TOOLS NEEDED

ALLEN KEY (Included) QTY. 2

PHILLIPS SCREW DRIVER (NOT INCLUDED)


NOTICE

AN ELECTRIC SCREWDRIVER IS HELPFUL IN ASSEMBLY. HOWEVER, PLEASE SET IT AT LOW TORQUE AND USE EXTREME CAUTION WITH AN ELECTRIC SCREWDRIVER BECAUSE YOU COULD OVER-TIGHTEN THE HARDWARE & STRIP THE SCREWS OUT OF THE WOOD COMPONENTS.

Attach Bottom Support (#2) to Legs (#1) with Allen Bolts (H1) and Allen Nuts (H2).

NOTICE

TIGHTEN UNTIL THE LEG ASSEMBLY FRAME IS STABLE BUT **DO NOT** TIGHTEN COMPLETELY YET.

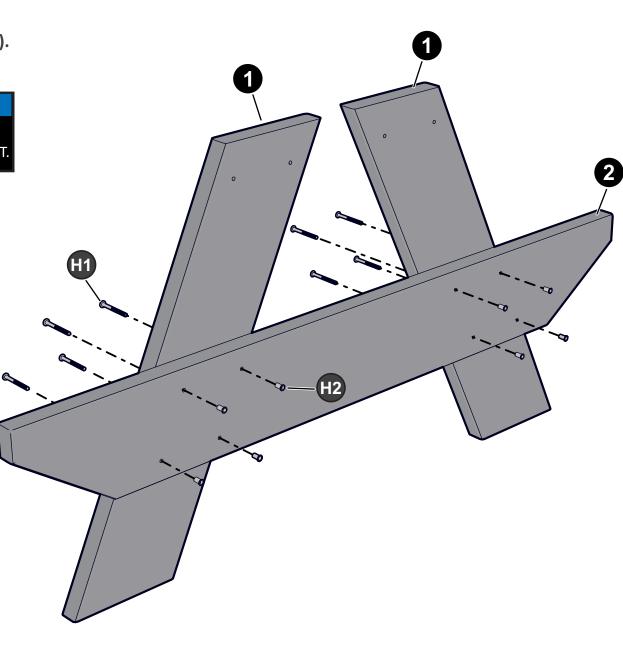


Attach Cross Support (#3) to Legs (#1) with Allen Bolts (H1) and Allen Nuts (H2).

NOTICE

TIGHTEN UNTIL THE LEG ASSEMBLY FRAME IS STABLE BUT **DO NOT** TIGHTEN COMPLETELY YET.

STEP 3

Repeat **Step 1&2** to make a second Leg Assembly.

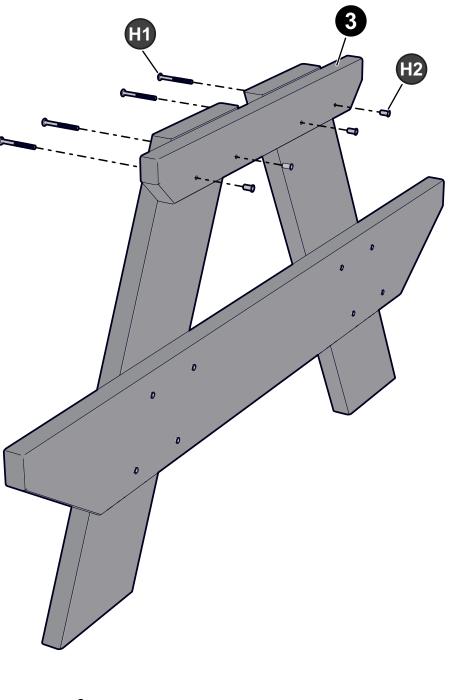


With the help of at least another adult stand up the leg assemblies and place the Table Top **(#4)** and Seats **(#5)** as shown.


NOTICE

BEFORE ATTACHING H3 SCREWS, MAKE SURE TO BUTT UP THE SEAT SUPPORTS AND TABLE TOP SUPPORTS AGAINST THE INSIDE OF THE CROSS/BOTTOM SUPPORTS ON THE LEG ASSEMBLY FRAME. SEE DETAIL A.

STEP 5

On both ends of the table line up Table Top (#4) and Seats (#5) and drive one screw into the center hole of the **seats** and on the end holes of the **Table Top** so the frame stable. See **Detail A**.

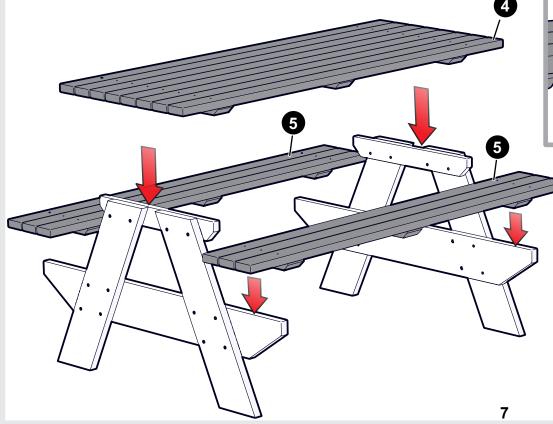

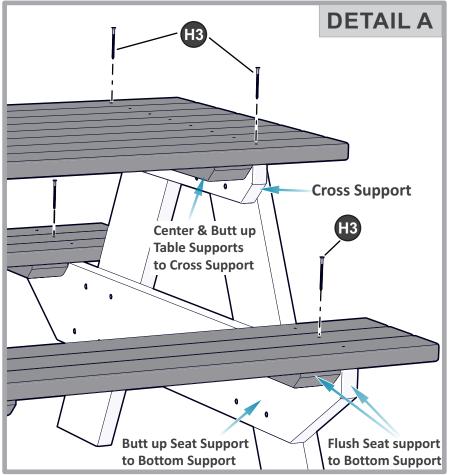

NOTICE


AN ELECTRIC SCREWDRIVER IS HELPFUL IN ASSEMBLY. HOWEVER, PLEASE SET IT AT LOW TORQUE AND USE EXTREME CAUTION WITH AN ELECTRIC SCREWDRIVER BECAUSE YOU COULD OVER-TIGHTEN THE HARDWARE & STRIP THE SCREWS OUT OF THE WOOD COMPONENTS.

Continue to drive Screws (H3) until the Table Top (#4) Seats (#5) are secure.

NOTICE

AN ELECTRIC SCREWDRIVER IS HELPFUL IN ASSEMBLY. HOWEVER, PLEASE SET IT AT LOW TORQUE AND USE EXTREME CAUTION WITH AN ELECTRIC SCREWDRIVER BECAUSE YOU COULD OVER-TIGHTEN THE HARDWARE & STRIP THE SCREWS OUT OF THE WOOD COMPONENTS. H3

Tighten **all** the Allen hardware with the Allen Wrenches provided until parts are secure.

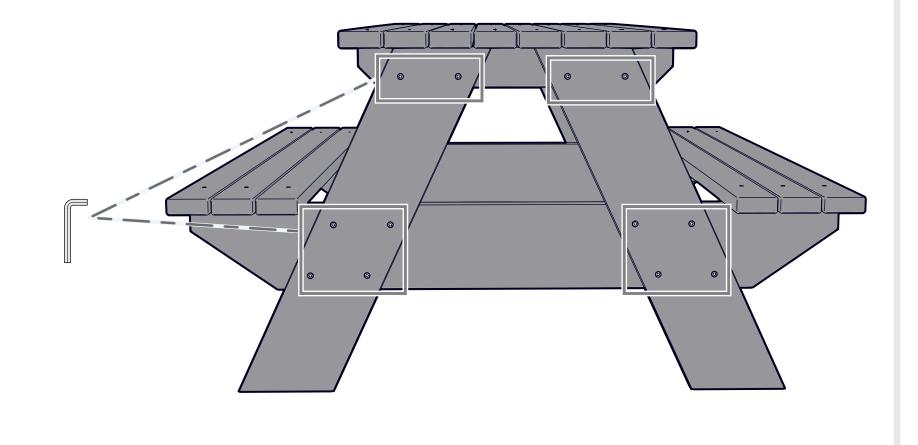

With the help of another adult, flip the assembly over carefully and place it on a flat and clean surface. Use the cardboard box to protect the tabletop.


STEP 9

Carefully attach the Diagonal Support **(#6)** to the bottom of the Tabletop **(#4)**. Place one screw on either side of the gap on the slats, as shown in **Detail A** & **Detail B**.

STEP 10

Carefully attach the other end of the Diagonal Support **(#6)** to the **center** (approximately) of the Bottom Support **(#2)** with **(H4)** Screws. See **Detail A**.

Repeat Steps 9 & 10 to attach another Diagonal Support **(#6)** to the other end of the table.

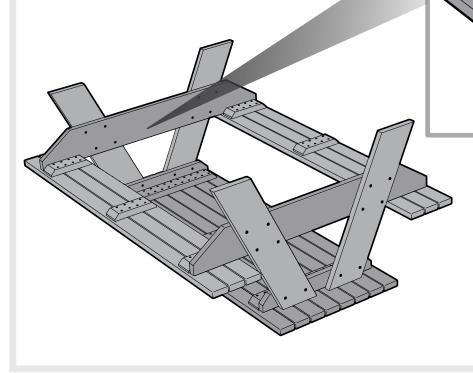

DETAIL A

NOTICE

AN ELECTRIC SCREWDRIVER IS HELPFUL IN ASSEMBLY. HOWEVER, PLEASE SET IT AT LOW TORQUE AND USE EXTREME CAUTION WITH AN ELECTRIC SCREWDRIVER BECAUSE YOU COULD OVER-TIGHTEN THE HARDWARE & STRIP THE SCREWS OUT OF THE WOOD COMPONENTS.

6 DETAIL B 6 H4 6 JAA 10 JA


H4

6

4

10

With the help of another adult, carefully flip the assembly right side up in the desired location. Congratulations, the assembly is complete.

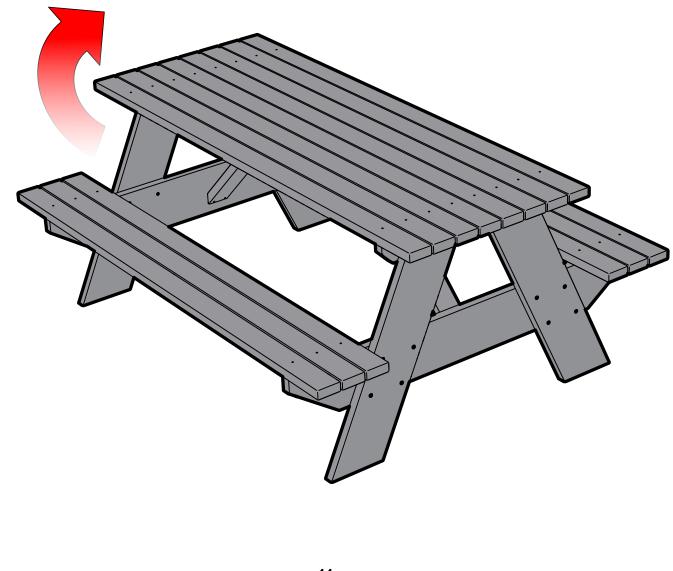

JACK & JUNE WARRANTY

1 Year Warranty

Subject to proper installation and normal residential use, Jack & June warrants, subject to the limitations stated below, to the original retail purchaser, parts to be free from defects in material and workmanship for a period of **one year** from date of purchase. Merchandise covered under this limited **one-year** warranty will, at our option, be repaired or replaced, <u>excluding</u> any freight or labor fees.

For **one Year** after the original purchase date of our **products**, Jack & June warrants, to the original retail purchaser, all wooden components against structural failuredue to corrosion, wood rot, or insect infestation. Seasonal checks, surf ace cracks, knotholes and knots, not resulting in structural failure, are natural characteristics of all wooden play equipment, are not covered under this warranty and will not affect the integrity of your playset.

Jack & June warrants to the original retail customer that we will replace any hardware that fail due to rust or breakage (excludes surface rust).

Timber is a natural material which can absorb and release moisture. Although this product is designed to minimize this effect, in certain circumstances some movement or distortion is unavoidable. During dry hot weather timber may shrink and check - this is a normal process of weathering. After the first year of service it is advisable to clean and apply a non-toxic stain or sealant to the wood, safe for children's use.

Components covered under this 1 year warranty will be replaced free of charge excluding freight and labor fees.

Non-residential use of the playset is prohibited and voids the warranty as the playsets are designed for residential use only.

Escalade Sports reserves the right to examine photographs and/or physical evidence of merchandise claimed to be defective, and to recover said merchandise, prior to disposition of warranty claims. Merchandise returned to our factory for examination or recovery must be shipped freight prepaid, unless a Return Authorization Number is issued.

This warranty program does not cover normal wear and tear, color fading, or damages resulting from misuse, abuse, vandalism, alteration, acts of God, or assembly and maintenance contrary to our instructions. Escalade Sports assumes no responsibility for incidental or consequential damages which may arise from the purchase or use of our equipment. Please supervise your children's play activity and maintain your play equipment periodically.

This warranty is expressly in lieu of all other warranties, expressed or implied, including warranties of merchantability or fitness for use. Jack & June does not assume or authorize any person to assume for us, any other liability in connection with the sale of our products.

Special Note: Jack & June reserves the right to make changes in materials, design, and pricing without notice. See your instruction manual for maintenance requirements. Your child's safety is your responsibility; therefore, you should inspect this equipment regularly for wear and safety.

For warranty service, contact: Escalade Sports P.O. Box 889 Evansville, IN 47706 1-800-GO-SWING Or E-Mail us at: playgroundcs@escaladesports.com