#### **TOOLS REQUIRED**



#### Allen Wrench

(Included)



#### Socket Wrench

(Included)



2 - Persons Recommended

#### **ASSEMBLY RATING**



EASY——DIFFICULT

The Assembly Rating is a 5-point system showing the level of effort needed to assemble a specific product.

**VERSION # 19-08-23** 



Are you missing anything?	Check out our Quick Tips!
Double-check all parts, hardware and accessories listed on Page 6 are accounted for.	We recommend reviewing the pre-assembly handouts. Even experts need a refresher now and then!
Should we send any replacements?  Are there any irregularities or flaws in the parts? We can send replacements!	Prep Time!  Please review the assembly instructions and all diagrams prior to assembling. Arrange parts as recommended on Page 7 and group identical hardware together to make assembling easier.

# PRE ASSEMBLY INTRODUCTION

We understand building ready-to-assemble furniture can be a challenging experience for some. To help avoid confusion, we have provided some helpful tips that may speed up the process.





#### **Teamwork**

ALWAYS have at least two people to help with transporting and assembling the product to avoid potential injury and/or damage.





#### **Suitable Location**

Assembling near the area of the intended location is highly recommended.





#### **Sufficient Space**

Make sure you have enough space to move around during the assembly.





#### **Avoid Scratches**

Use cardboard, blankets or a carpeted area while assembling furniture to prevent scratches.





#### **Flat Surface**

Make sure the furniture rests on a flat and level surface with each leg evenly touching the floor.

# ASSEMBLY AND CARE ADVICE




FAILURE TO FOLLOW THE GUIDELINES BELOW MAY RESULT IN INJURY AND/OR PROPERTY DAMAGE.



Position each part correctly and insert screws or bolts into their respective holes.




Use the appropriate hand tools or power tools for assembly. Select steps, such as tightening screws and/or bolts, may require hand tools to avoid causing damage during assembly.

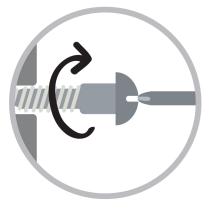

Turn clockwise to tighten and only tighten when step is completed or when instructed to do so.



Save the instructions and store any supplied tools for later maintenance.

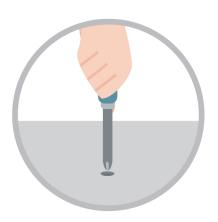

After two weeks, check and tighten any loose hardware and repeat again every six months thereafter.

IT IS THE USER'S RESPONSIBILITY TO MAINTAIN THE FURNITURE. THE HARDWARE MAY LOOSEN OVER TIME AND MAY CAUSE THE FURNITURE TO BE WOBBLY AND UNABLE TO SUPPORT ITS INTENDED WEIGHT CAPACITY. THIS MAY LEAD TO COLLAPSE AND MAY CAUSE SERIOUS INJURY.

# CAM LOCK FASTENER ASSEMBLY INSTRUCTIONS

#### Note:


Every cam lock bolt must have a cam lock connector in order to fasten the parts together.




cam bolt cam lock




m lock screwdriver

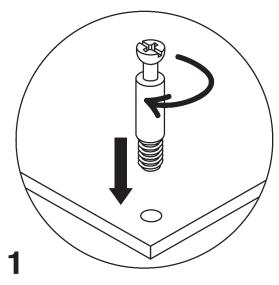


Screw the cam bolt into panel.

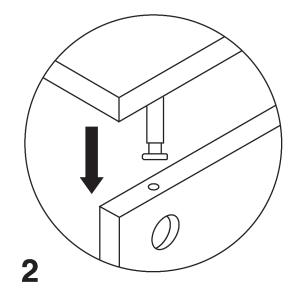

Insert the cam bolt into the bolt hole of joint panel.

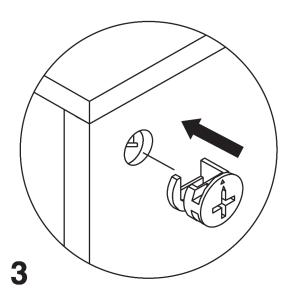

Align the cam lock with its side opening (or arrow) pointing to cam bolt.

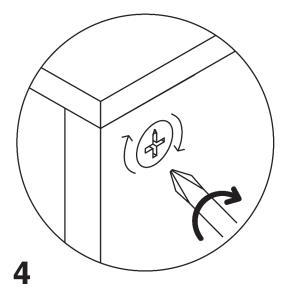


Turn the cam lock clockwise gently until it will not turn any more.

# **SOFA TABLE**



- · Please keep instructions for future reference.
- · Check the quantity and irregularity of parts and hardware before you start.

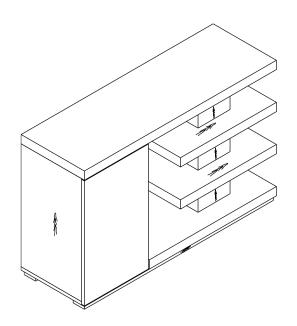

#### **PARTS**



1pc



Wooden top





Back board



2pcs



Right-layer board





Cabinet door





Left-layer board





Right-bottom board Supporting

#3) 1pc



Left board





Left-bottom board





batten-back

1pc



Mid board



**Post** 

1pc




**Supporting** batten-front

# **SOFA TABLE**



- · Please keep instructions for future reference.
- · Check the quantity and irregularity of parts and hardware before you start.

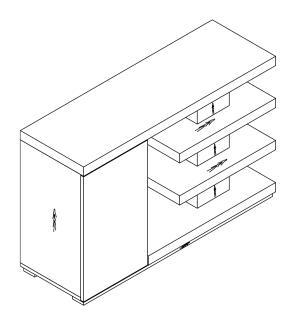

#### **HARDWARE**



10pcs




1pc



1pc



Bolt 1/4" X 1-5/8"

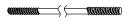

Rod 1/4"x28"



Washer



Nut M6





Ø6x30





Cam Bolt M6x40





Cam Lock Ø14.5x11





Cam Bolt M6x24






Cam Lock Ø12x10.5

6pcs



Adjustable Foot M6 x 16



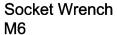



Allen Wrench M4

18pcs




Screw M4





Pipe hinges

### **Exploded View**

1

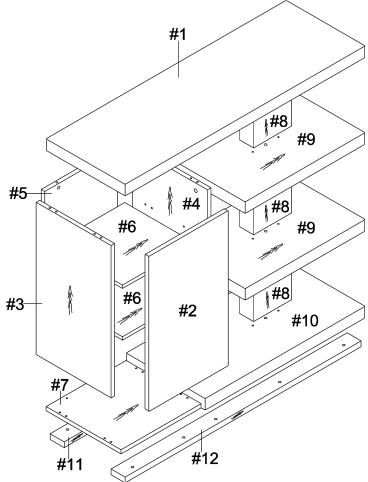

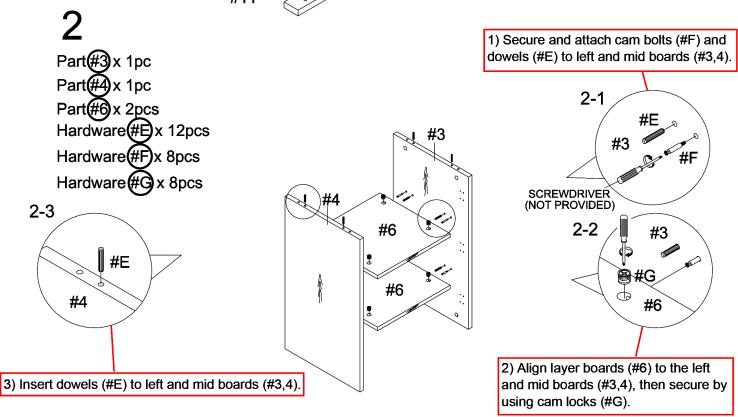

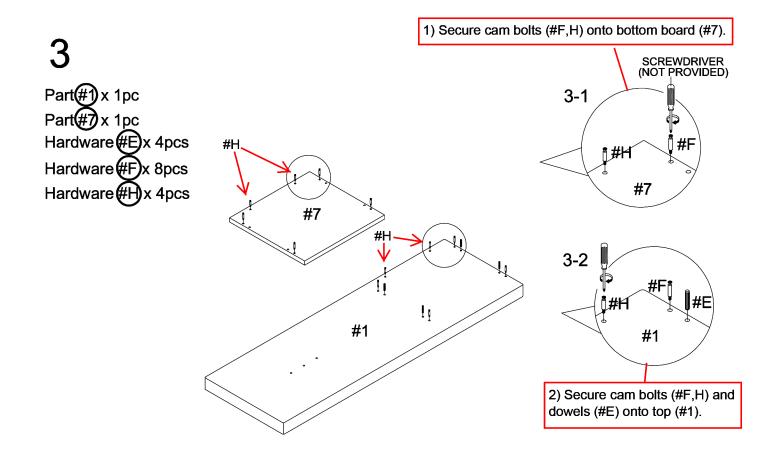

4

Part(#3)x 1pc


Part(#4)x 1pc

Part(#5)x 1pc


Part(#7)x 1pc

Hardware #Gx 4pcs

Hardware (#I) x 2pcs

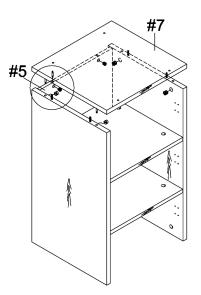


Align bottom board (#7) to built product, then secure cam bolts (#H) by using smaller cam locks (#I) and cam bolts (#F) by using larger cam locks (#G).

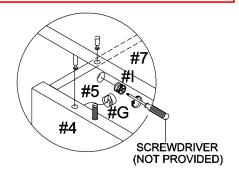

Align built product to top (#1), then secure cam

SCREWDRIVER (NOT PROVIDED)

bolts (#H) by using smaller cam locks (#I) and cam bolts (#F) by using larger cam locks (#G). Part#1x 1pc 5-1 #5 Part(#4) x 1pc Part(#5) x 1pc Hardware #Gx 4pcs #1 SCREWDRIVER (NOT PROVIDED) Hardware(#I)x 2pcs 5-2 #G #3 #1 #1 Part(#2)x 1pc Align hinges (#N) to the built product and door (#2), then Part(#3)x 1pc secure by using screws (#M). Hardware (#M)x 18pcs Hardware (#N) x 3pcs #2

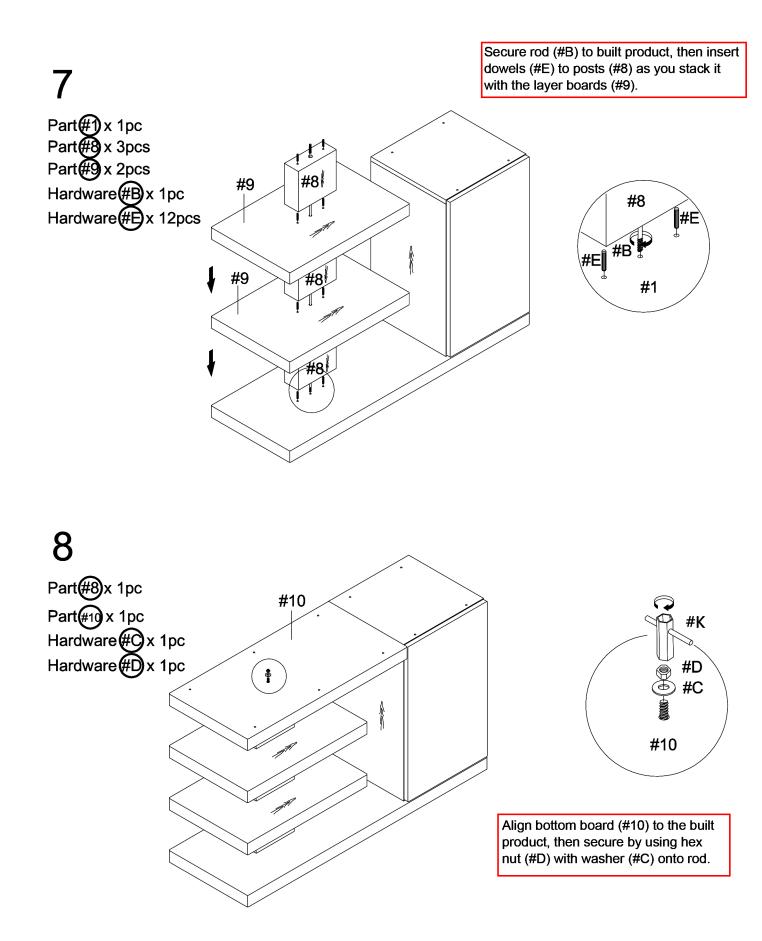


**9**Part#7x 1pc

Part(#11) x 1pc


Part(#12) x 1pc

Hardware #Ax 10pcs


Hardware (#J)x 6pcs

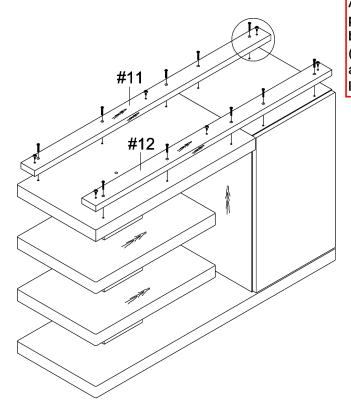

Align supports (#11,12) to built product, then secure by using bolts (#A). Attach adjustable feet (#J) to supports (#11,12), then adjust feet according to ground level.

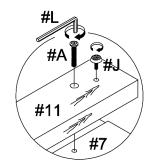

10

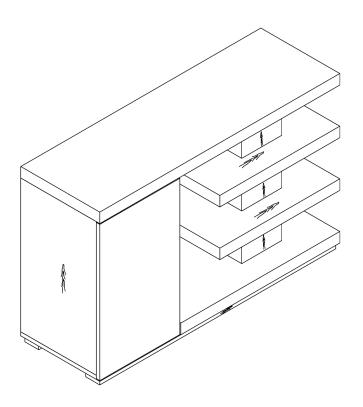

# ASSEMBLY COMPLETED



Please ensure the furniture rests on an even and flat surface. If the product wobbles or feels loose, double-check all bolts and/or screws are properly tightened and secured.

#### √ Keep this handy!

Please retain this instruction manual and any order-related information for future reference.