


 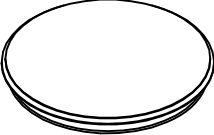










ASSEMBLY INSTRUCTION

A Table Top  1 pc	B Post  1 pc	C Leg  3 pcs	D Support  1 pc	E Hex Nut 5/16"  3 pcs
F Allen Bolt Ø5/16"x35mm  8 pcs	G Lock Washer Ø5/16"x11mm  11 pcs	H Flat Washer Ø5/16"x19x1.5mm  11 pcs	I Allen Key 4mm  1 pc	J Allen Wrench Ø5/16"  1 pc




This page lists all the contents included in the box. Please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage.

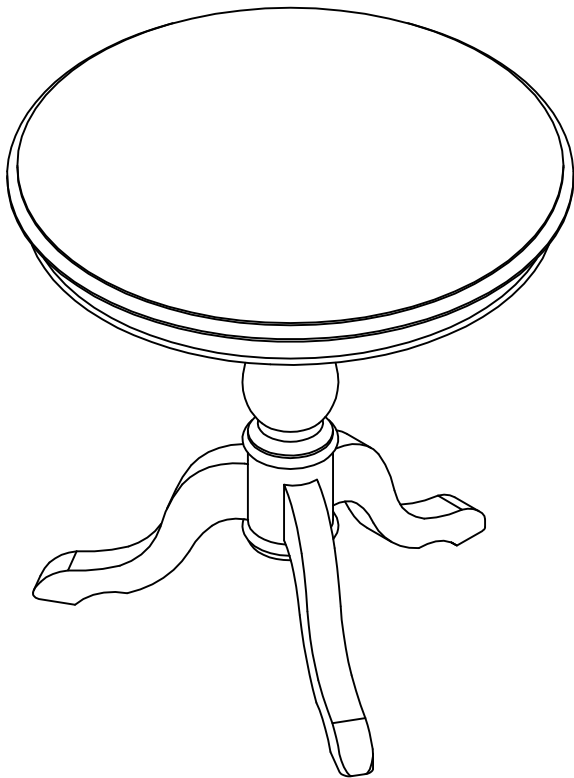
1 Attached three Leg(C) to the Post(B). Use Hex Nut(E), Lock Washer(G) and Flat Washer(H) on holes of Post(B). Turn the Allen Wrench(J) in Hex Nut(E).

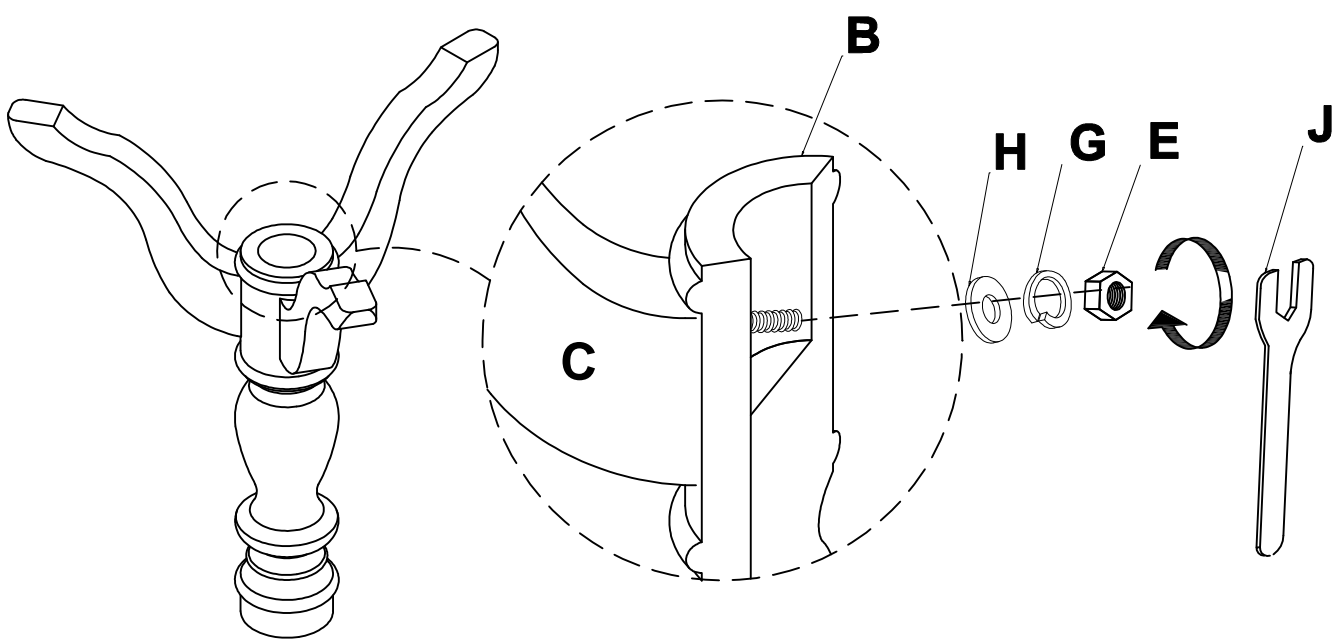

2 Attached Support(D) to the Post(B). Use Allen Bolt(F), Lock Washer(G) and Flat Washer(H) on holes of Support(D). Turn the Allen Key(I) in Allen Bolt(F).

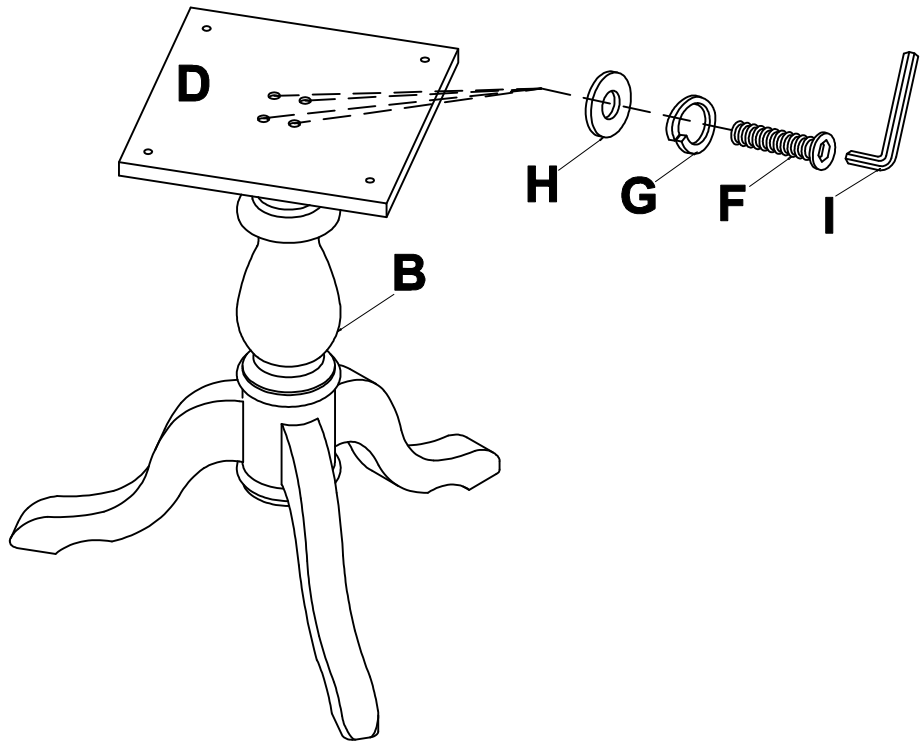

3 Attached Support(D) to the Table Top(A). Use Allen Bolt(F), Lock Washer(G) and Flat Washer(H) on holes of Support(D). Turn the Allen Key(I) in Allen Bolt(F).

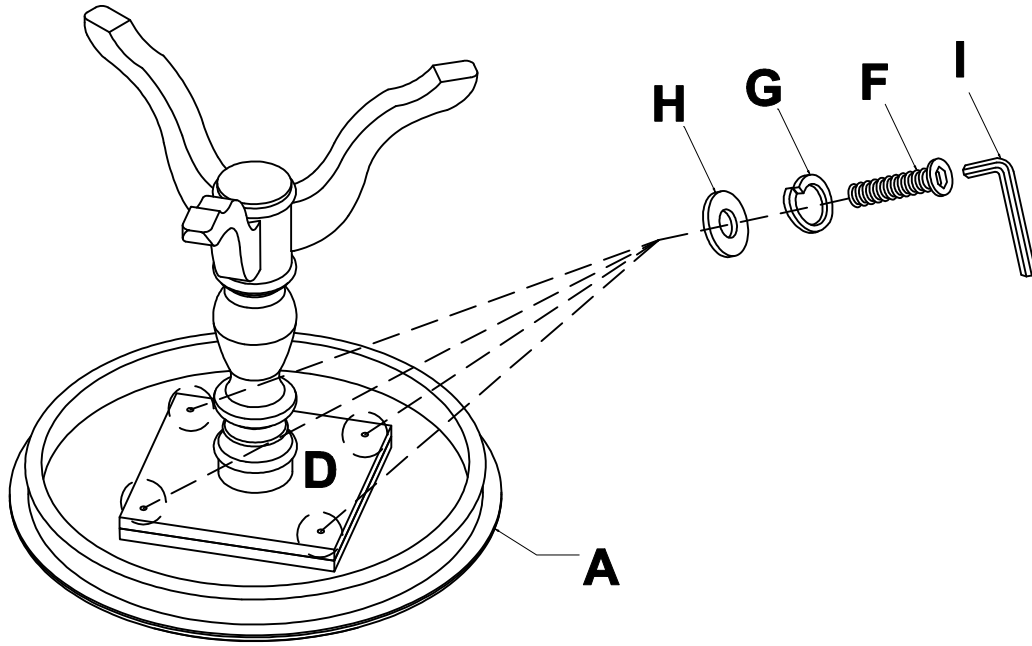

Cleaning & Care

Treat surface with care. Surface is resistant to scratches but is not scratch resistant. Clean surfaces with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are tight.