 
 
 


Installation Manual

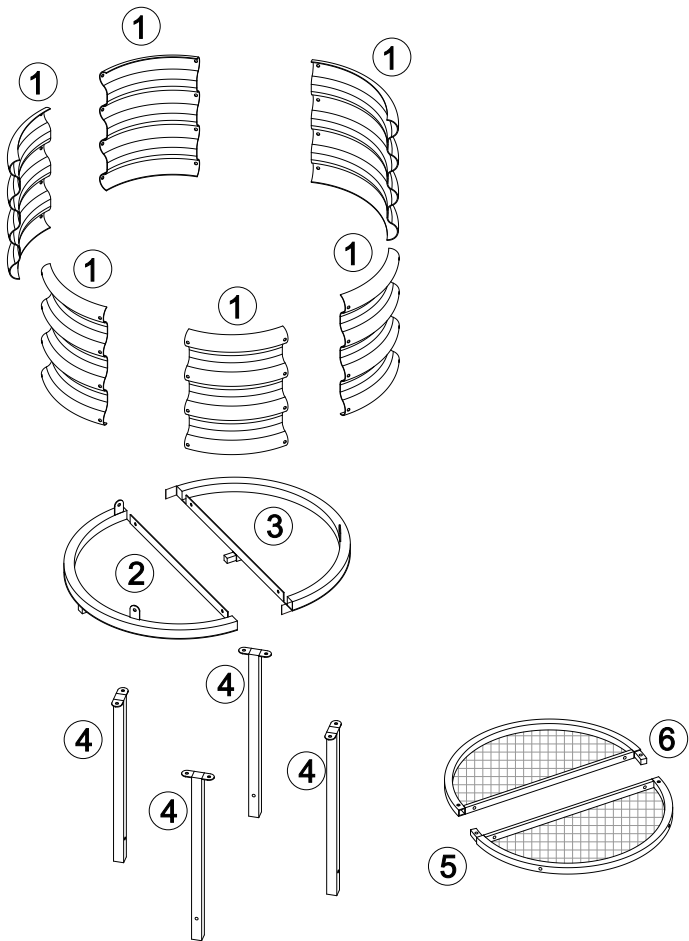 


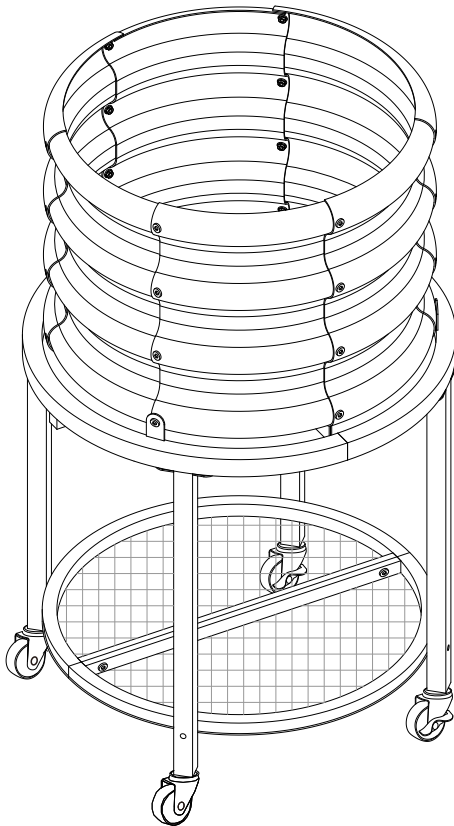

① X6pc

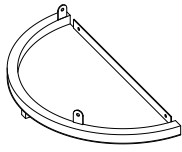


② X1pc

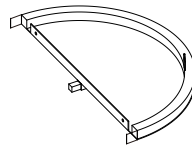


③ X1pc



 ④ X4pc




⑤ X1pc

 


⑥ X1pc

 
M6X10



Ⓐ X21pc

 

Ⓑ X28pc

 


Ⓒ X2pc




Ⓓ X1pc

 M6X30

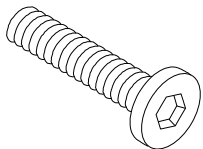


Ⓔ X6pc

 








Ⓕ X2pc


 
M6X12









Ⓖ X14pc

         1

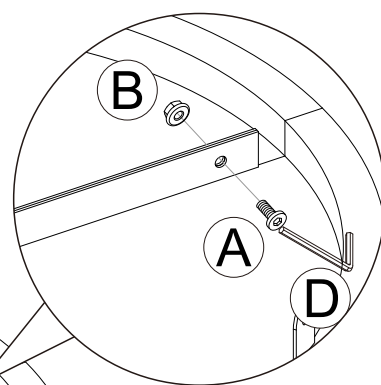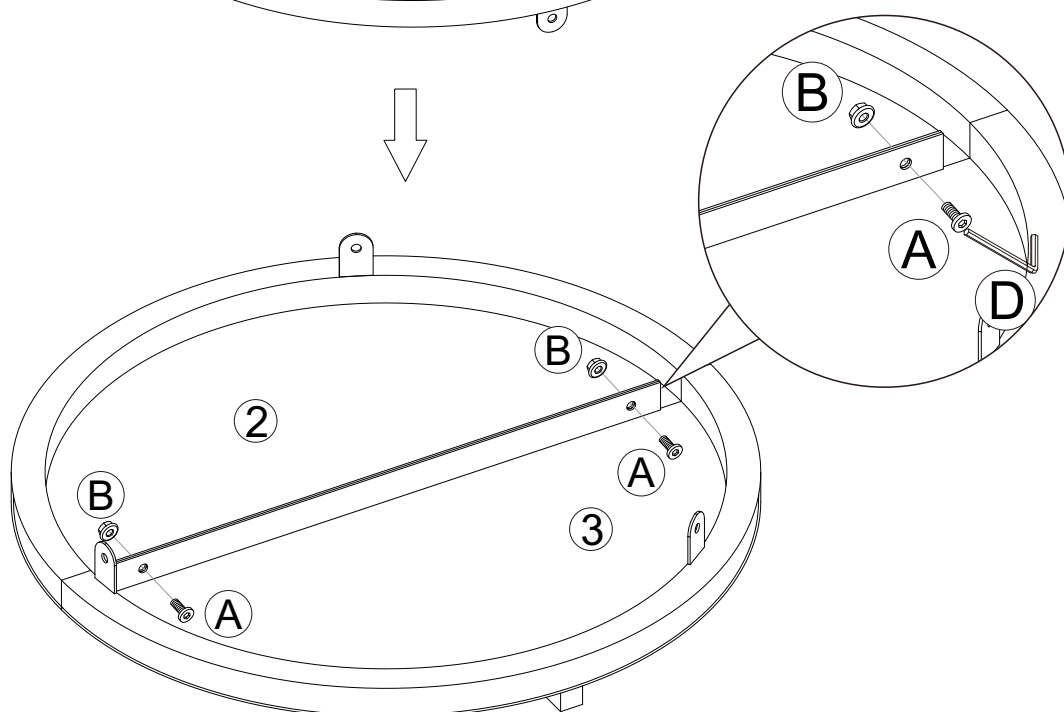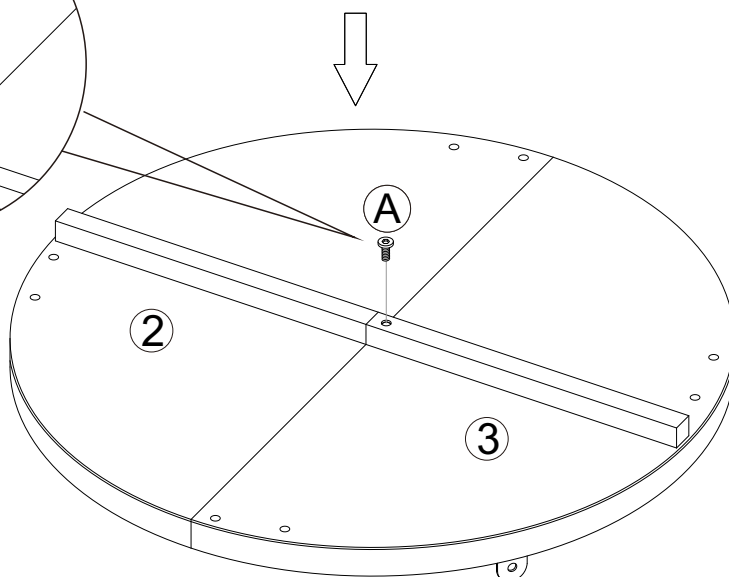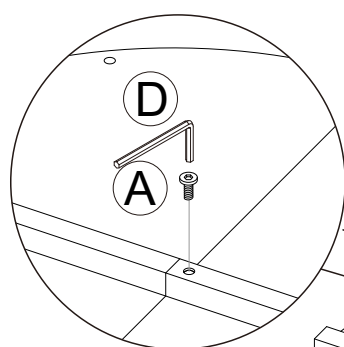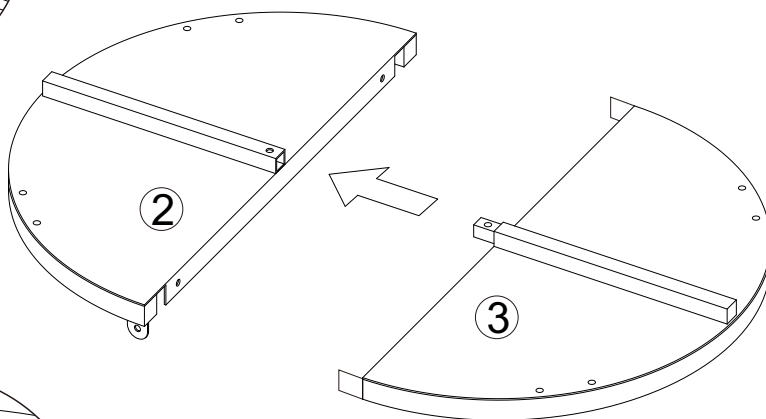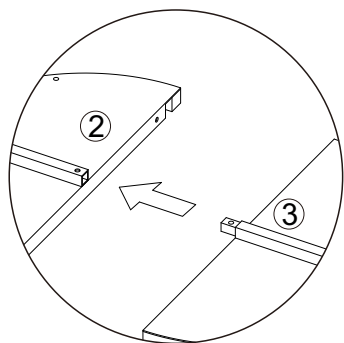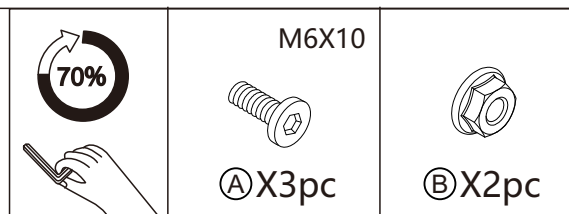

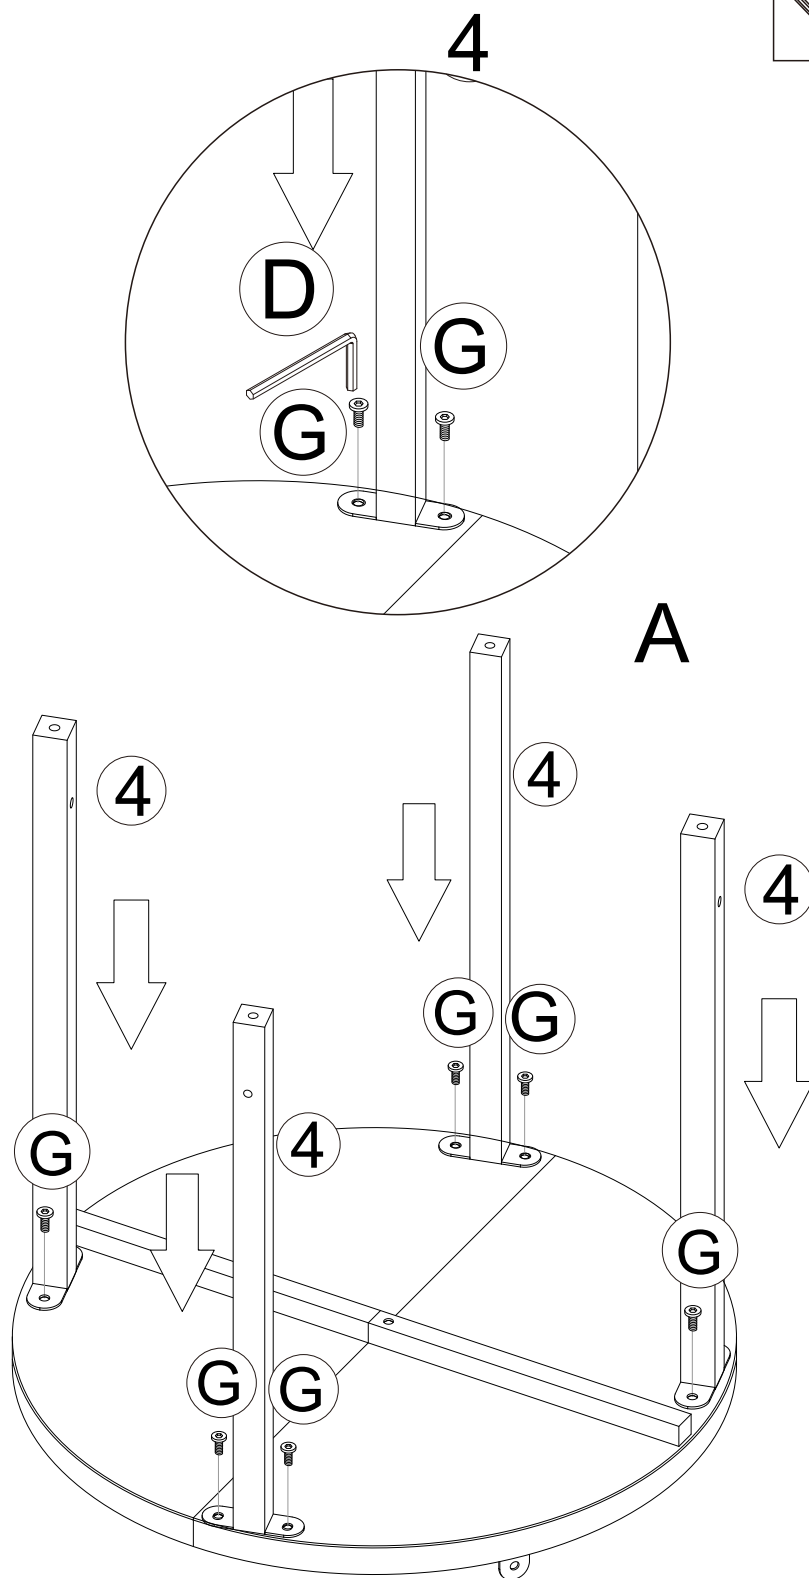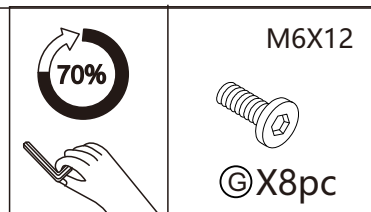


3

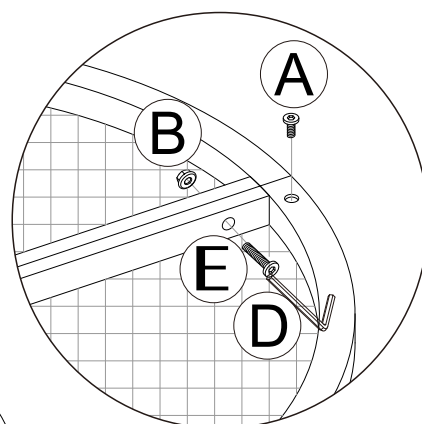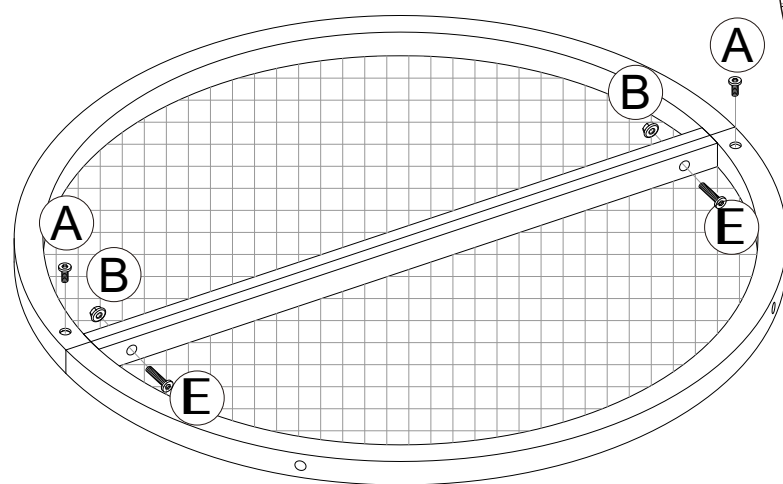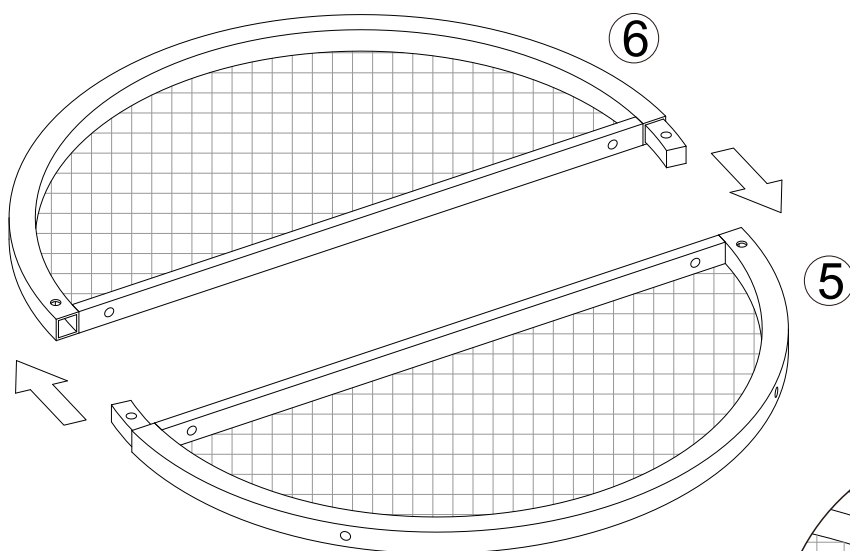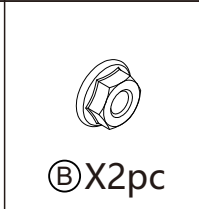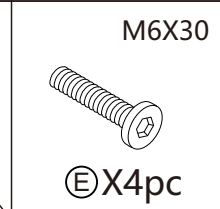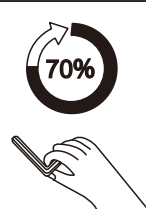      

4



 M6X30





ⒺX4pc






ⒸX2pc



  ⒻX2pc

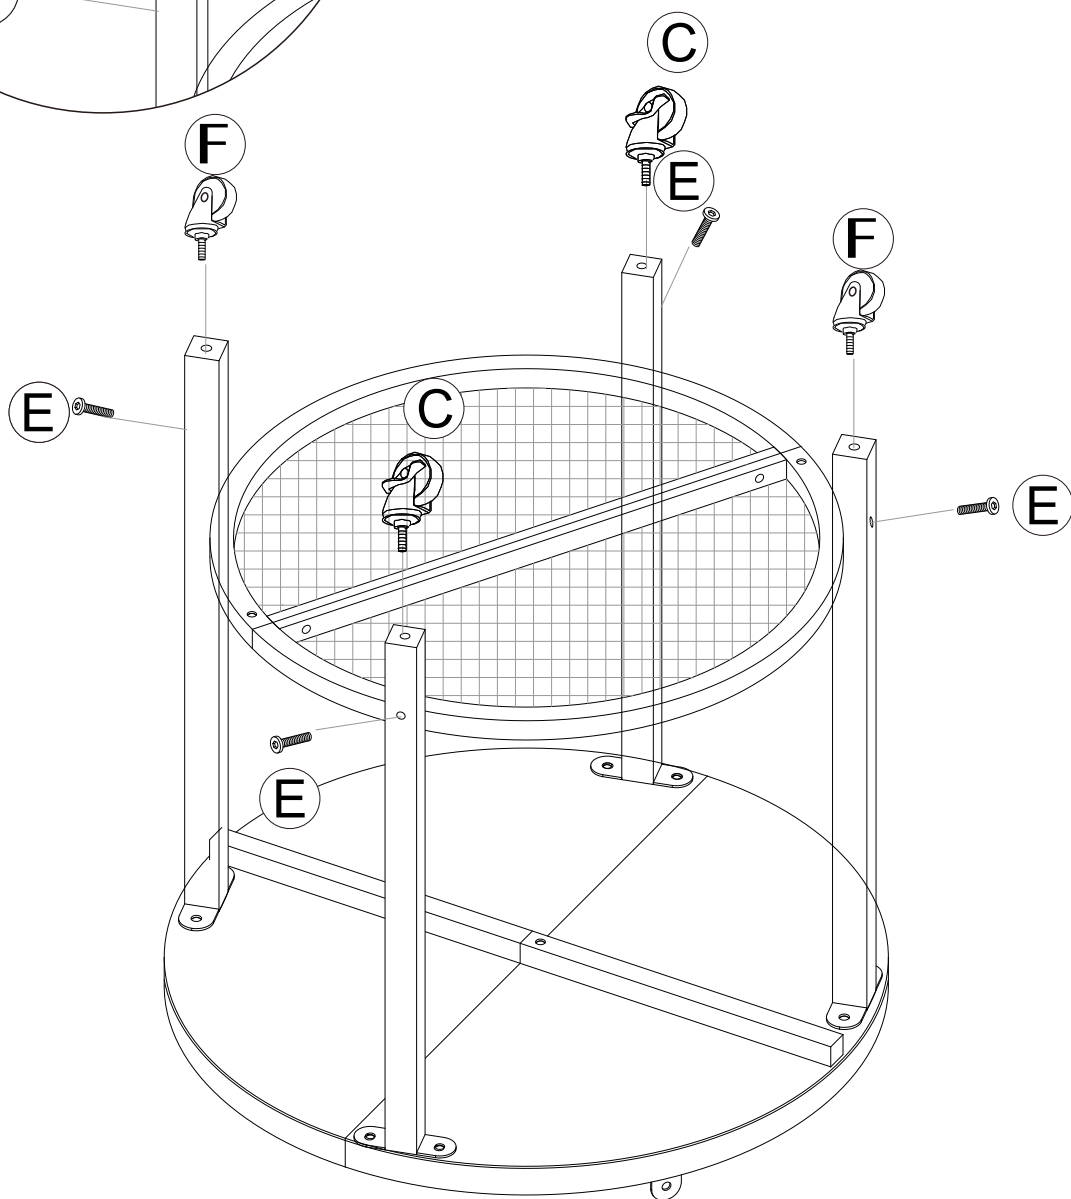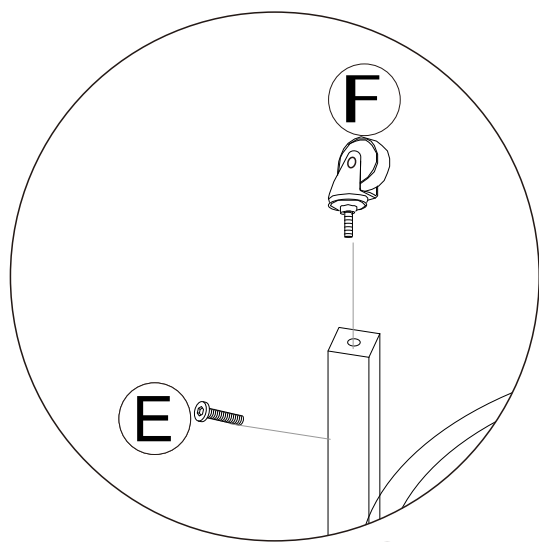

	M6X10  Ⓐ X6pc	 Ⓑ X6pc
---	--	---

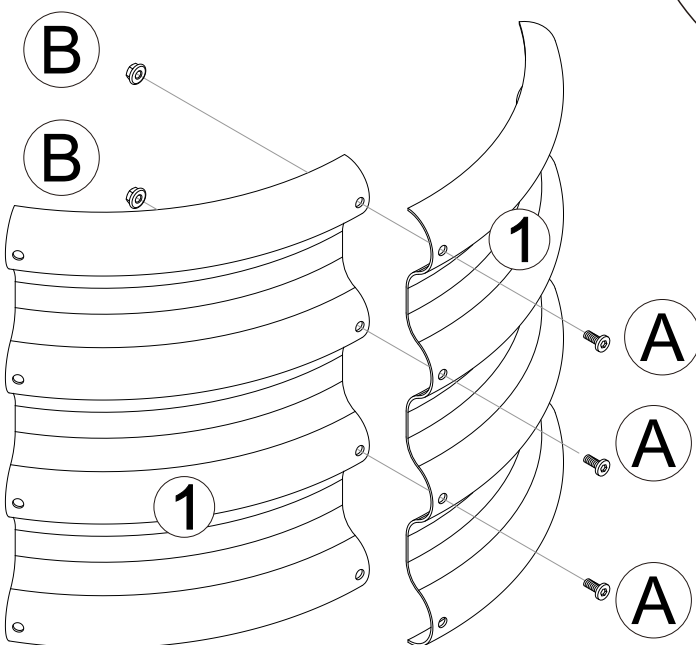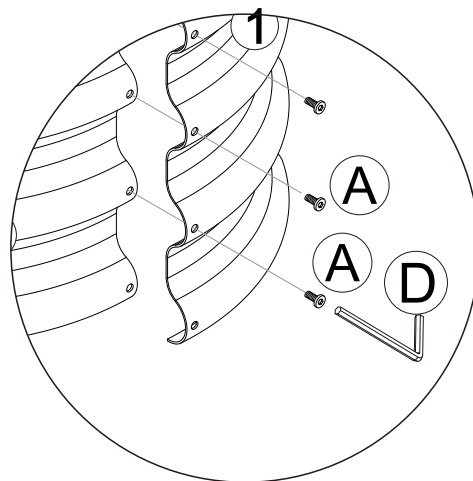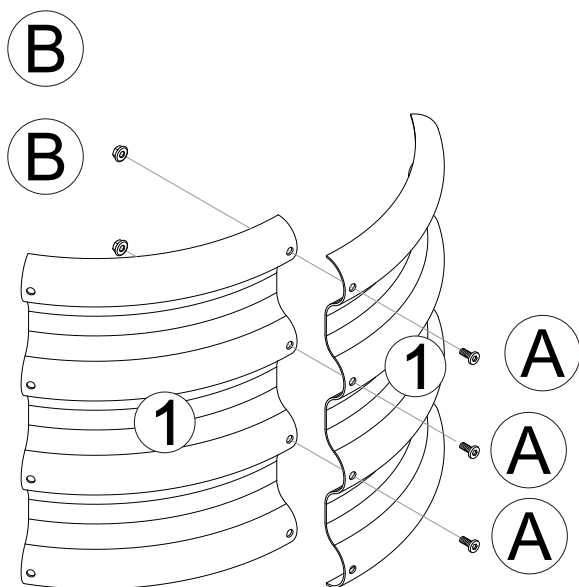   




M6X10



Ⓐ X12pc




 Ⓑ X12pc

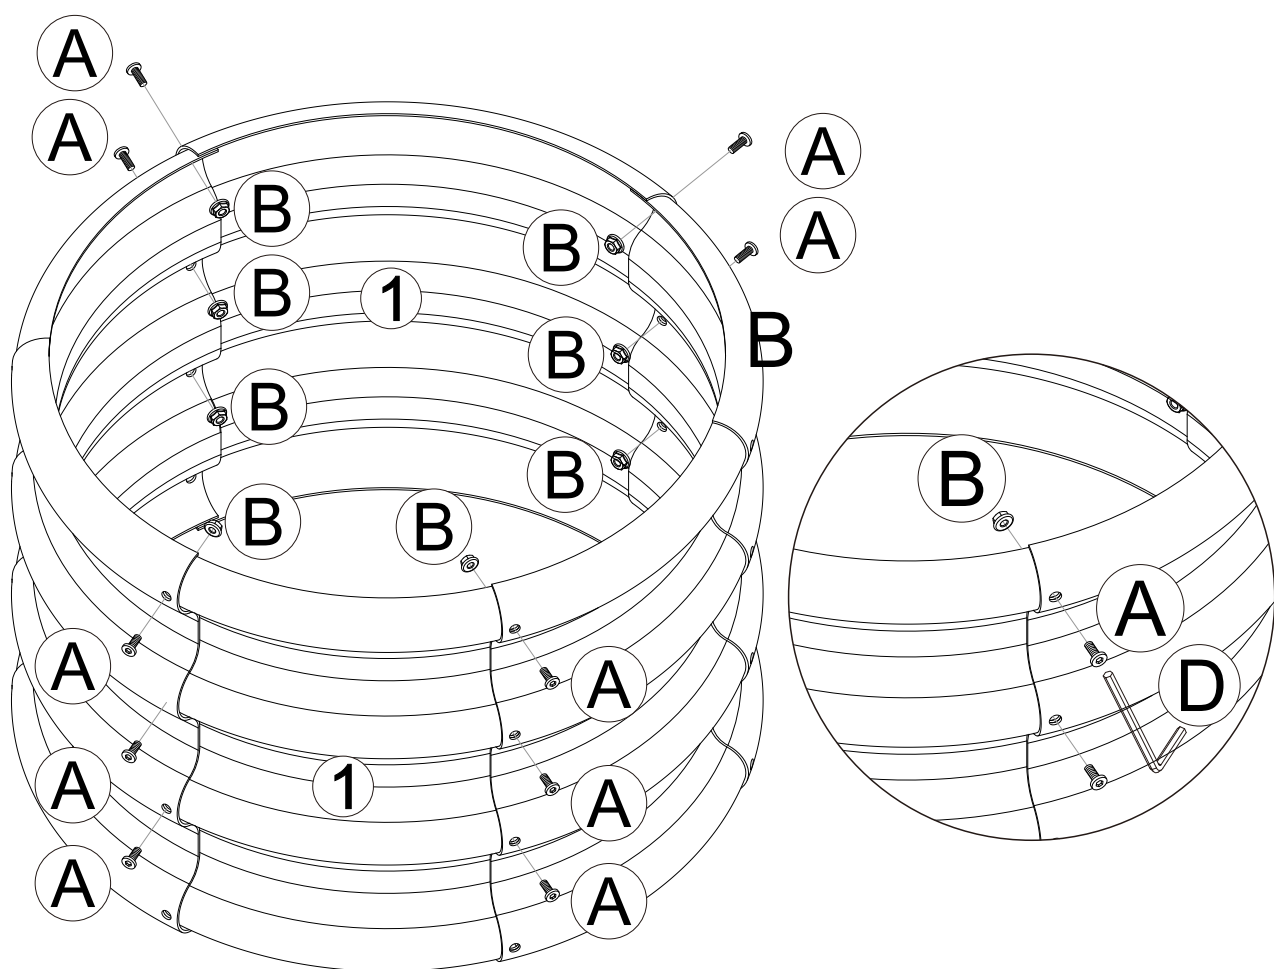







M6X12

 

ⒸX6pc



    ⒷX6pc

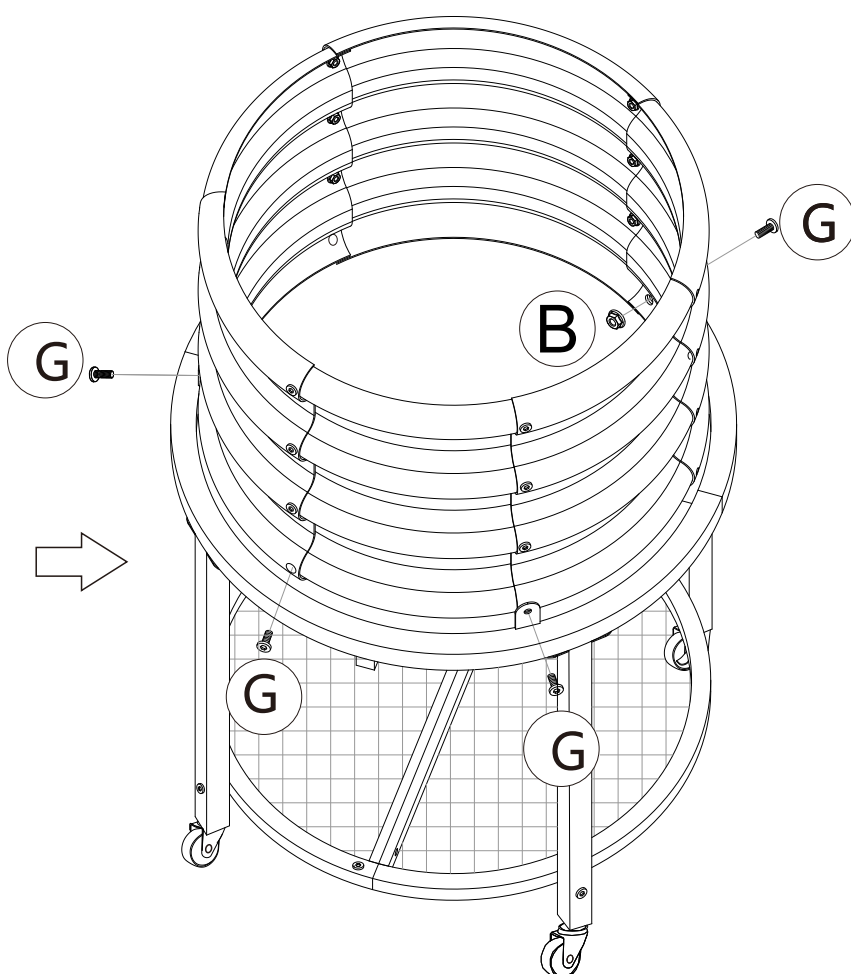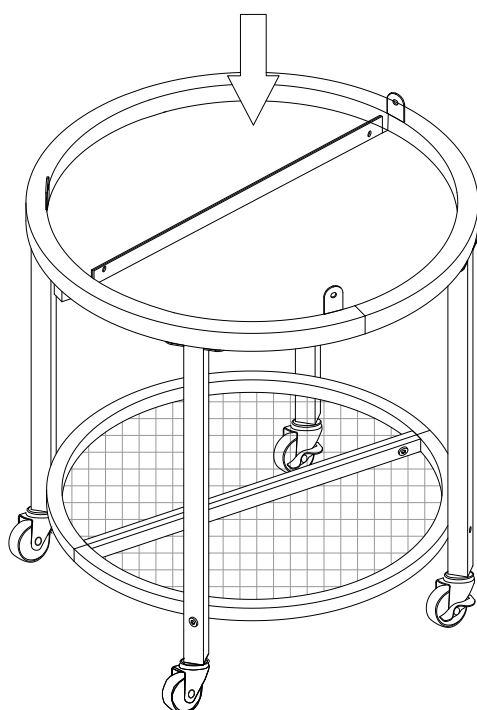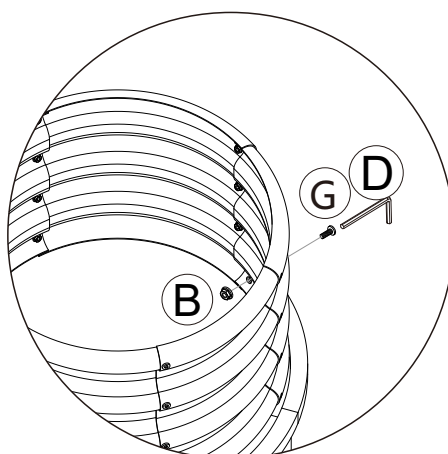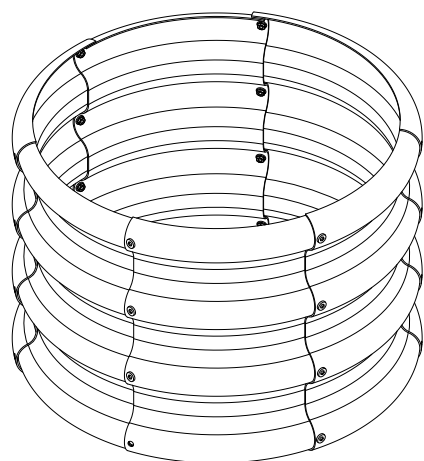



Tighten all screws to 100% after inspection.

