 




INSTALLATION

Product Manual

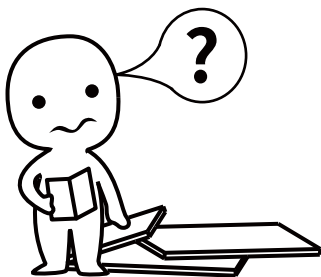


IMPORTANT INFORMATION!

  please read the entire manual before starting to assemble and/or using this product. follow the manual thoroughly and keep it for further reference.

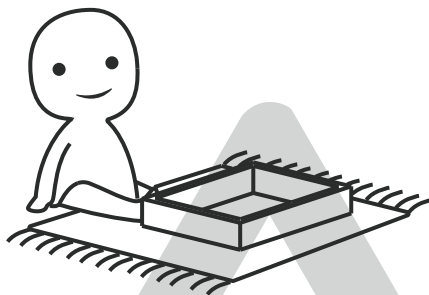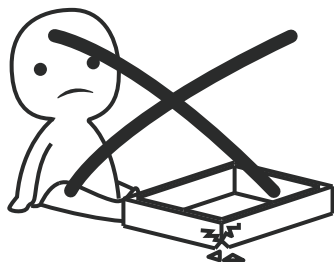



AVOID SCRATCHES!

 In order to avoid scratching this furniture should be assembled on a soft layer- could be a rug.

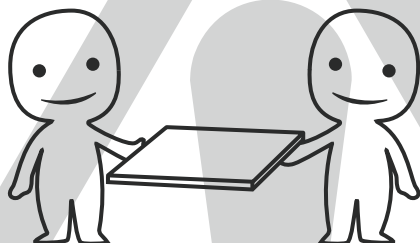

IMPROVE EFFICIENCY !

  Try to find a partner to install with you, which can speed up the installation efficiency and shorten the time.

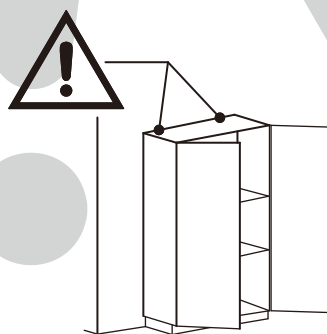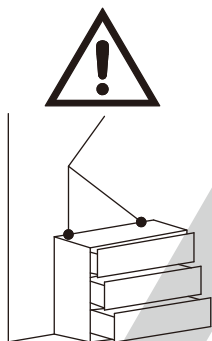

ANTI-TOPPLE WARNING !

 
Overturned furniture can cause serious or fatal crush injuries. To prevent tipping over, be sure to use the wall attachment, if not included with this product. Please purchase the wall attachment that fit your wall. If unsure, seek professional advice. Please read and follow each step of the instructions carefully.

IMPORTANT !




It is important that any product which is assembled using any kind of screw is re-tightened 2 weeks after assembly, and once every 3 months - in order to assure stability through-out the lifespan of the product.

For regular maintenance and cleaning of the product, for the frame, please use a rag dipped in neutral detergent to fully wipe it, and then dry it with a clean rag. For glass materials, wipe with a rag dampened with water glass cleaner, and then dry with a dry rag.

Do not use an electric screwdriver, and do not use too much force when installing, because the board is easy to break.

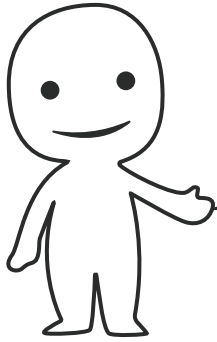


Please prepare the following tools

   

When installing, please carefully confirm whether each screw corresponds to the manual, accessories with similar shapes can be distinguished by size

 
Ax90




Bx90



 
C x 2

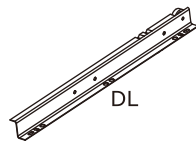


D x 2

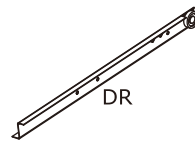 

E x 2

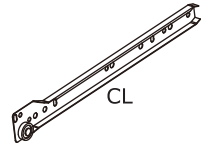 

F x 2

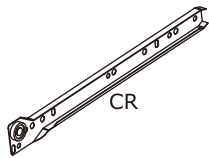 

G x 2



H x 4



M4x16mm

I x 13




M3.5 x 25 mm

Jx6



M4x40mm

 K x 12




Lx32



M3 x 12 mm

 
M x 2

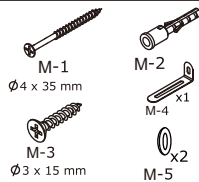

N x 3




 O x 3

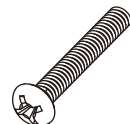

M4x25mm

 P x 3




Qx48




M3 x 14 mm

 
R x 6




S x 1

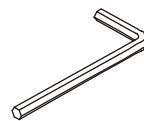 

T x 6

 


U x 6

 

V x 6



 Wx16



M6x30mm

X x 24

 


M2.5x10mm


Y x 4



Z x 4



M3.5 x 35 mm

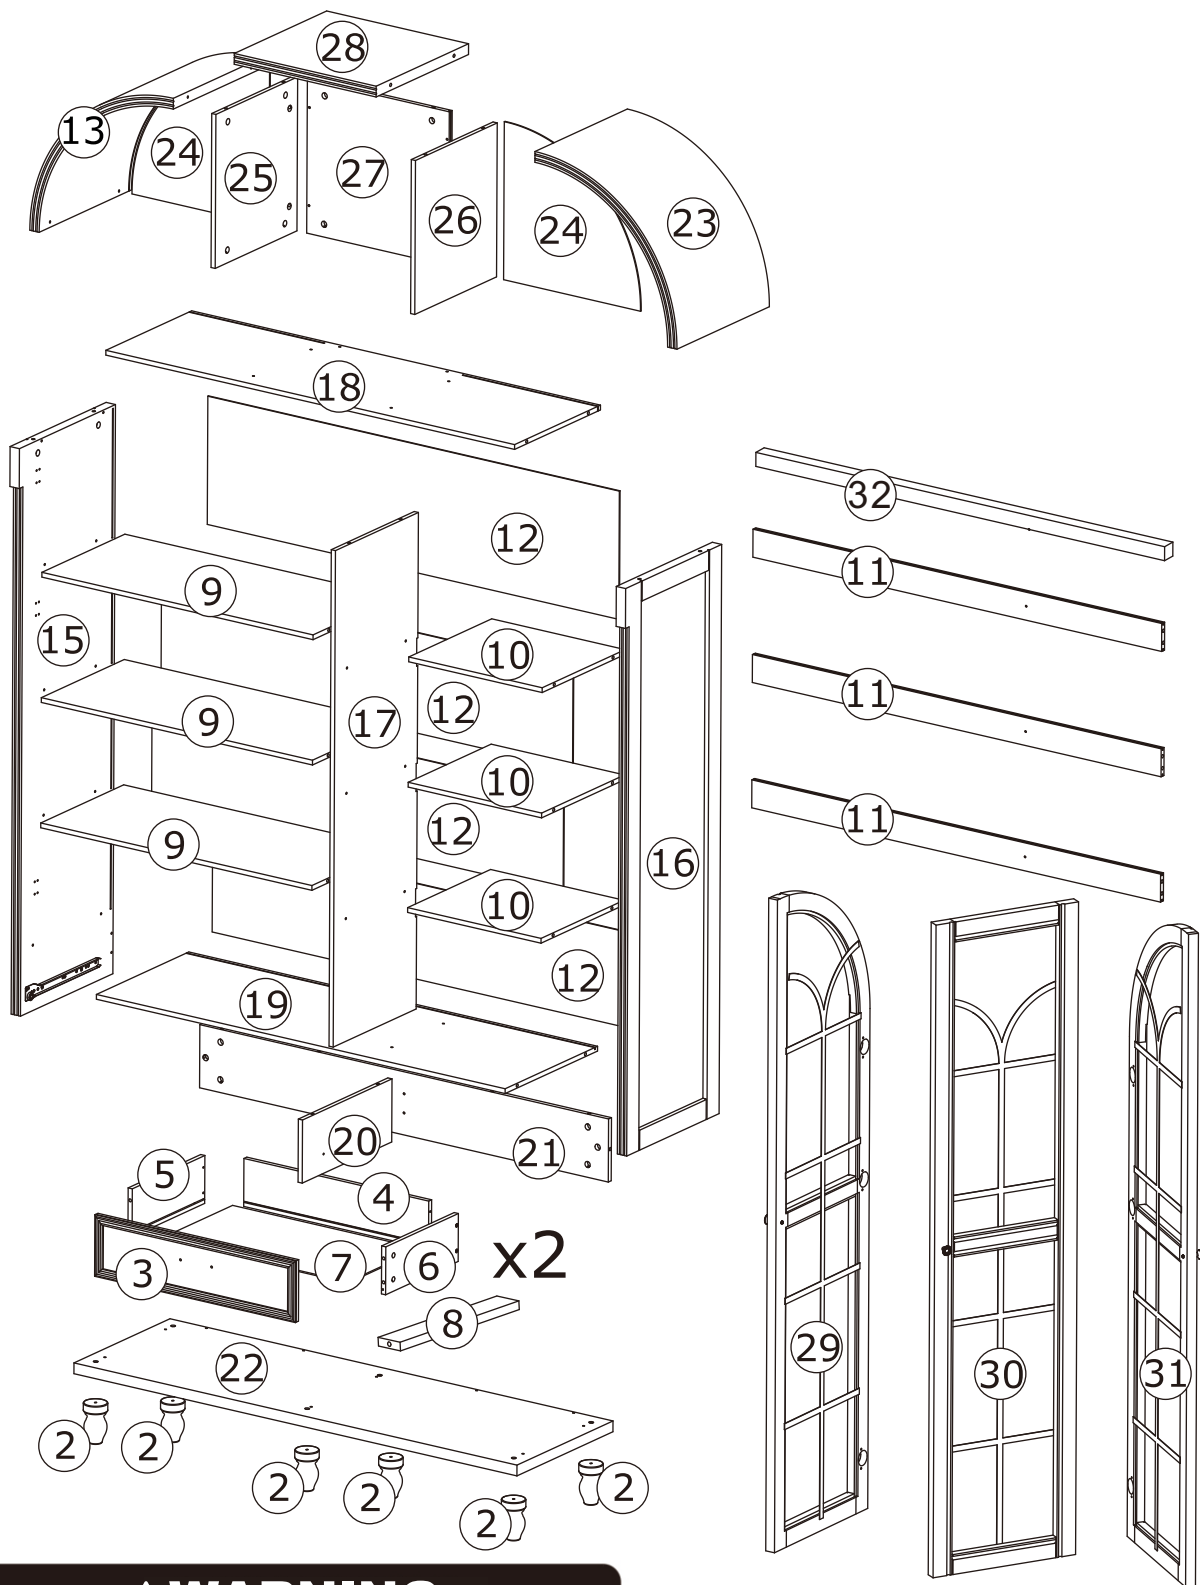 


⚠ WARNING






















Children have died from furniture tipover. To reduce the risk of furniture tipover:










- ALWAYS install Anti-tip device provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.

 *This is a permanent label.
Do not remove!*




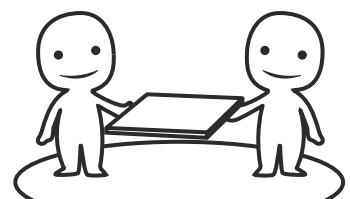


ASSEMBLED BY 2 ADULTS

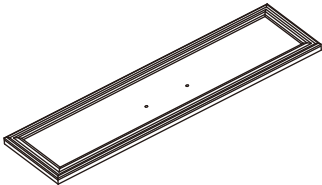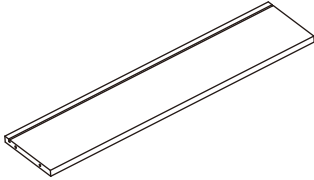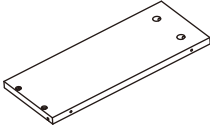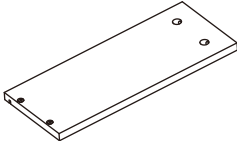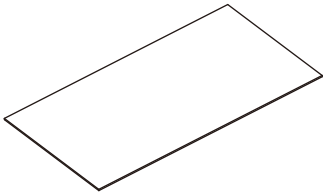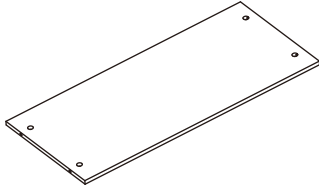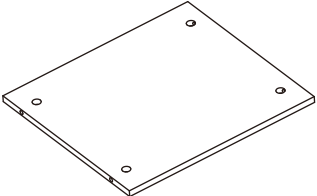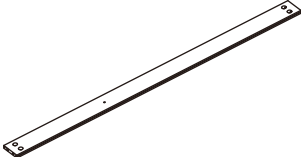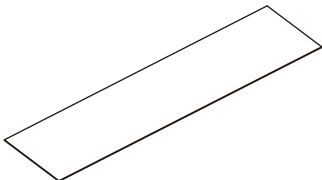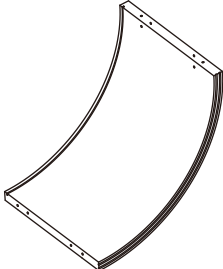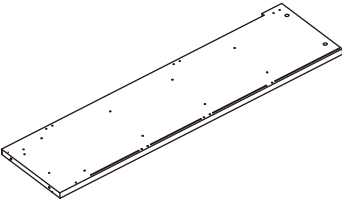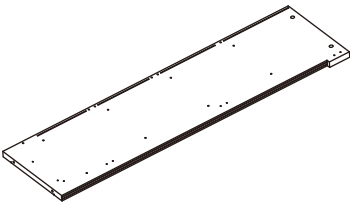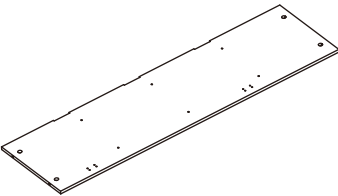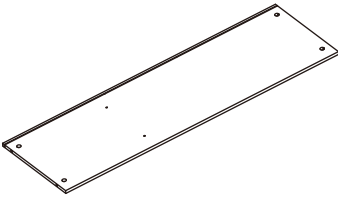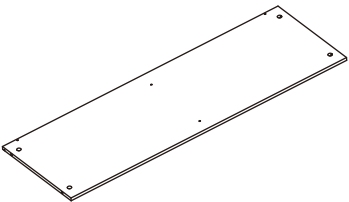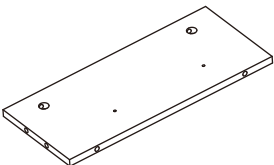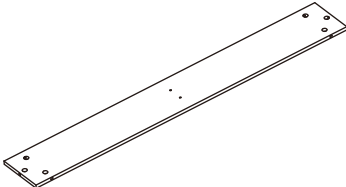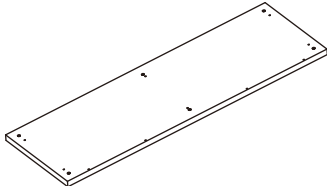                   
② x6 	③ x2 	④ x2 	⑤ x2 
⑥ x2 	⑦ x2 	⑧ x2 	⑨ x3 
⑩ x3 	⑪ x3 	⑫ x4 	⑬ x1 
⑮ x1 	⑯ x1 	⑰ x1 	⑱ x1 
⑲ x1 	⑳ x1 	㉑ x1 	㉒ x1 

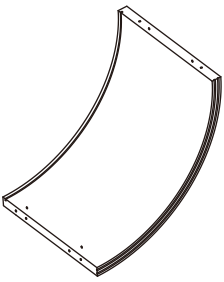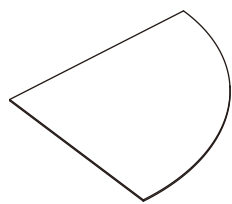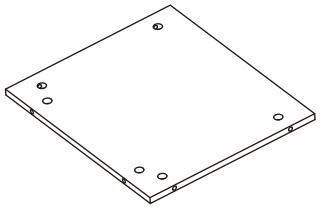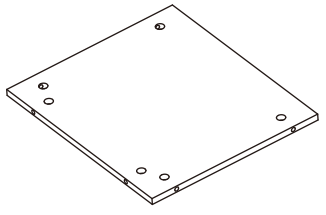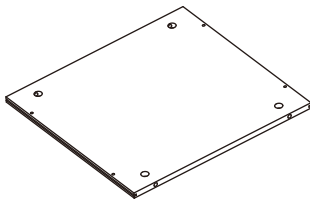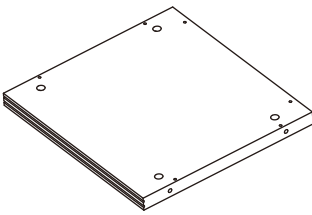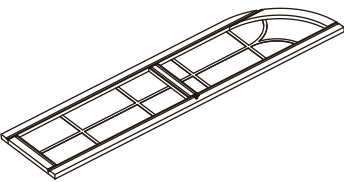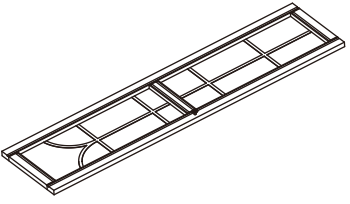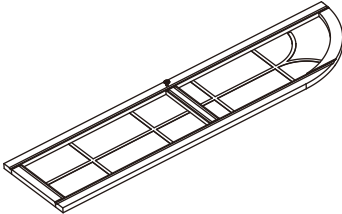         ②③ x1 	②④ x2 	②⑤ x1 	②⑥ x1 
②⑦ x1 	②⑧ x1 	②⑨ x1 	③① x1 
③① x1 	③② x1 		

    
1

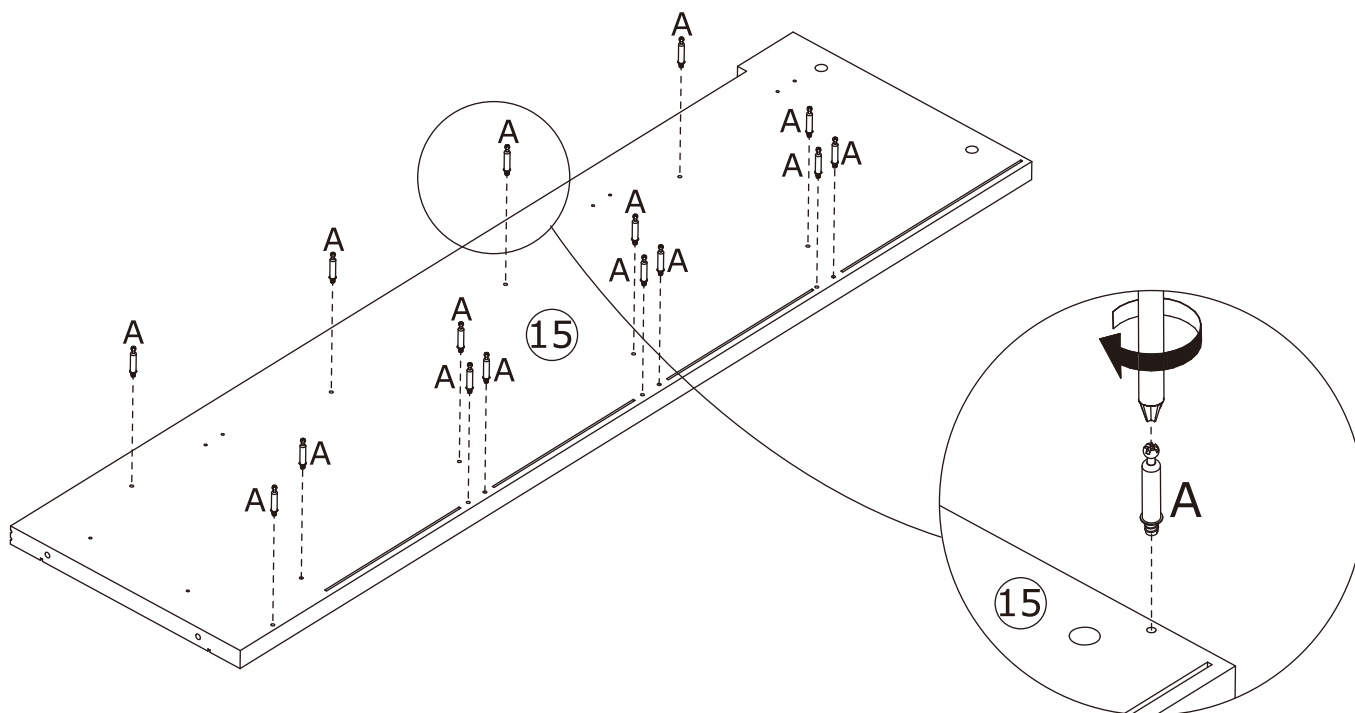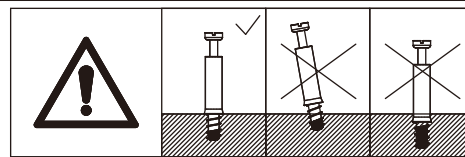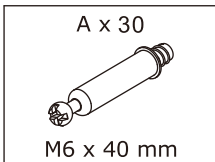




 
Screw eccentric rod (A) into plate 15 and 16 as shown.

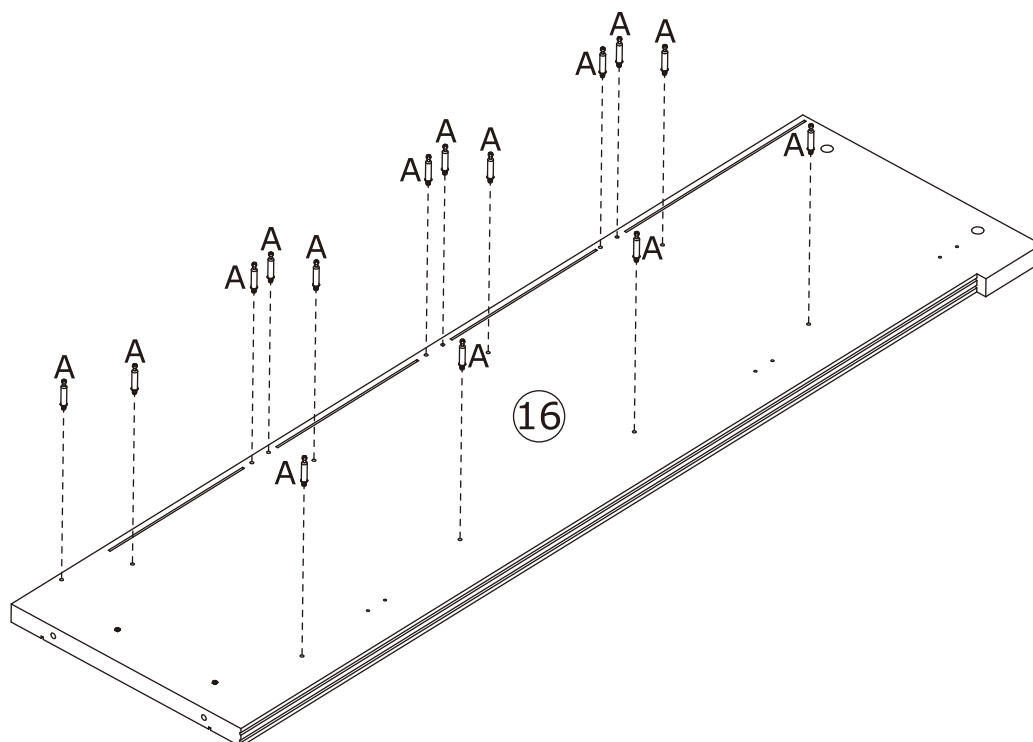




2

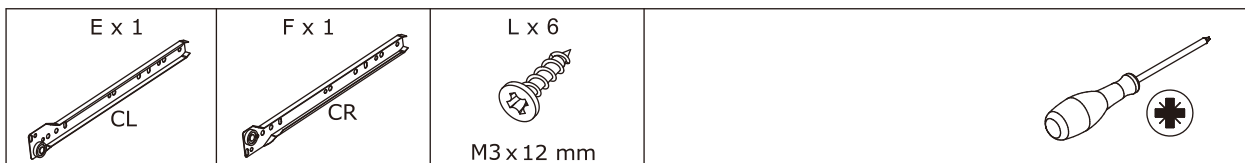 

   
 
Mount and fix rail (E-CL) to plate 15 and (F-CR) to plate 16 with screw (L) as shown.

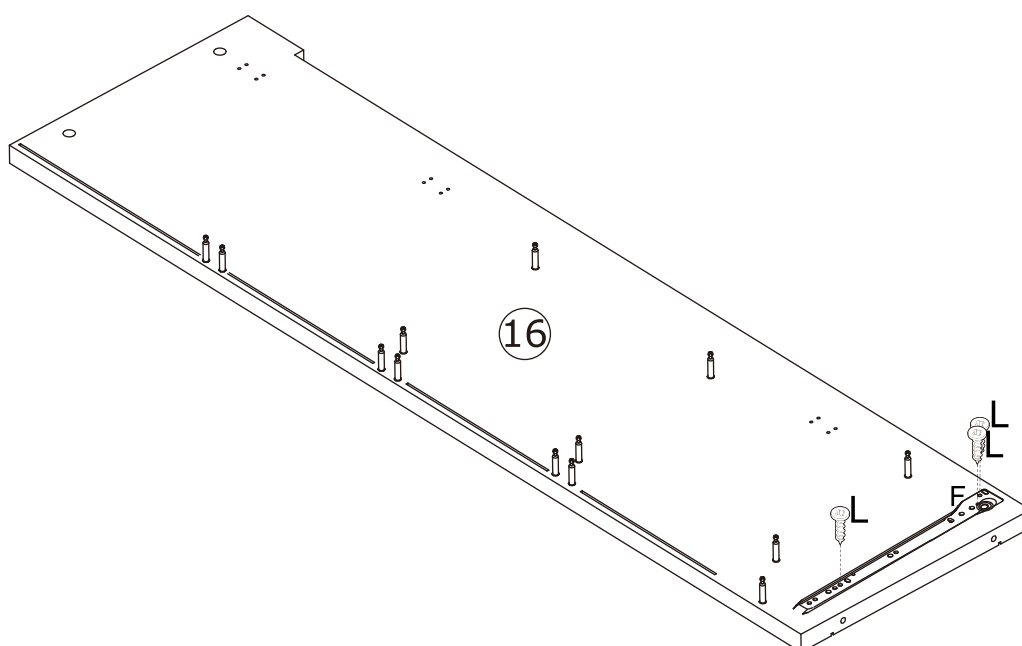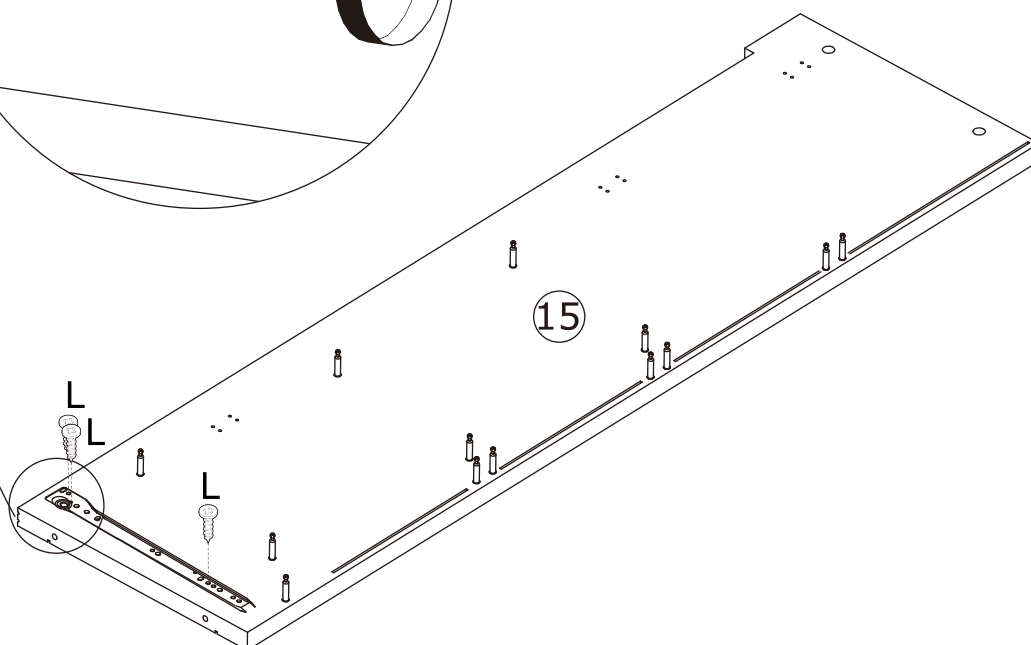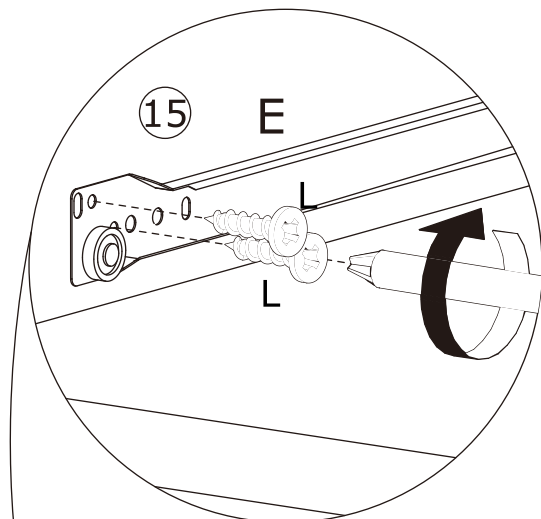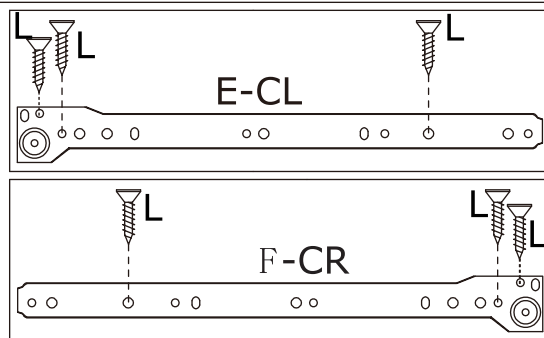


3

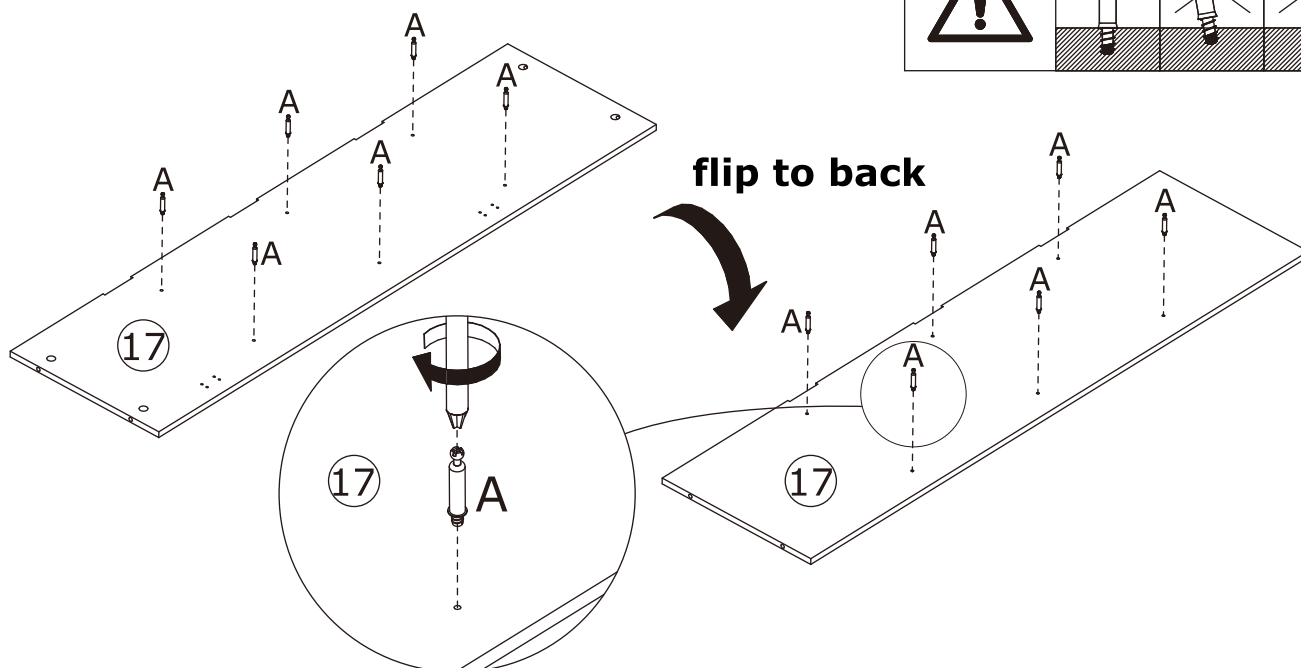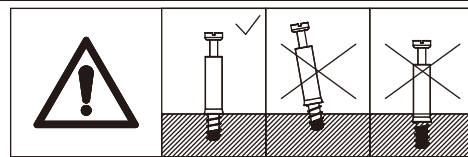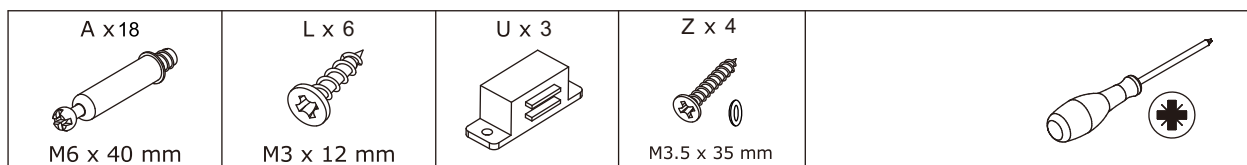   

 
 
Screw eccentric rod (A) into plates 17 and 19 and install the door sucker (U) to plate 19 with the screw (L) as shown.
Screw eccentric rod (Z) into plates 32

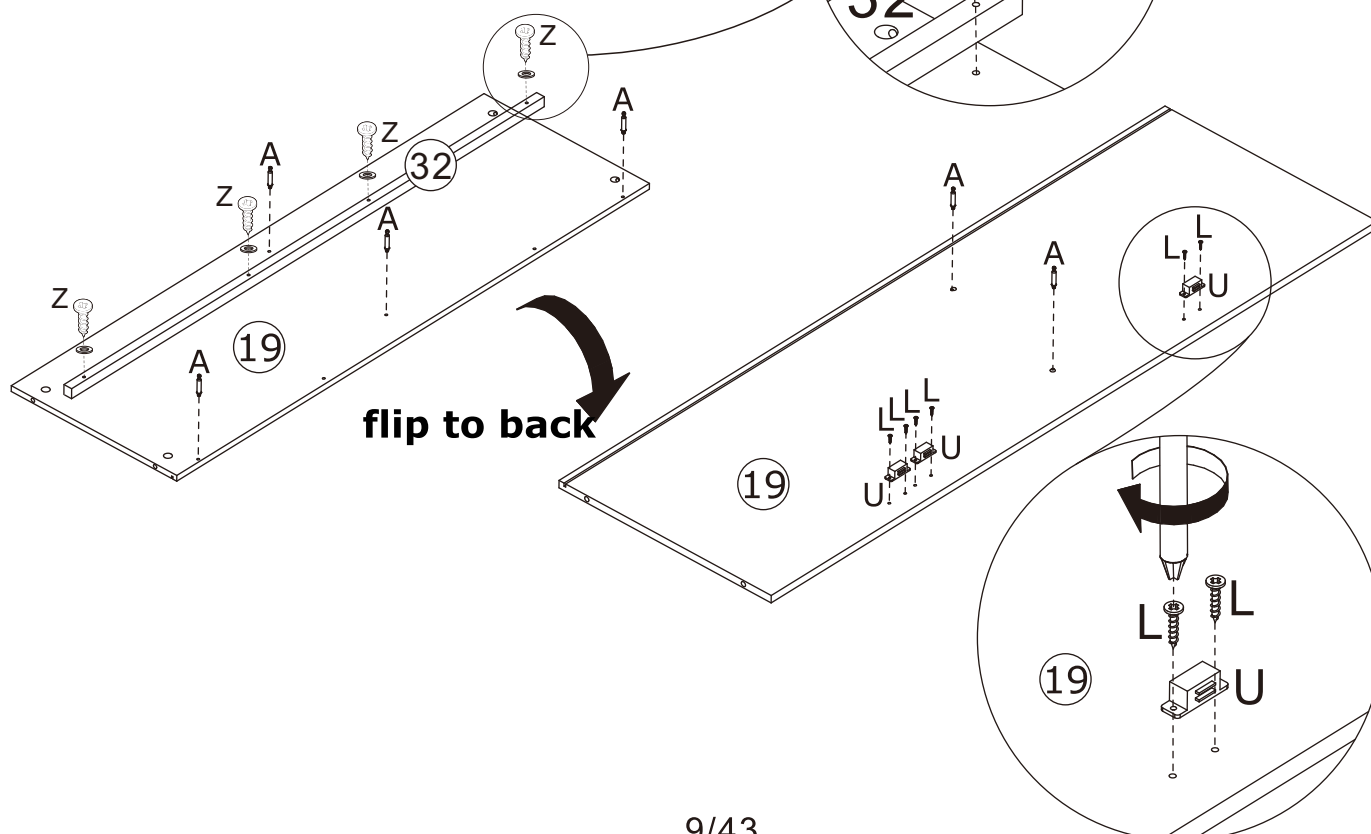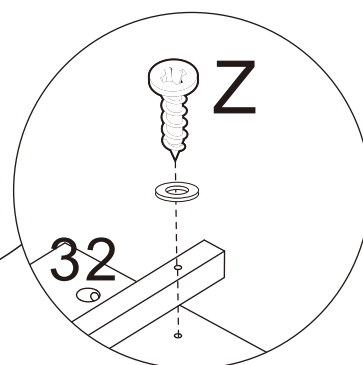




4

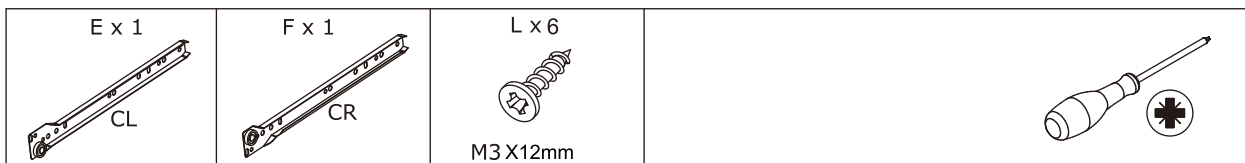 

  
Secure rail (E-CL) and (F-CR) to plate 20 with screws (L) as shown.

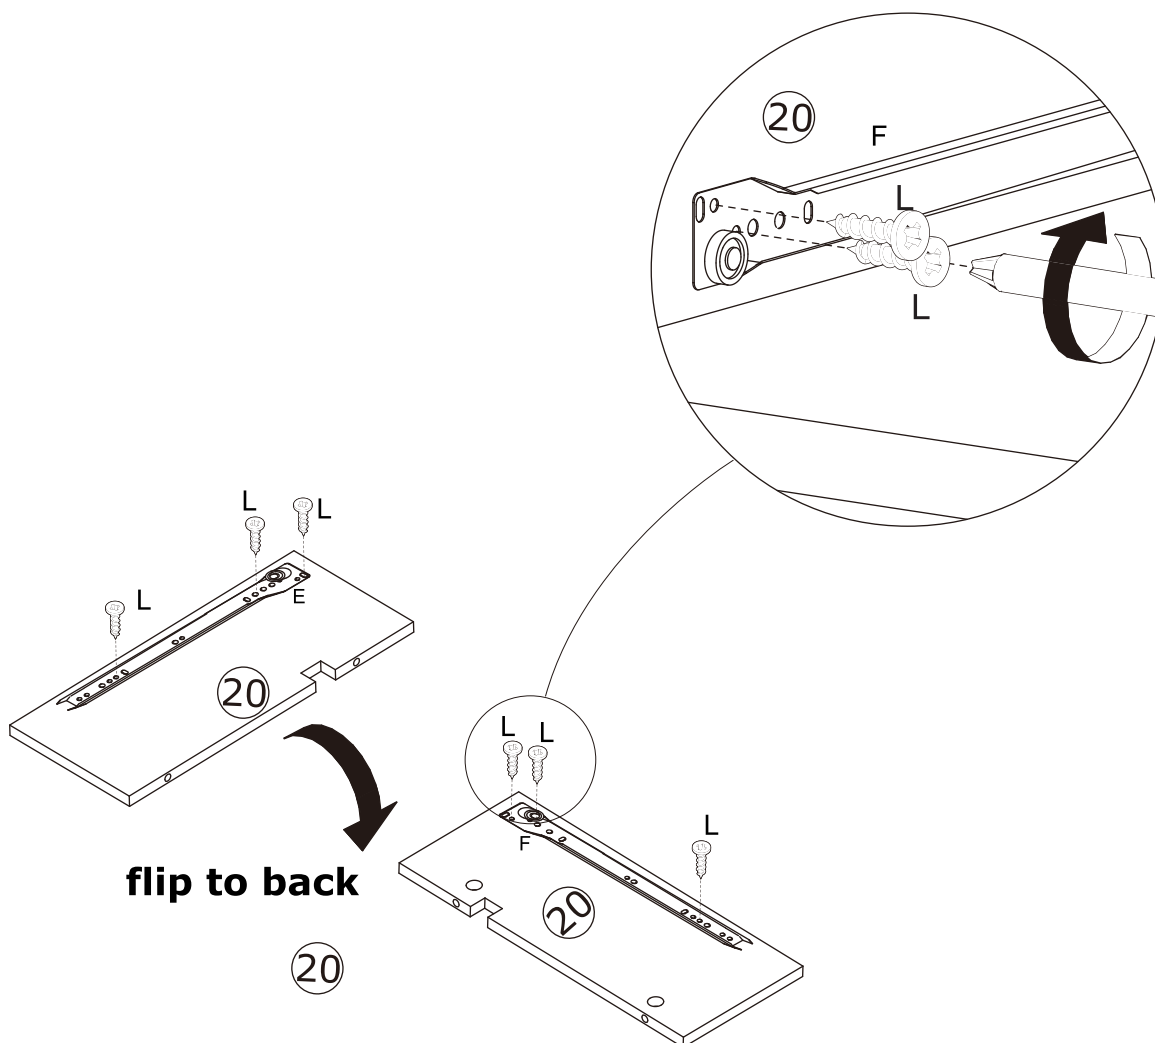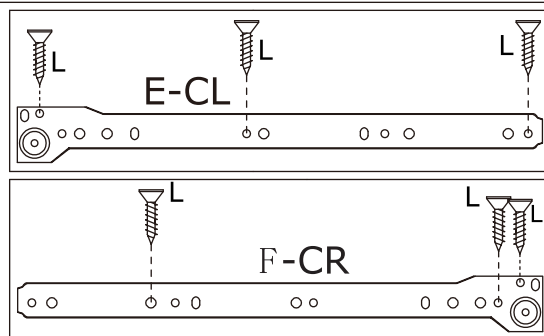

5

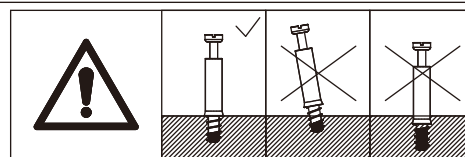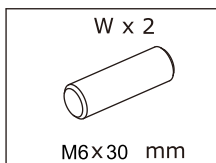   


 Insert the dowels (W) to plate 21 as shown.



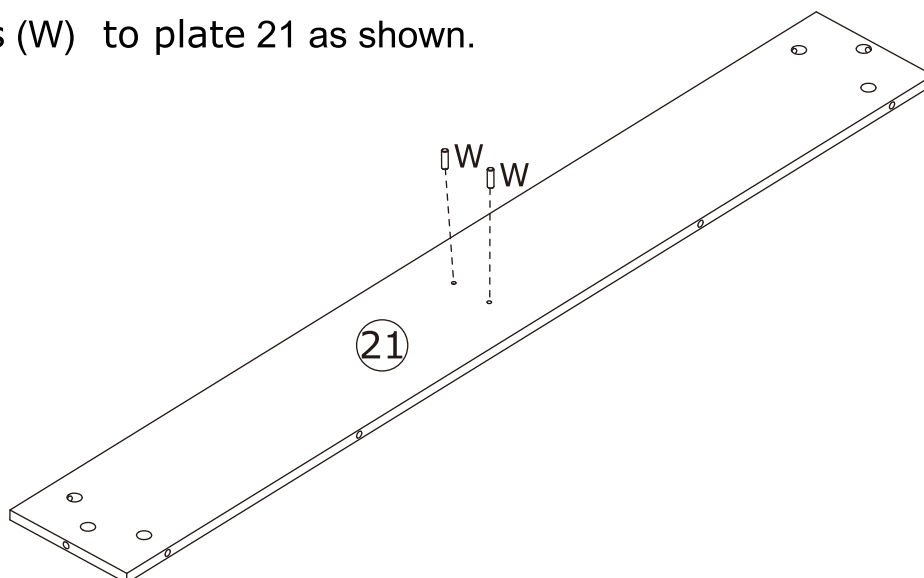


6

 
Attach board 20 to board 21 as shown.

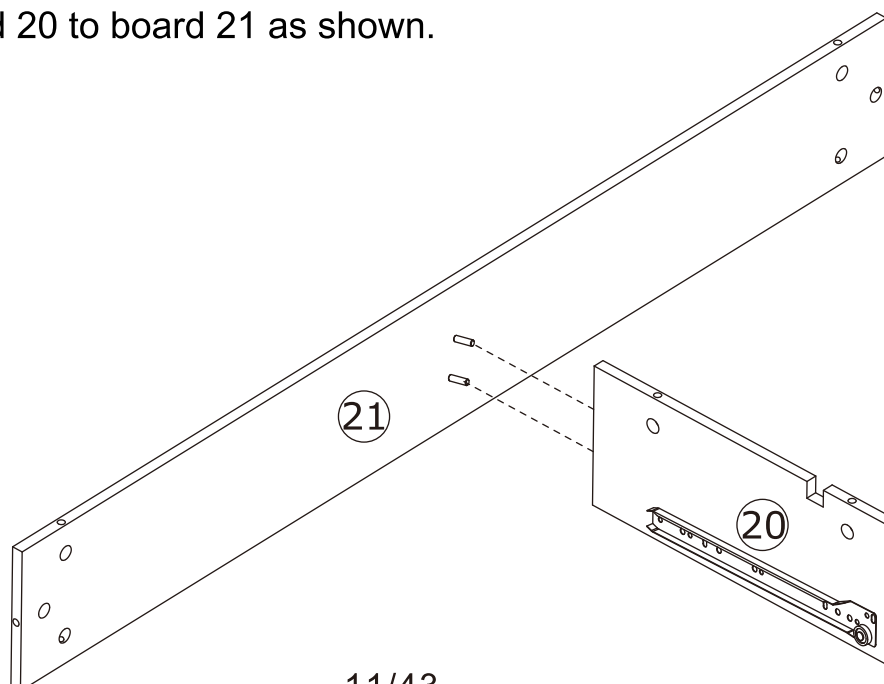

7

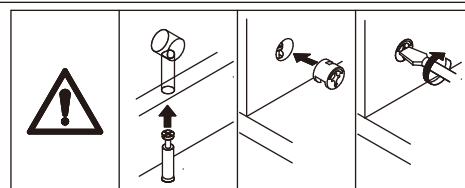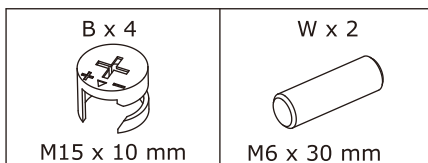   

 Connect plate 19 and plate 21 with dowel (W), then connect plate 19 to plate 20, add cam lock (B) into plate 20, 21 and turn clockwise to tighten as shown.

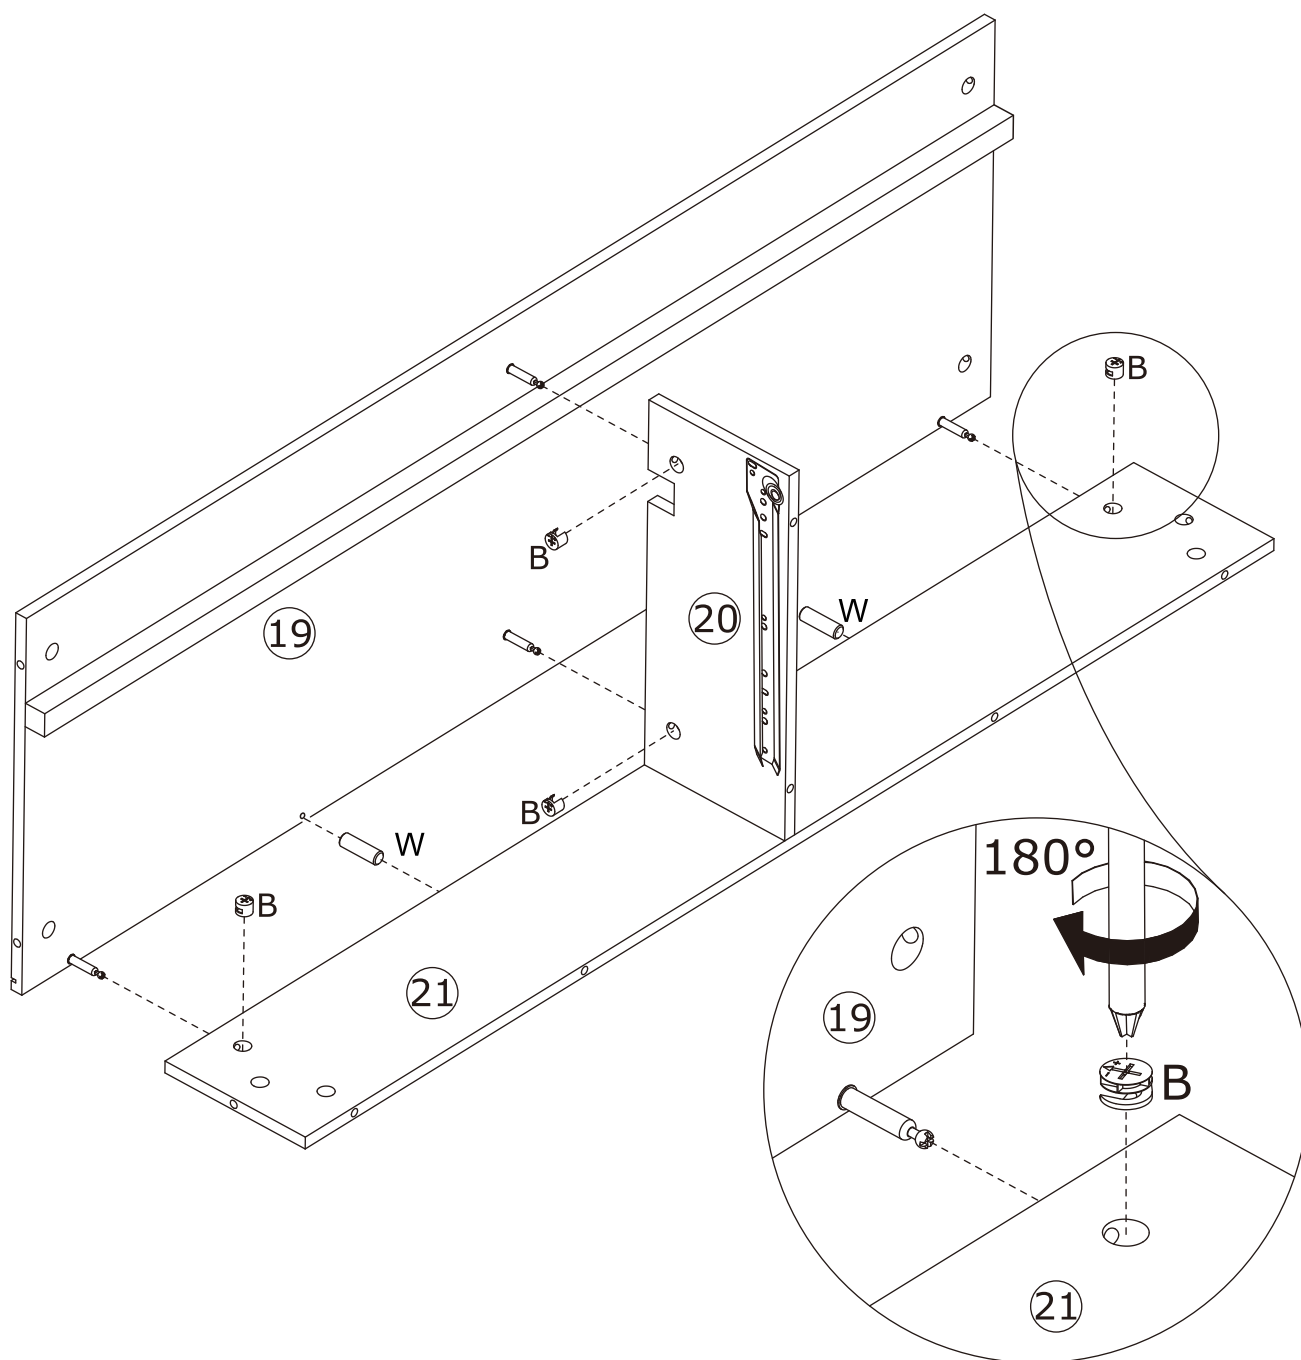


8




B x 3



 M15 x 10 mm



   Attach plates 19, 21 to plate 15, add cam lock (B) into plate 19, 21 and turn clockwise to tighten as shown.

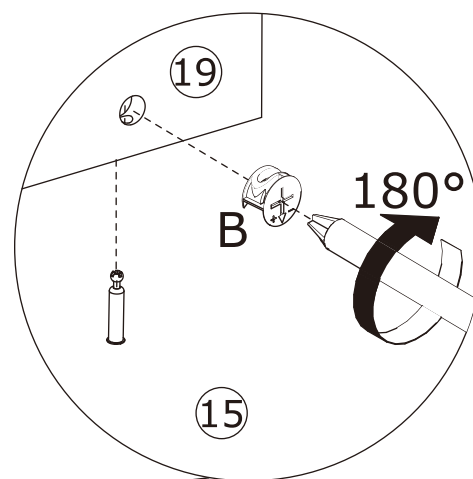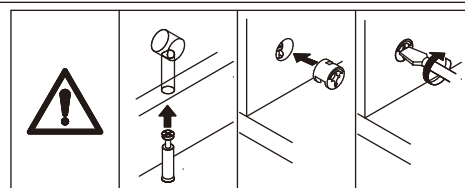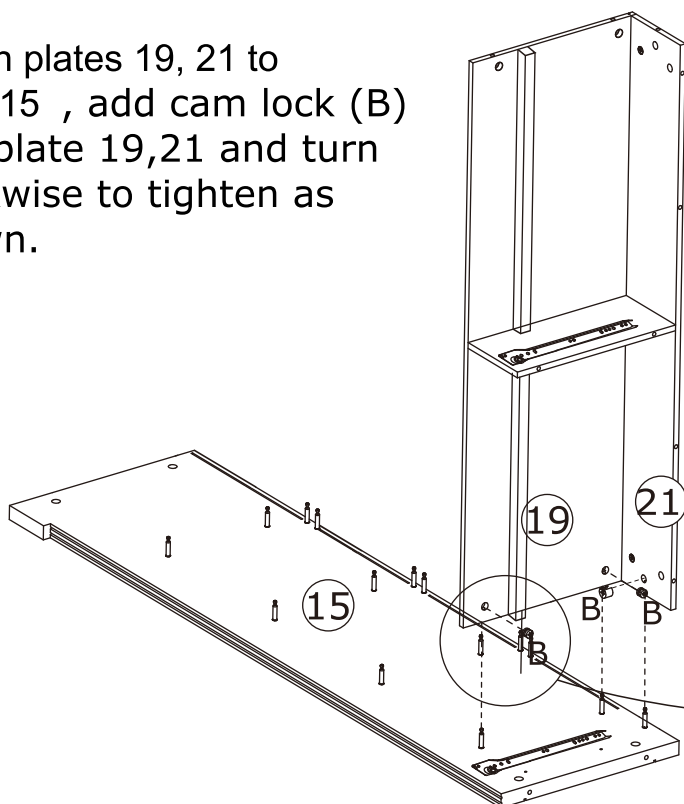

9

 
 
 
B x 2



M15 x 10 mm




Attach plate 9 to plate 15, add cam lock (B) into plate 9 and turn clockwise to tighten as shown.

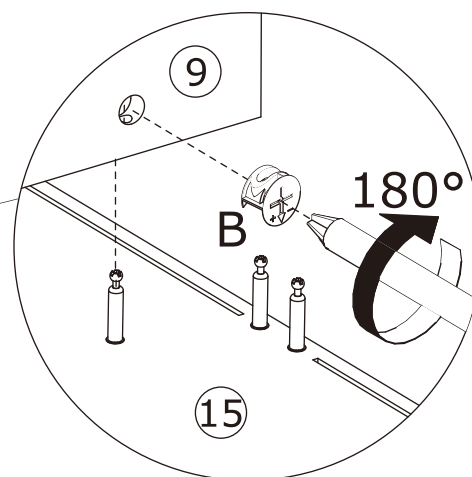
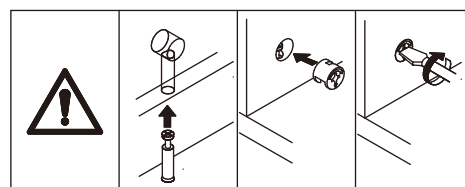
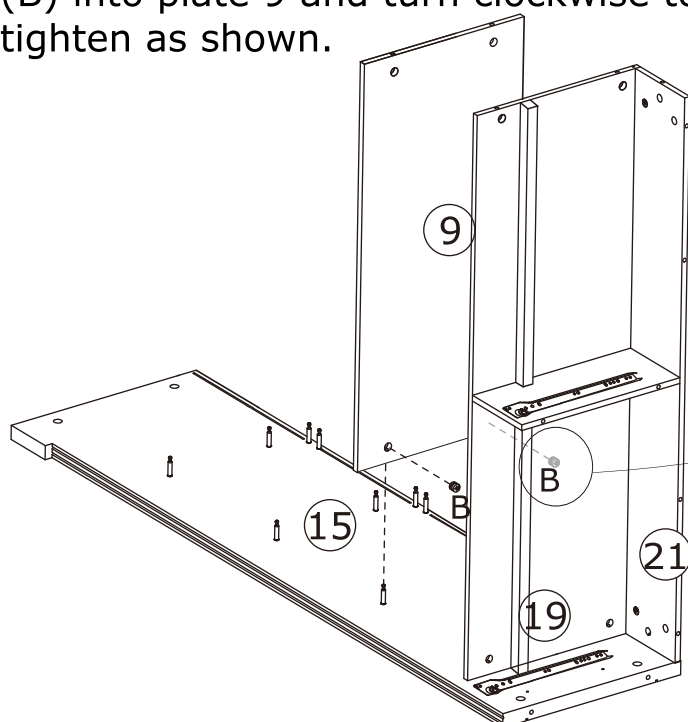


10

 B x 2
M15 x 10 mm



   Attach plate 9 to plate 15 , add cam lock (B) into plate 9 and turn clockwise to tighten as shown.

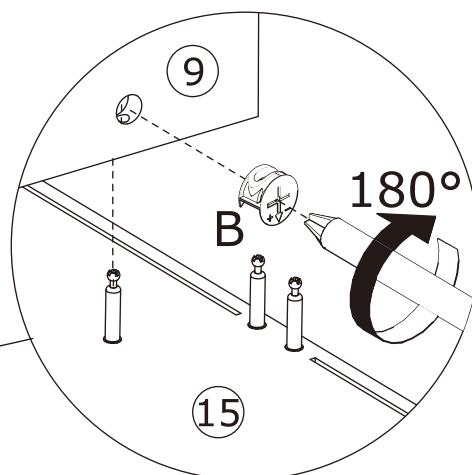
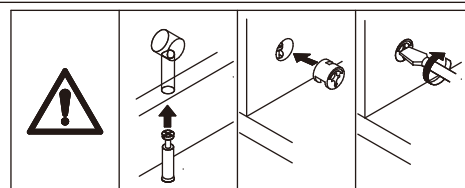
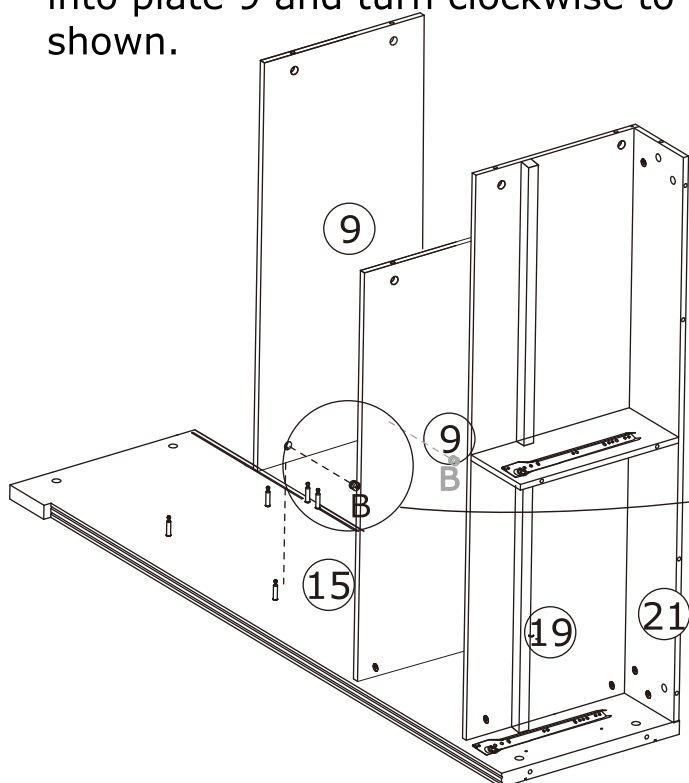


11

B x 2
M15 x 10 mm




   Attach plate 9 to plate 15 , add cam lock (B) into plate 9 and turn clockwise to tighten as shown.

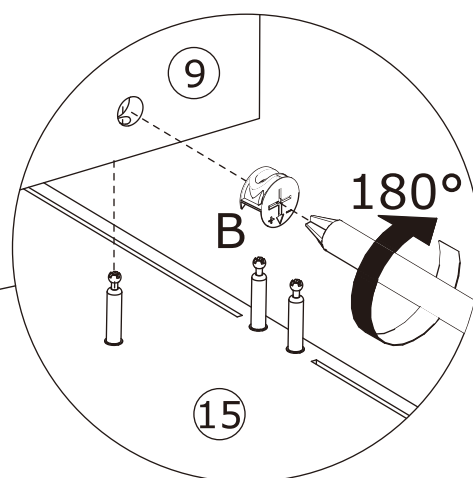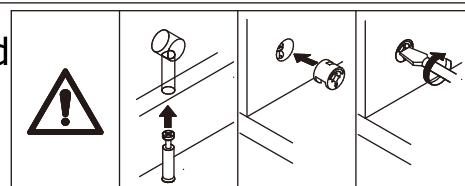
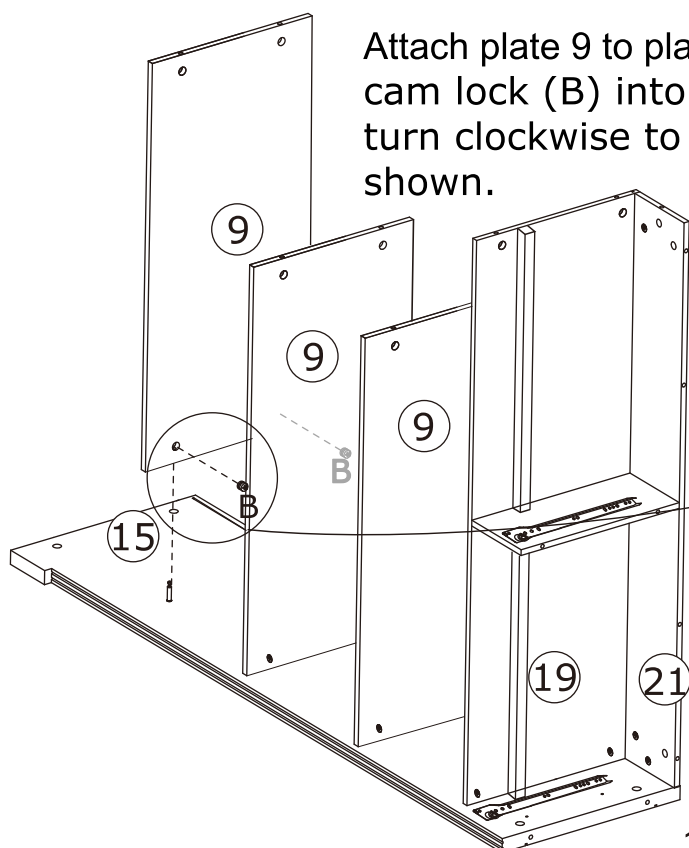


12


 
Attach plate 17 to plates 9 and 19 at first.

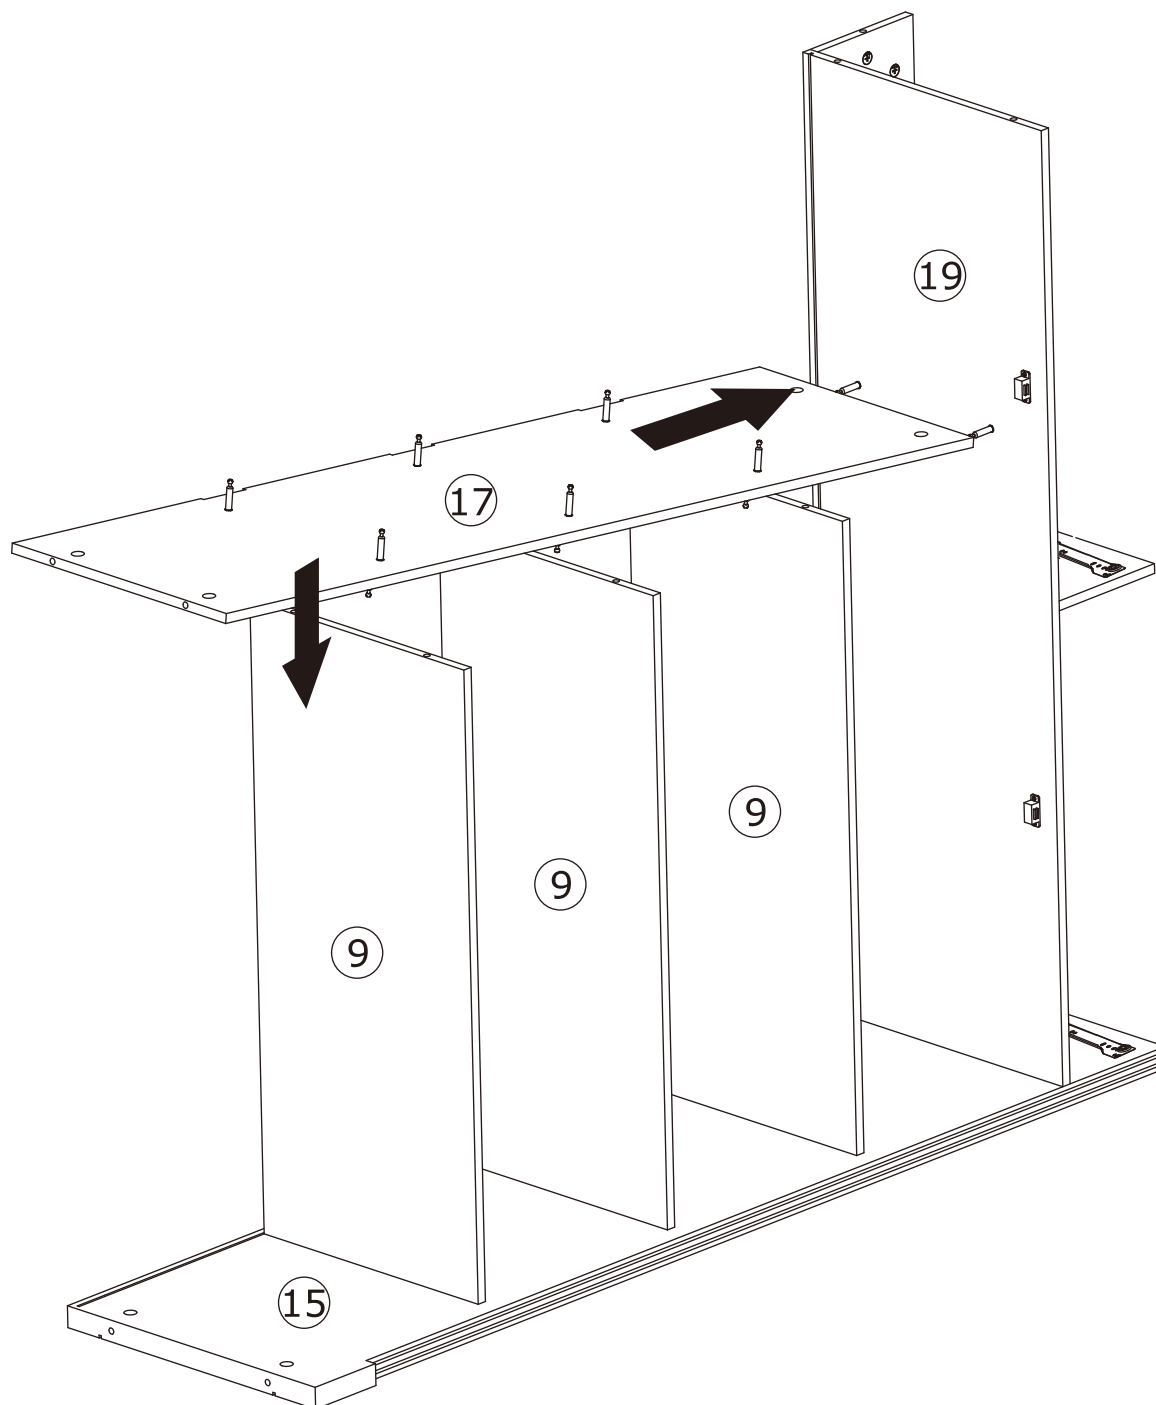



13

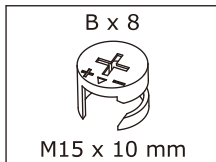  


 
 
Secure plate 17 to plates 9 and 19 with eccentric wheels (B) as shown.

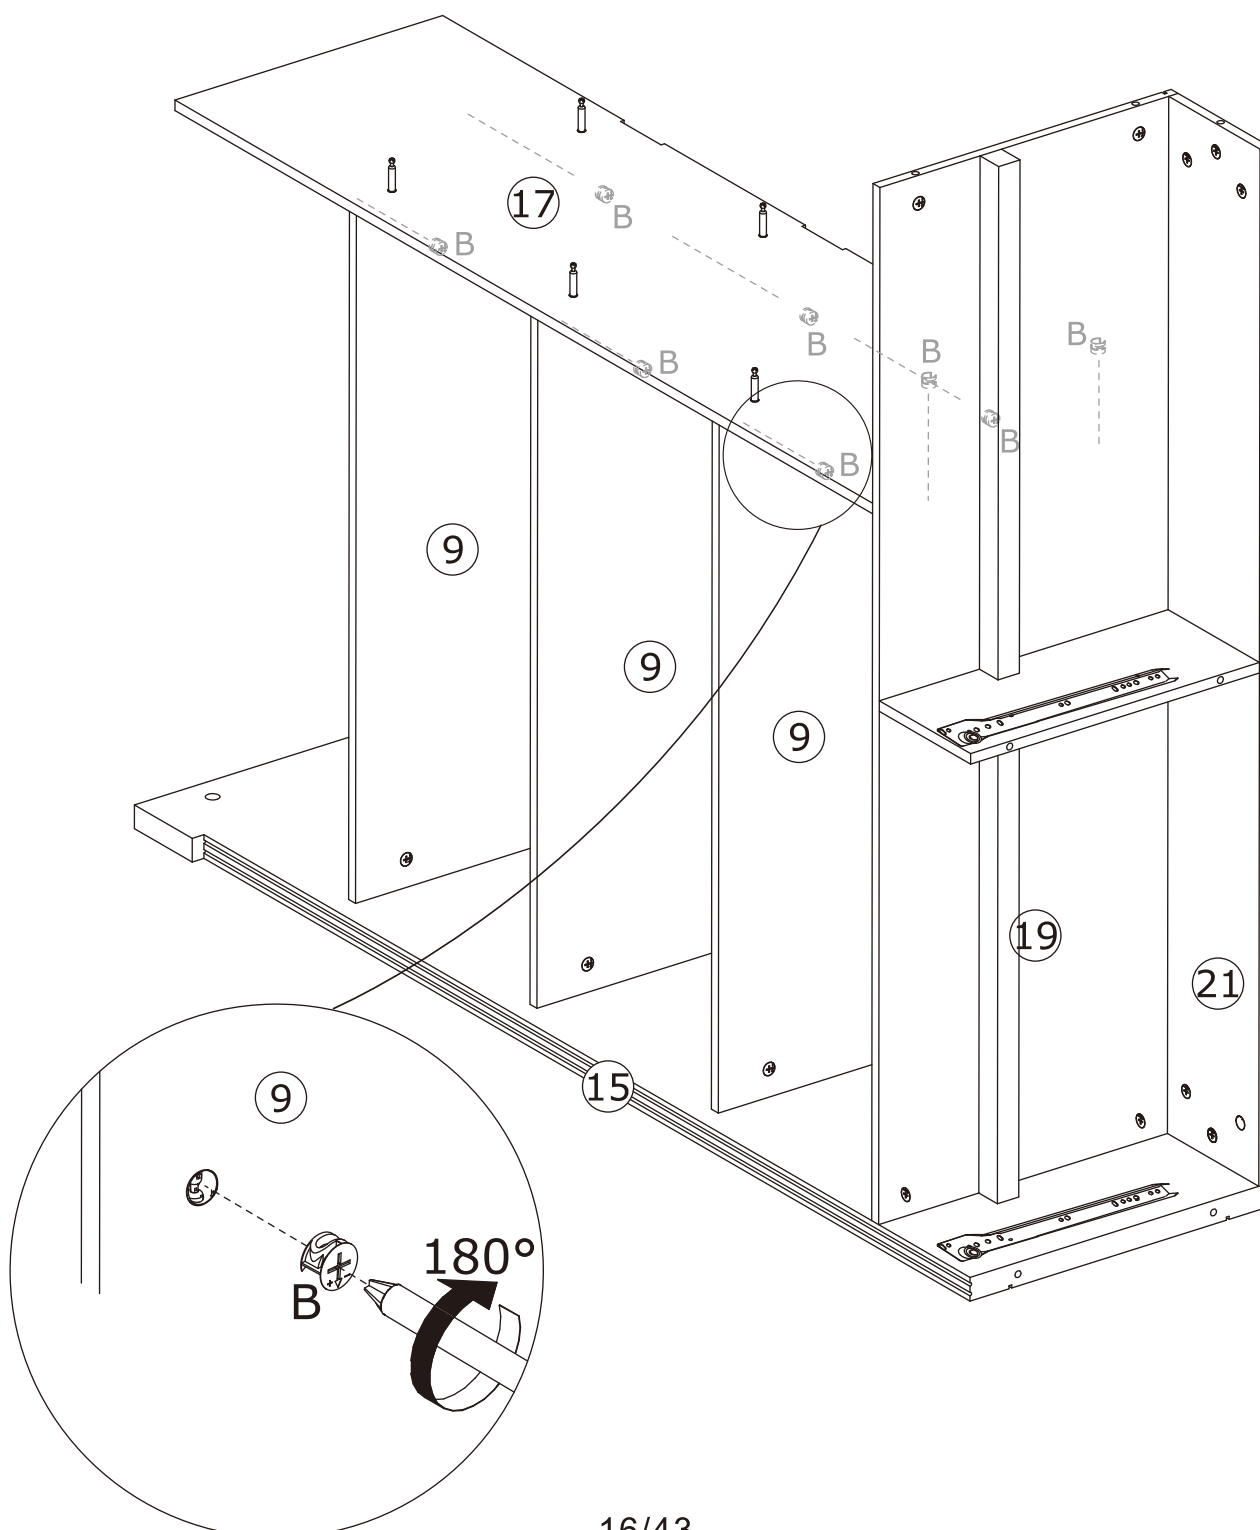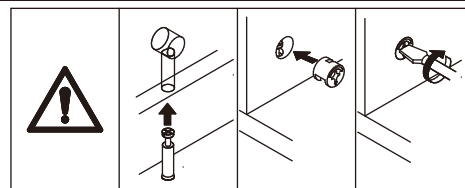

14

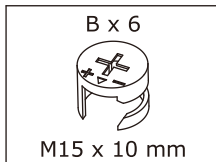  

   
Attach plate 11 to plate 15, add cam lock (B) into plate 11 and turn clockwise to tighten as shown.

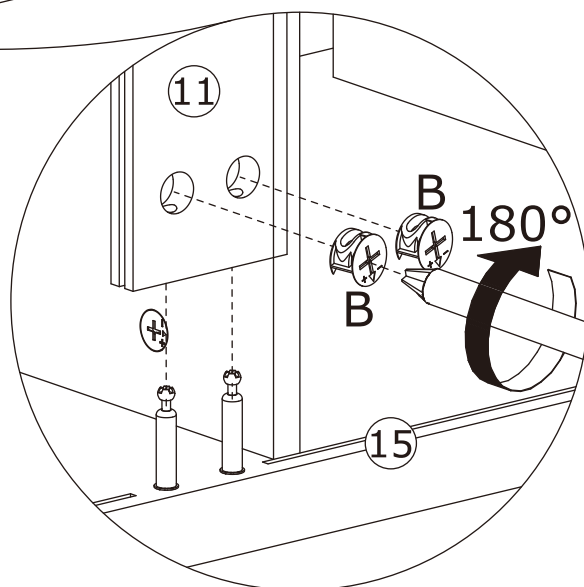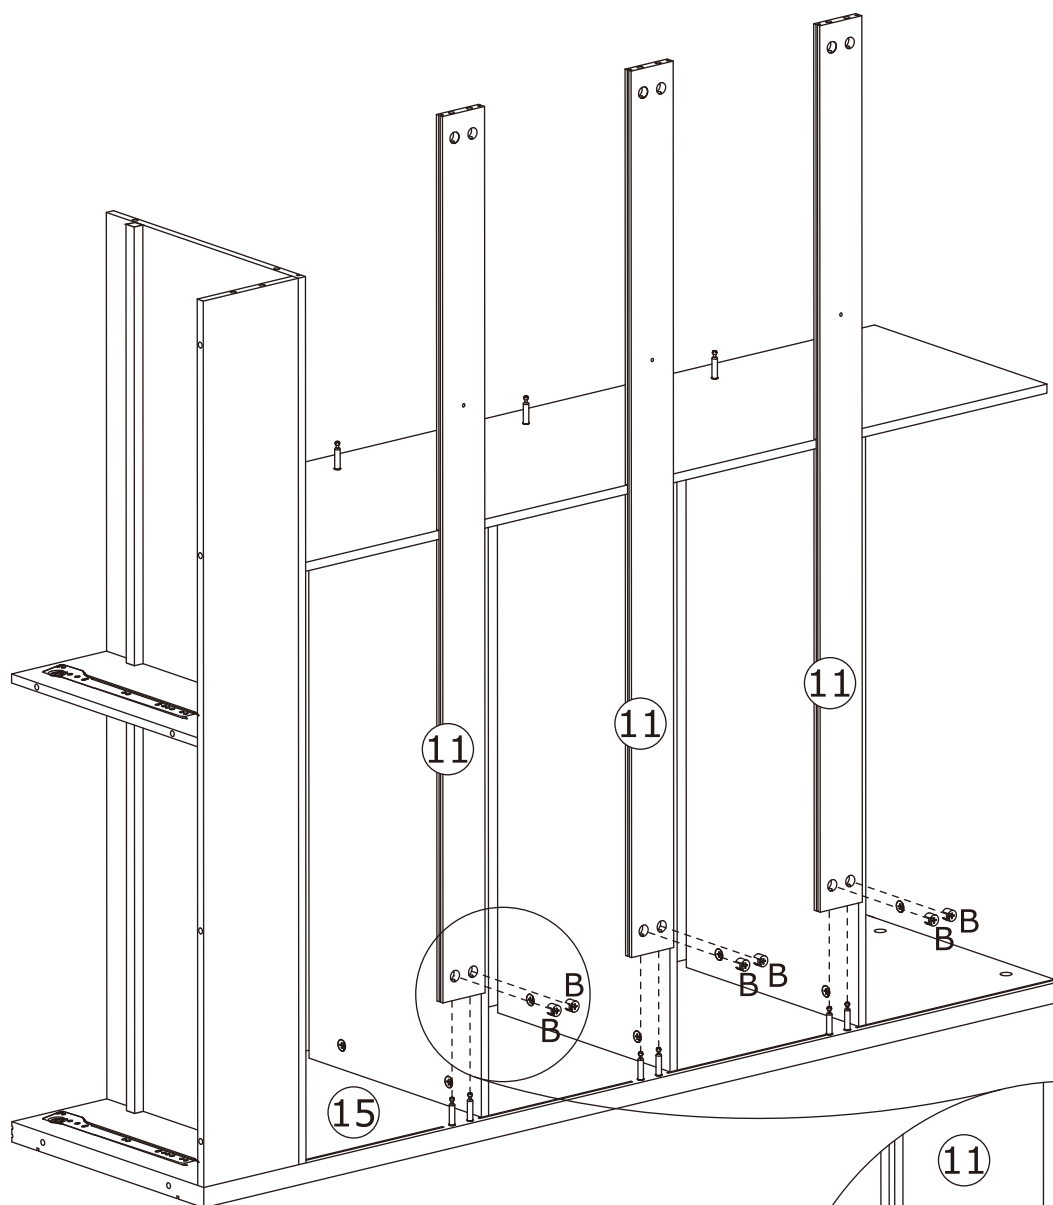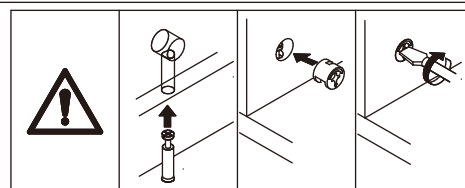



15




 
M3.5 x 25 mm




 
 
Fix plate 11 to plate 17 using screw (I) as shown.

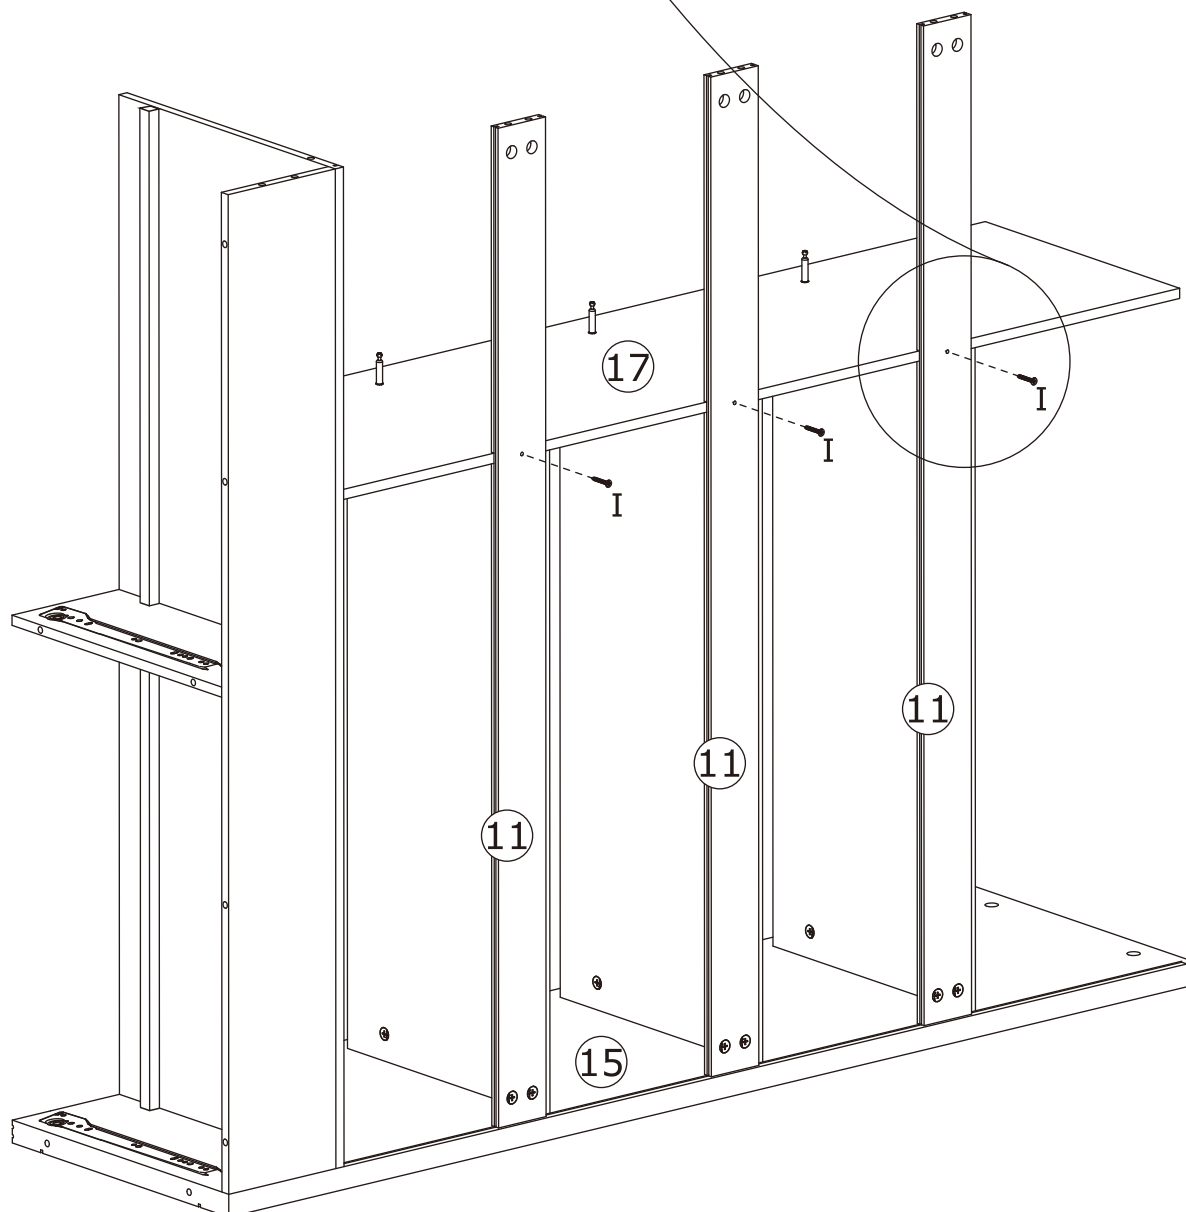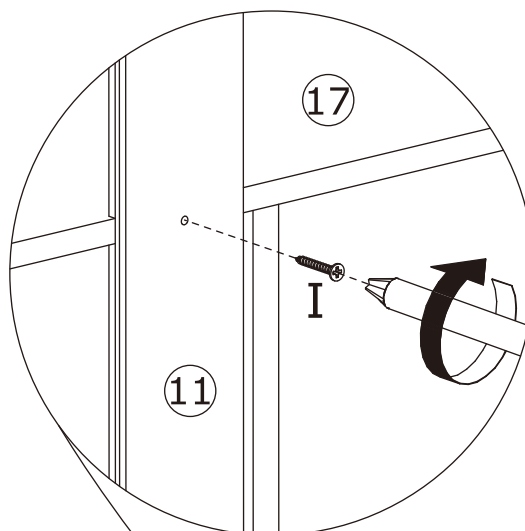

16

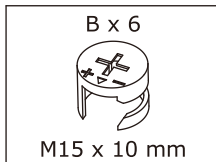  


   Attach plate 10 to plate 17, add cam lock (B) into plate 10 and turn clockwise to tighten as shown.

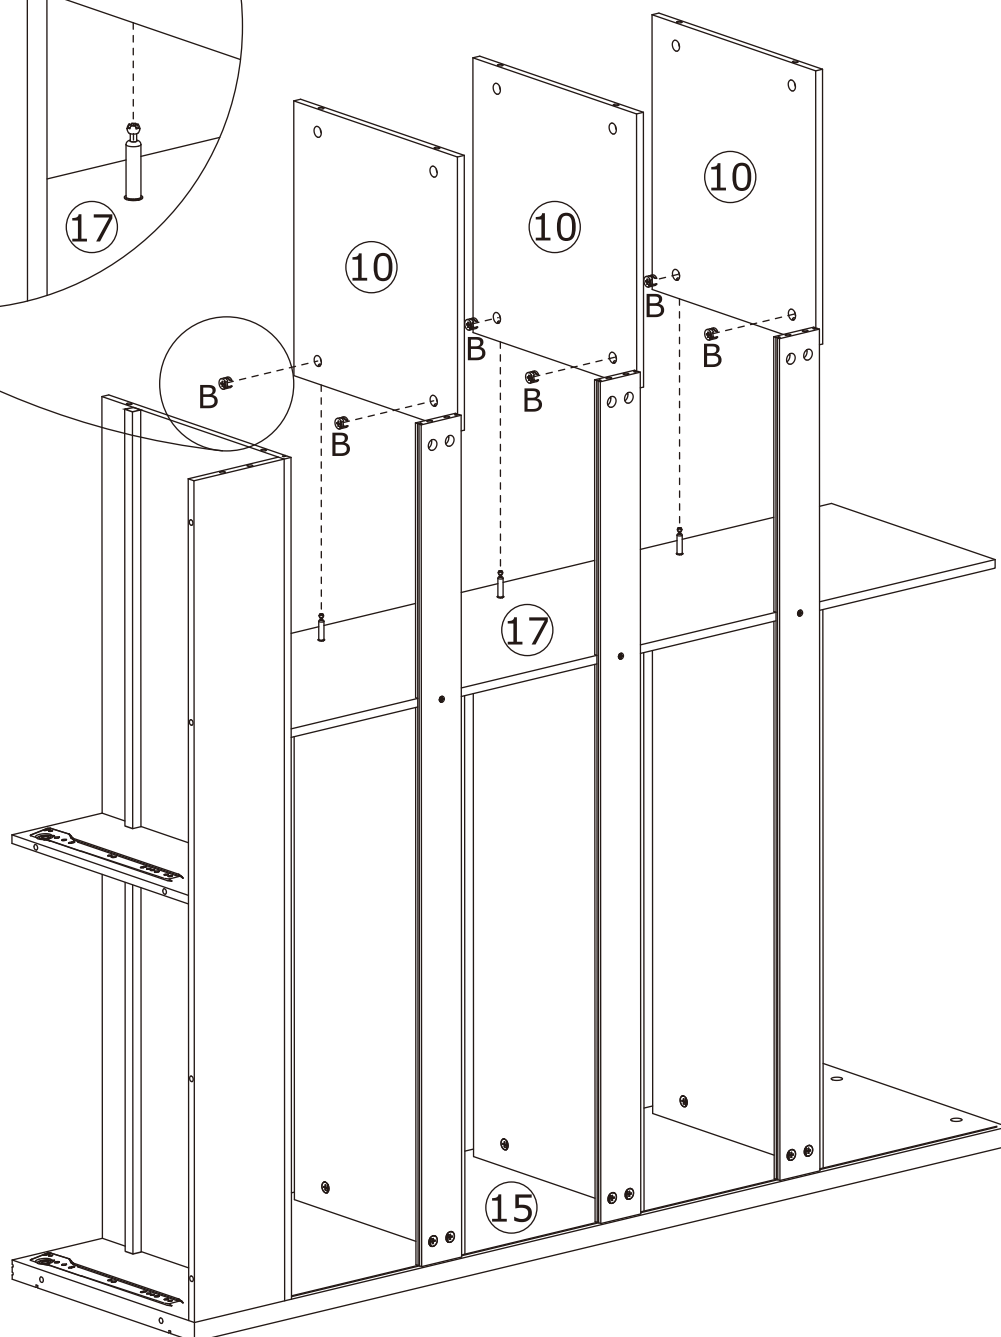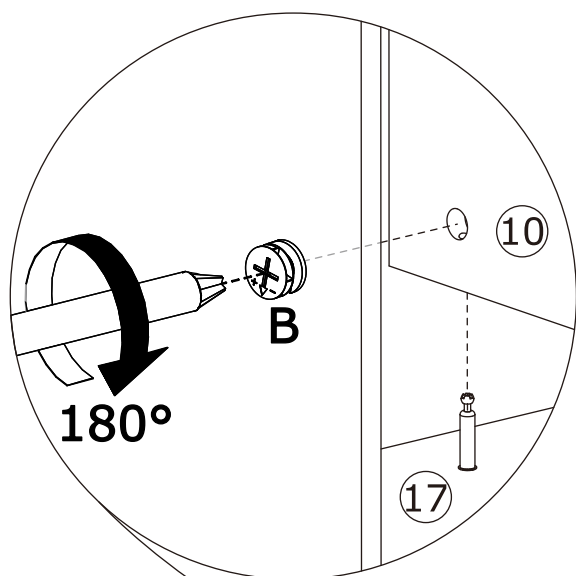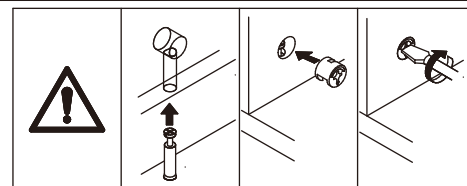

17

 Insert plate 12 along the grooves as shown.



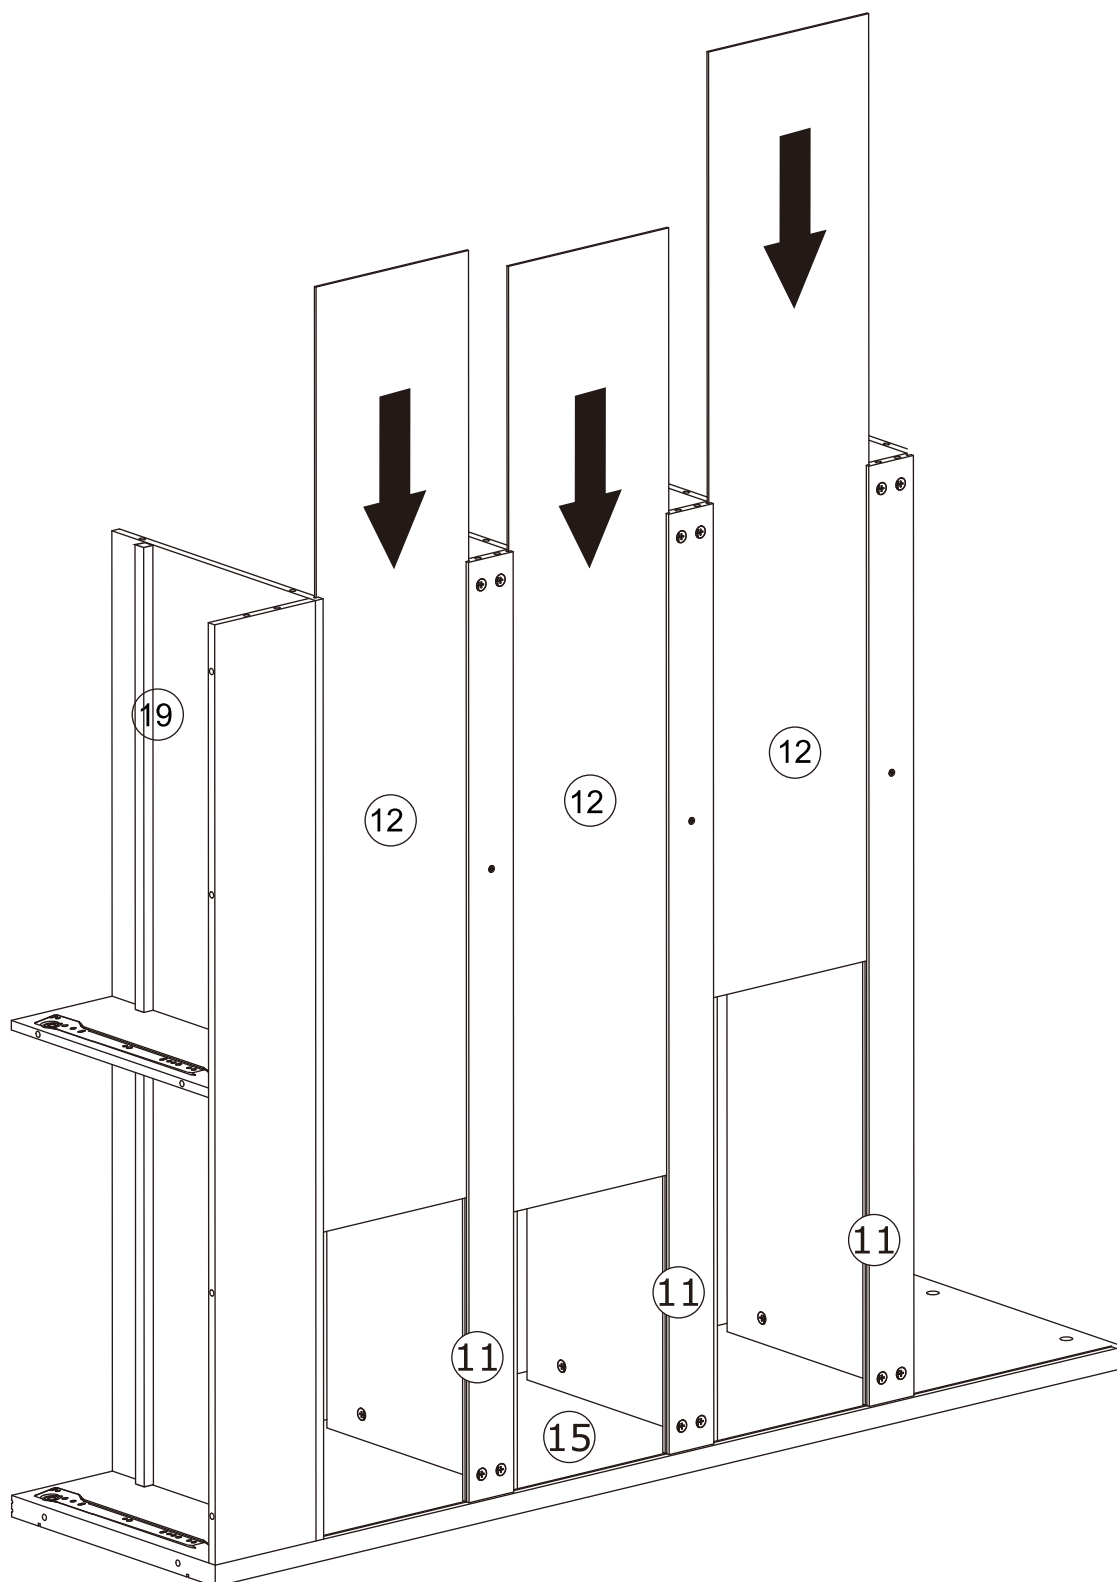


18


B x 7



   M15 x 10 mm

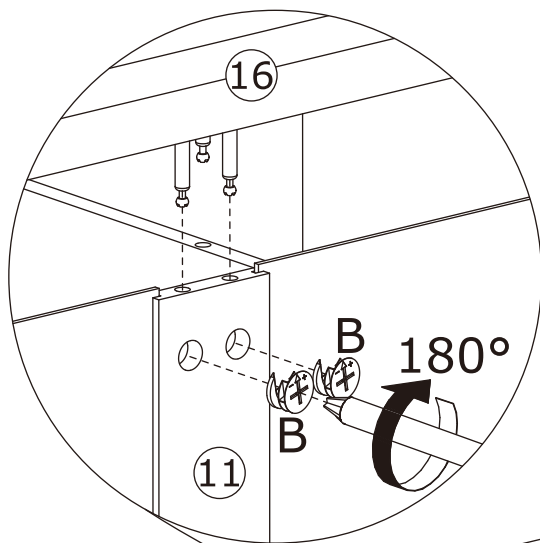

 Attach plate 16 to plate 21, 19, 10 and 11, add cam lock (B) into and turn clockwise to tighten as shown. Then insert plate 12 along the grooves as shown.

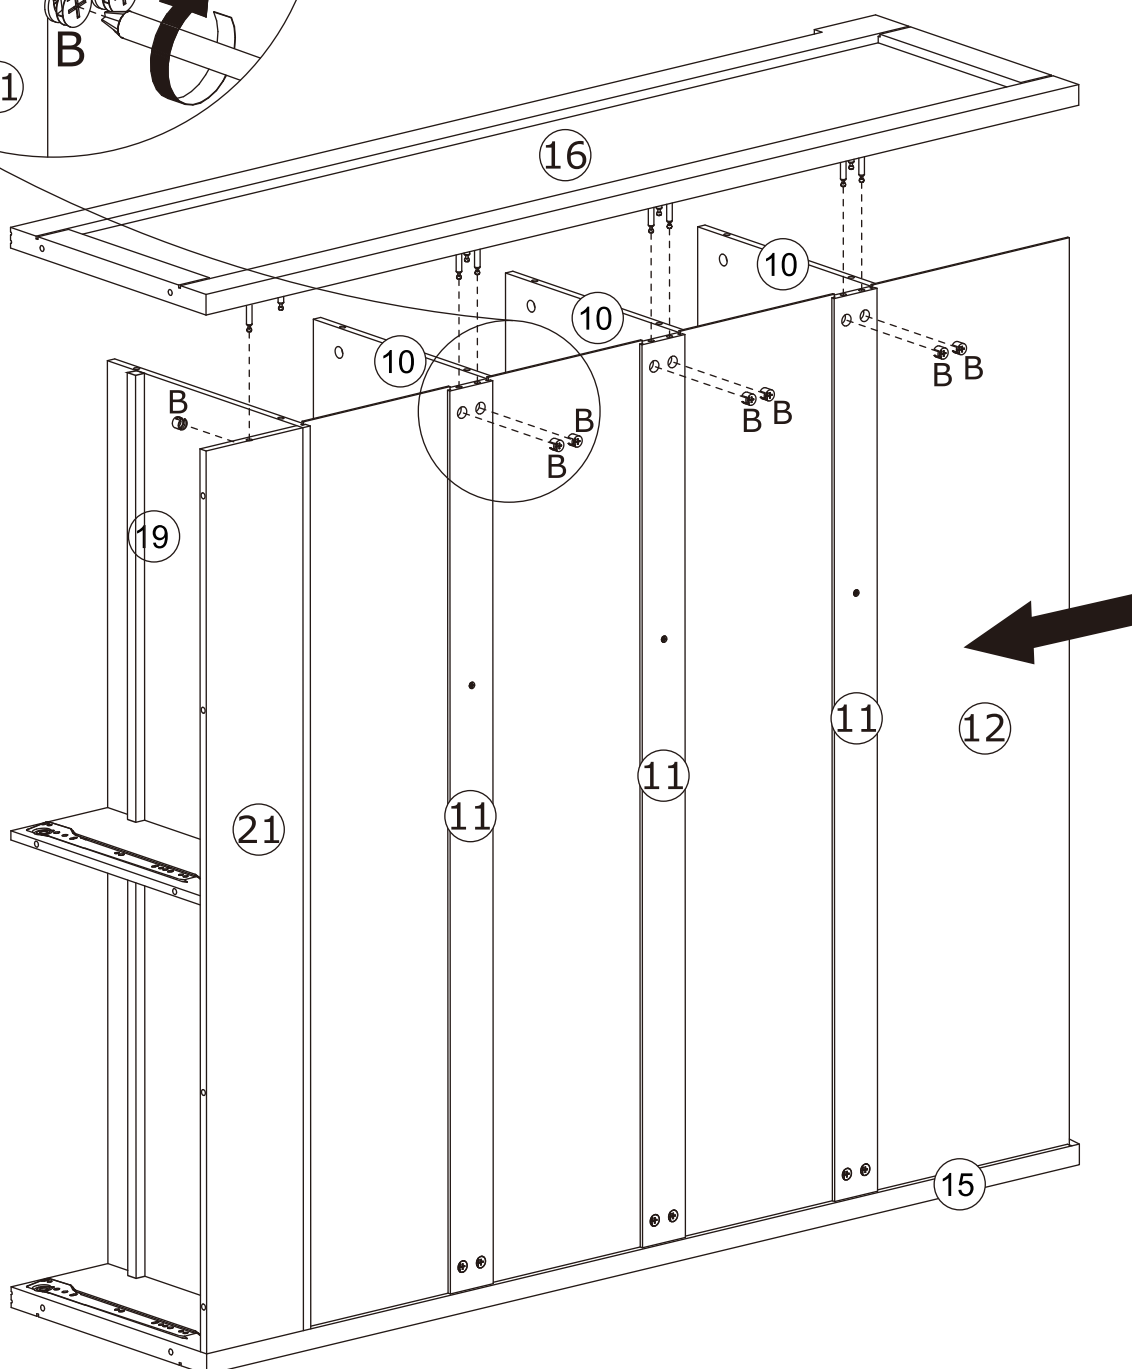

19



 
 
B x 8



M15 x 10 mm




Attach plate 16 to plate 10 and 19 , add cam lock (B) into and turn clockwise to tighten as shown.




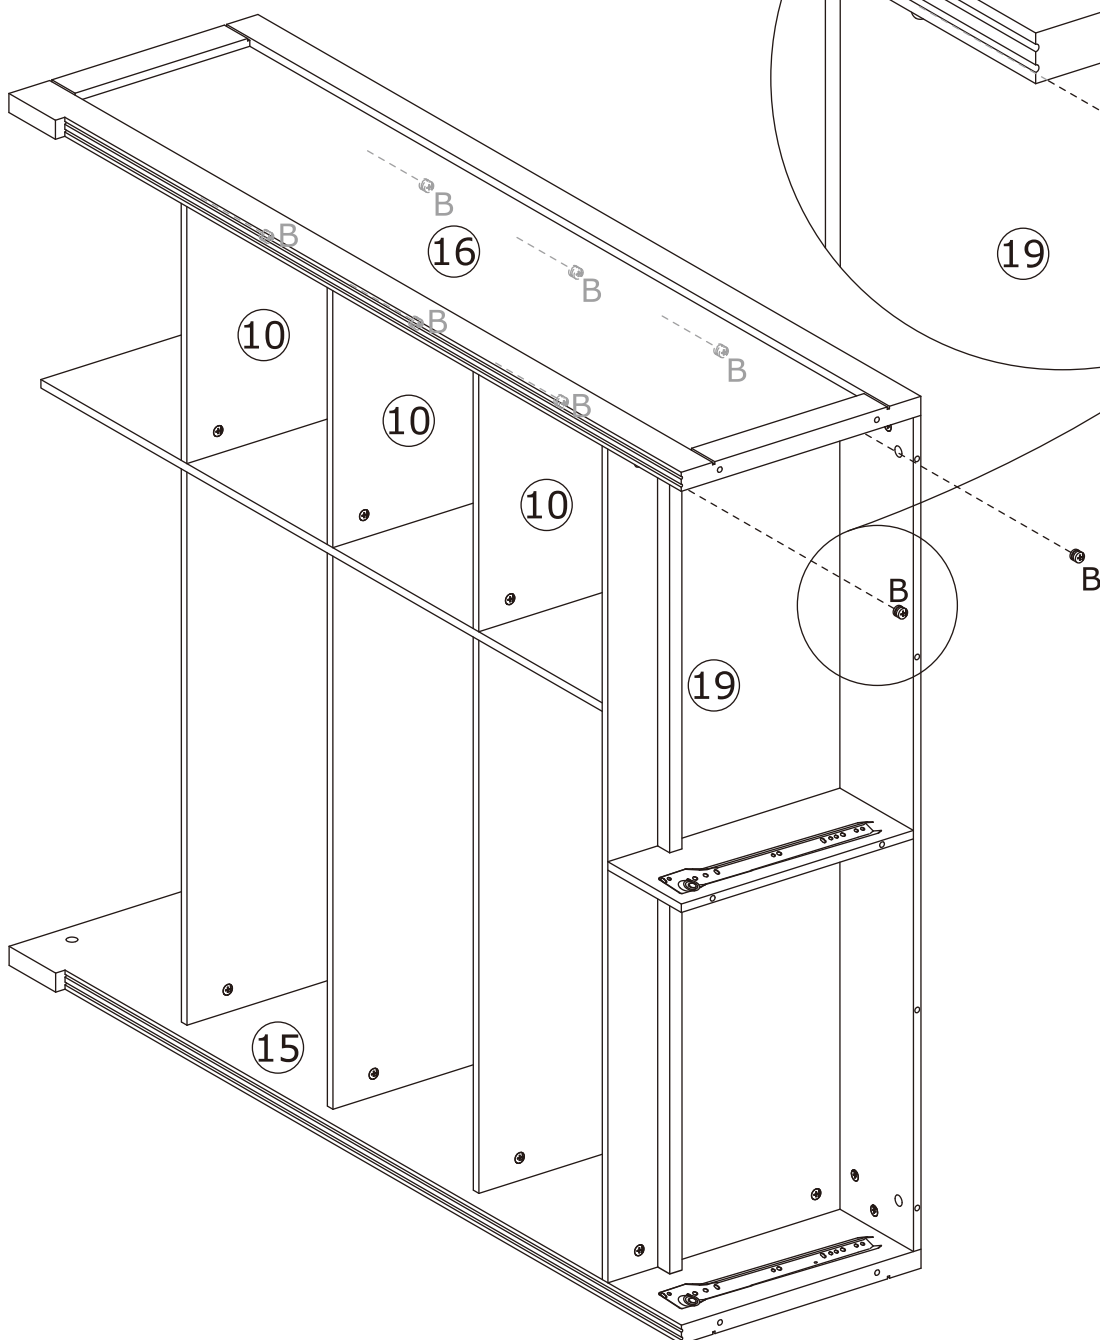
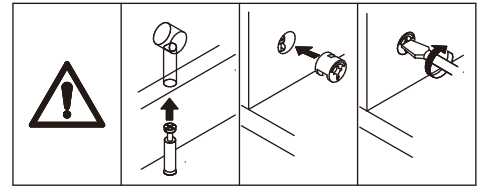


20




 
Ax 10
M6 x 40 mm



  
 
 
 
Screw eccentric rod (A) into plate 28 and install the door suction (U) to plate 25 and 26 with the screw (L) as shown.

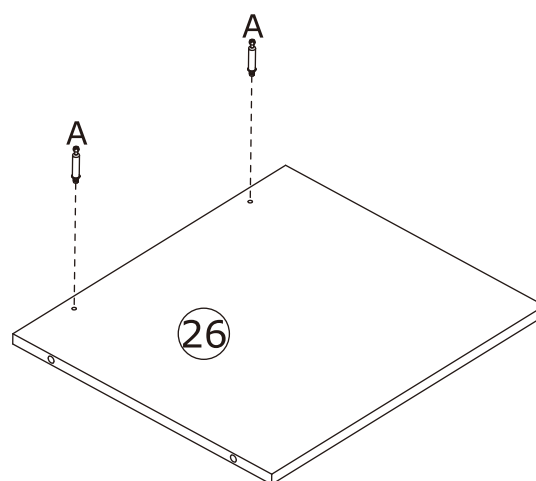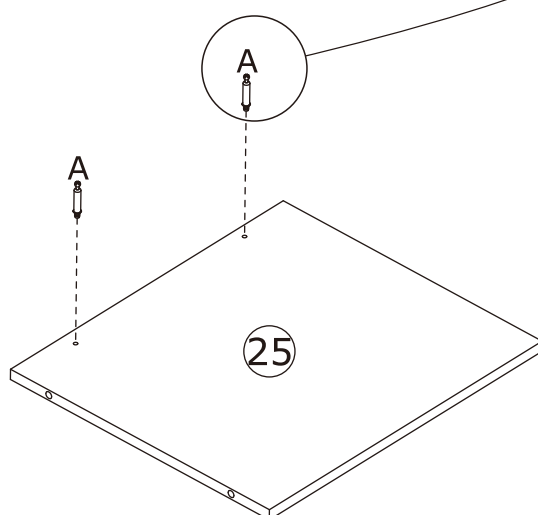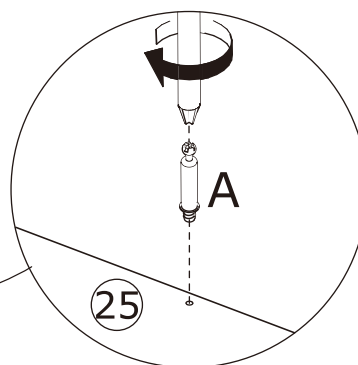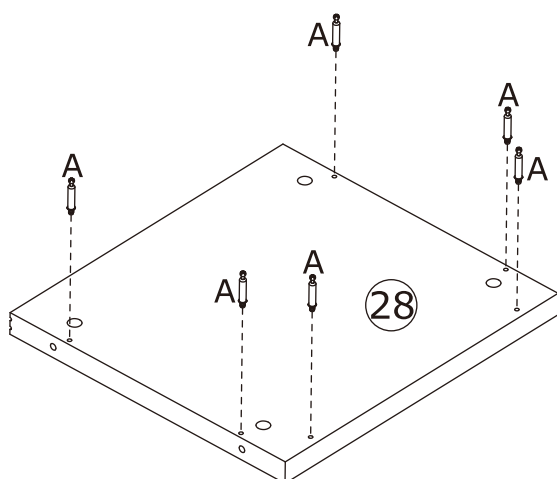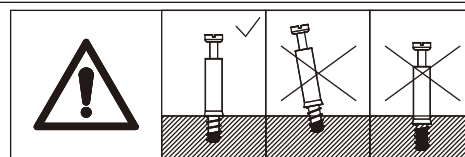


21

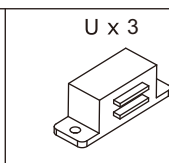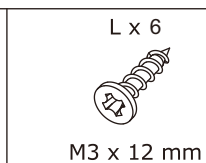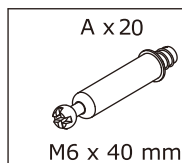    

    Screw eccentric rod (A) into plates 13, 23, and 18 as shown.

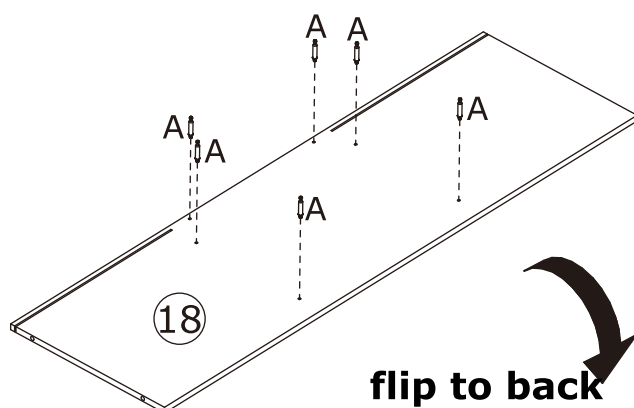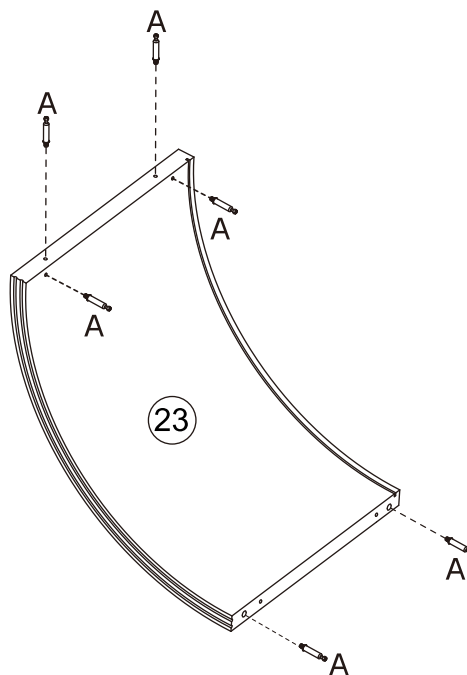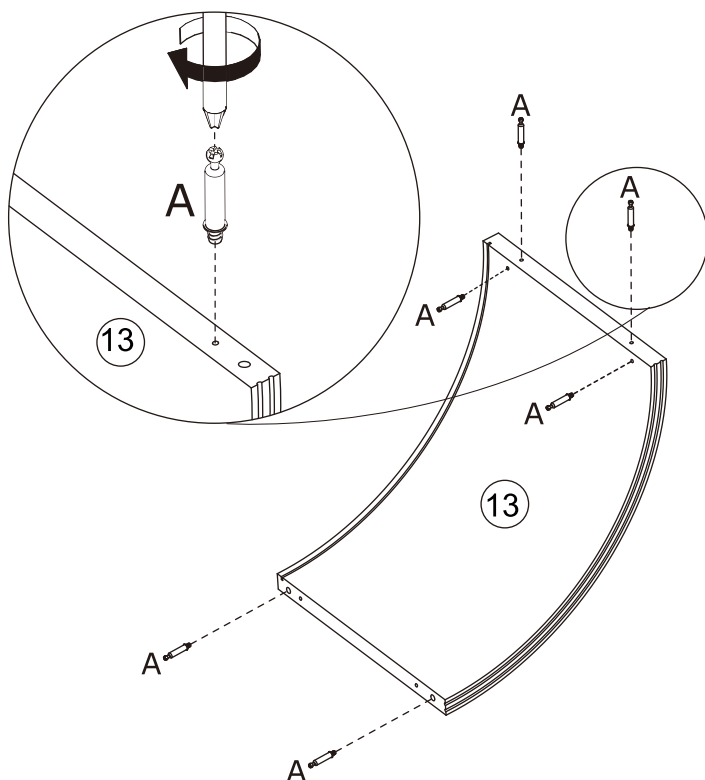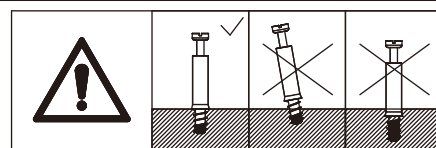


flip to back


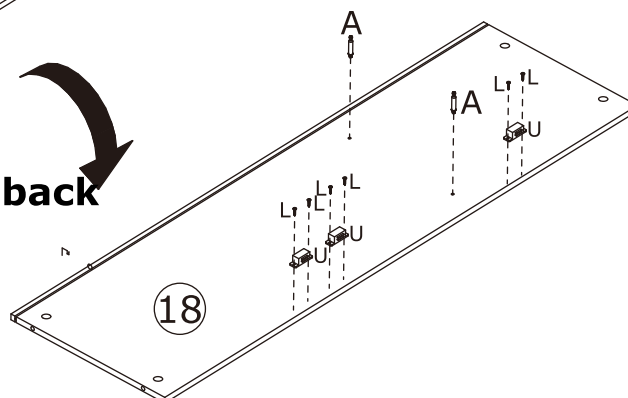 


22

 B x 4
M15 x 10 mm





  Attach plate 25, 27 and 26 together , add cam lock (B) into and turn clockwise to tighten as shown.

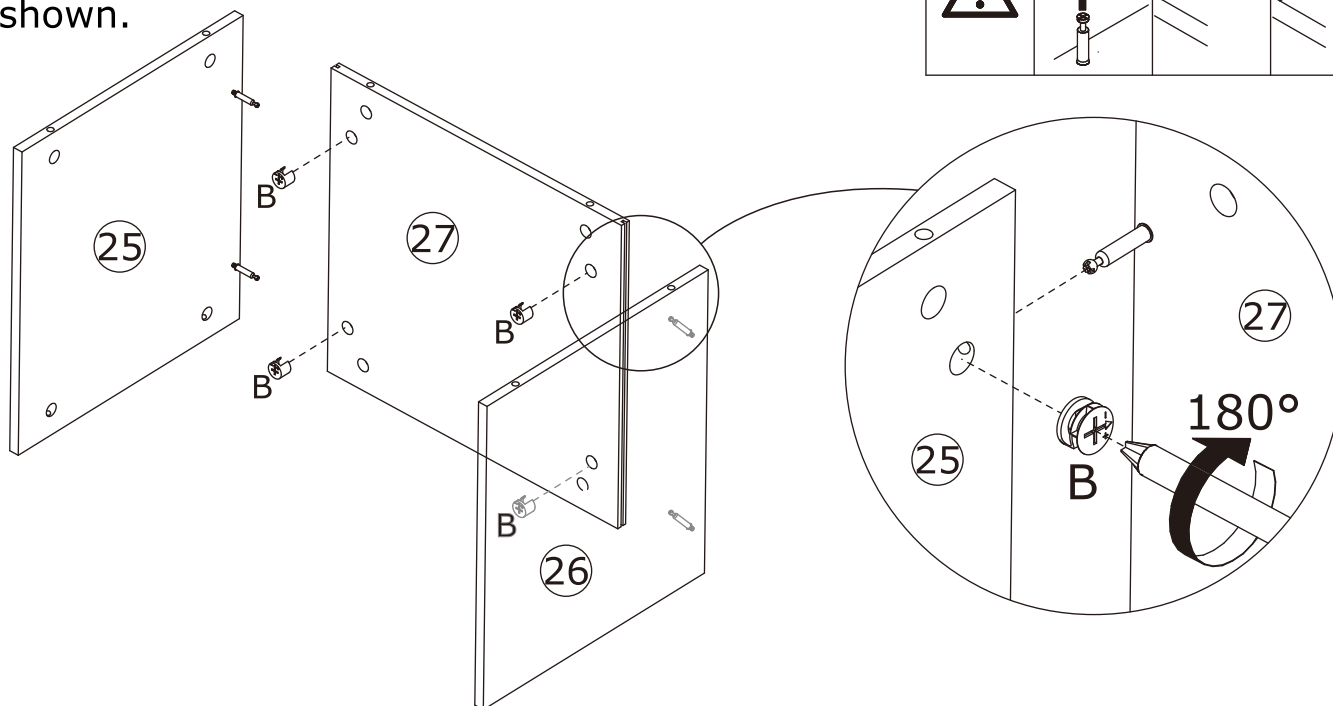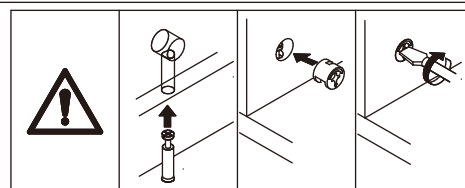

23

  B x 6
M15 x 10 mm

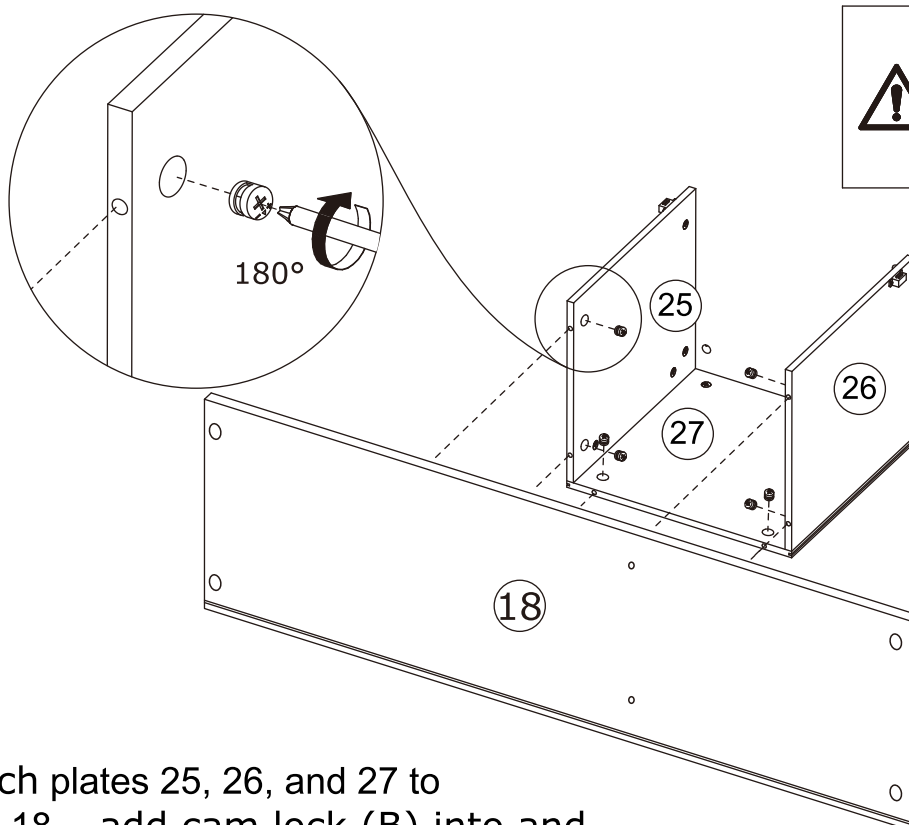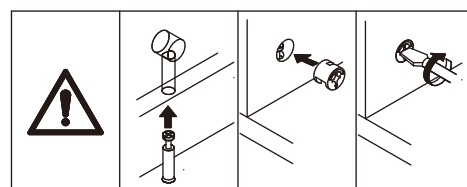


Attach plates 25, 26, and 27 to plate 18 , add cam lock (B) into and turn clockwise to tighten as shown. 25/43

24




B x 6



 M15 x 10 mm




   Attach plate 28 to plates 25, 26, and 27, add cam lock (B) into and turn clockwise to tighten as shown.

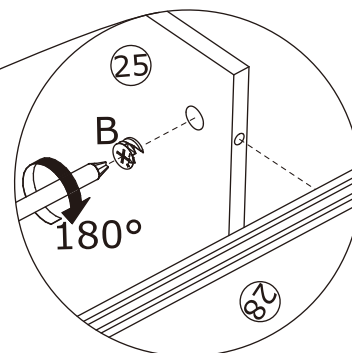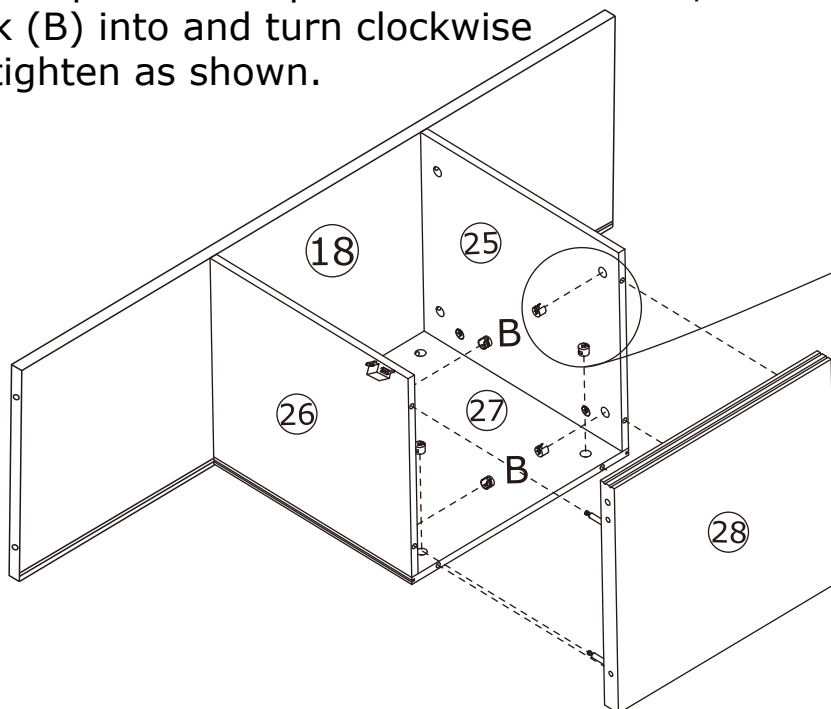
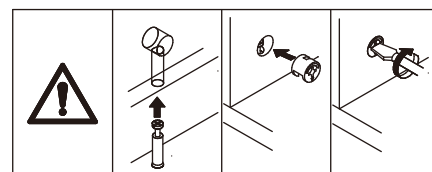







25

 Insert the plate 24 along the grooves as shown.

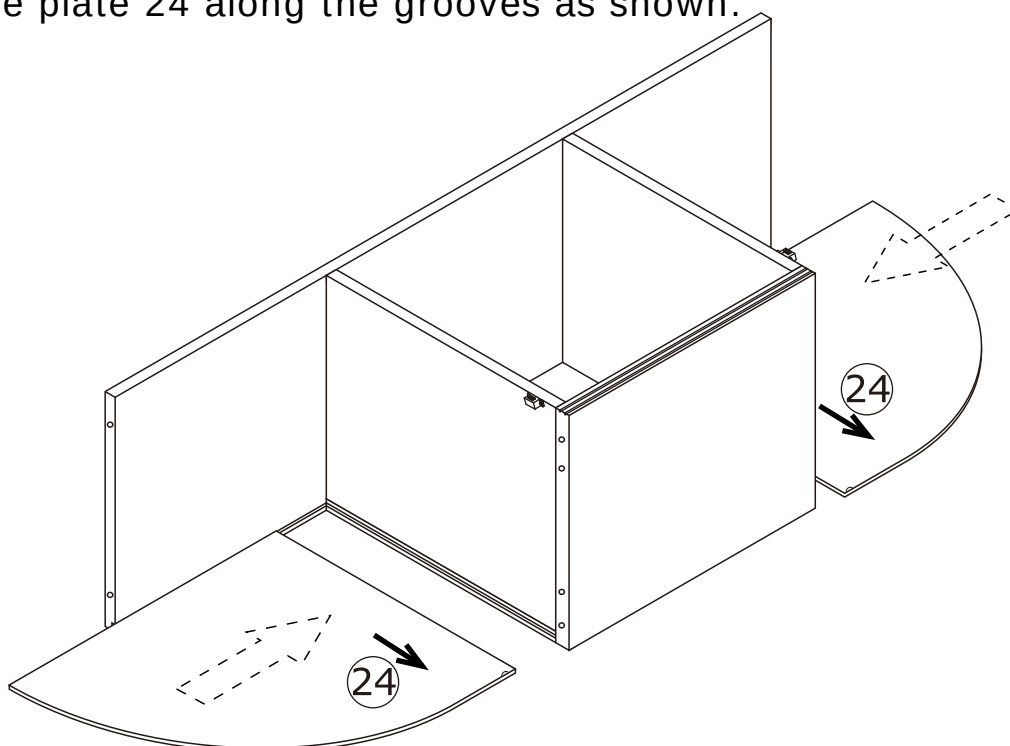

26

  
B x 8  M15 x 10 mm	W x 4  M6x30mm	Ax 2  M6 x 40 mm
---	---	---

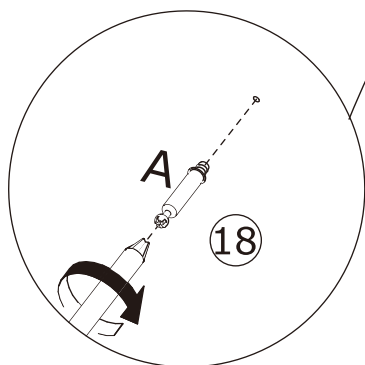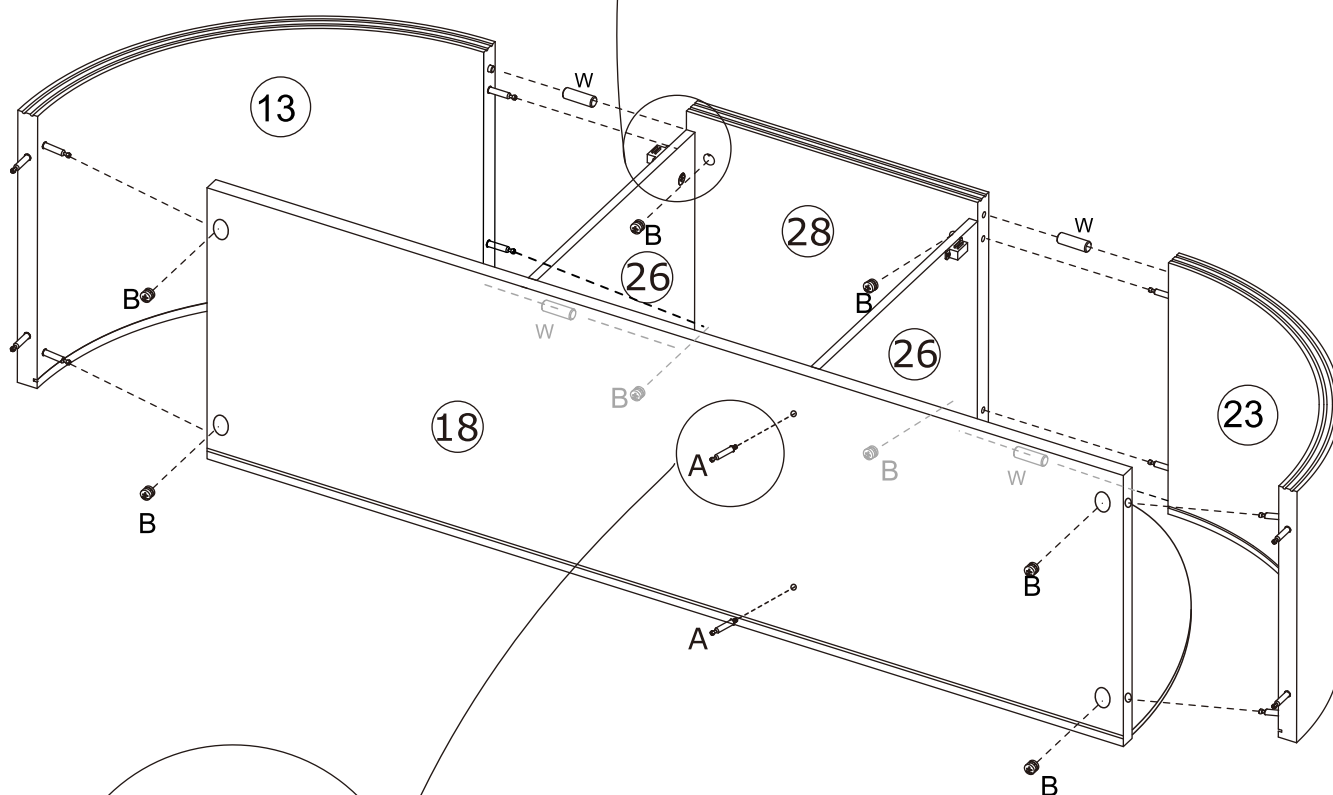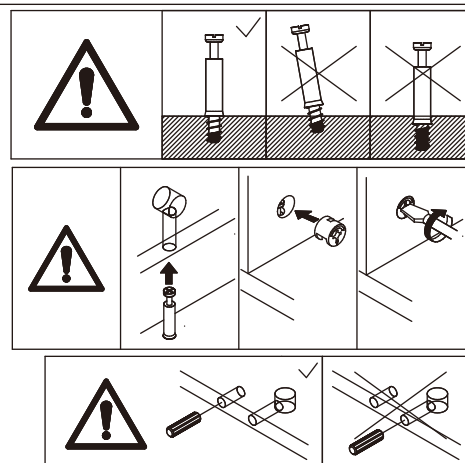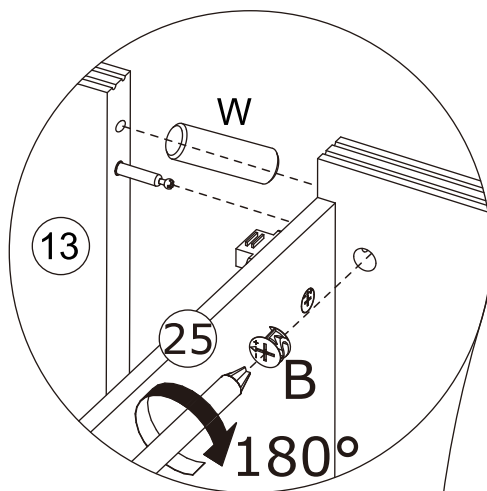     



Insert the dowels (W) to plates 13, 23 .
Attach plate 13 and 23 to plates 18 and 28, add cam lock (B) into and turn clockwise to tighten as shown.

27

 B x 6
M15 x 10 mm






  Connect the two components, add cam lock (B) into and turn clockwise to tighten as shown.


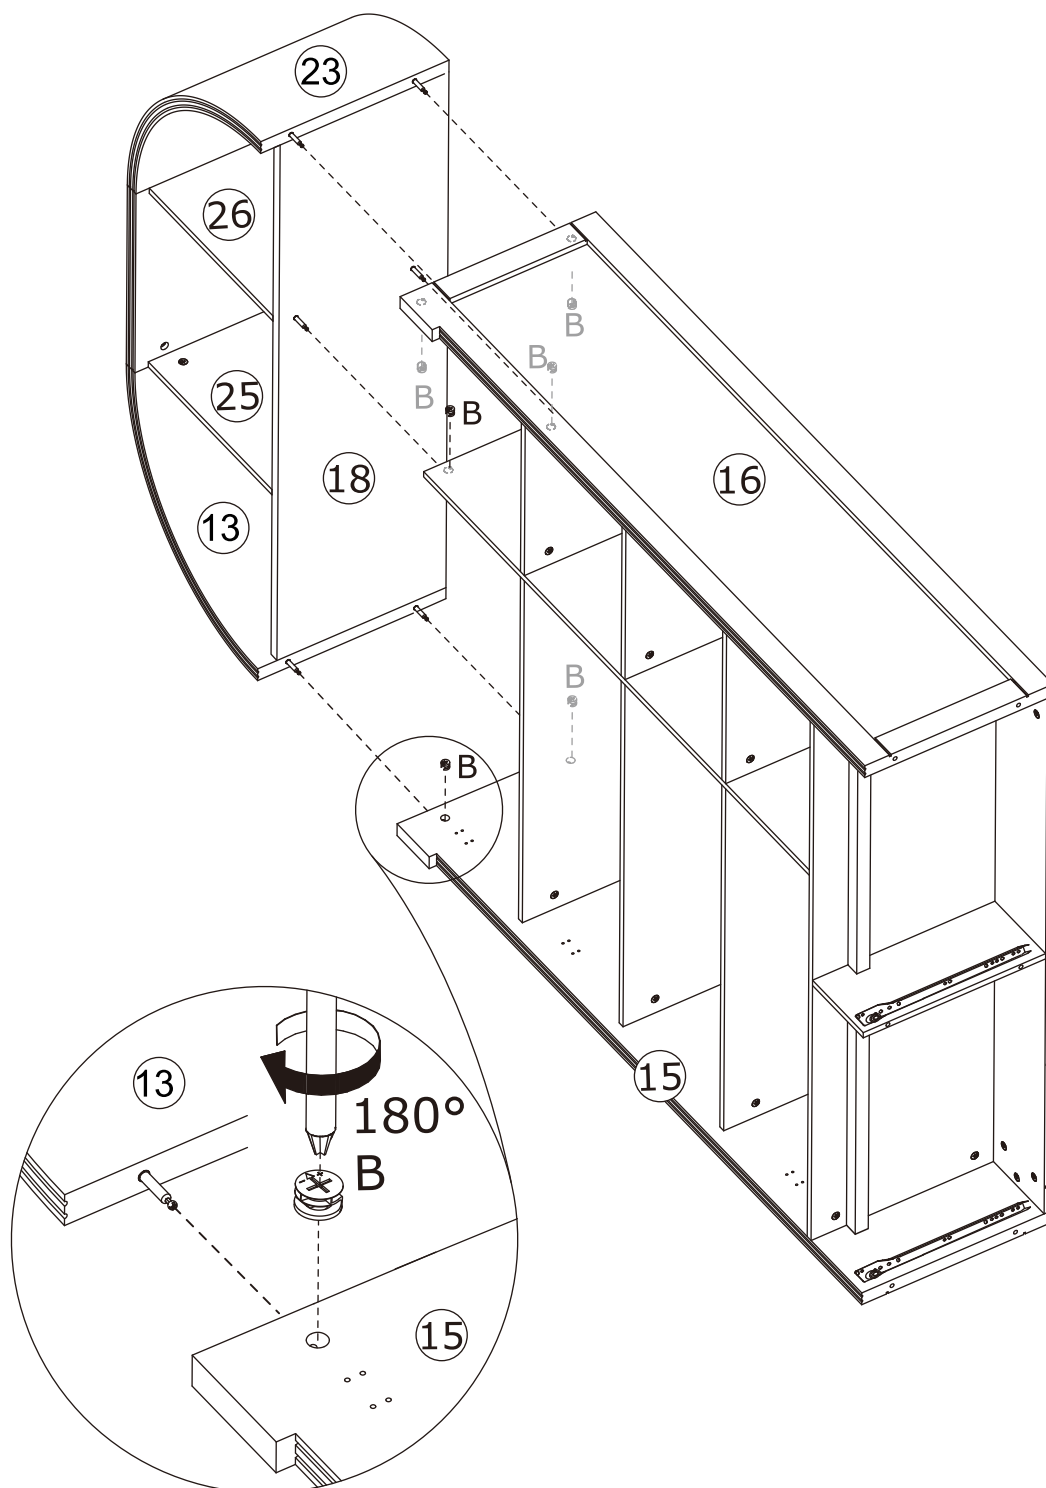
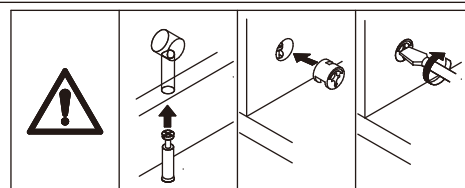


28

  
 
Y x 4

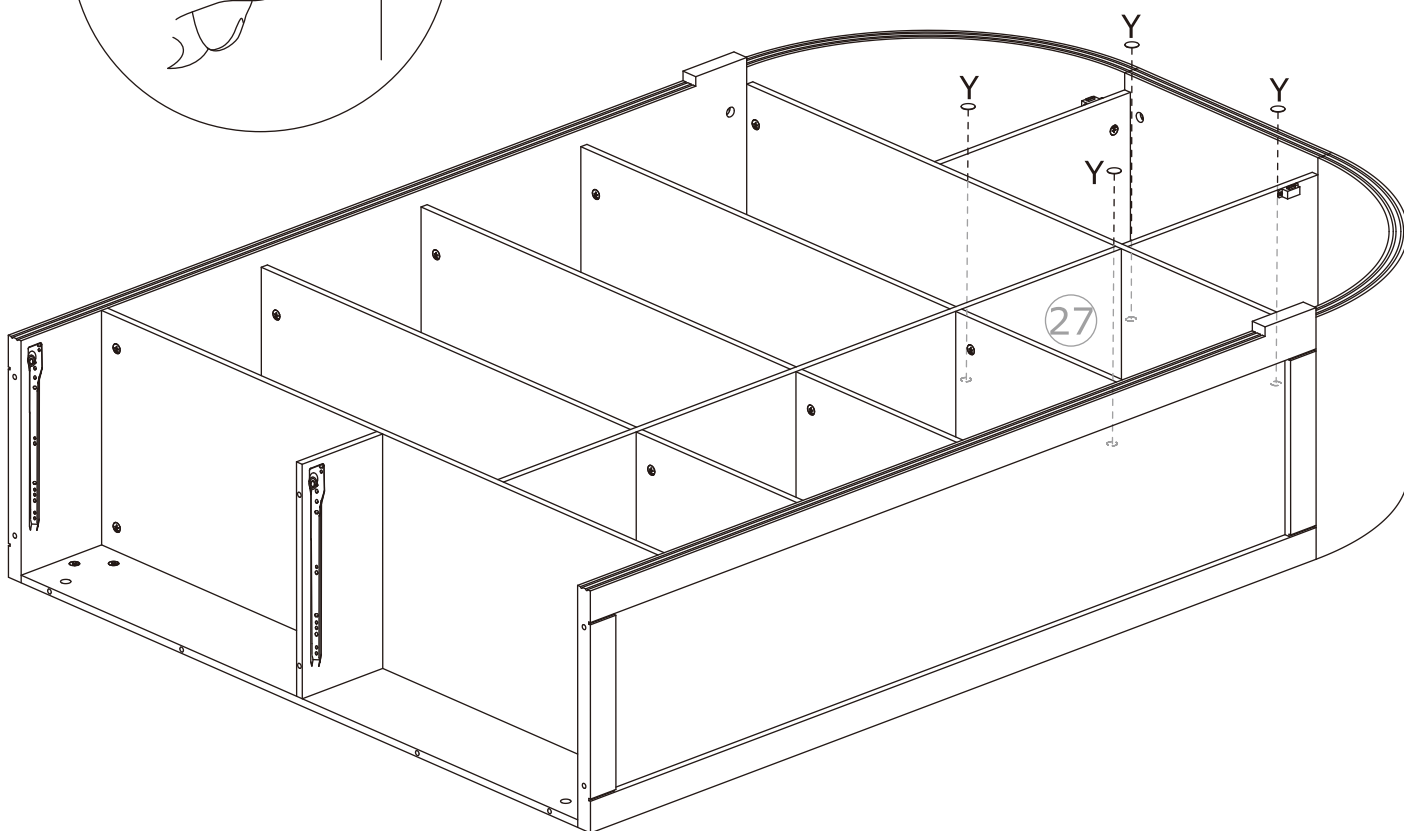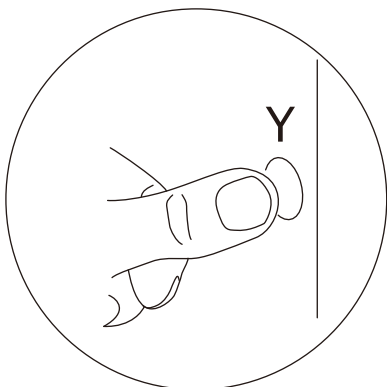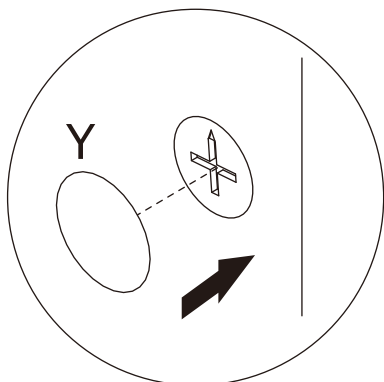


29

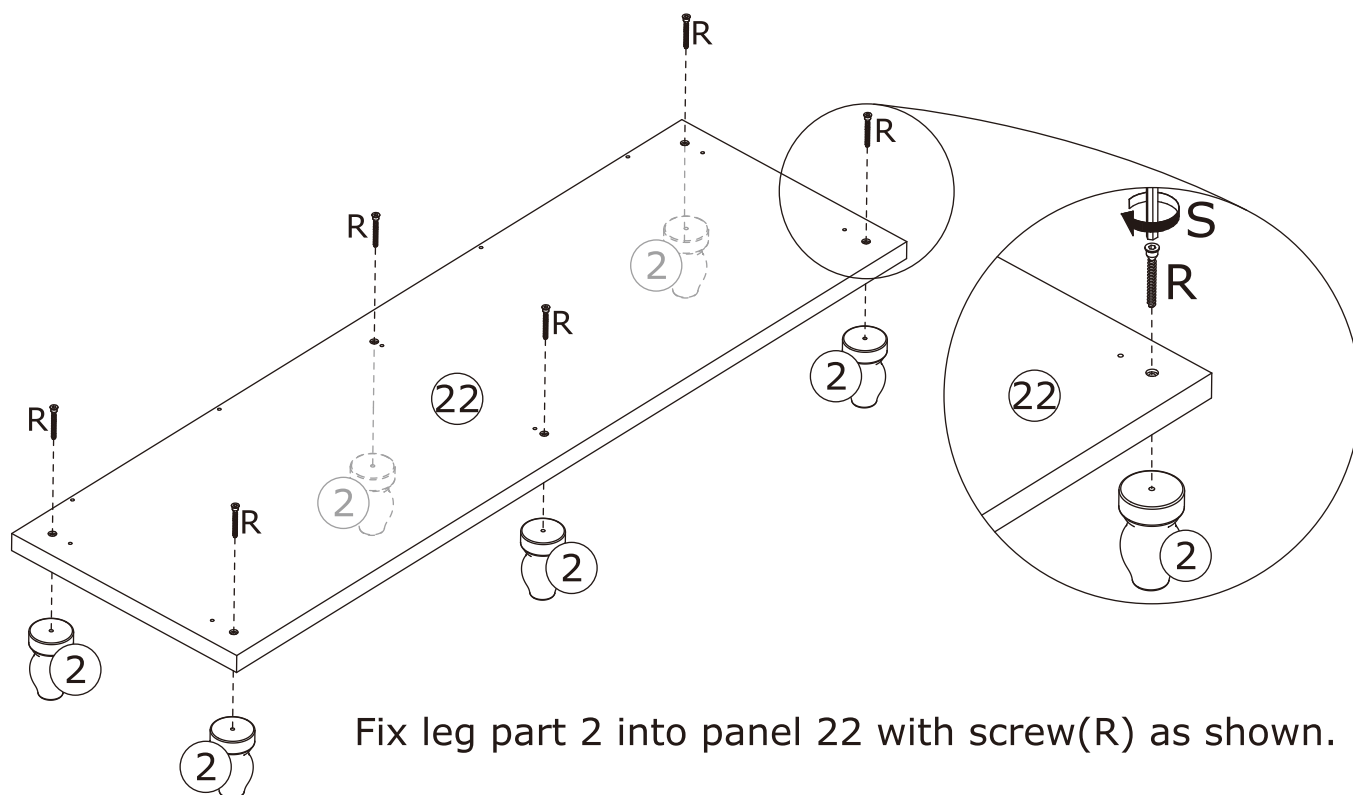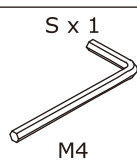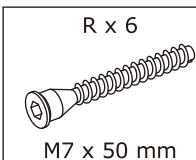   

30

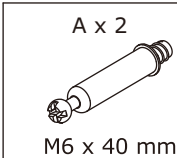  

 Screw eccentric rod(A)
into panel 22 as shown.

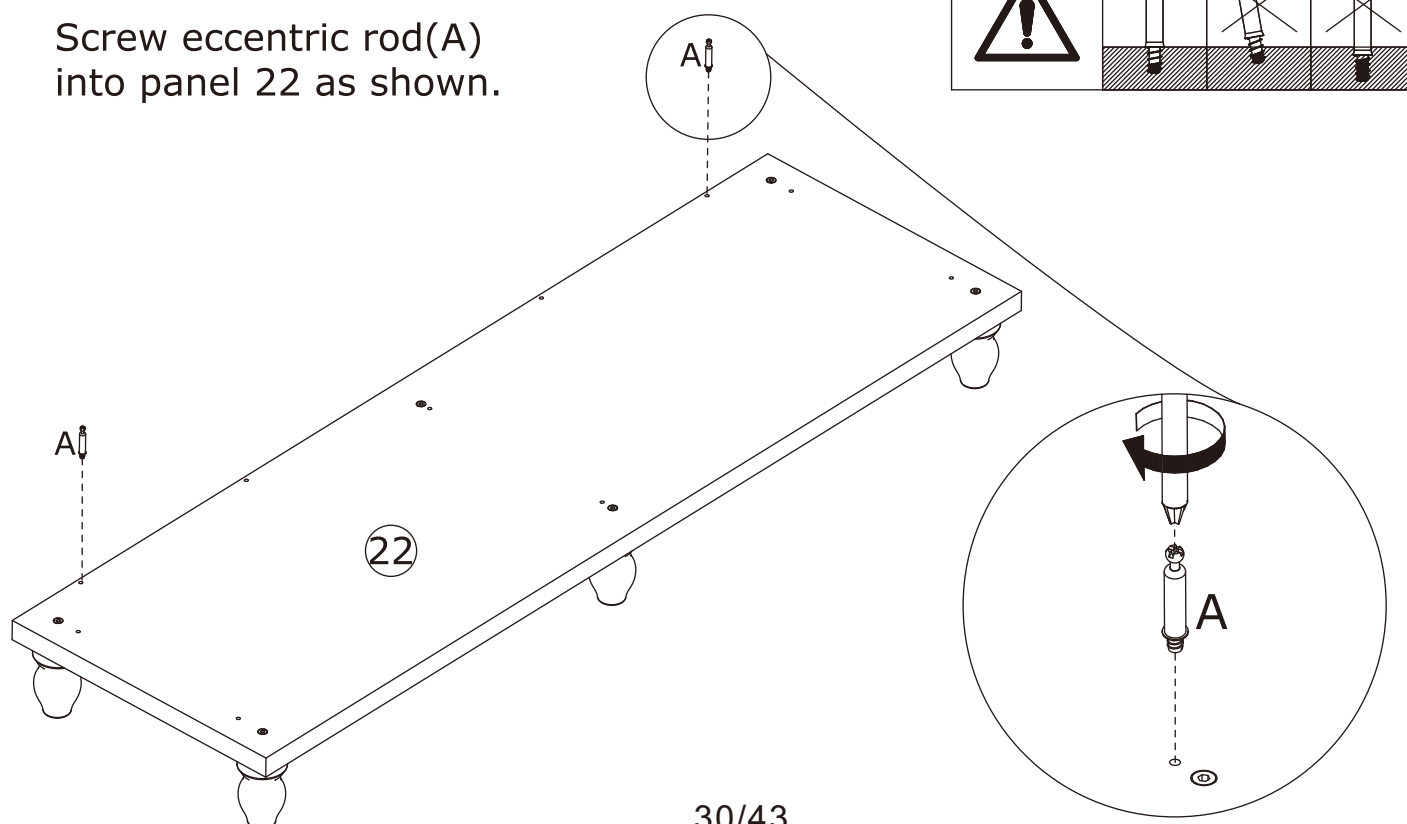

31

J x 6



M4x40mm

B x 2

 


M15 x 10 mm

W x 8






M8 x 25 mm




Connect plate s 22 and 21 together, add cam lock (B) into and turn clockwise to tighten as shown.

   Connect plates 22, 15, 20 and 16 together with with dowel (W) and fix using screw (J) as shown.

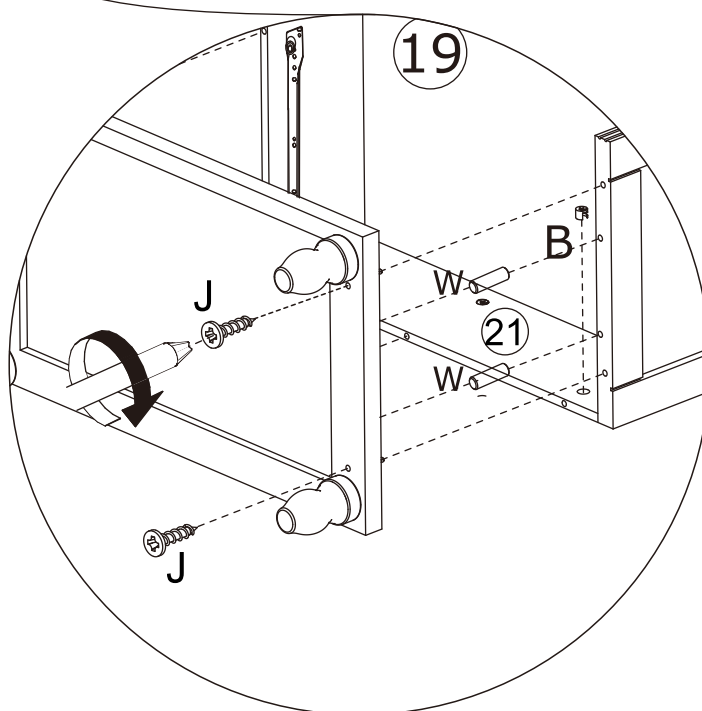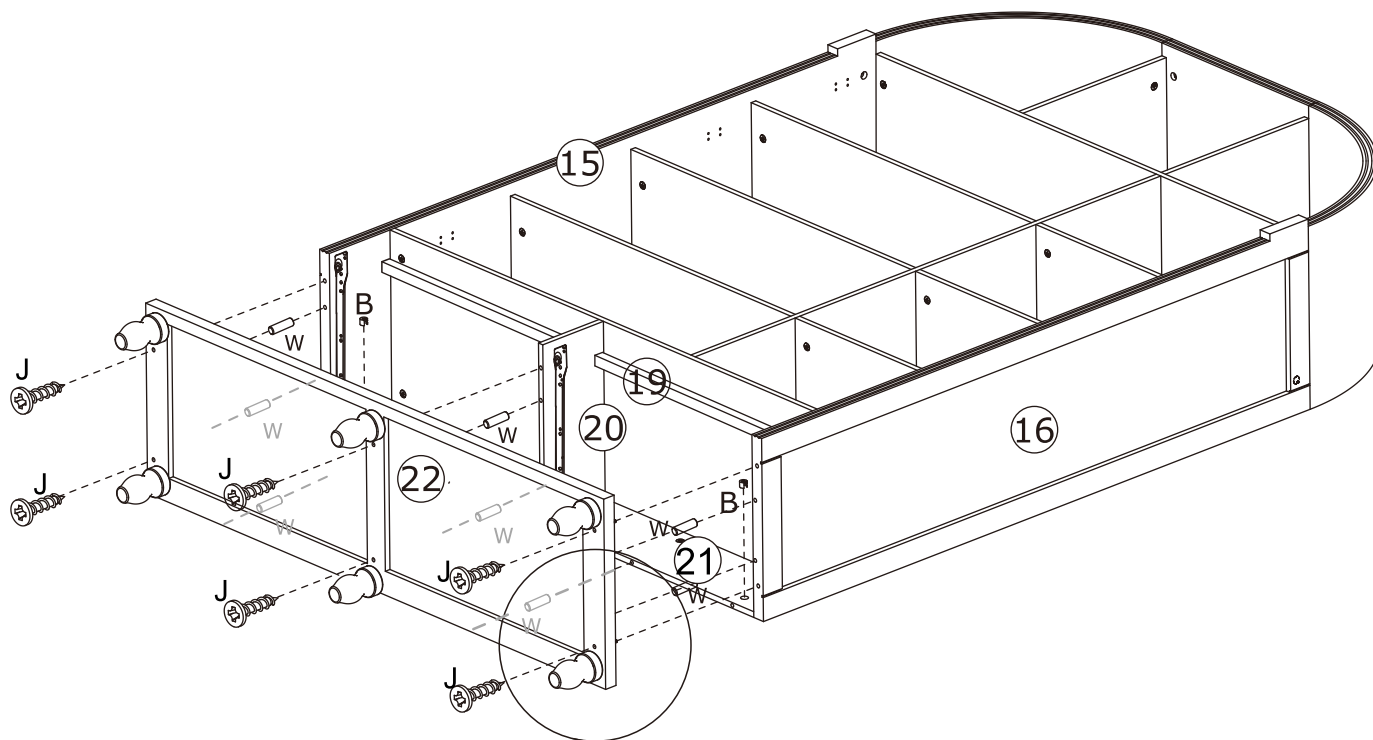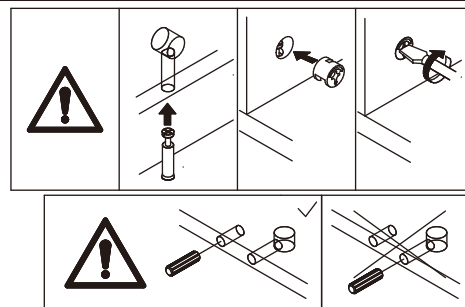

32

 
K x 12




L x 12



 M3 x 12 mm




 Insert buckle(K) into back slots and fix with screw(L) as shown.

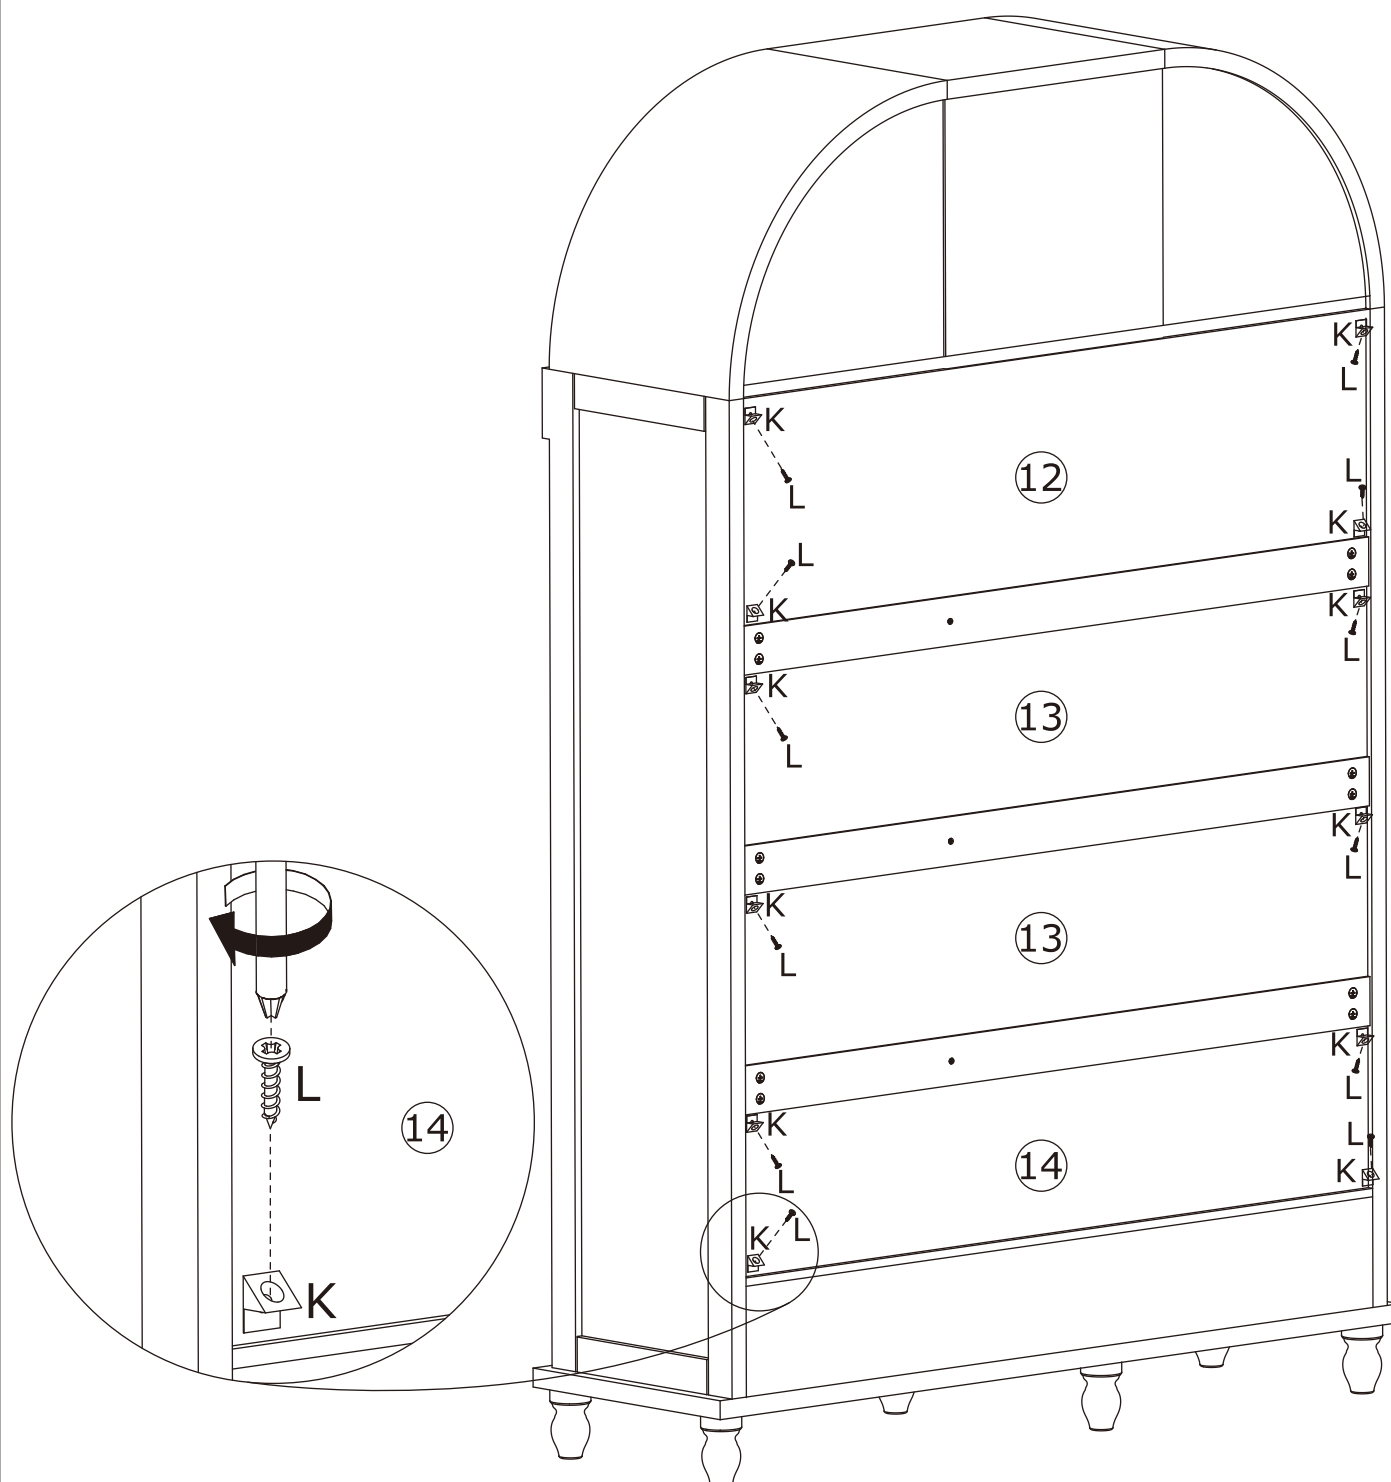


33



 
M x 2










Fix part(M) to back as shown.

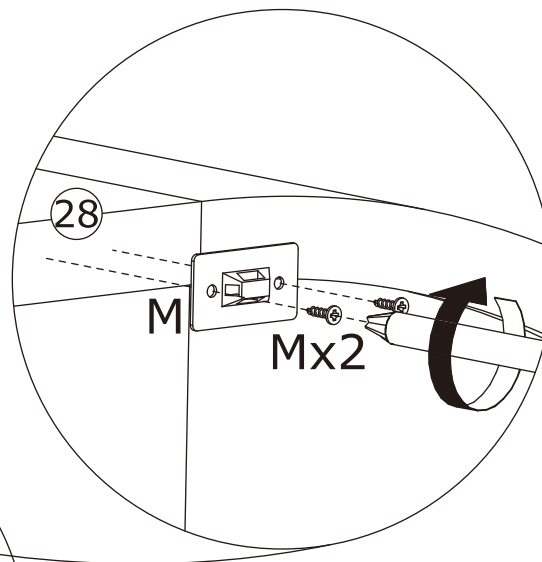 

34


 
 
 
M-1 x 2  Ø 4 x 35 mm	M-2 x 2 	   
M-3 x 2  Ø 3 x 15 mm	M-4 x 2  x1	M-5 x 2  x2

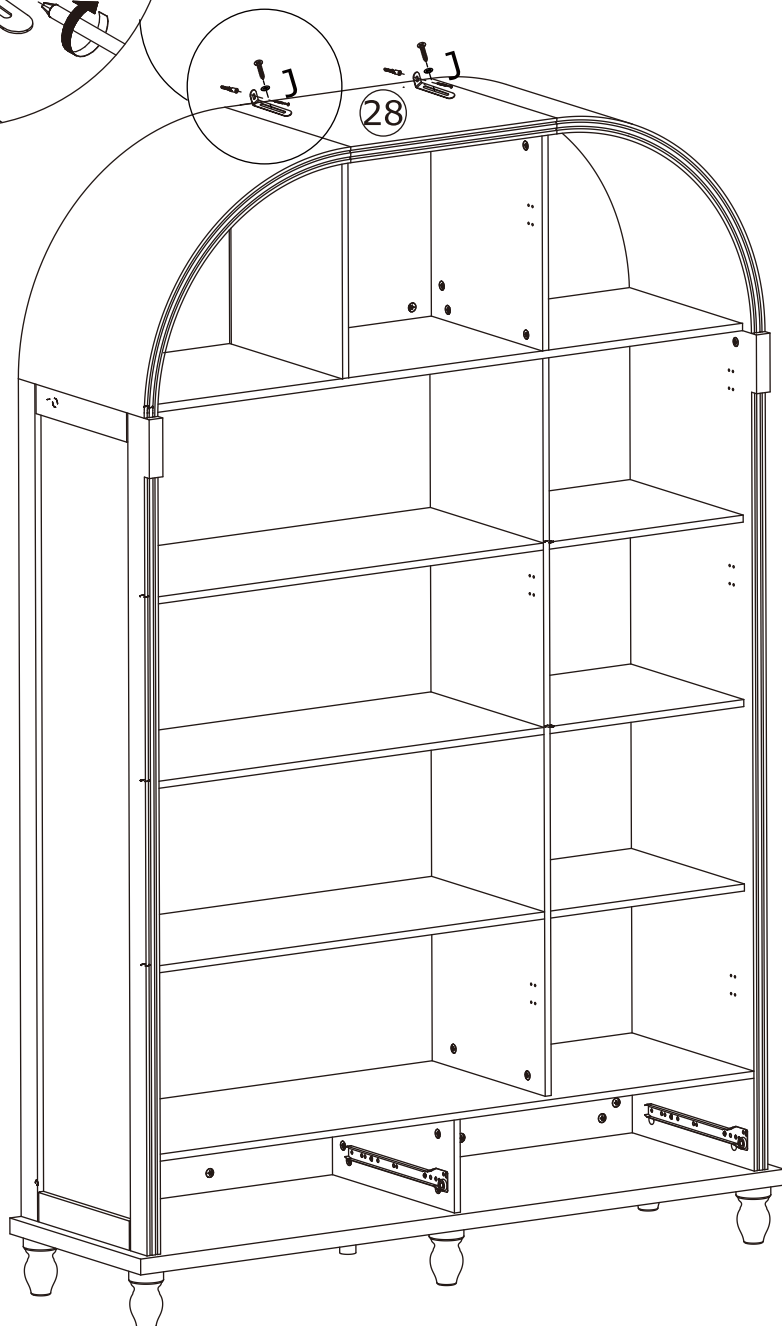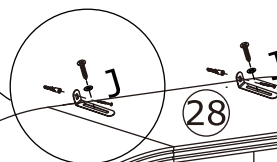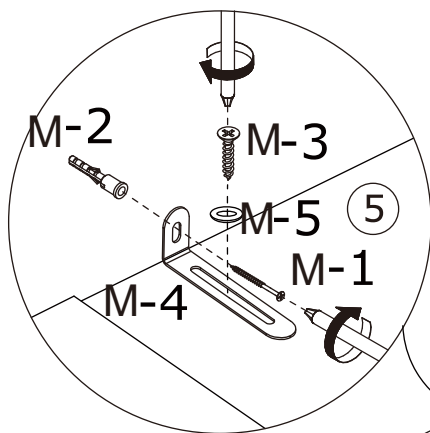   

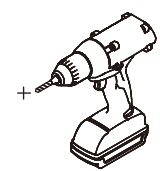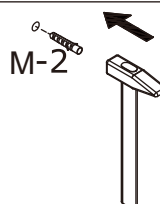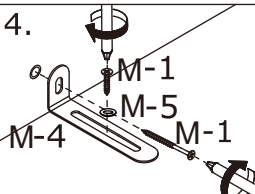    - 
- 
- 
- 

35

    
A x 10
M6 x 40 mm

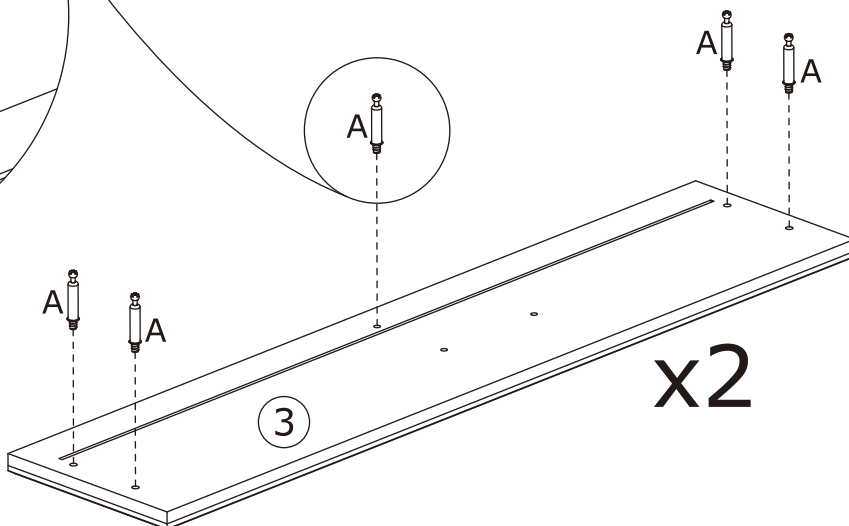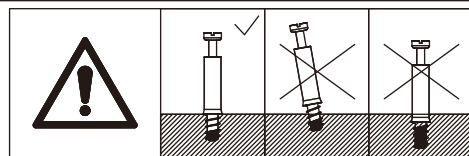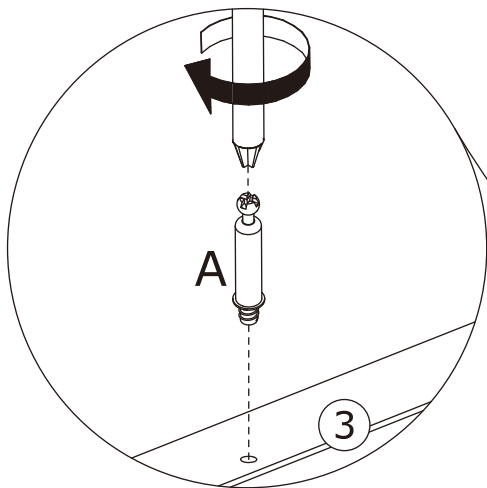



Screw eccentric rod(A)
into panel 3 as shown.

36

 
B x 8
M15 x 10 mm



  Insert panel 7 along available grooves as shown.

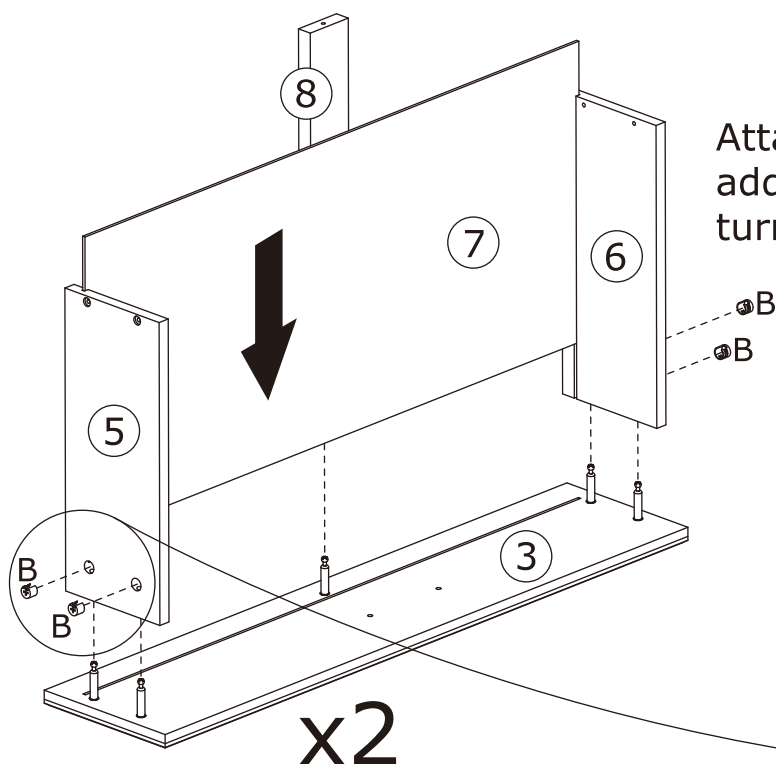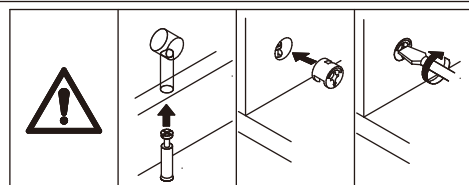


 Attach panel 3 to panel 5, 8 and 6,
add cam lock(B) into panel 5,6 and
turn clockwise to tighten as shown.



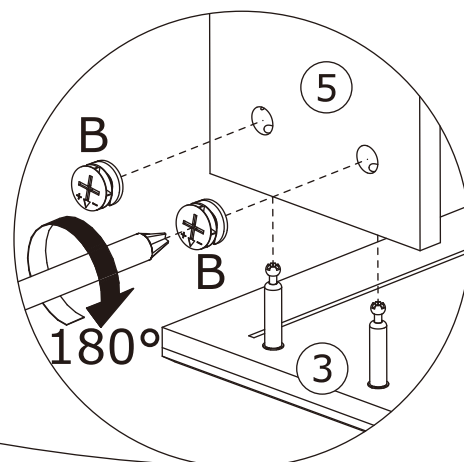


37

 B x 2
M15 x 10 mm






   Add cam lock(B) into panel 8, and turn clockwise to tighten as shown.

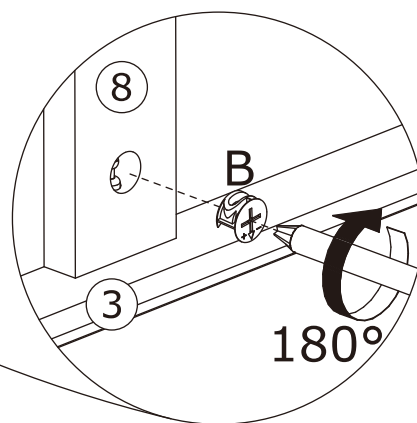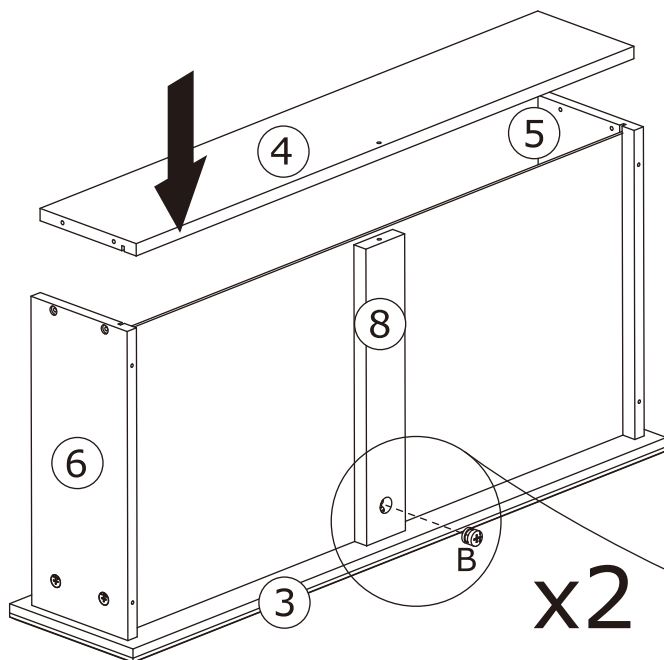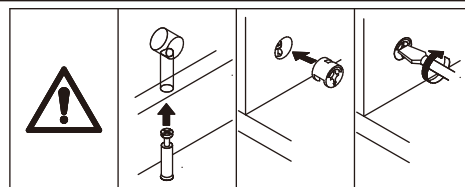


38

   I x 10
M3.5 x 25 mm

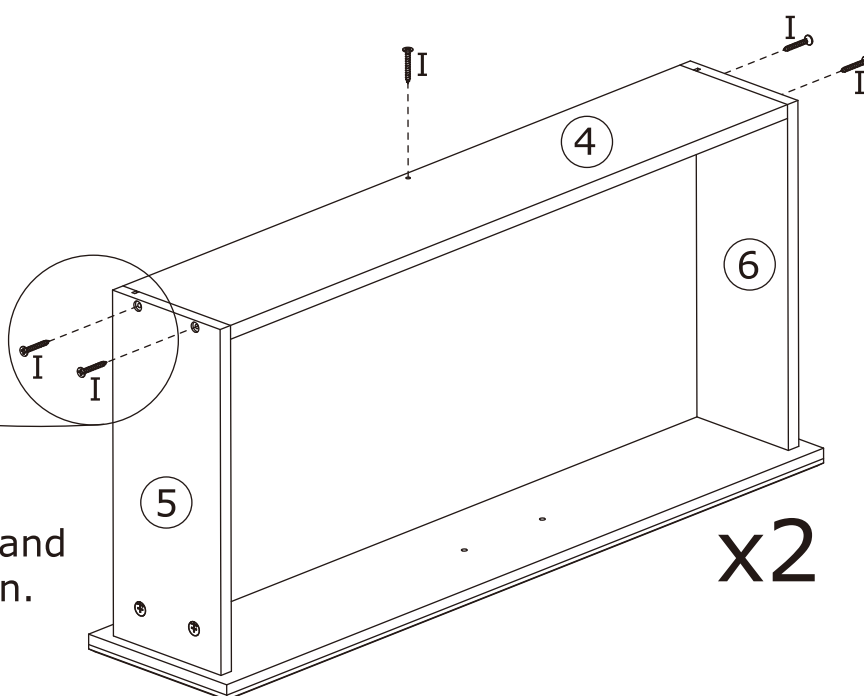
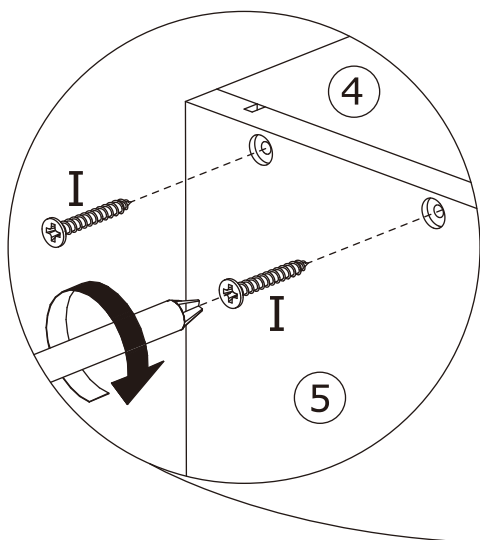



Fix panel 4 to panel 5, 8 and 6 using screw(I) as shown.

 39

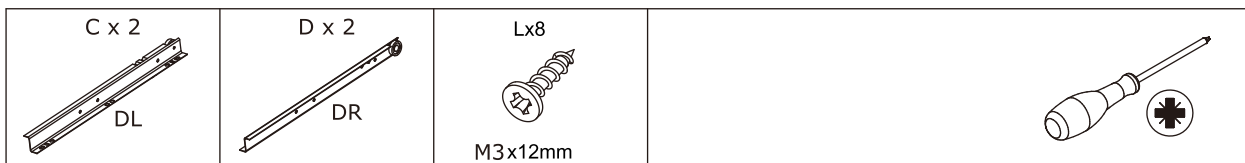

  
 
Fix track (C-DL) and (D-DR) to panel 5 and 6 with screw (L).

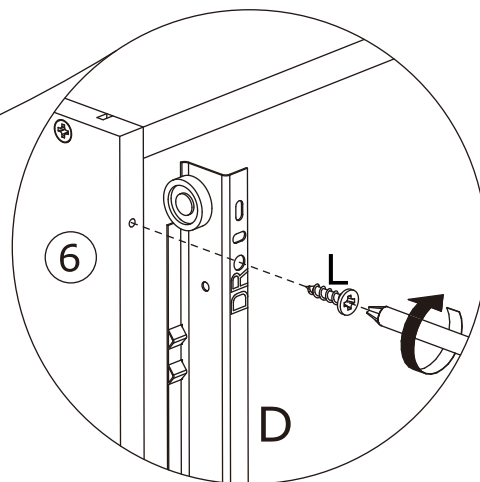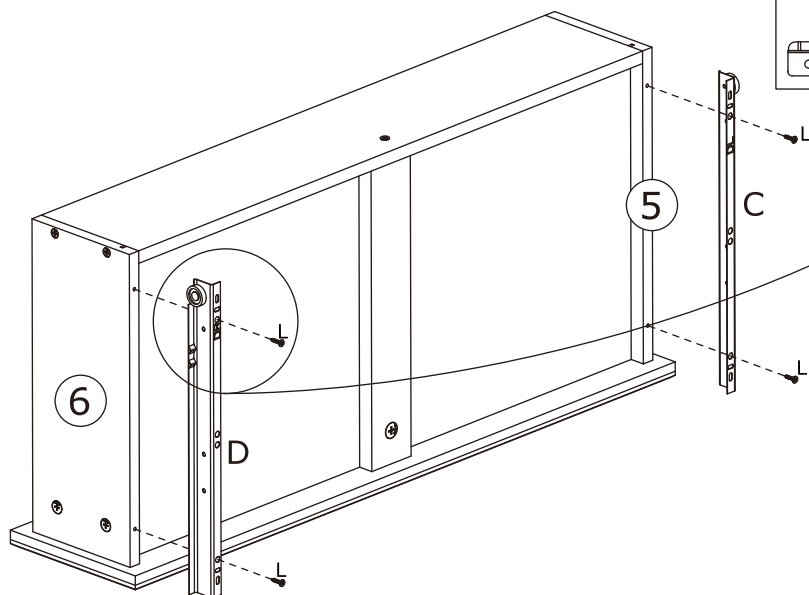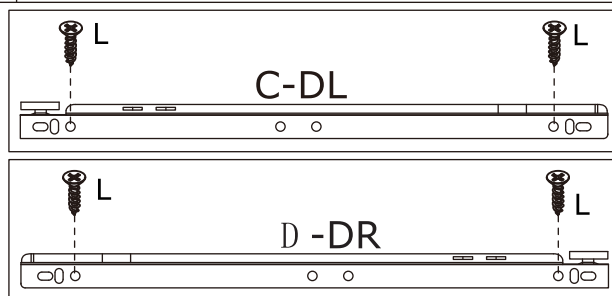



40




  Fix handle(G) to panel 3 with screw(H) as shown.

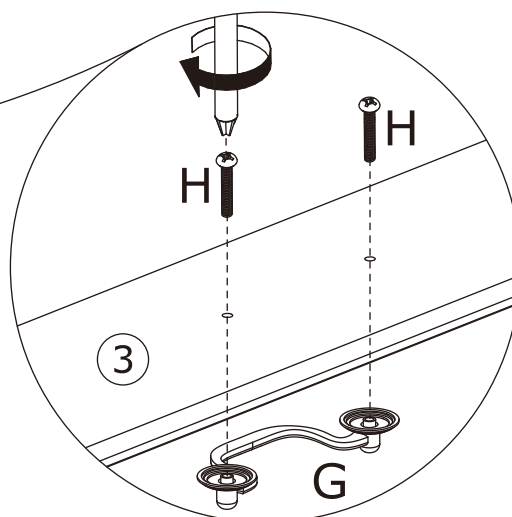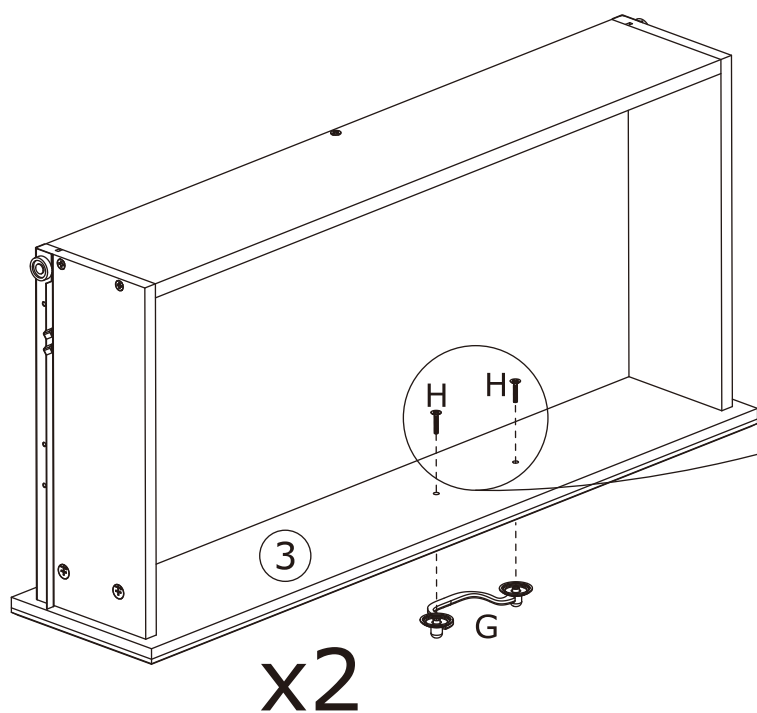



41

  N x 1 	O x 1  M4 x 25 mm	P x 3 	Q x 6  M3 x 14 mm	X x 4  M3 x 12 mm	
V x 2 					


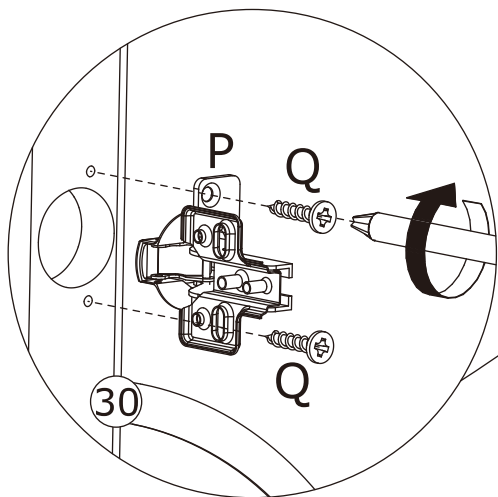 





Fix hinge(P) to glass panel 30 with screw(Q) as shown.
Fix knob(N) to glass panel 30 with screw(O) as shown.

  Fix part(V) to glass panel 30 with screw(X) as shown.



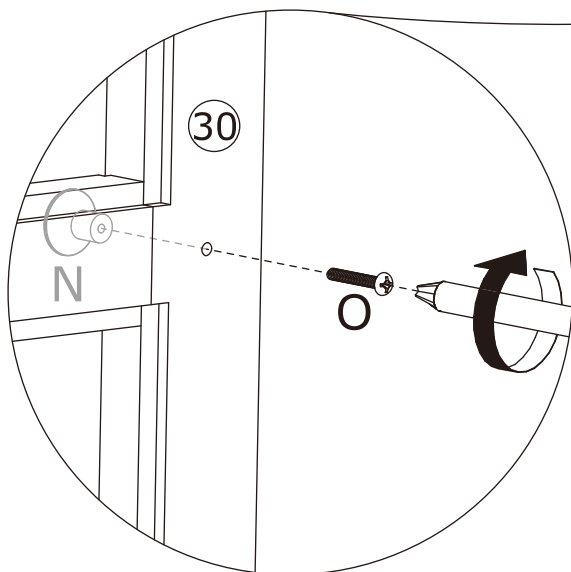
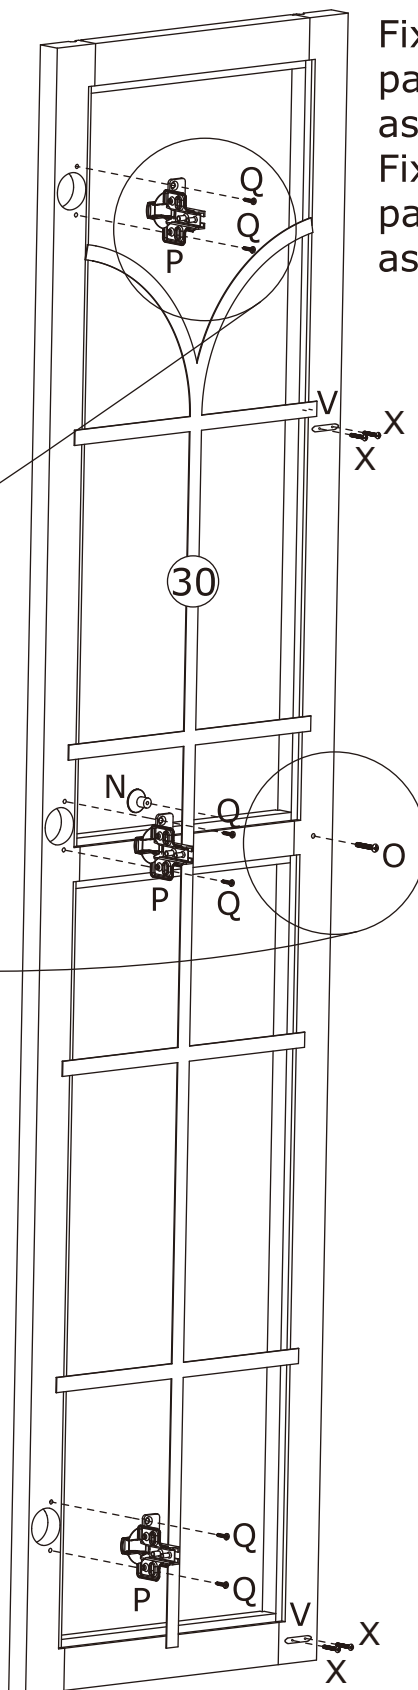


42

  X x 8  M3 x 12 mm	N x 2 	O x 2  M4 x 25 mm	Q x 18  M3 x 14 mm	T x 6 	
V x 4 	Fix hinge(T) to glass panel 29 and 31 with screw(Q) as shown.				

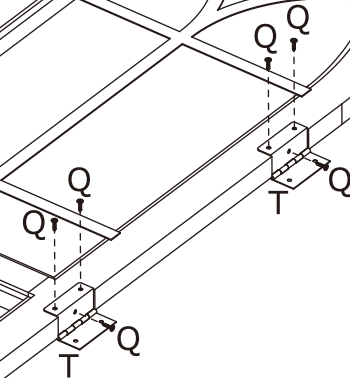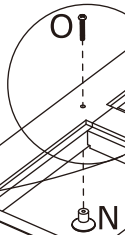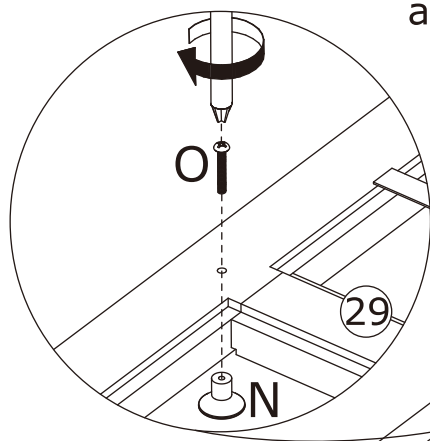   

    Fix knob(N) to glass panel 29 and 31 with screw(O) as shown.

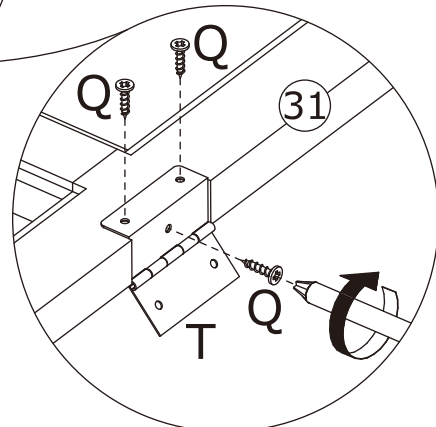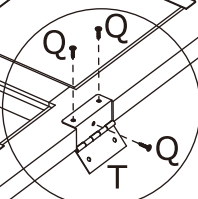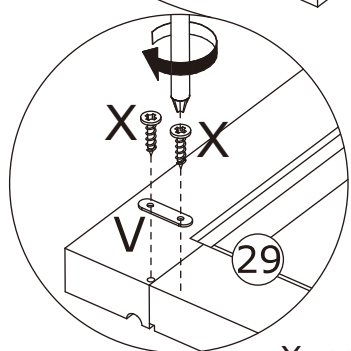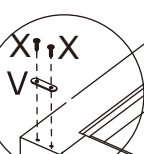



Fix part(V) to glass panel 29 and 31 with screw(X) as shown.

43



Q x 24



  M3 x 14 mm

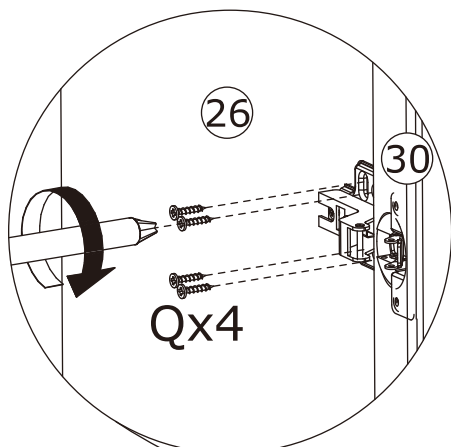

  Attach glass panel 29, 30 and 31 to panel 15, 17 and 16 by fixing hinge with screw(Q) as shown.

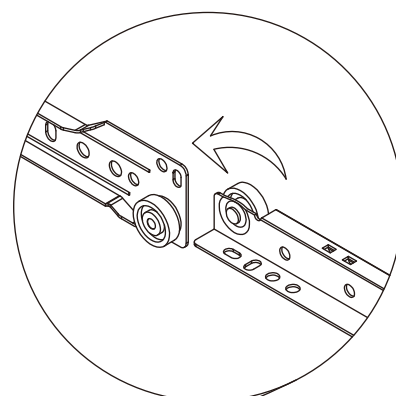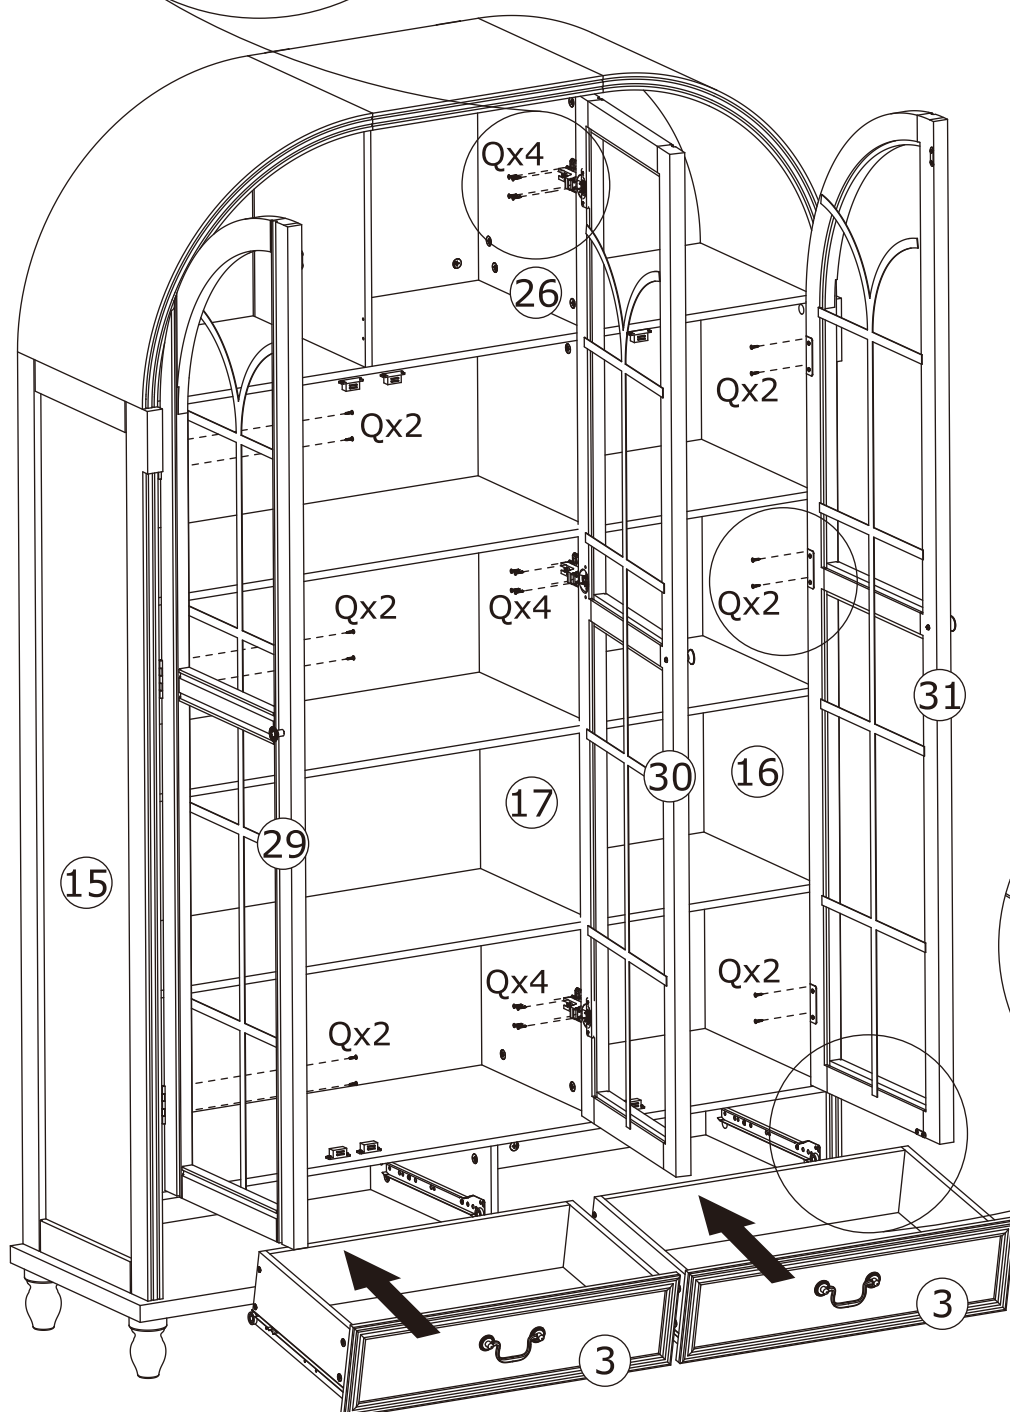



WARRANTY

WARRANTY CLAIMS

- There is a 30-day warranty for broken furniture or any other problems that do not work properly. The warranty will start from the date of purchase which must be verified by proof of purchase.
- Before making a claim, we may be able to answer your query, simply call us. Please leave your purchase order number, along with some details of the problem, if you want a replacement part. We will arrange within 48 hours. If there is out of stock, we will reply with a shipping date.
- The product must be used in accordance with the instructions provided. For health reasons.
- For other reasons, if the furniture needs to be returned, it must be cleaned and dried and operated within 30 days of receipt.

Type of Warranty Claim

- Failure to follow the furniture instructions will invalidate the warranty. Attention please.
- Does not include damage during installation, but includes damage during transportation.

Scope of responsibility

- Shall not bear any responsibility for misuse or user damage and / or loss of parts during the installation of furniture.
- After using, the damage and scratches of the furniture are not covered by the warranty.

The Warranty Relates to All Bought in The Us and Covers The Following Areas

- Sheet parts: 1 month from the date of purchase.
- Electrical parts: 1 month from the date of purchase.

RETURNS

CHANGED YOUR MIND AND NEED TO RETURN YOUR ITEM?

PLEASE FOLLOW THE BELOW INSTRUCTIONS:

- If you have purchased and have simply changed your mind, follow the retailer's instructions for returns.

DEFECTIVE ITEMS

- If your item is defective in any way, i.e. it doesn't work but you can't identify why, in the first instance, please call us.

DAMAGED ITEMS

- If you receive an order with obvious shipping damage from the retailer, then we suggest the delivery is refused. If the delivery has been accepted and then shipping damage is found, please follow the specific instructions advised by the retailer. In all circumstances please save all packaging material and paperwork for the order. Please be aware that if you dispose of packaging material or attempt to return the merchandise without contacting the fulfiller, you jeopardise your chances of making a claim, and you may not receive a credit for the return.

AFTER-SALES CONTACT



adelahu@fufugaga.com



208-820-0068