 








PORCH SWING

ASSEMBLY INSTRUCTION






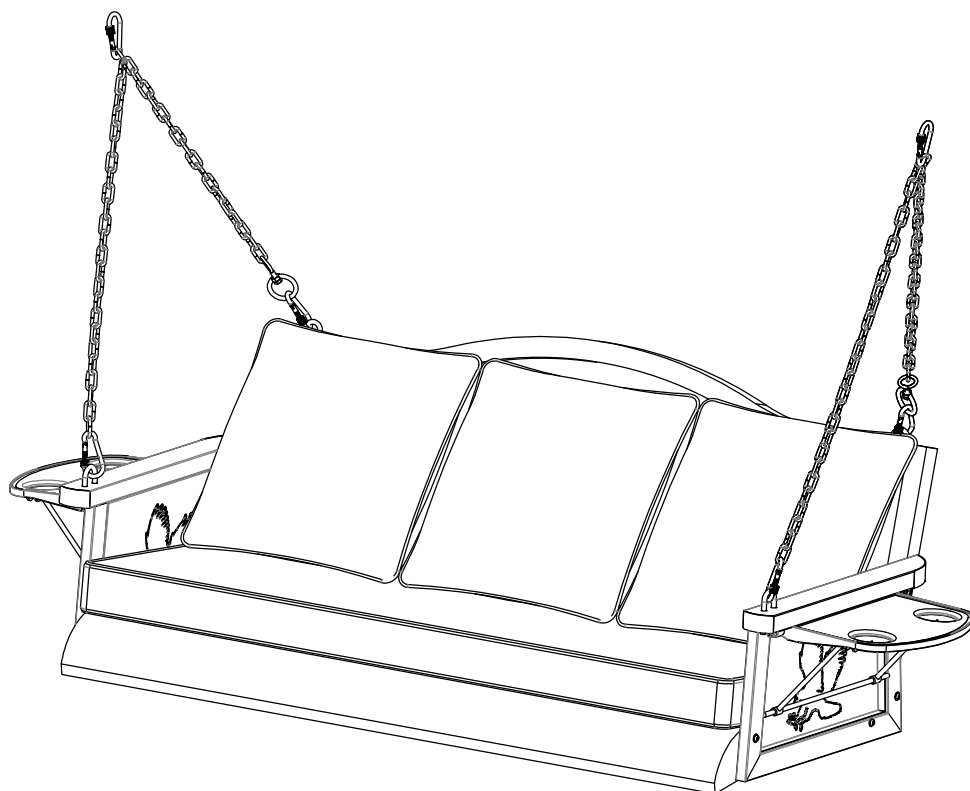


Assembly Instruction

      
Parts List

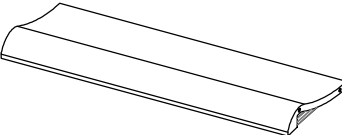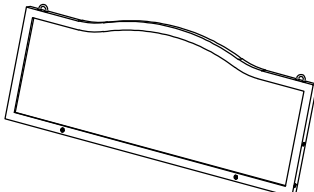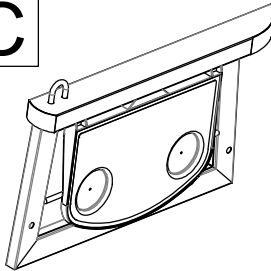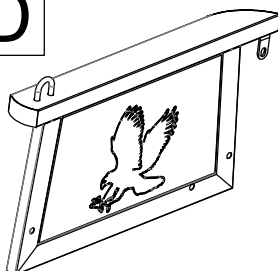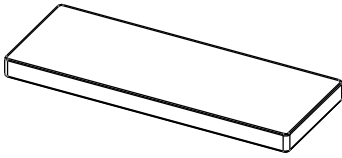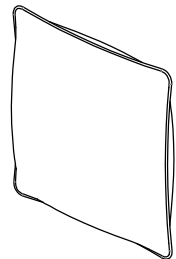A  Seat panel	B  Back panel	C  Left armrest	D  Right armrest
1 PC	1 PC	1 PC	1 PC
E  Seat cushion	F  Back cushion		
1 PC	3 PCS		

      Hardwares List
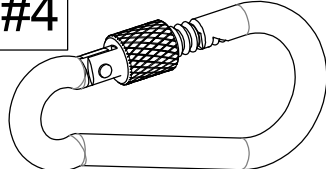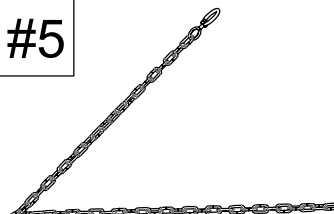
#1  Screw M6*45 (mm)	#2  Screw M6*35 (mm)	#3  Screw M6*20 (mm)	#4  Big nut safety clasp
2 PCS	6 PCS	2 PCS	6 PCS
#5  Chain	#6  Allen key 4# (mm)		
2 PCS	1 PC		

 
Assembly Instruction - Porch swing

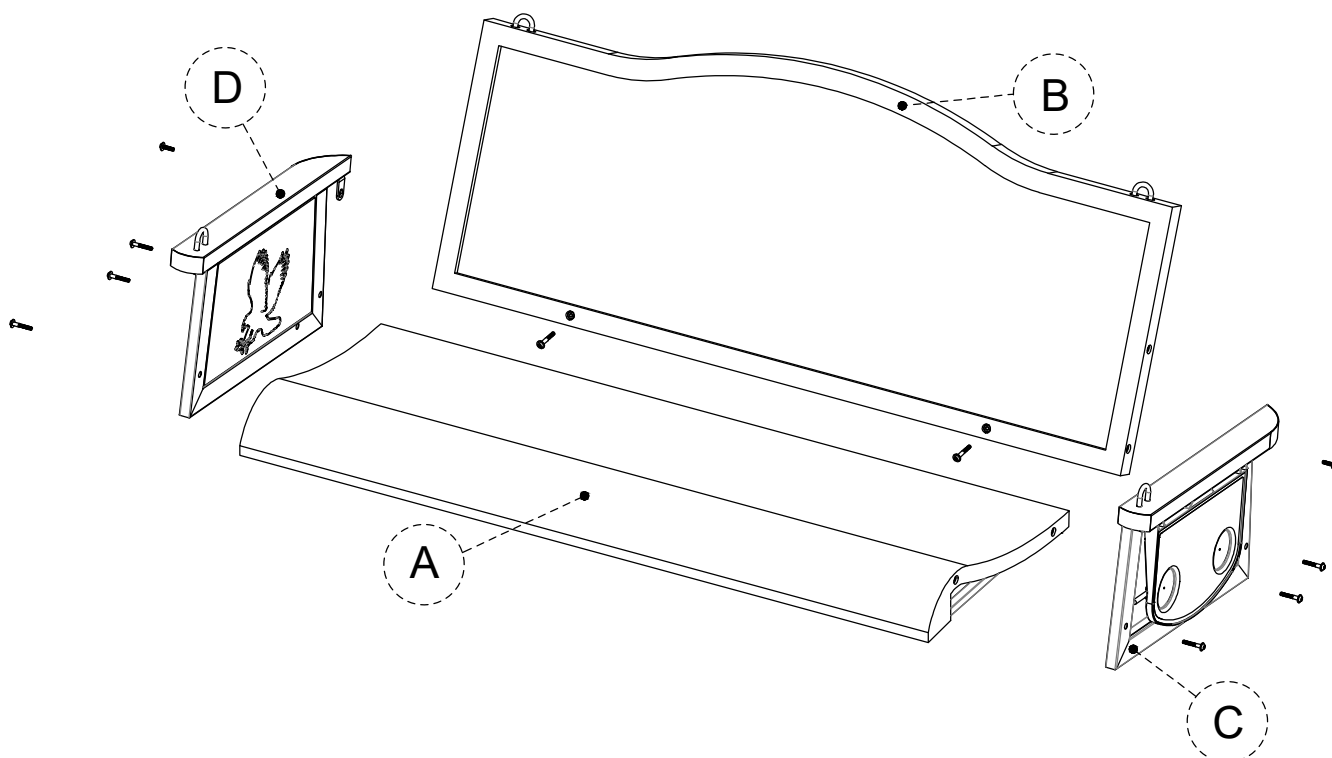


STEP 1

A x1

 B x1

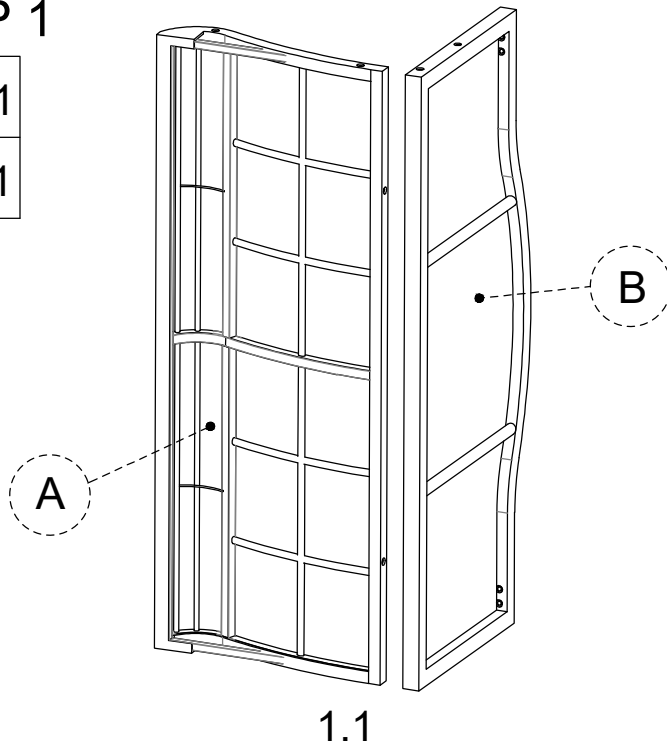

 1.1

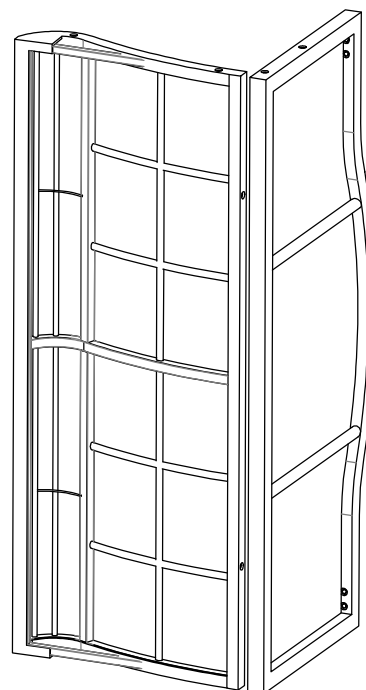



1.2

Place A and B as shown in the figure;

Assembly Instruction - Porch swing

STEP 2

#1 x2

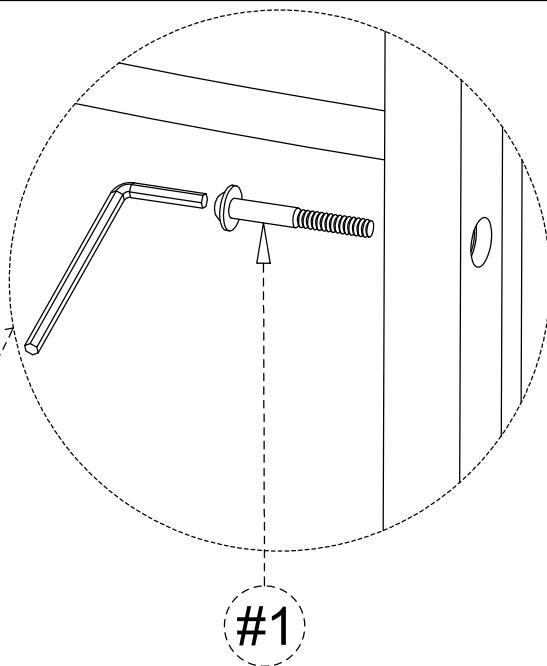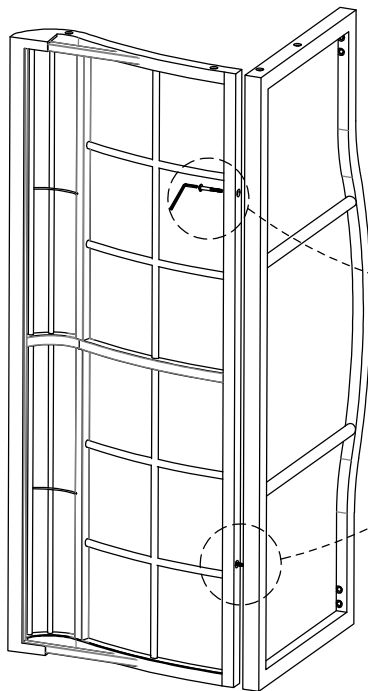  


DO NOT tighten the screws,
just screw in a few turns of wire thread;


Assemble B with A using screw #1;

STEP 3

 C x1

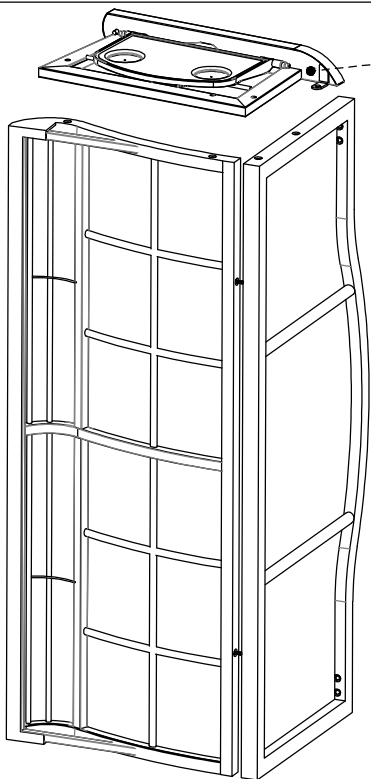

C

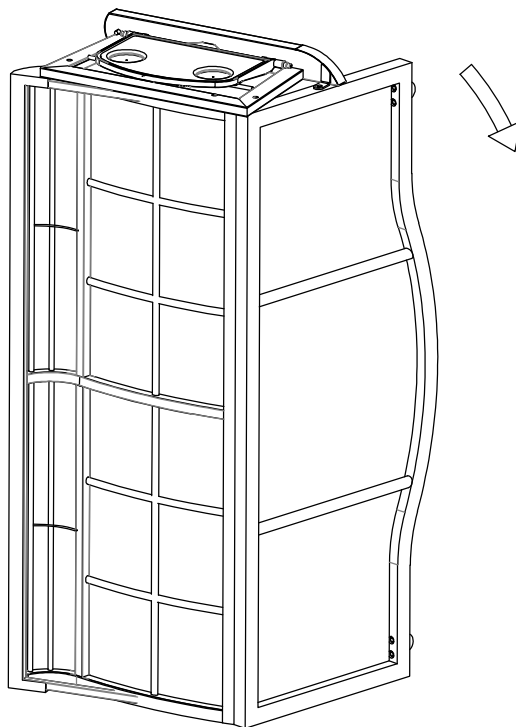 

3.1 Place C as shown in the figure;


3.2 Place C on A and B, adjust the angle of B to align the screw holes;

Assembly Instruction - Porch swing

STEP 4

#2 x3
 
#3 x1

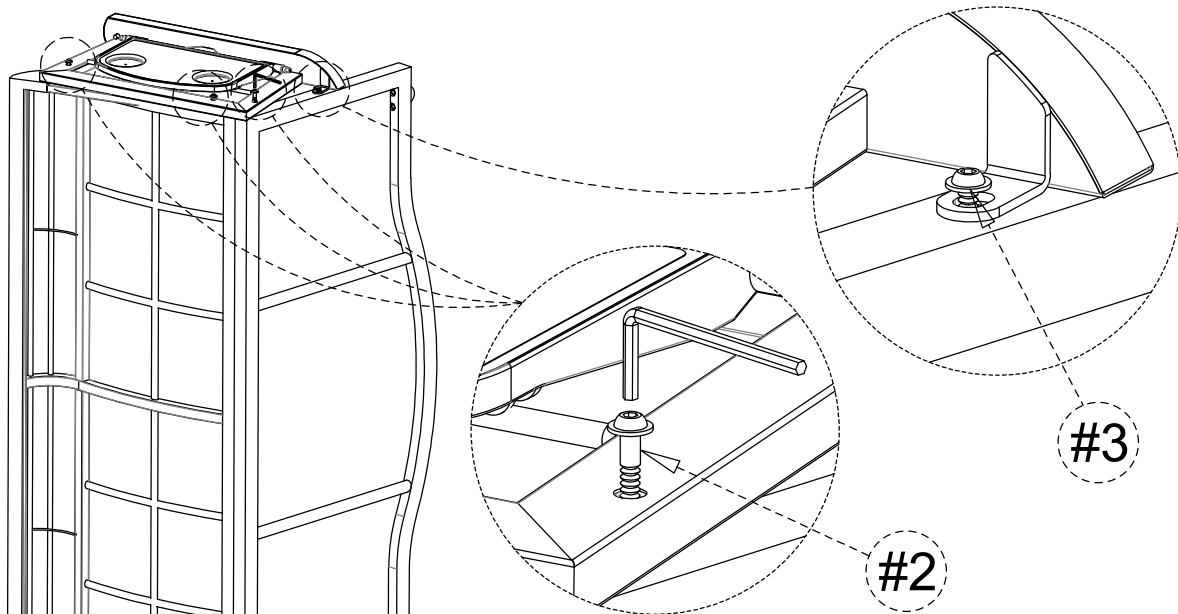


DO NOT tighten screws completely until assembly is completed;

Assemble C with A and B using screw #2, screw #3;

STEP 5

 C x1

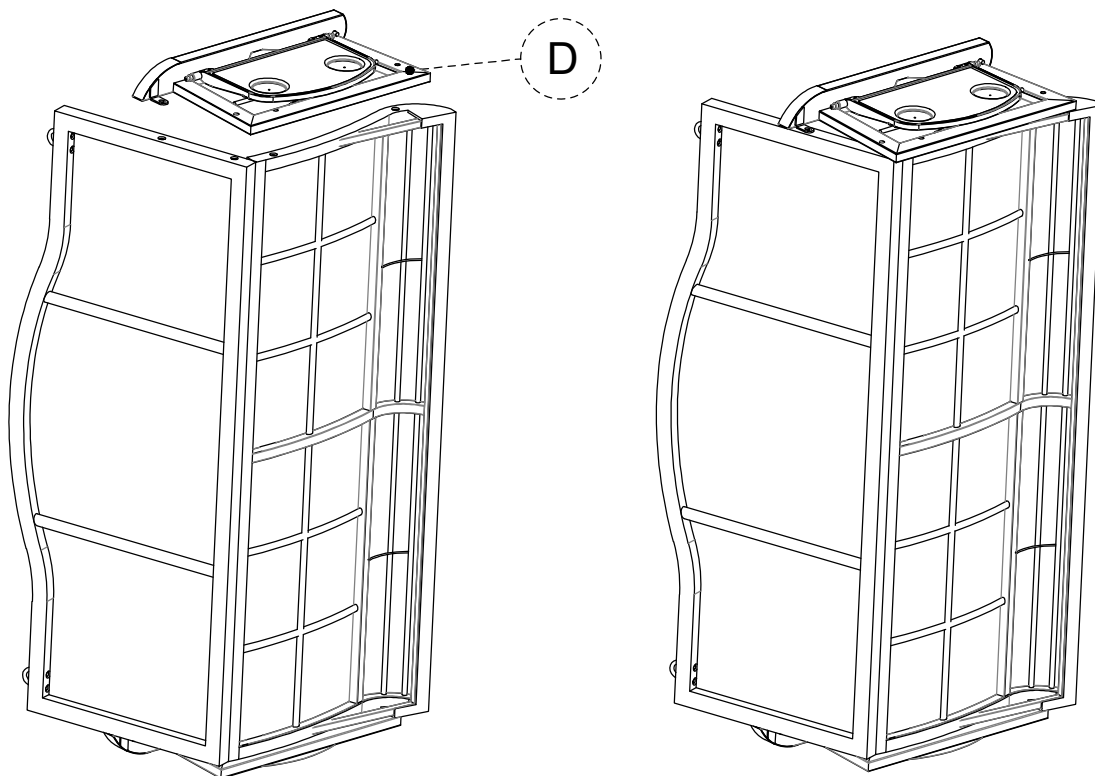


Place D on A and B;

Assembly Instruction - Porch swing

STEP 6

#2 x3

 
#3 x1

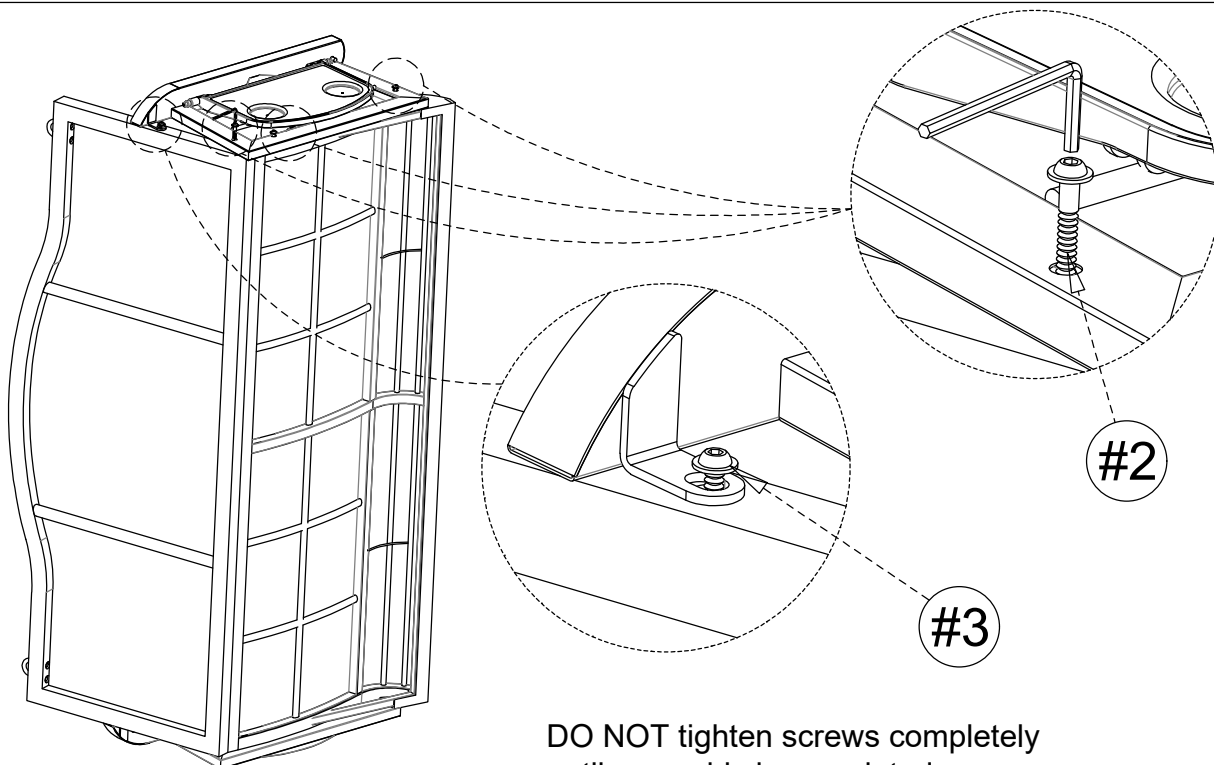

DO NOT tighten screws completely until assembly is completed;

Assemble D with A and B using screw #2, screw #3;

 STEP 7

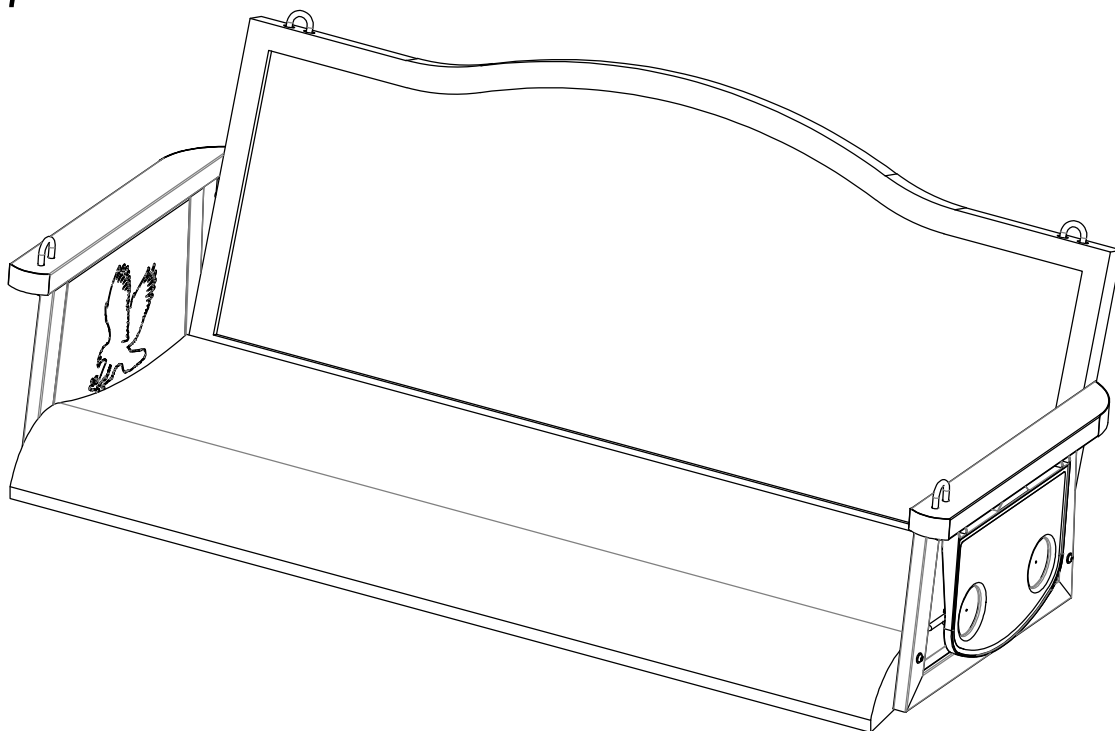



Tighten all the screws completely;

Assembly Instruction - Porch swing

STEP 8

#4 x6
  
#5 x2

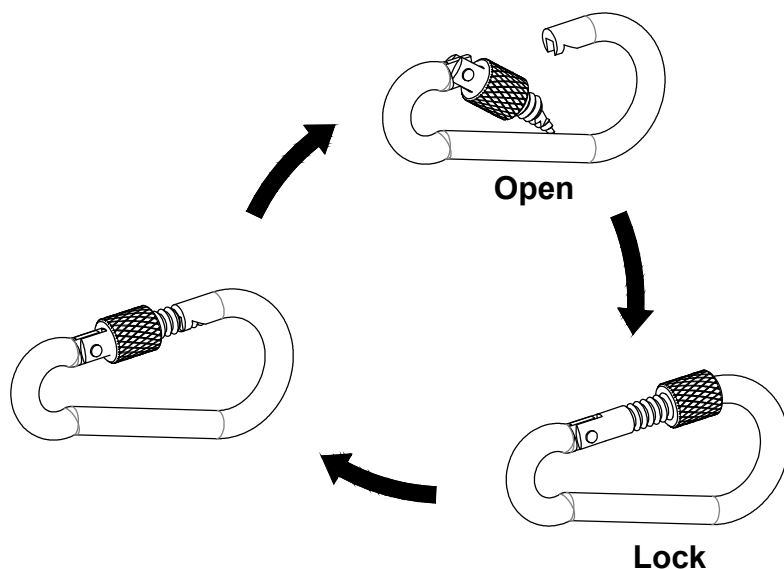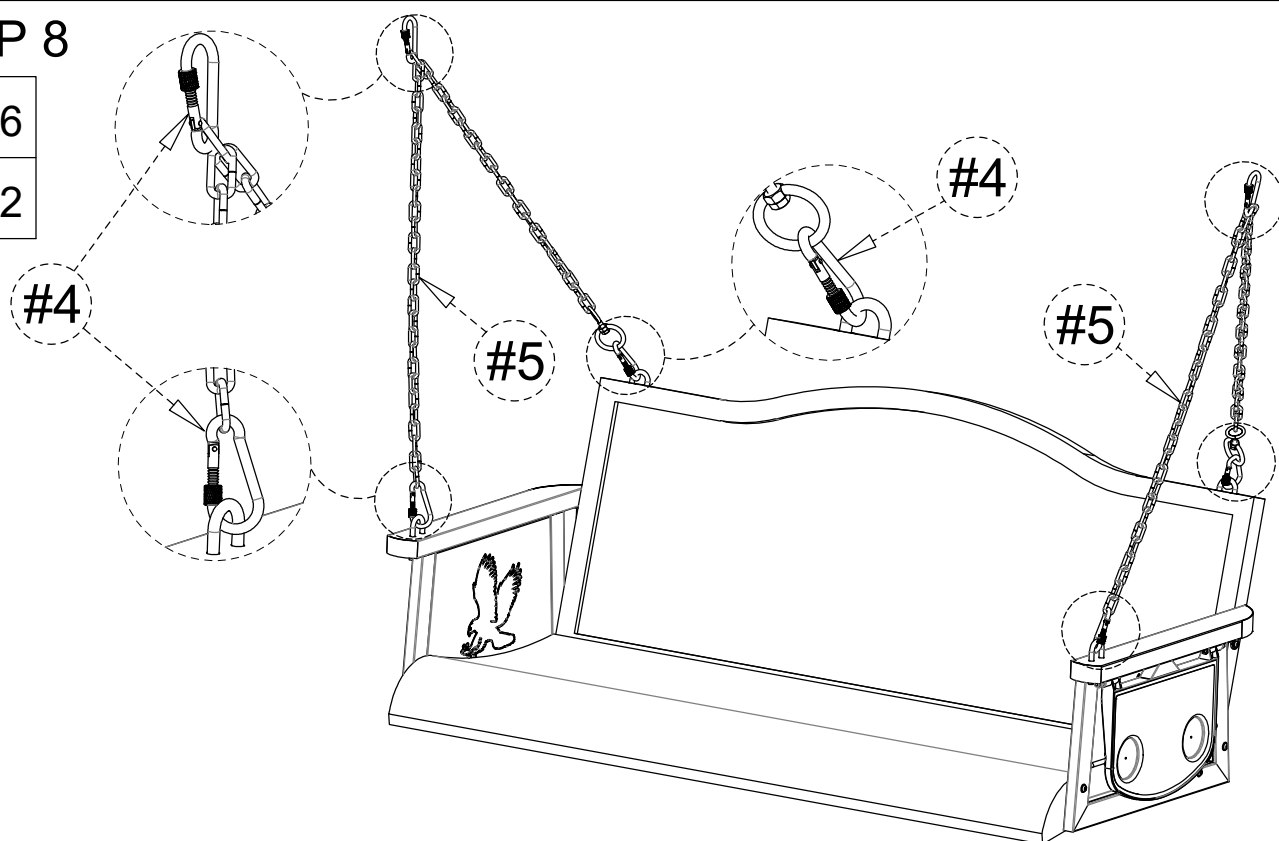

The nut safety buckles must be locked;
Regularly inspect the chain and the suspension
as a whole for safety hazards.

 
 
Suspend the swing chair with chains where needed as shown;
Adjust the length of the chain suspension as needed to adjust the tilt angle of the swing chair;

Assembly Instruction - Porch swing

STEP 9

E x1

F x3

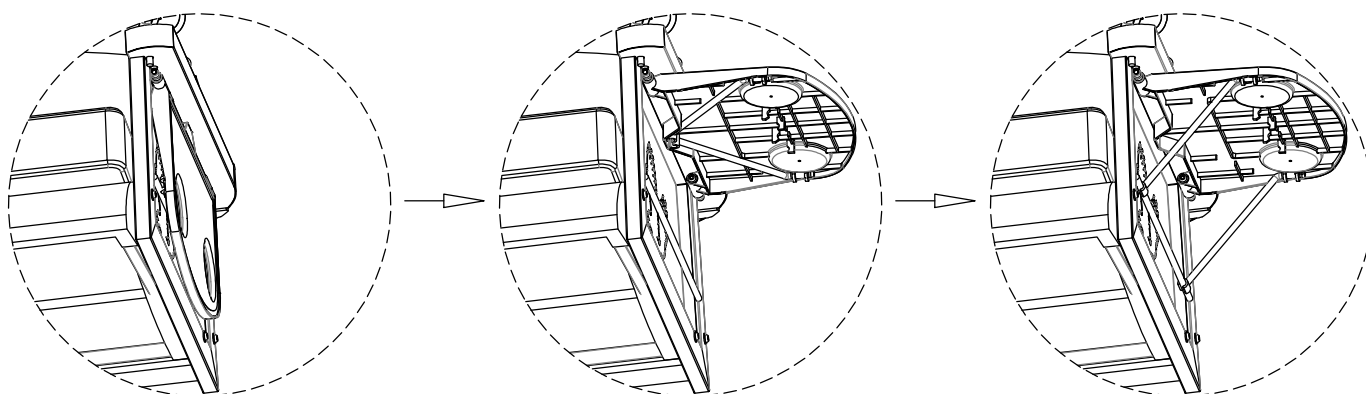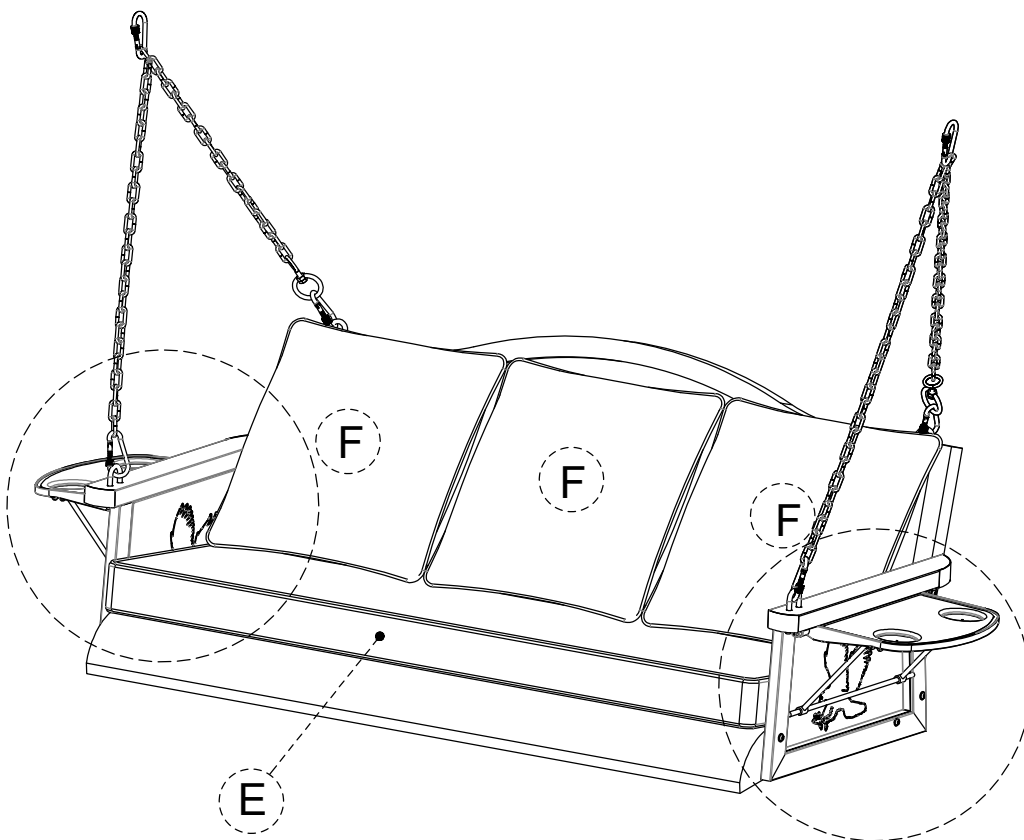

The plastic tea table can be unfolded and retracted.

Place E and F as shown in the figure;