 


Assembly Guide


W2831P241961

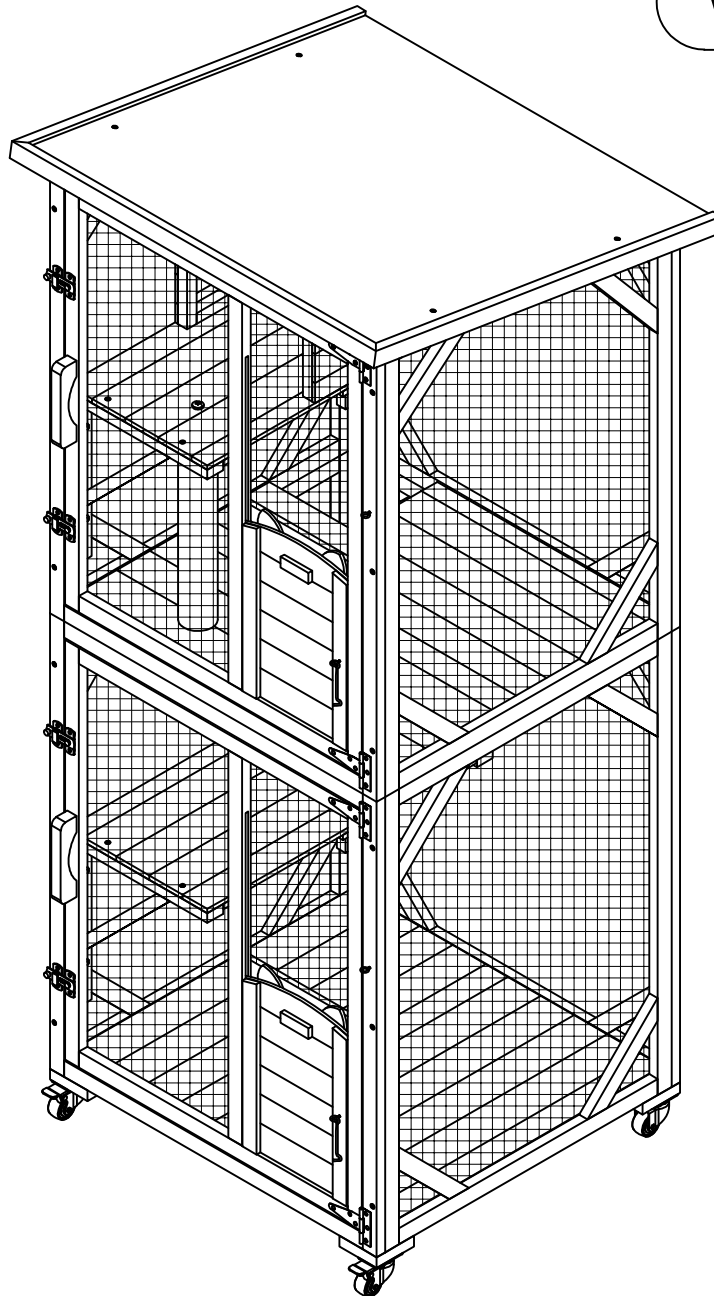


READ AND SAVE THIS INSTRUCTIONS FOR FUTURE USE

ASSEMBLY & INSTRUCTION MANUAL

 
Ax1

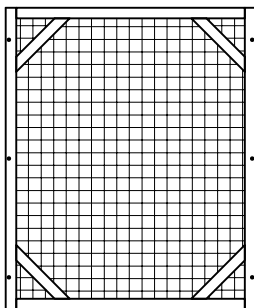


Bx1

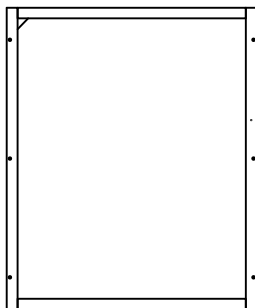 


Cx1

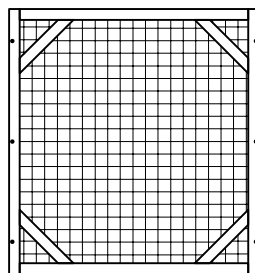 


Dx1

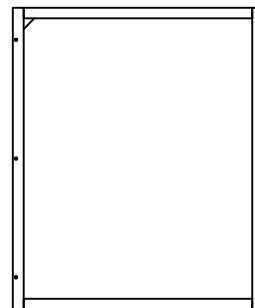 


Ex1

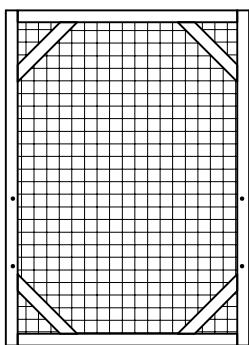 


Fx1

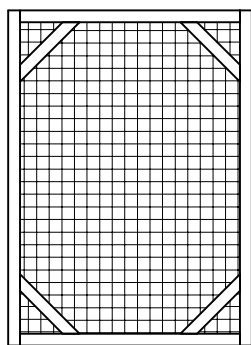 


Gx1

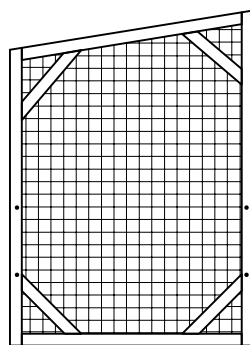 


Hx1

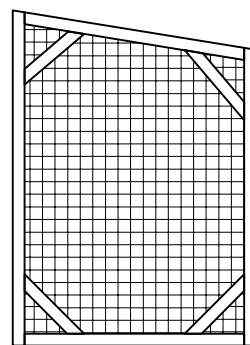 


Ix2

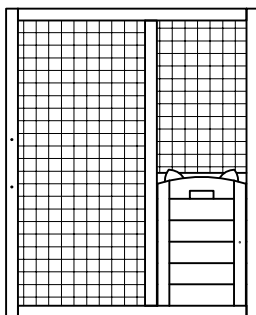 


Jx1

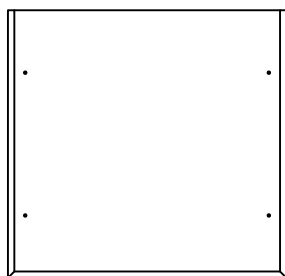 


Kx1

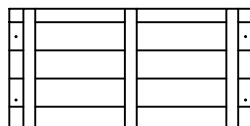 


Lx1

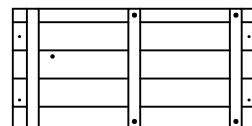 


Mx1

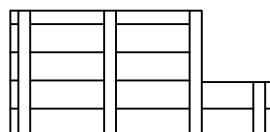 


Nx1

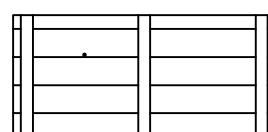 


Ox2

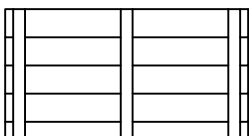 


Px1

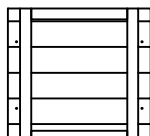 

Qx2

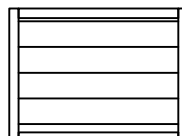 


Rx1

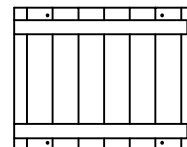 


Sx1



 Tx4

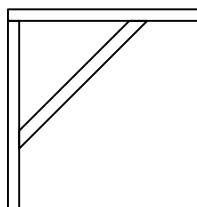


Ux4

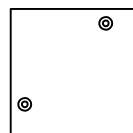 

Vx2




 ①x16+1




M3*12mm

 ②x24+2




M3*16mm

 ③x16+1




M3.5*20mm

 ④x16+1



M3.5*25mm

 ⑤x4



M3.5*30mm

⑥x36+2




M3.5*35mm

⑦x8+1




M3.5*50mm

 ⑧x4

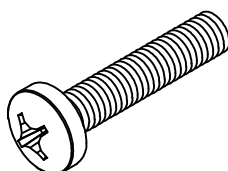


M6*30mm

 ⑨x8+1

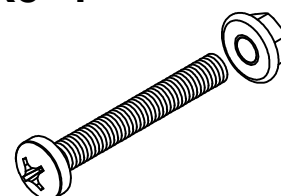


M6*45mm

 ⑩x2

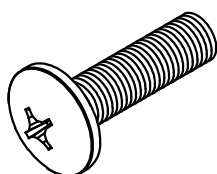

M8*35mm

 
⑪x26+2




wood stick

φ8*20mm

 
⑫x4

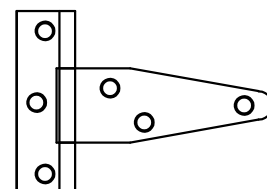


⑬x4

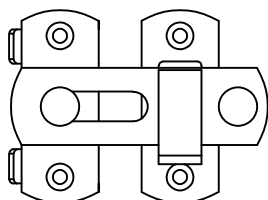 


⑭x2


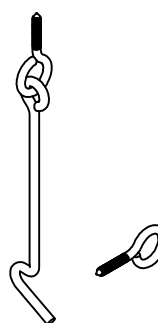 


⑮x2

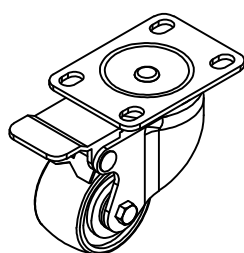 


⑯x2

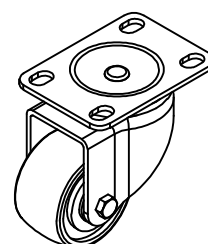 

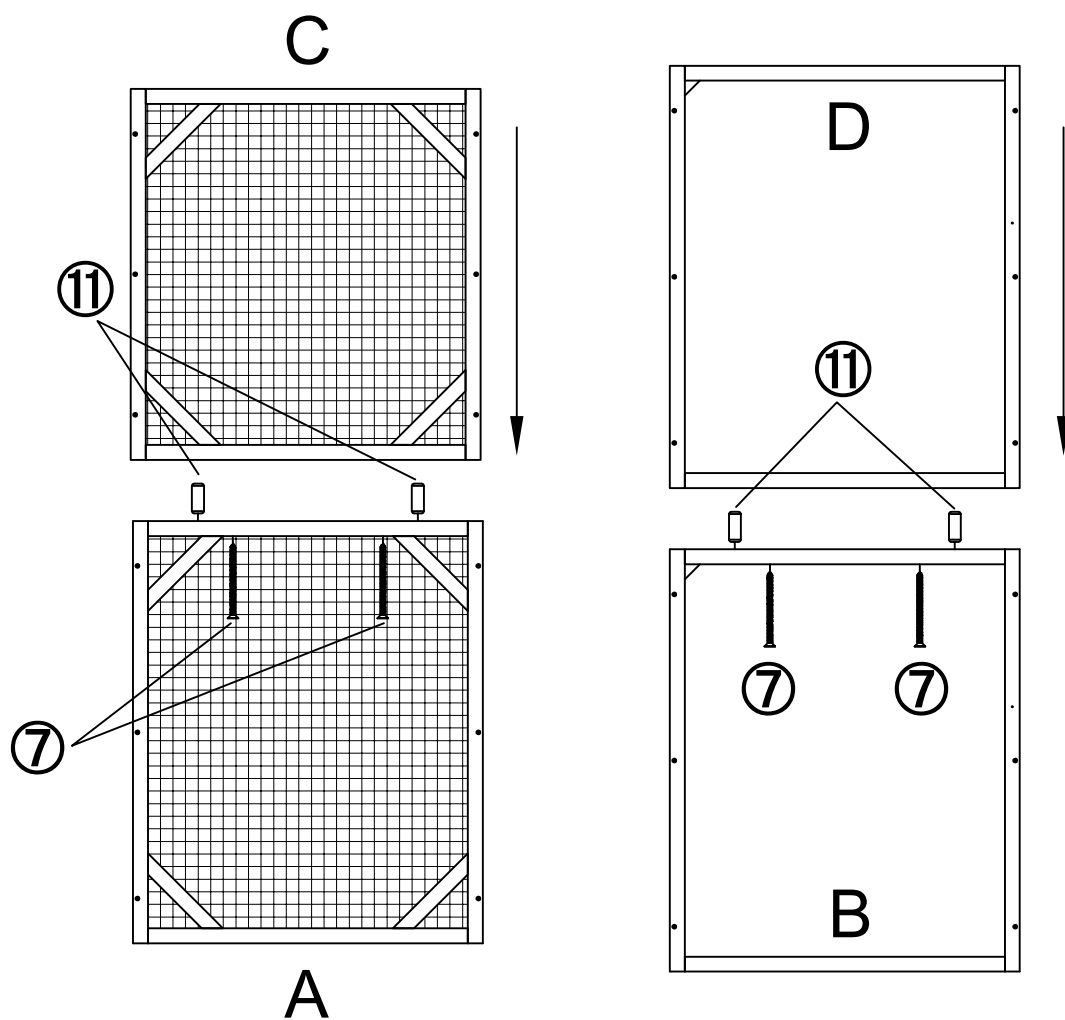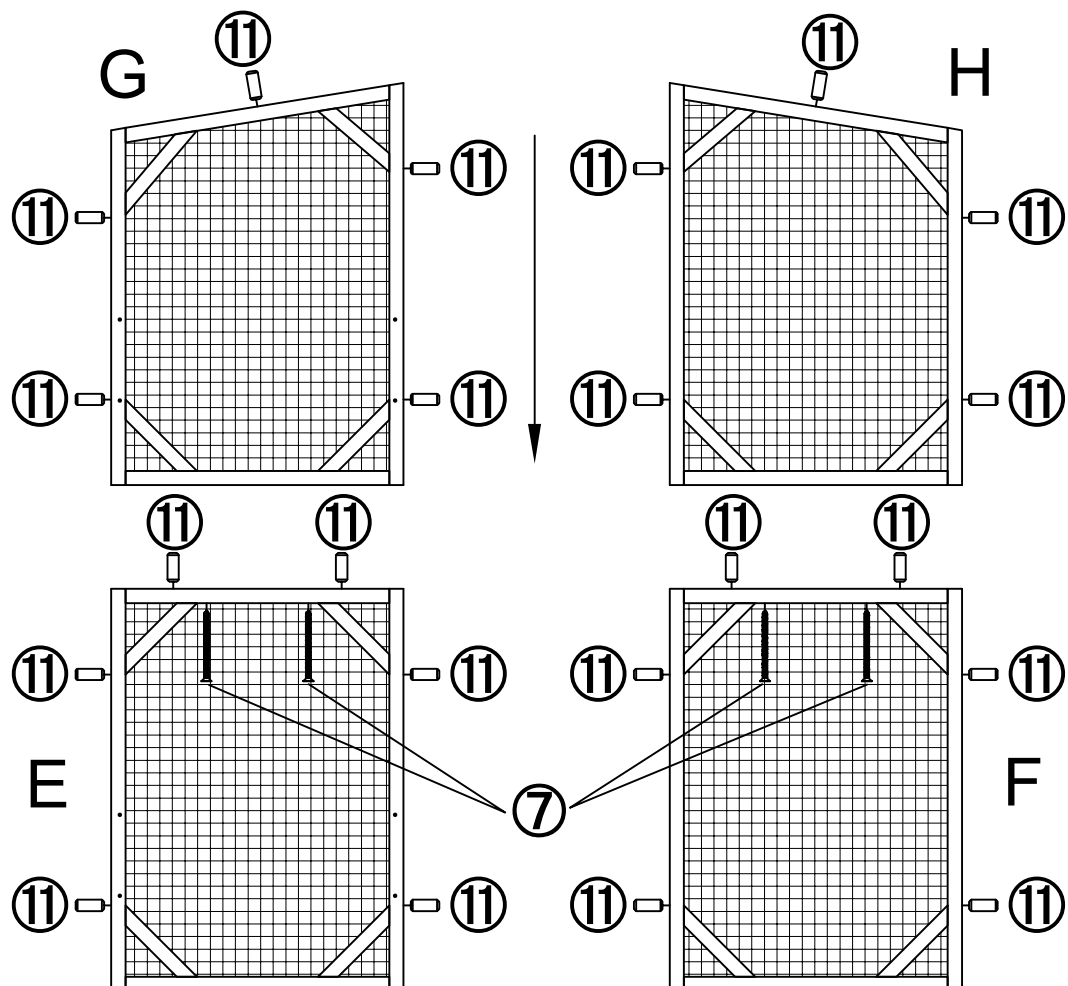  Ax1**Bx1****Cx1****Dx1****⑦x4****⑪x4****Ex1****Fx1****Gx1****Hx1****⑦x4****⑪x22**

 ⑥x12

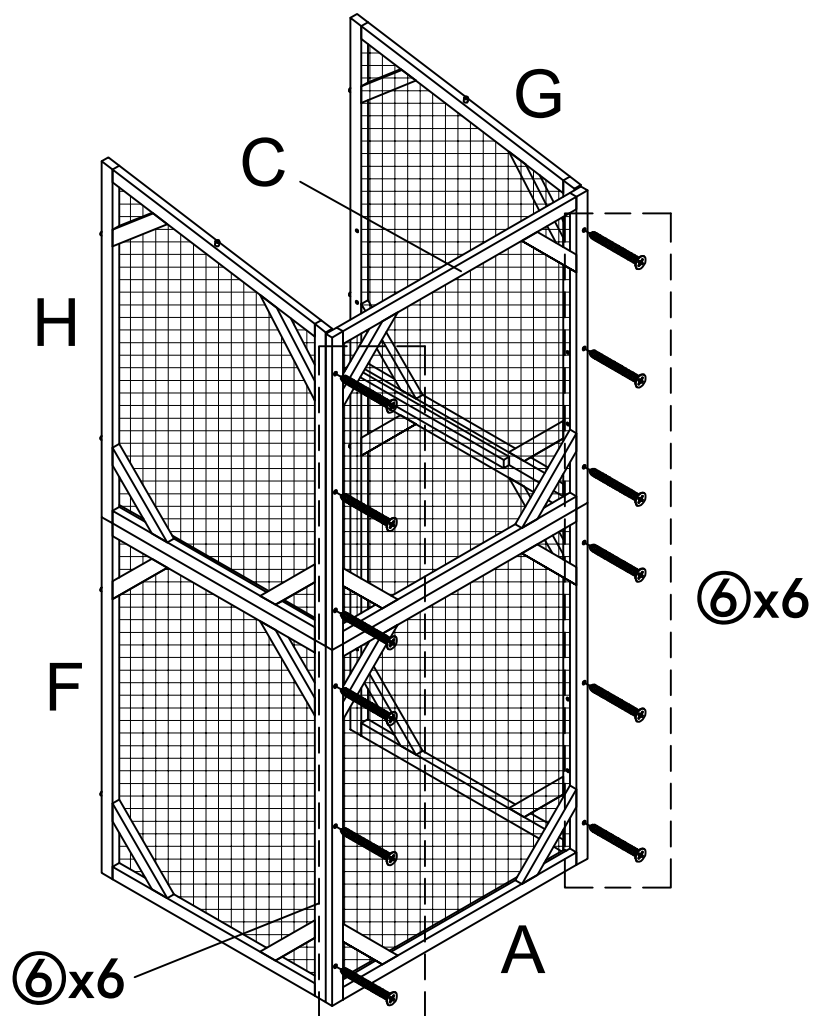


Ix2

Vx2



②x24

⑧x4

 
⑫x4

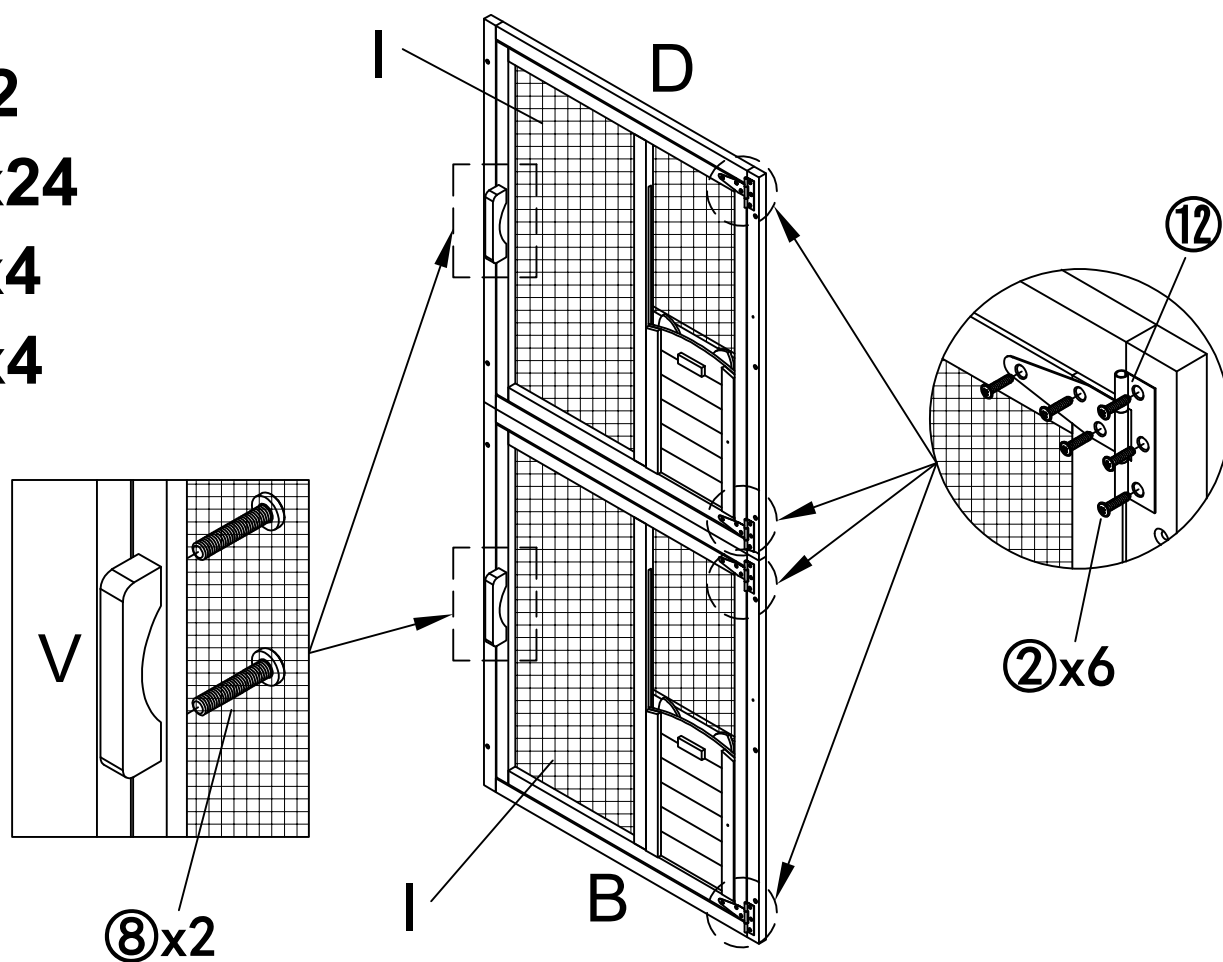



Tx4
⑨x8

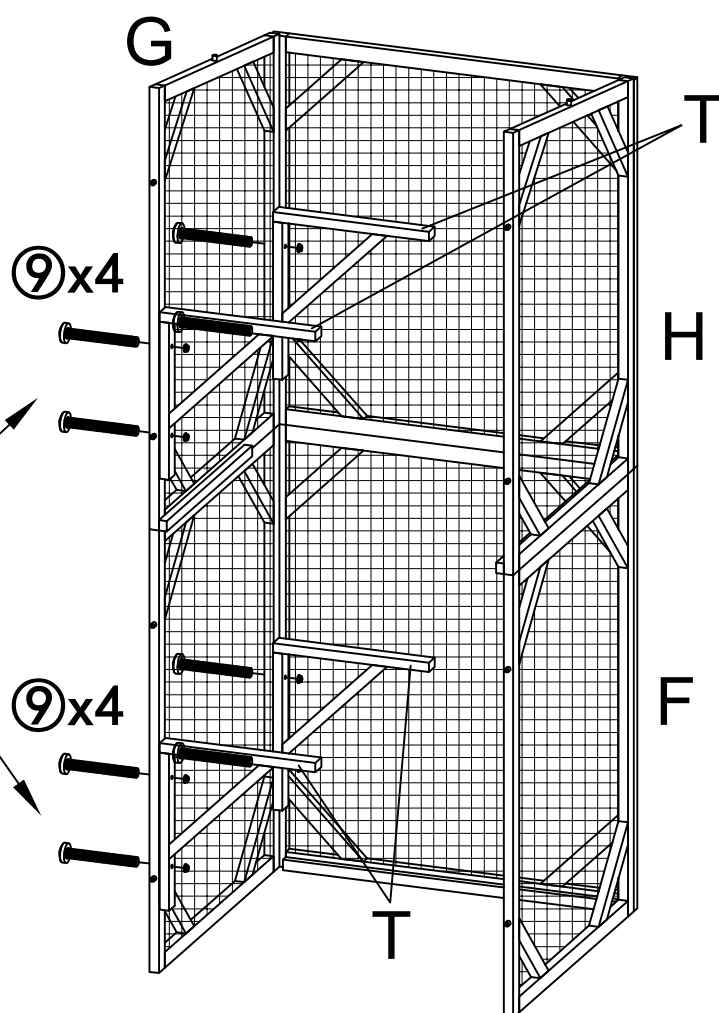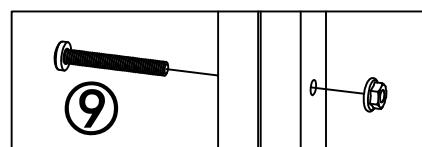  


Kx1
Lx1
④x8


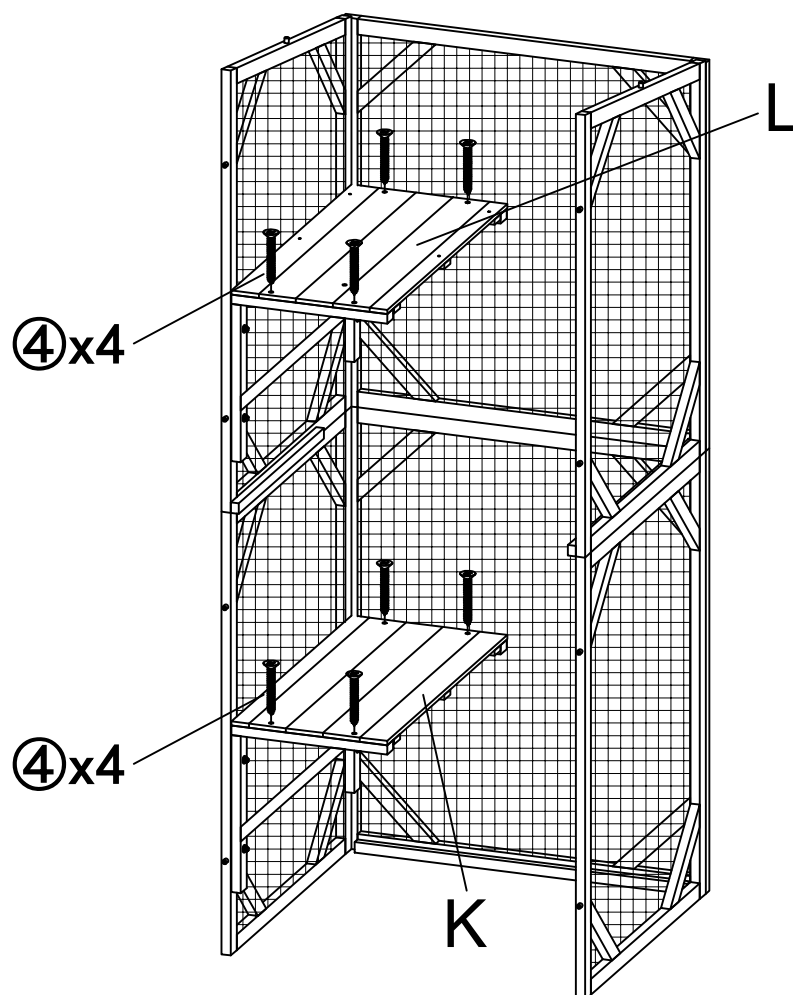 


Px1
Qx2
Rx1
④x8

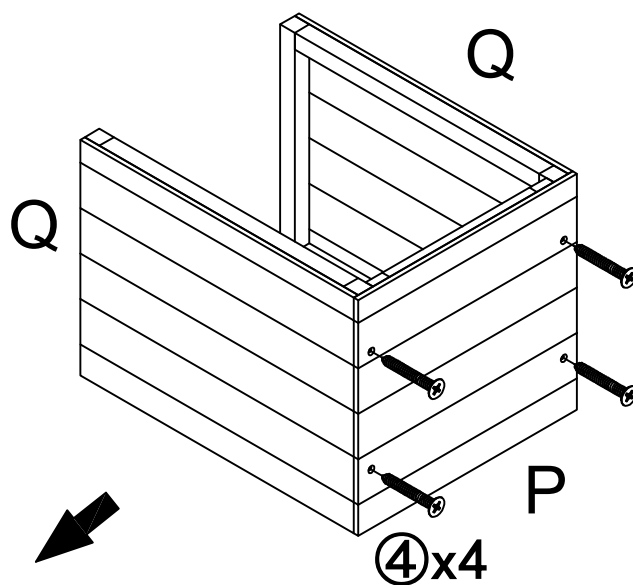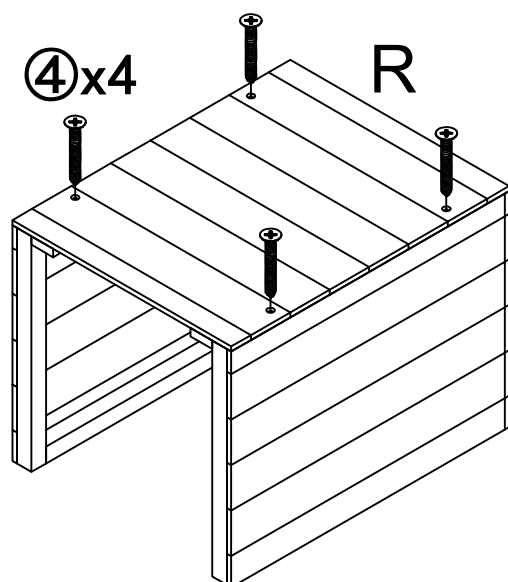  

⑥x4

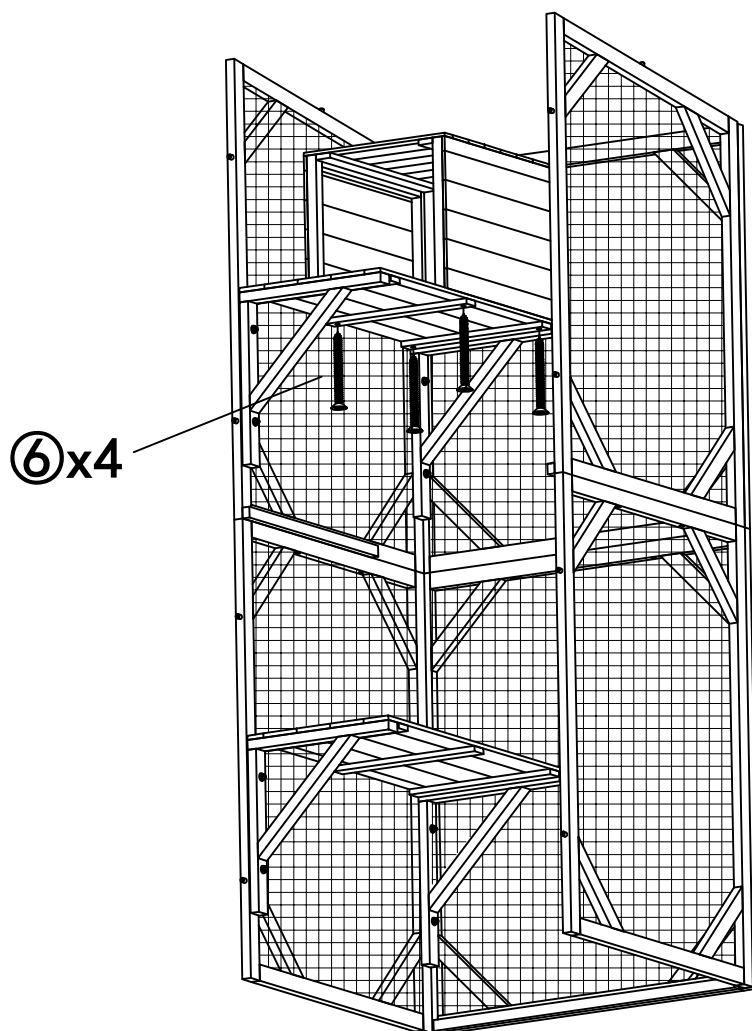 

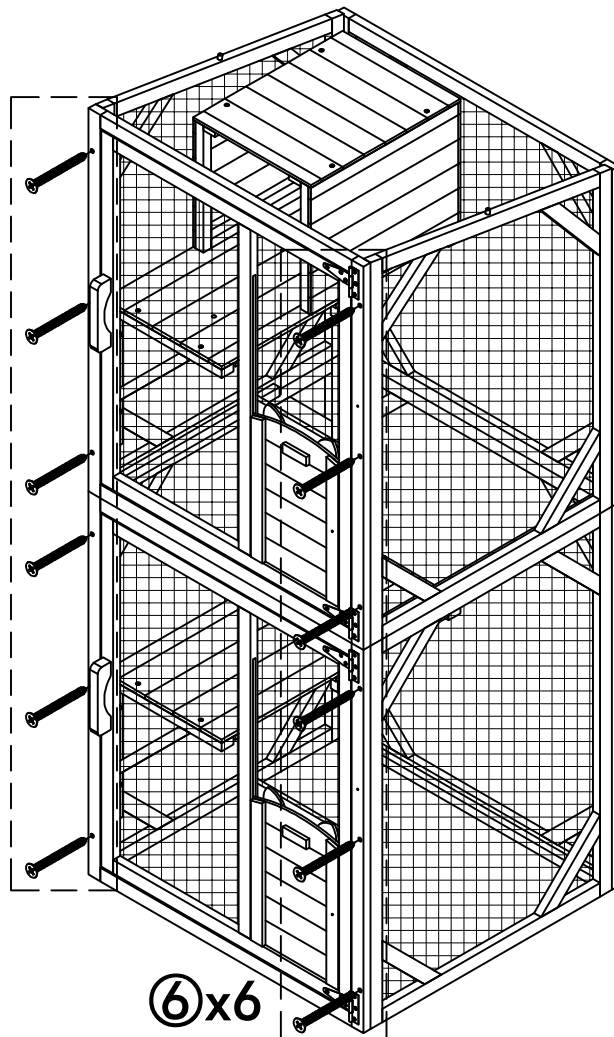 
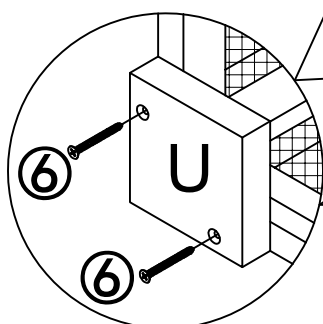 
⑥x12**⑥x6****⑥x6****Ux4****⑥x8**

③x16


⑮x2

⑯x2

  ③x4

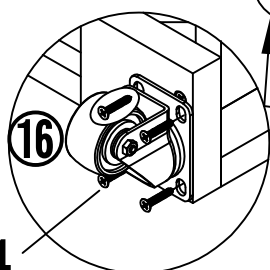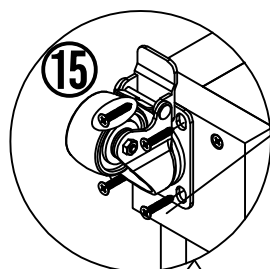

③x4

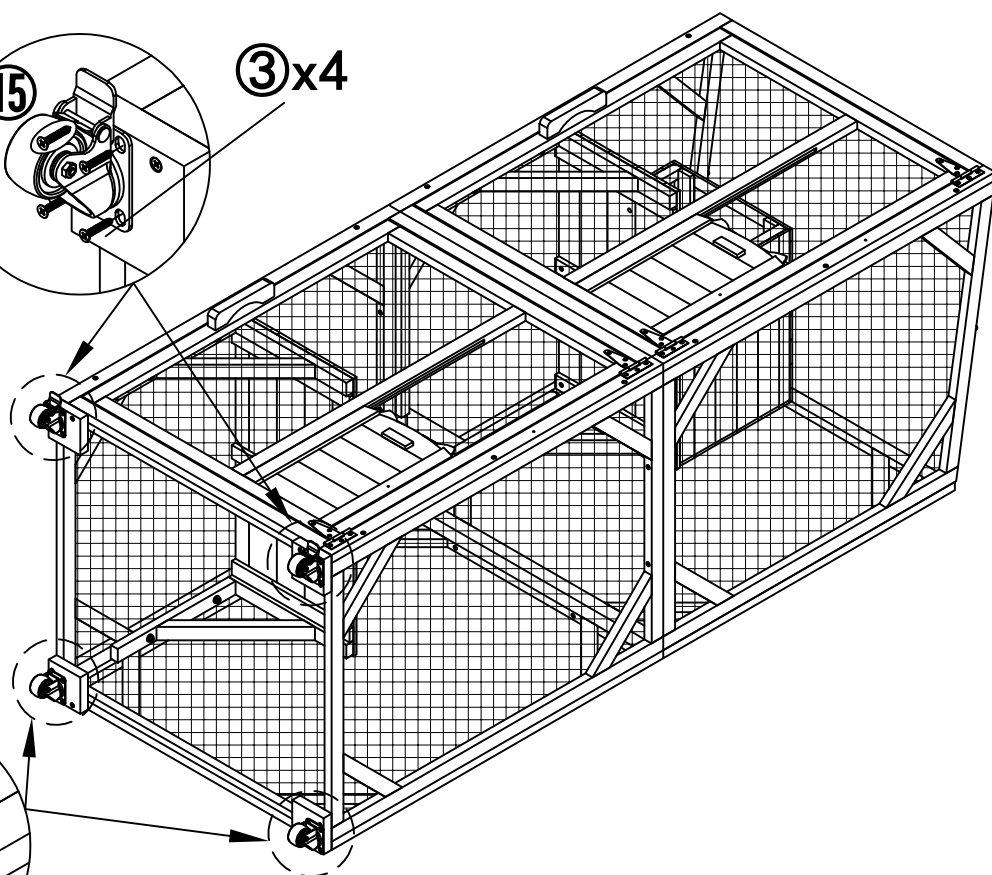 

Mx1


Nx1

Ox2


M

N

 
O

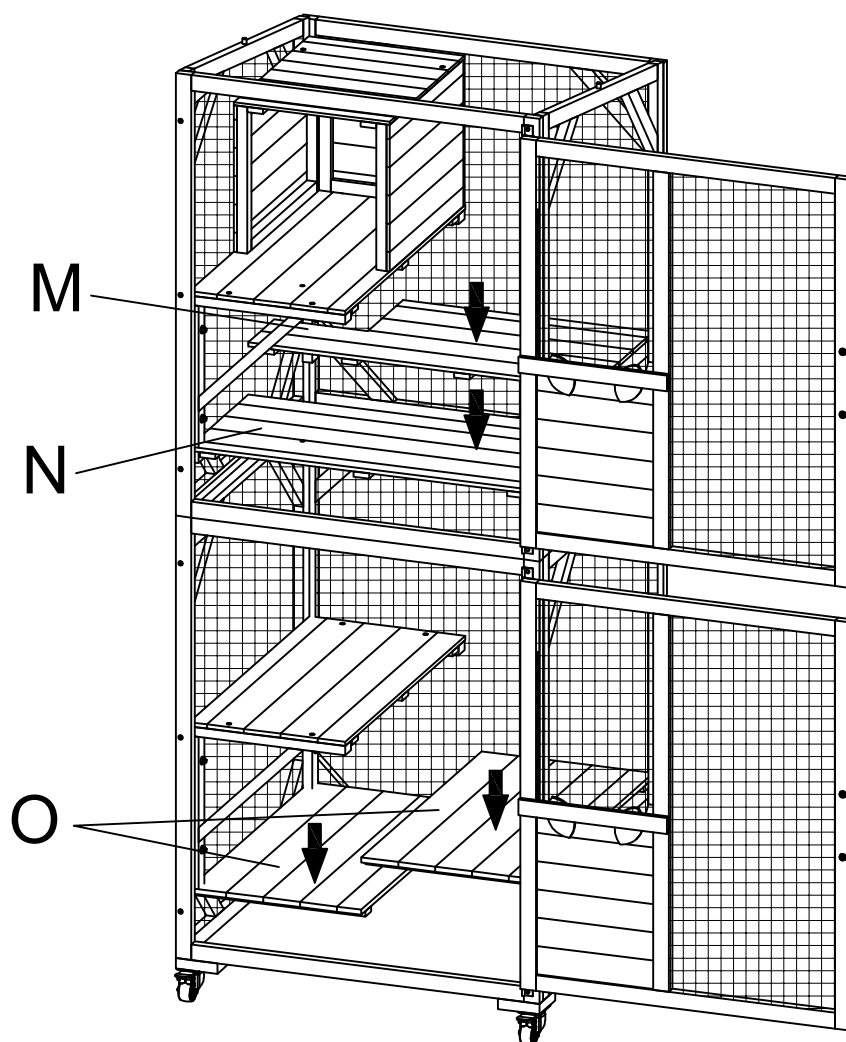

Sx1
⑩x2

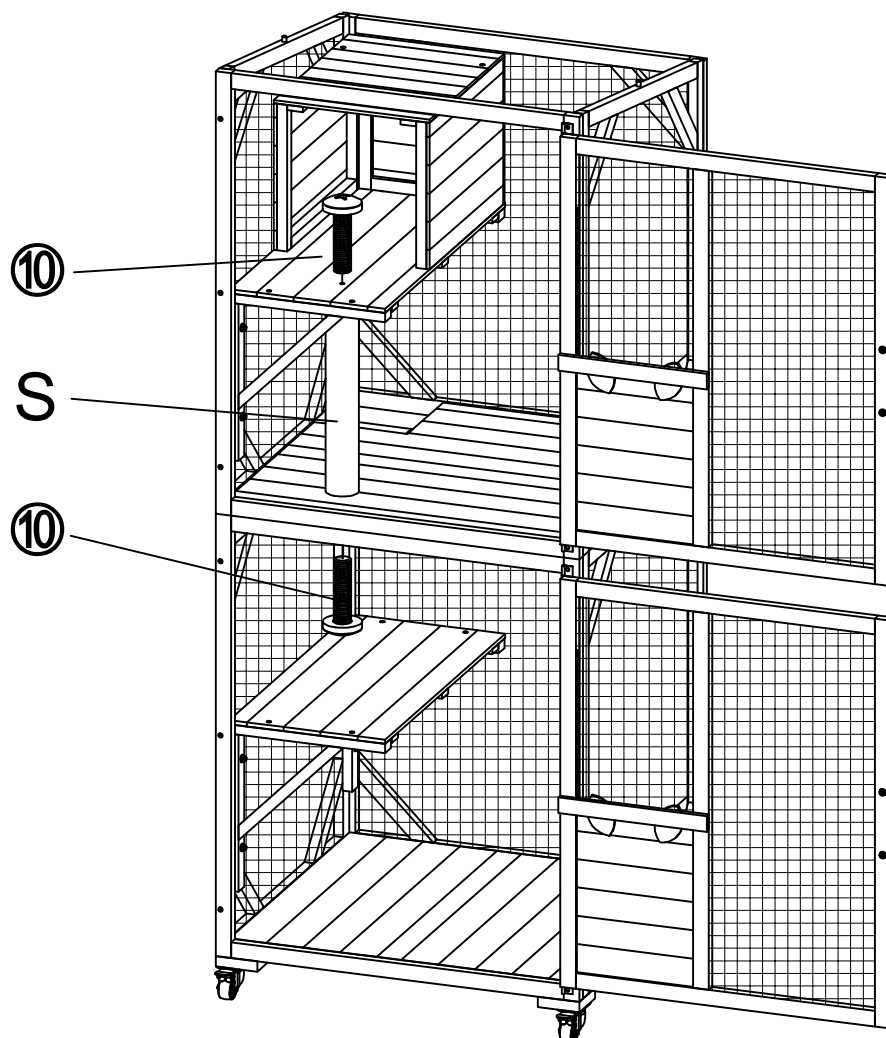 

Jx1
①x16
⑤x4
⑬x4

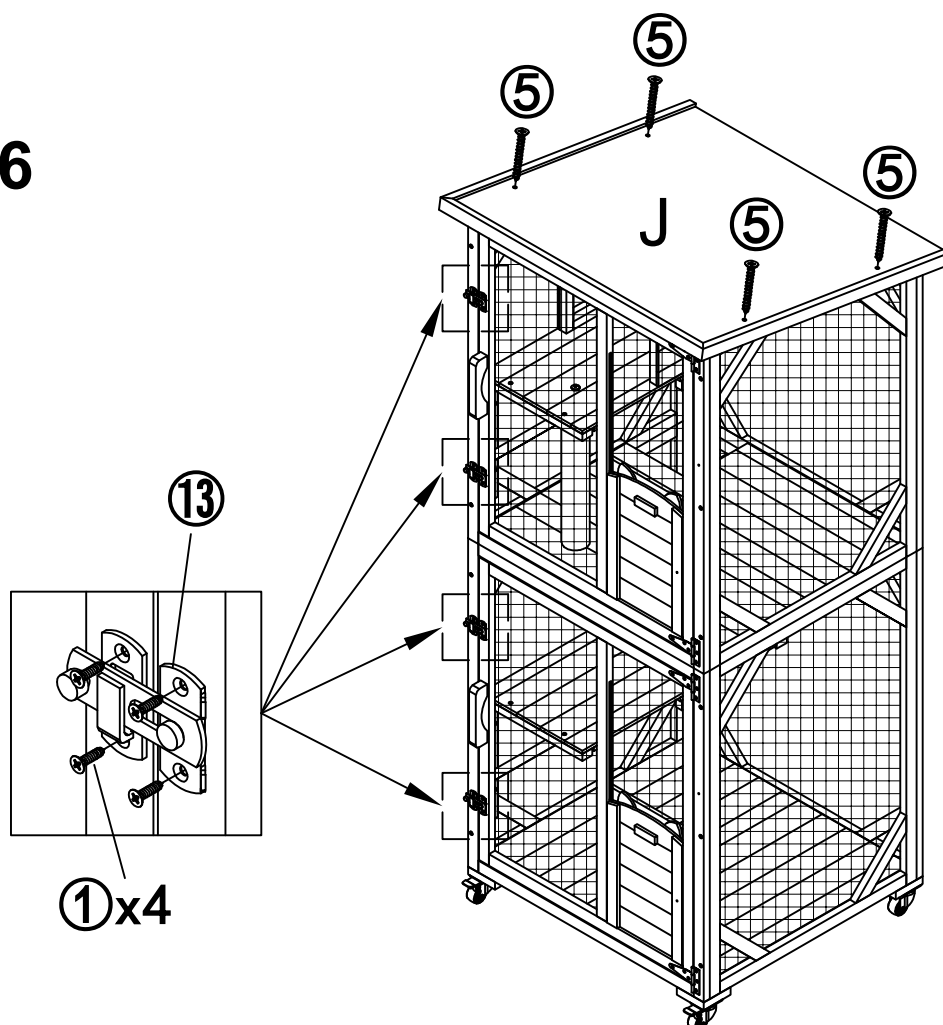 

14x2