 


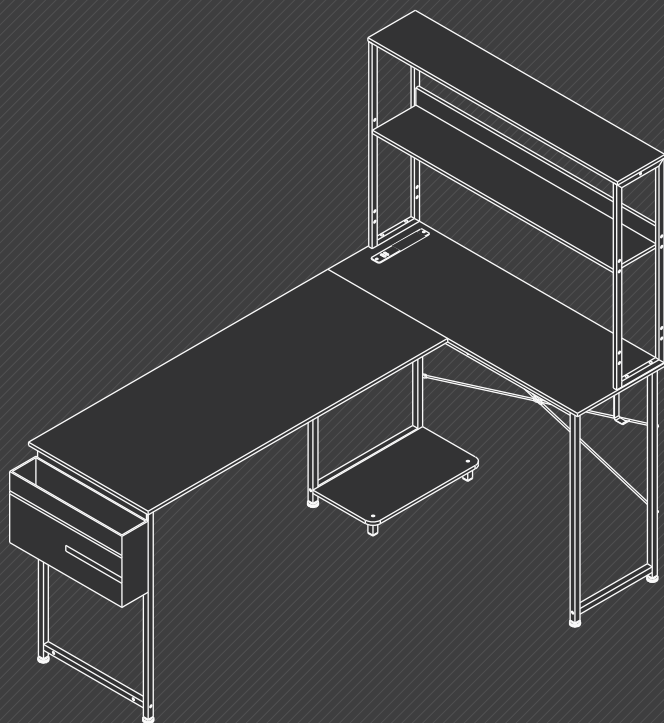

L SHAPED DESK

53"/61"



USER MANUAL



Contents


TOPIC	PAGE
01	SAFETY INSTRUCTIONS
1-1	Thank You For Choosing Our Product
1-2	Precautions
02	INSTALLING MODULES
2-1	Disassembly Diagram
2-2	Parts List
2-3	Assembly Instructions
03	CUSTOMER SERVICE
3-1	30-Day Return Policy
3-2	1-Year Warranty
3-3	Quick Response Within 24 Hours
04	PROBLEMS YOU MAY ENCOUNTER
4-1	Problems You May Encounter

Safety Instructions

Thank You For Choosing Our Product

Before assembly, please read this USER MANUAL first, and check according to Parts List to make sure all parts are included. Feel free to contact us if you have any concerns or questions about your product, we are always ready to help. Your satisfaction is our first priority!

 
Precautions

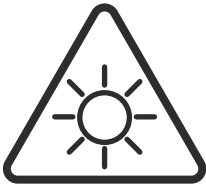

- Avoid long-term direct sunlight exposure.



 - Keep away from sharp objects.

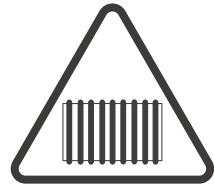


- Keep away from heat.



- Keep infants/children away from assembly parts to avoid choking and suffocation.




 - Keep away from corrosive substances.

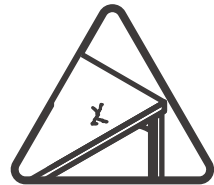

- Pay attention to avoid over-tightening fasteners, or they may induce cracking within the board.

 Disassembly Diagram

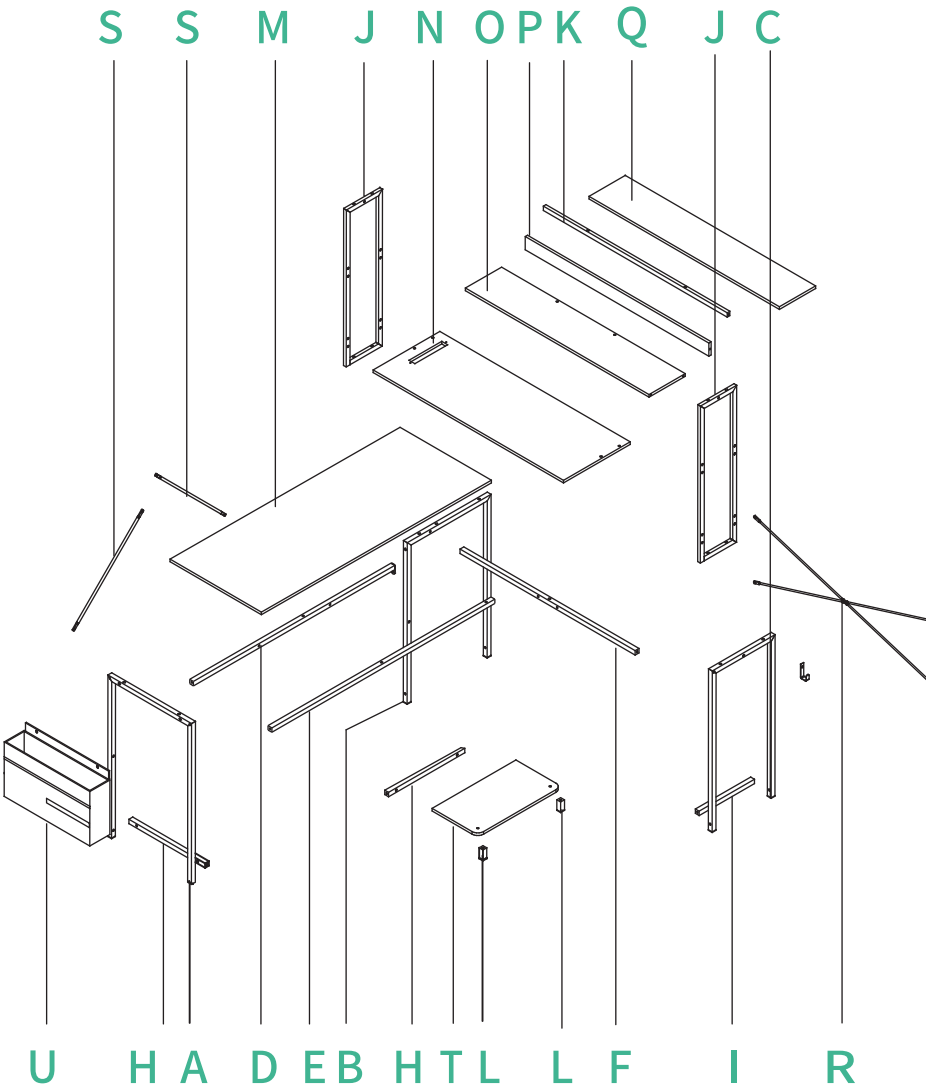










Parts List

For ease and safety, we recommend two people for assembly.



A x1 	B x1 	C x1 	D x1
E x1 	F x1 	H x2 	I x1
J x2 	K x1 	L x2 	M x1
N x1 	O x1 	P x1 	Q x1
R x1 	S x2 	T x1 	U x1

         Parts List

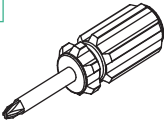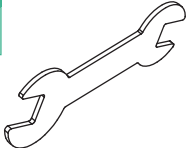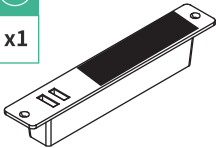
1 x7  1 Spare	2 x12  M6.3x50 2 Spare	3 x3  ST4x12 1 Spares	4 x6  M6x12 1Spares
5 x42  M6x28 3 Spares	6 x5  M6x40 1 Spare	7 x9  1 Spare	8 x2 
9 x1 	10 x1 	11 x1 	12 x1 
13 x1 	14 x3  1 Spare		

Assembly Instructions




The table can be assembled in two ways. Please refer to the R1-R15 steps for the right corner desk and the L1-L15 steps for the left corner desk.

 
R1-R15: Right-corner desk

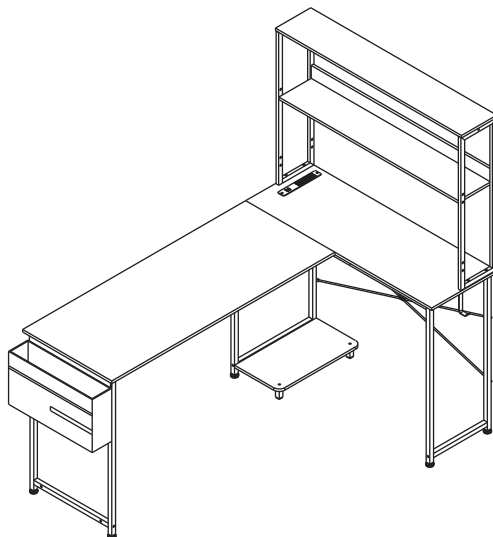

L1-L15: Left-corner desk

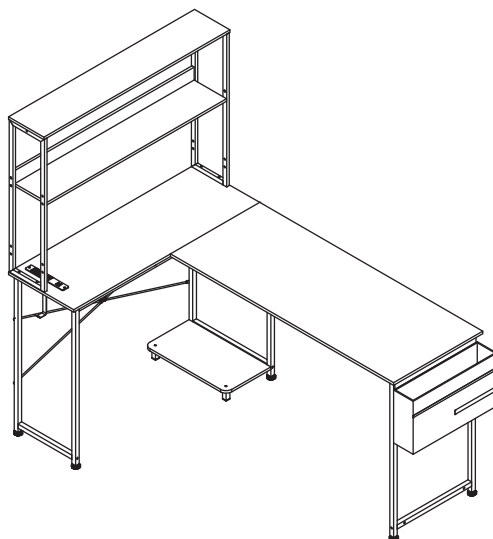 

R-1

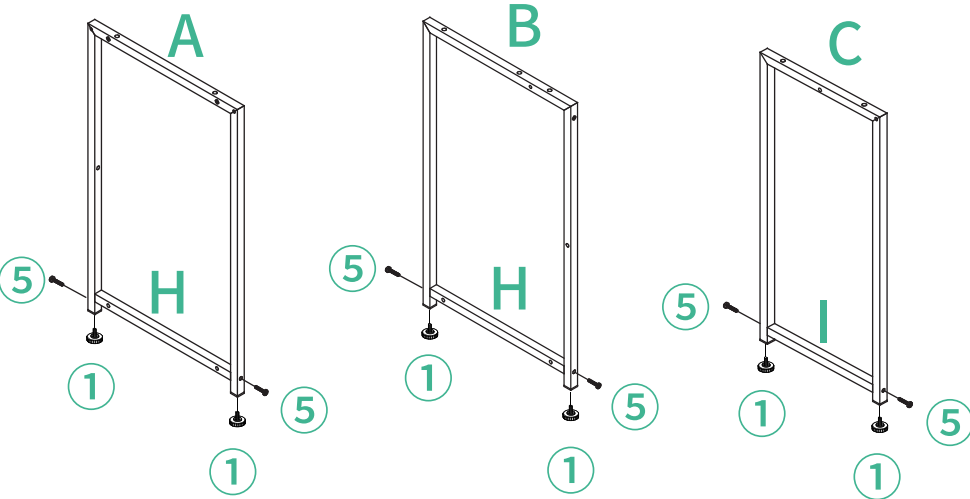 

1 x6 	5 x6 	8 x1 			
A x1 	B x1 	C x1 	H x2 	I x1 	

 
Assembly Instructions

R-2

This is a key step.

Ensure that holes marked on B and C face the same direction.
For a right-corner desk, install B on the right side of C;
For a left-corner desk, install B on the left side of C.


Note: One hole faces upward.

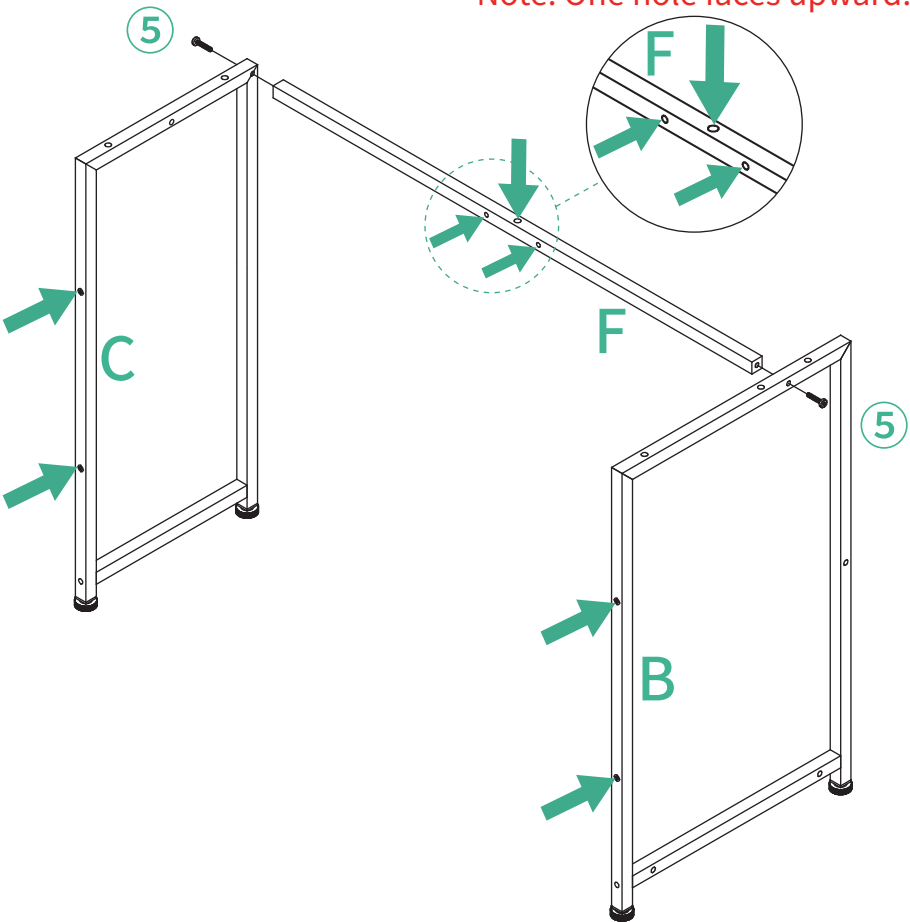

B x1		C x1		F x1		8 x1		5 x2	
----------------	--	----------------	--	----------------	--	----------------	--	----------------	--

Assembly Instructions

 
R-3 Note the installation direction of A, holes marked on A,B, and D face outward.

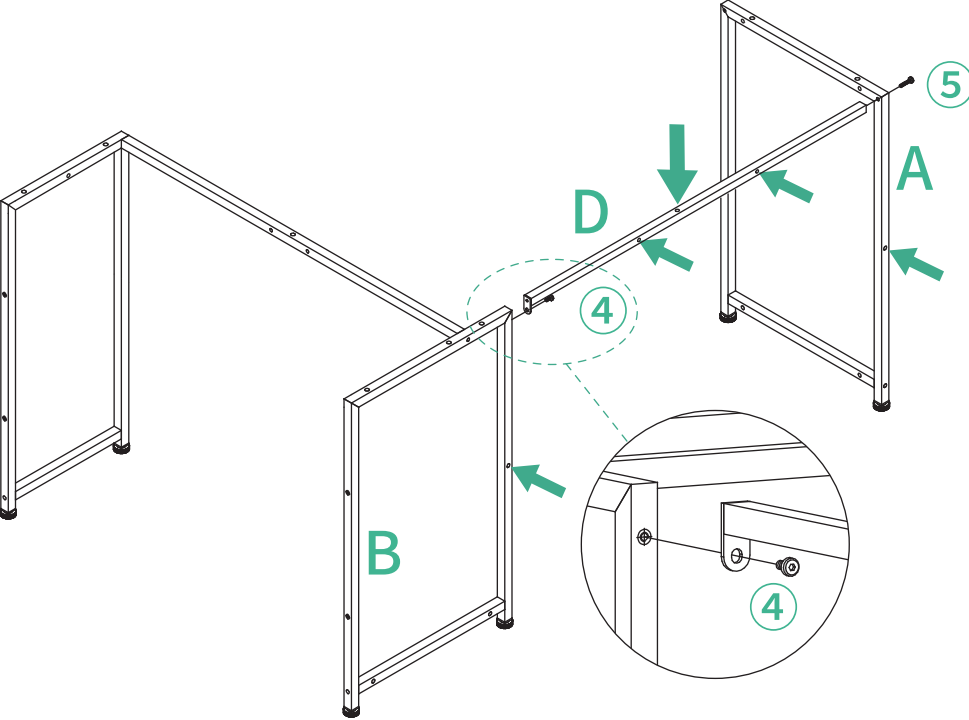

A x1		D x1		4 x1		5 x1		8 x1	
----------------	---	----------------	---	----------------	---	----------------	---	----------------	---


Assembly Instructions

 R-4 Determine the installation direction of E according to the position of holes on E

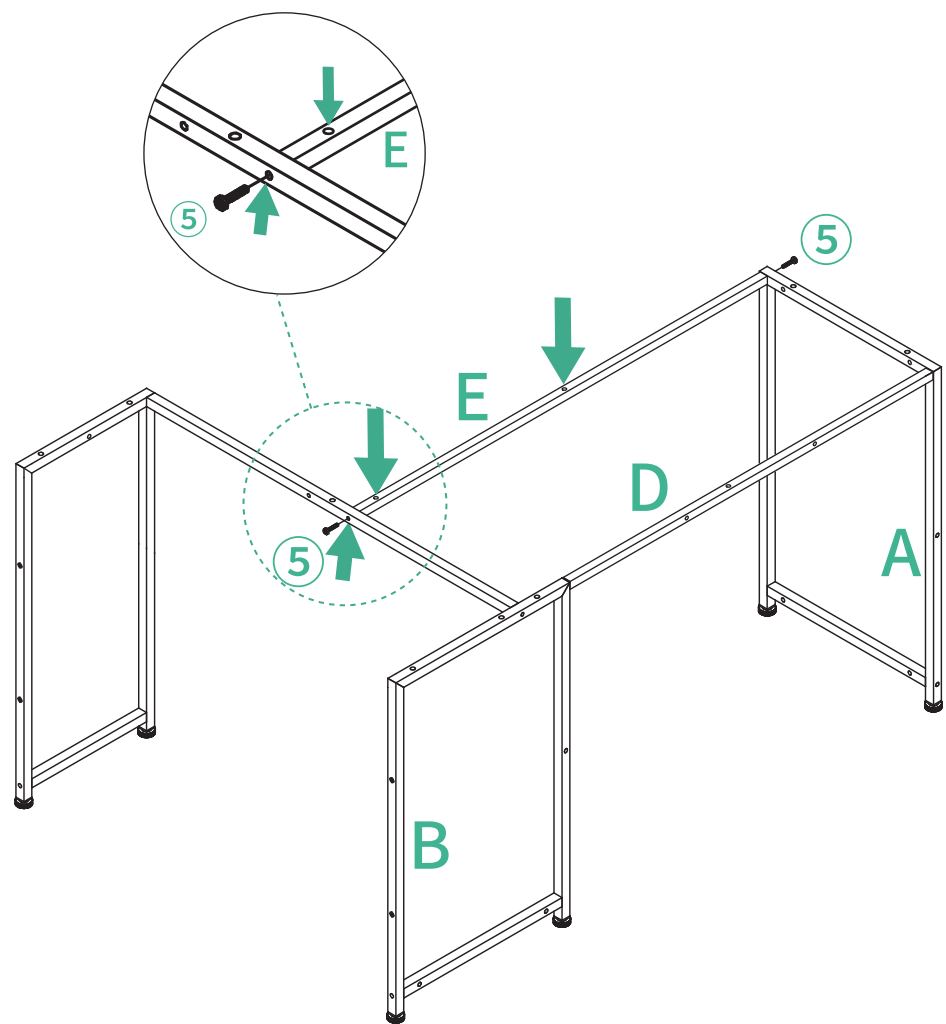

E x1		5 x2		8 x1	
----------------	--	----------------	--	----------------	--

 
R-5

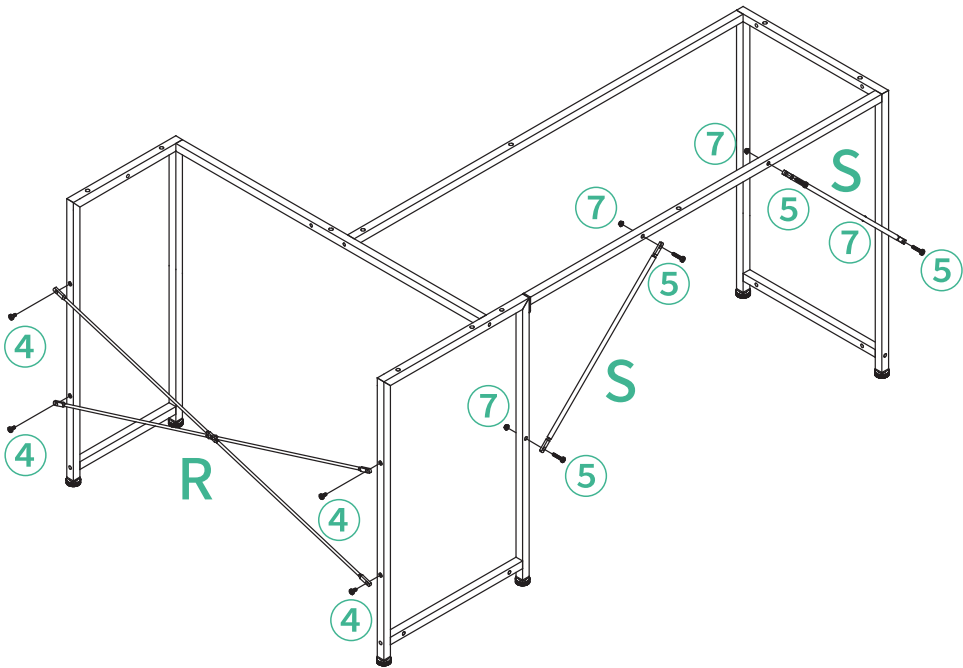

S x2		R x1	
4 x4		5 x4	
7 x4		8 x1	
10 x1			

Assembly Instructions

 R-6 Do not install foot pad on part L.


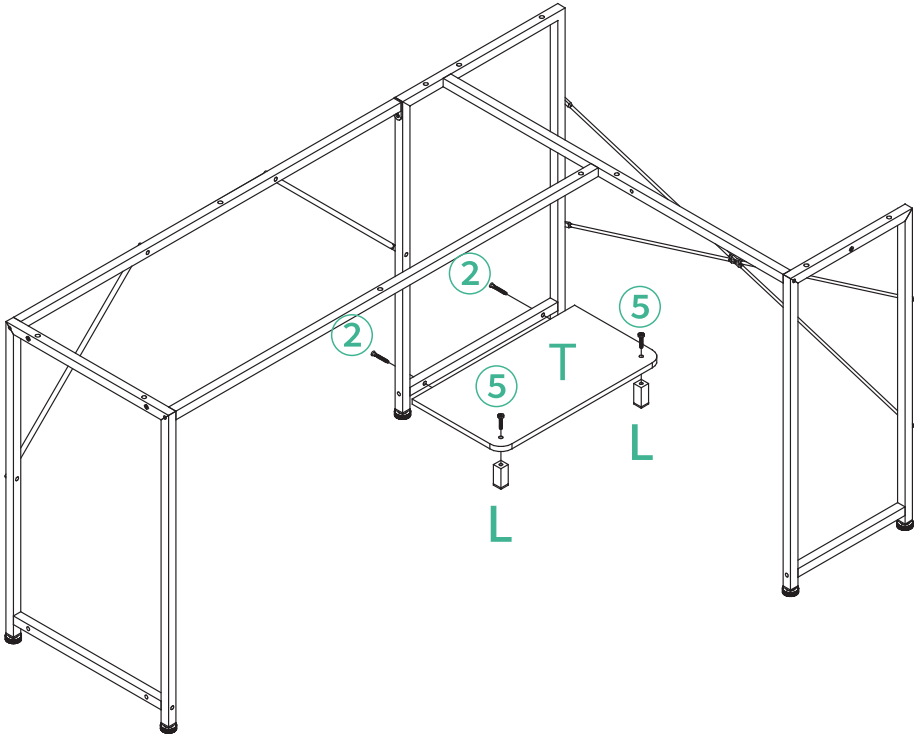


L x2		T x1		2 x2		5 x2		8 x1	
----------------	---	----------------	---	----------------	---	----------------	---	----------------	---

Assembly Instructions


R-7

  Screw all the screws ⑤ into the board, and then align the board M, N before tightening them

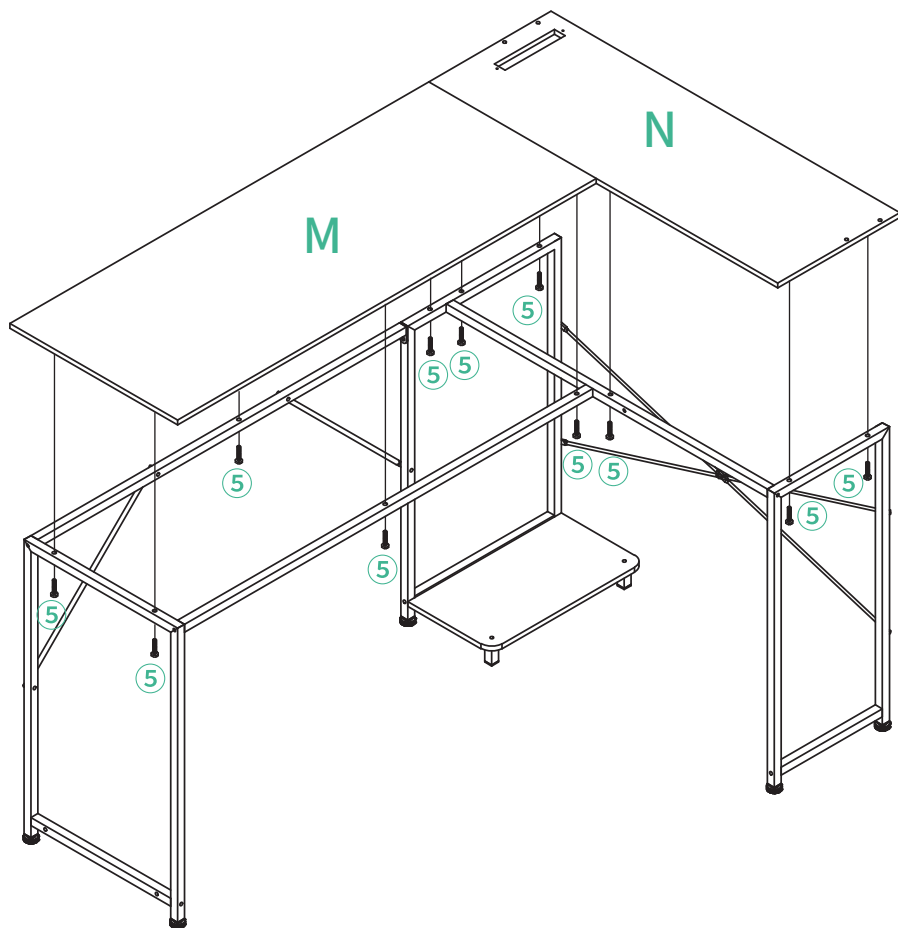

Assembly Instructions

 
R-8 Screw through the cloth bag or hook and directly into the steel frame; Having screw holes on either the front or back side is considered normal, as the desk is designed for reversible installation.

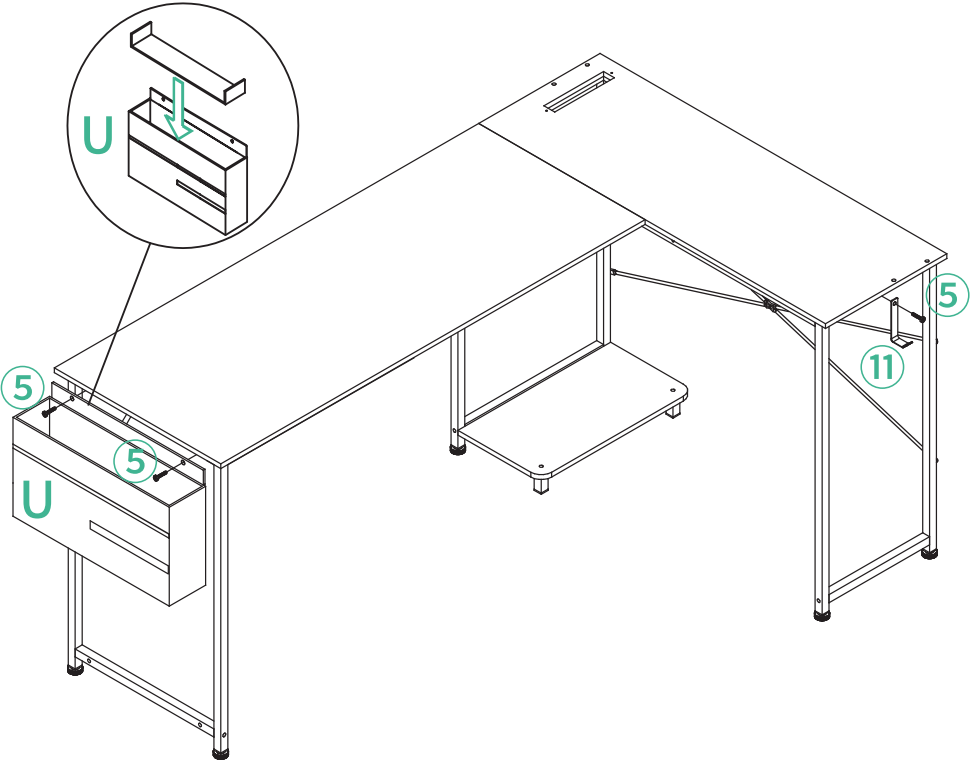

U x1		11 x1		5 x3		8 x1	
----------------	---	-----------------	---	----------------	---	----------------	---


Assembly Instructions

 R-9 Pay attention to the direction of part J; the marked hole should face upward.

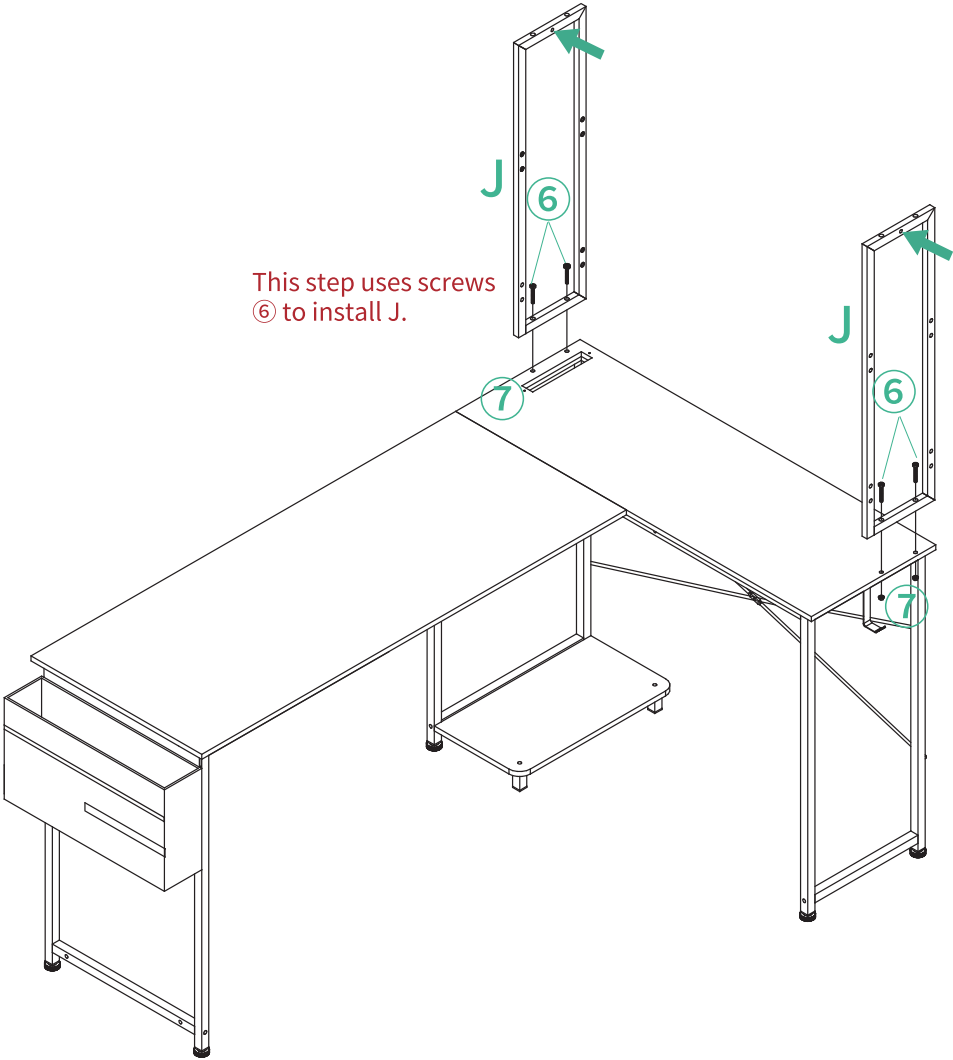


J x2	⑥ x4	⑦ x4	⑧ x1	⑩ x1

 R-10

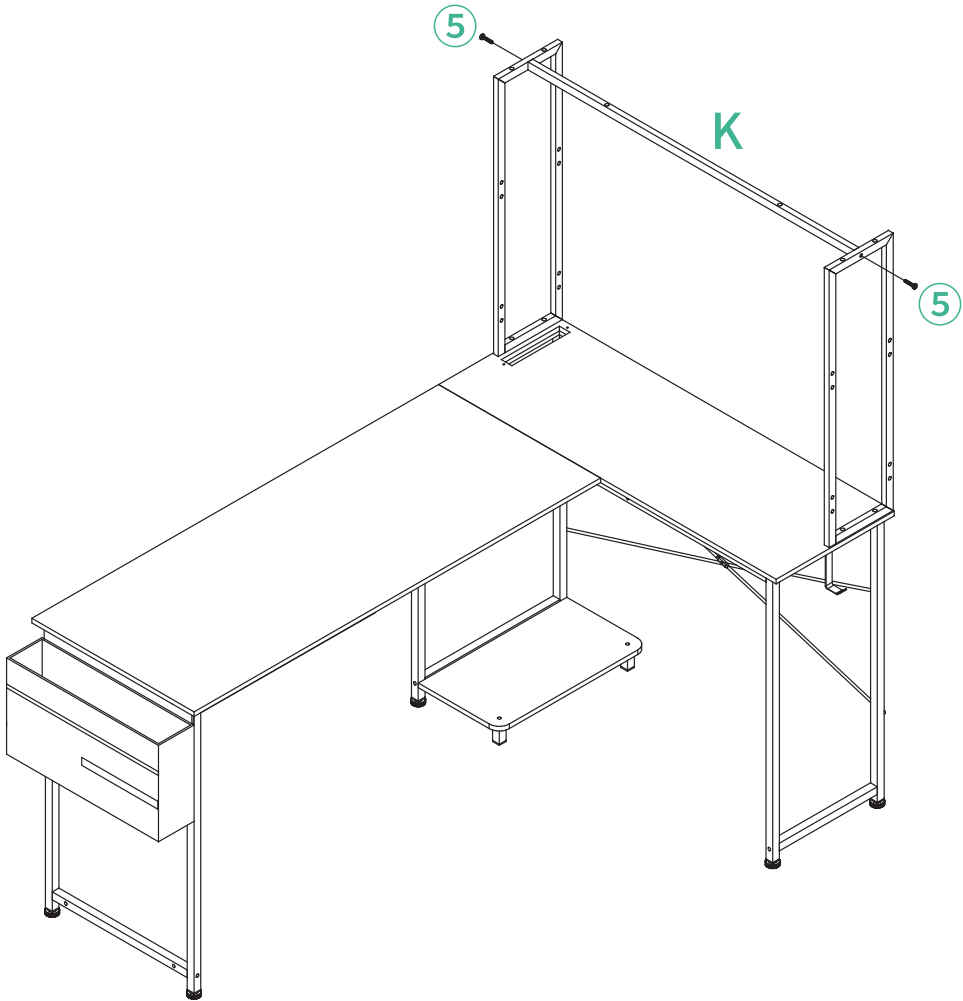

K x1		5 x2		8 x1	
----------------	---	----------------	---	----------------	---

 R-11

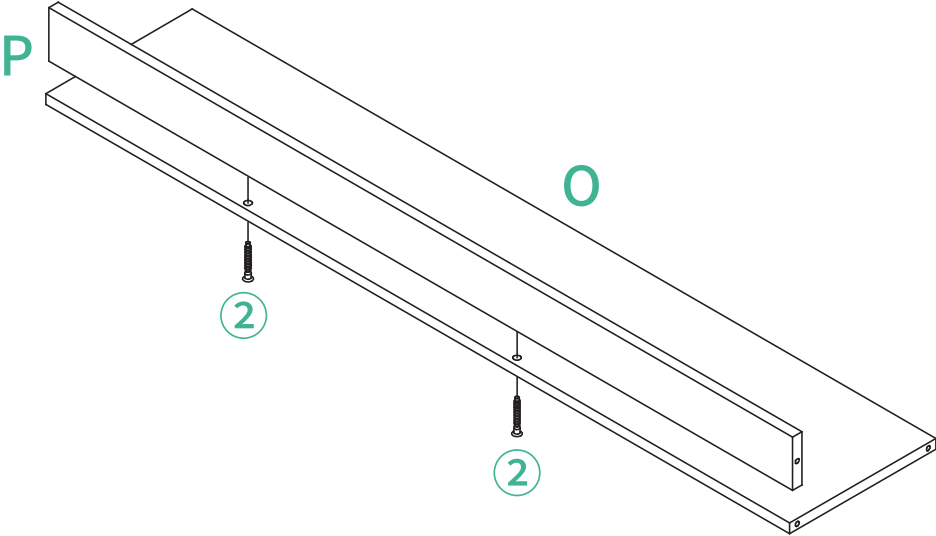


O x1		P x1		2 x2		8 x1	
---------	---	---------	---	---------	---	---------	---

Assembly Instructions

R-12





When installing P&O, if the steel frame is rather tight, loosen the installation screws on part K for adjustment.

 O and P can be mounted at different heights to meet different using needs.


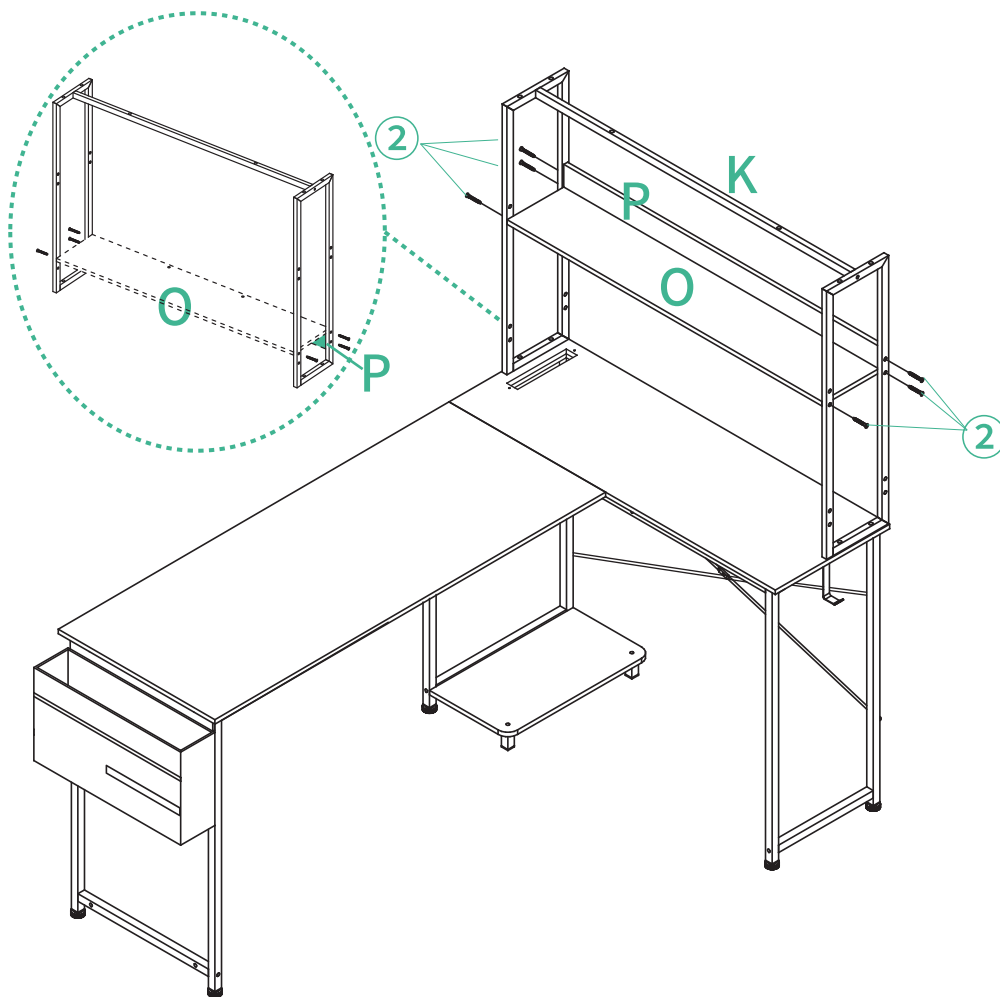


Assembly Instructions

    R-13

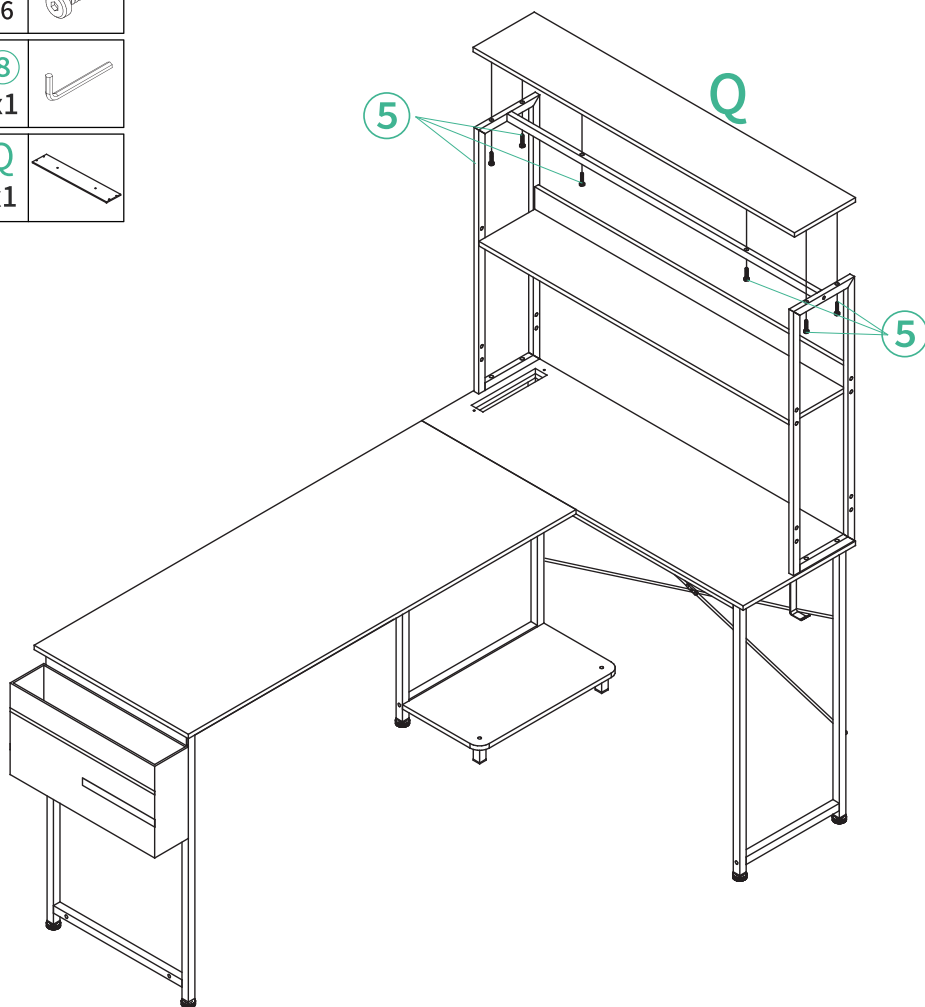


R-14

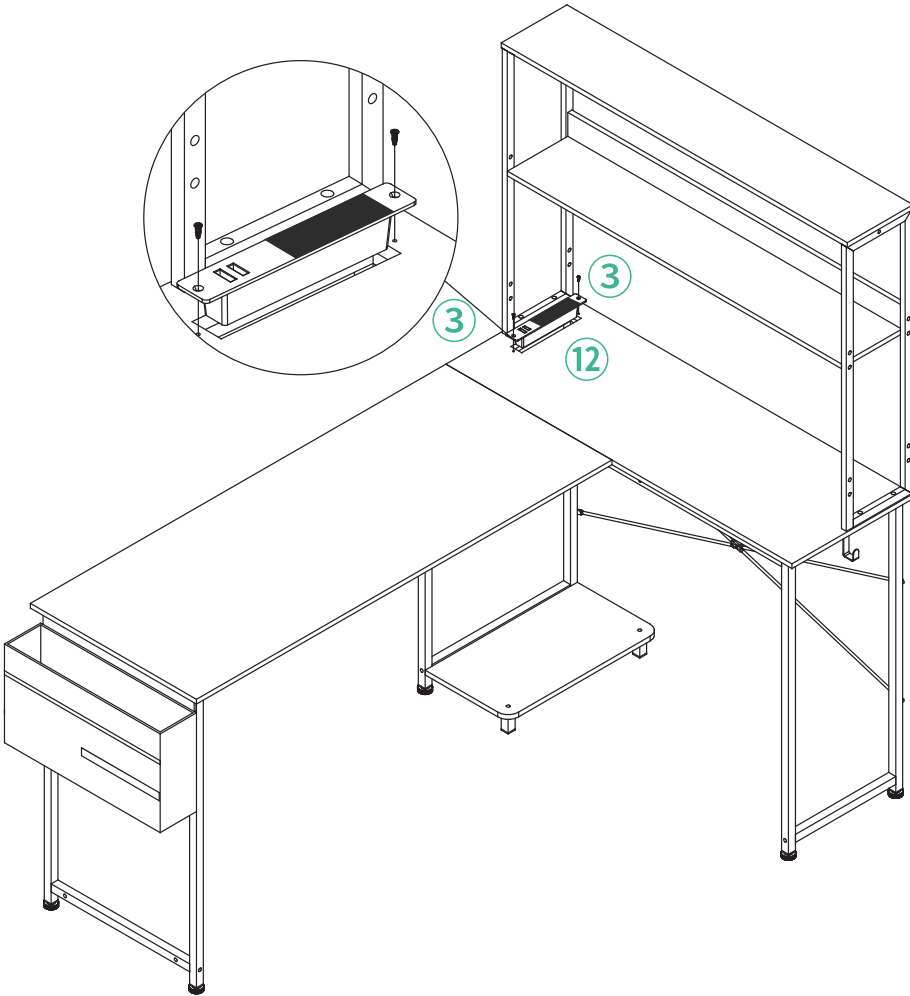  

Assembly Instructions

R-15

 The light strip can be attached to any position according to personal preference, and the strap is used to fix the wires of the light strip.

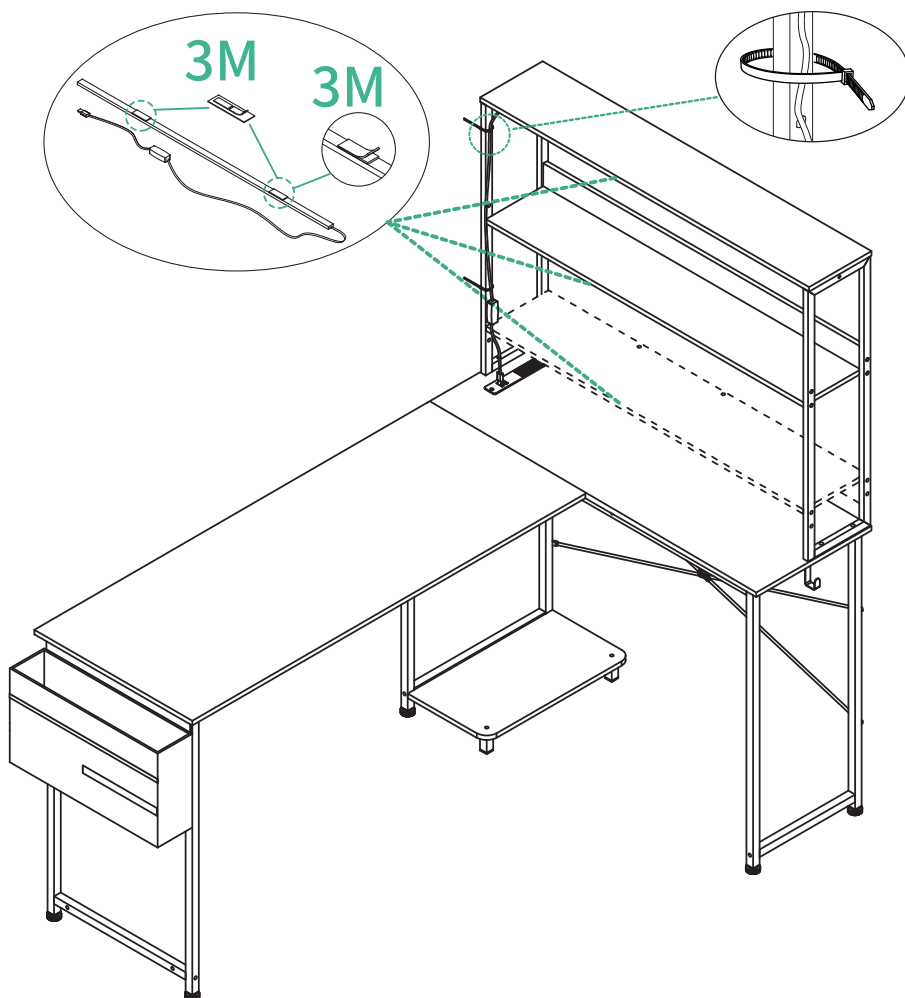


Assembly Instructions




The table can be assembled in two ways. Please refer to the R1-R15 steps for the right corner desk and the L1-L15 steps for the left corner desk.

 
R1-R15: Right-corner desk

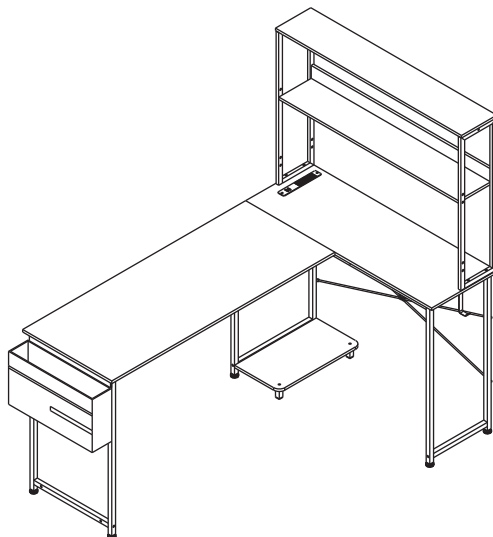

L1-L15: Left-corner desk

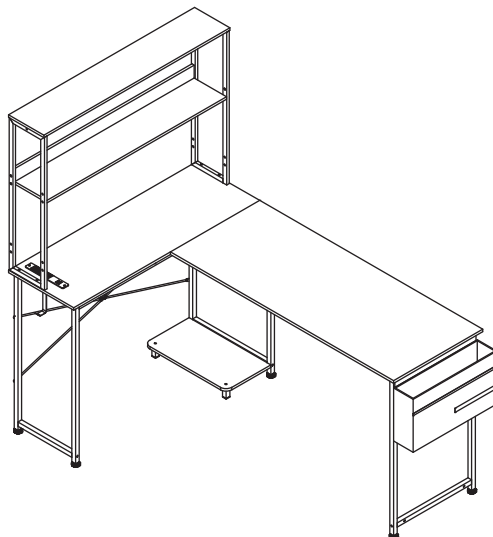 

L-1

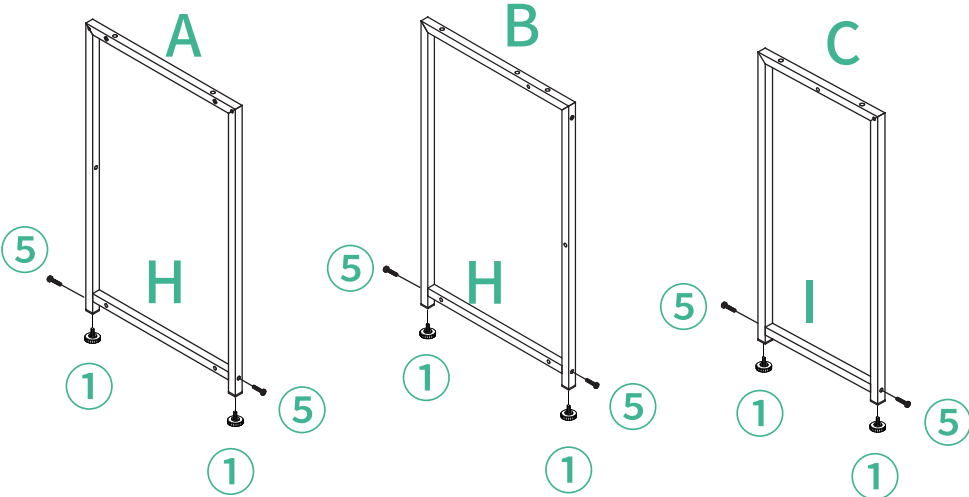 

1 x6		5 x6		8 x1	
---------	---	---------	---	---------	---

A x1		B x1		C x1		H x2		I x1	
---------	---	---------	---	---------	---	---------	---	---------	---

 
Assembly Instructions

L-2

This is a key step.

Ensure that holes marked on B and C face the same direction.
For a right-corner desk, install B on the right side of C;
For a left-corner desk, install B on the left side of C.


Note: One hole faces upward.

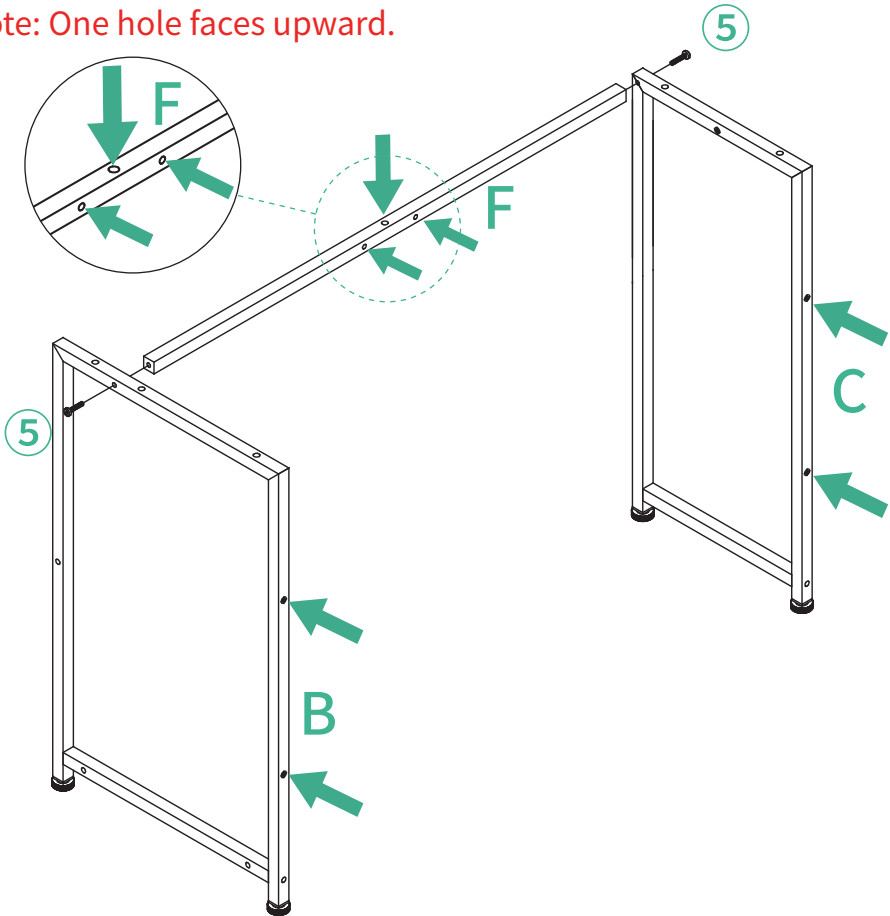

B x1		C x1		F x1		8 x1		5 x2	
----------------	--	----------------	--	----------------	--	----------------	--	----------------	--

Assembly Instructions

 
L-3 Note the installation direction of A, holes marked on A,B, and D face outward.

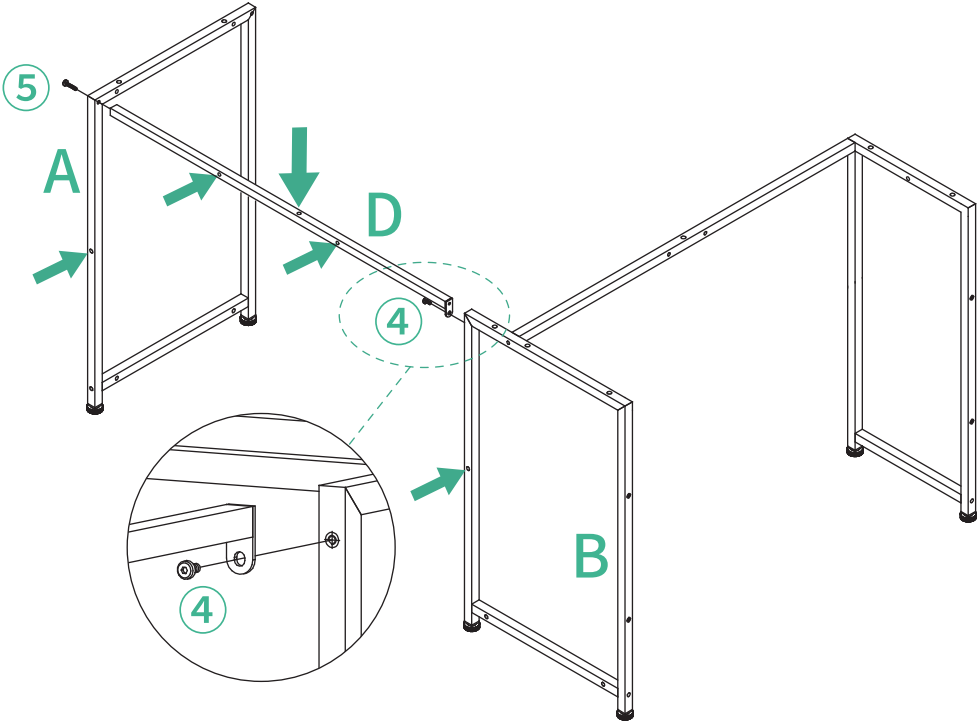

A x1		D x1		4 x1		5 x1		8 x1	
----------------	---	----------------	---	----------------	---	----------------	---	----------------	---


Assembly Instructions

 L-4 Determine the installation direction of E according to the position of holes on E

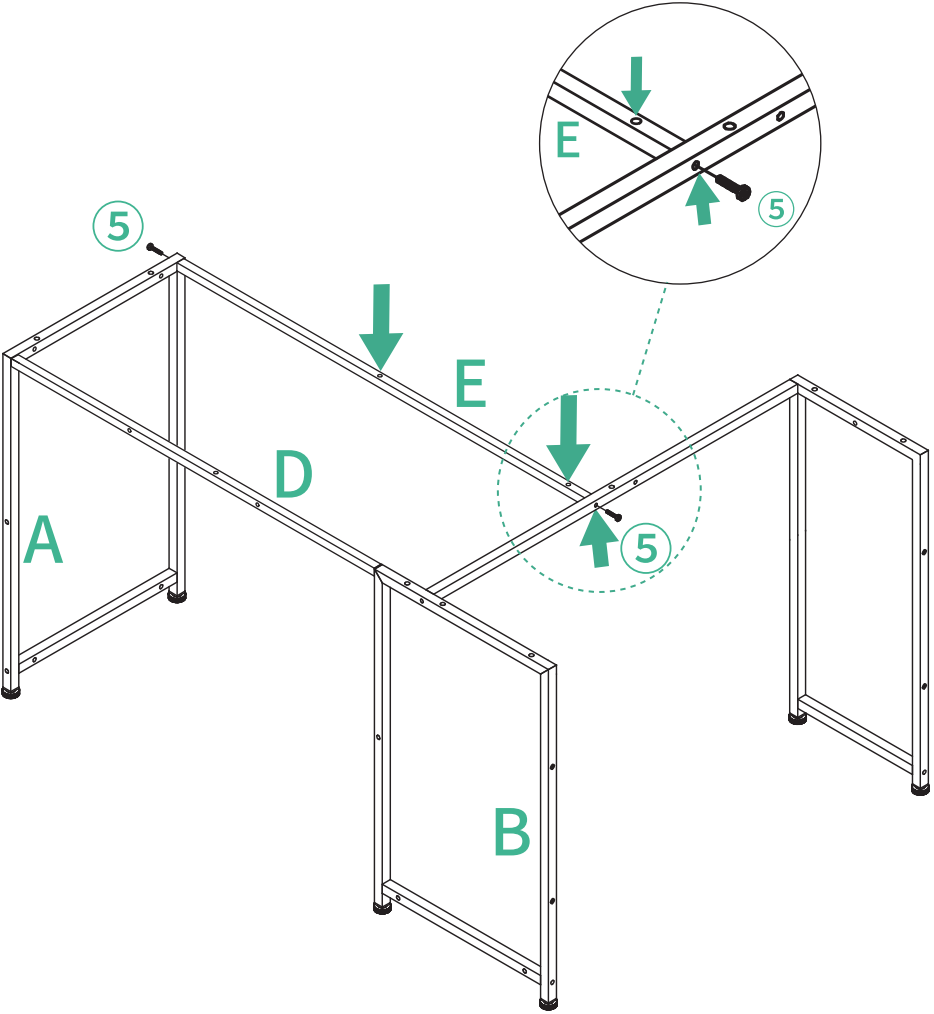

E x1		5 x2		8 x1	
----------------	---	----------------	---	----------------	---

 L-5

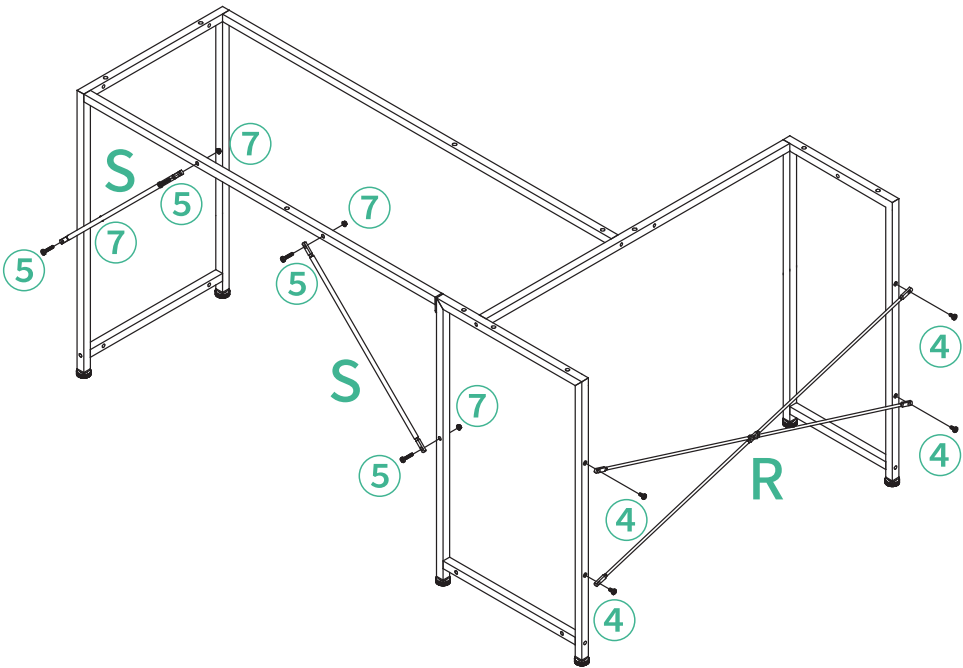


S x2		R x1	
----------------	--	----------------	--

4 x4		5 x4		7 x4		8 x1		10 x1	
----------------	--	----------------	--	----------------	--	----------------	--	-----------------	--

Assembly Instructions

 L-6 Do not install foot pad on part L.


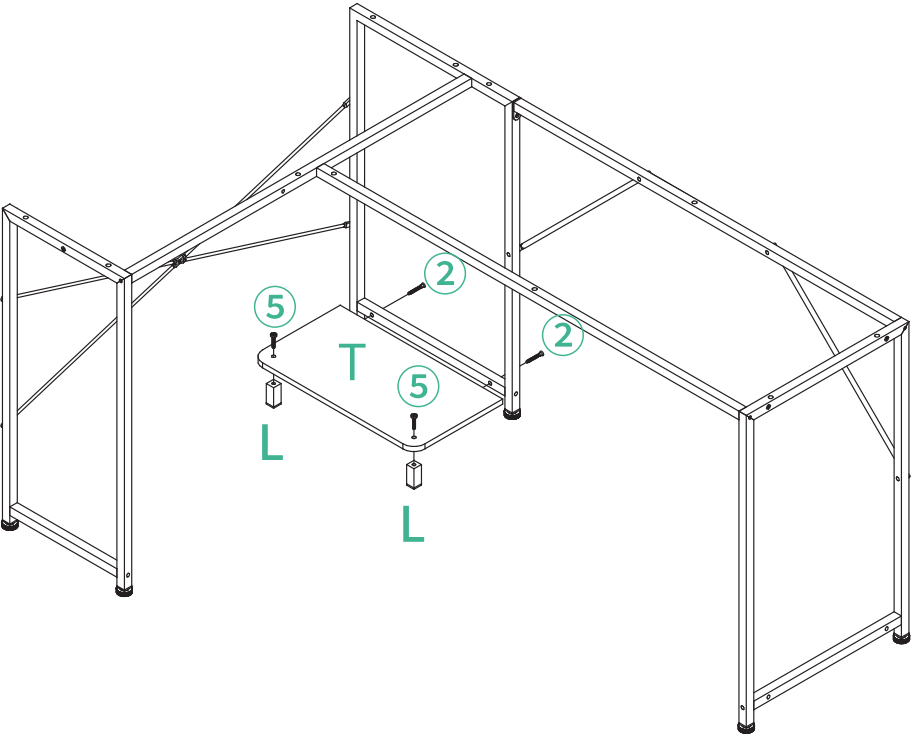


L x2		T x1		2 x2		5 x2		8 x1	
---------	--	---------	--	---------	--	---------	--	---------	--

Assembly Instructions


L-7

  Screw all the screws ⑤ into the board, and then align the board M, N before tightening them

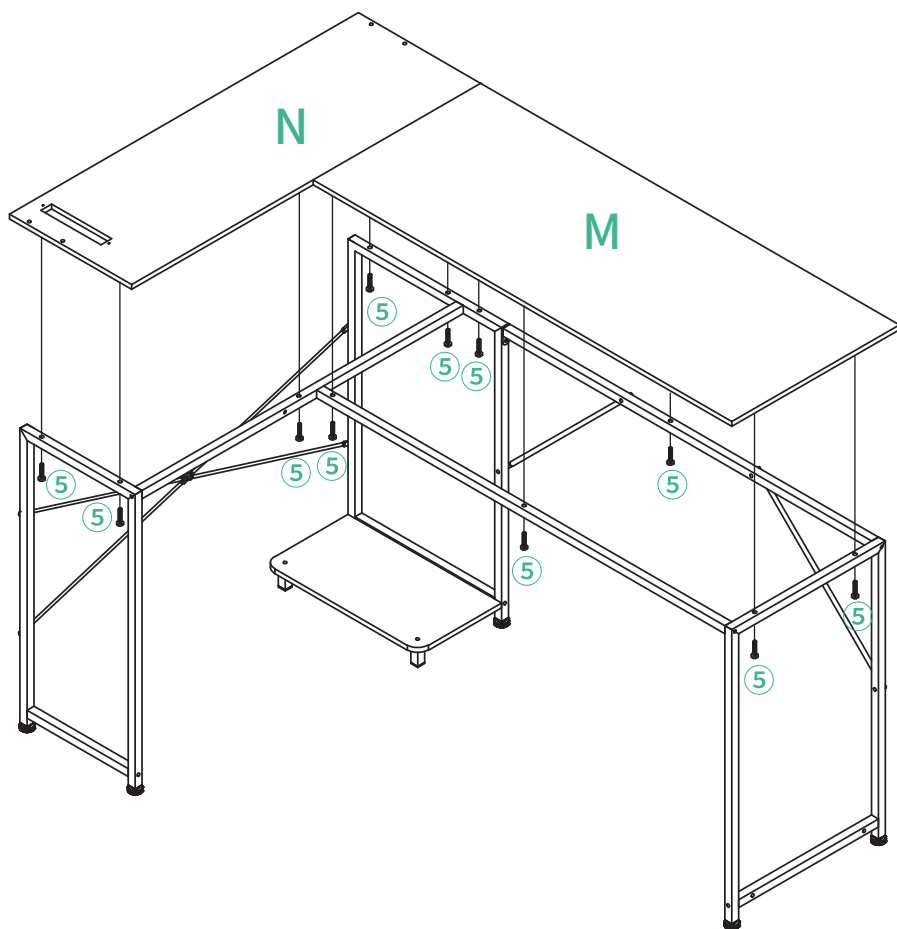


Assembly Instructions

 L-8 Screw through the cloth bag or hook and directly into the steel frame; Having screw holes on either the front or back side is considered normal, as the desk is designed for reversible installation.

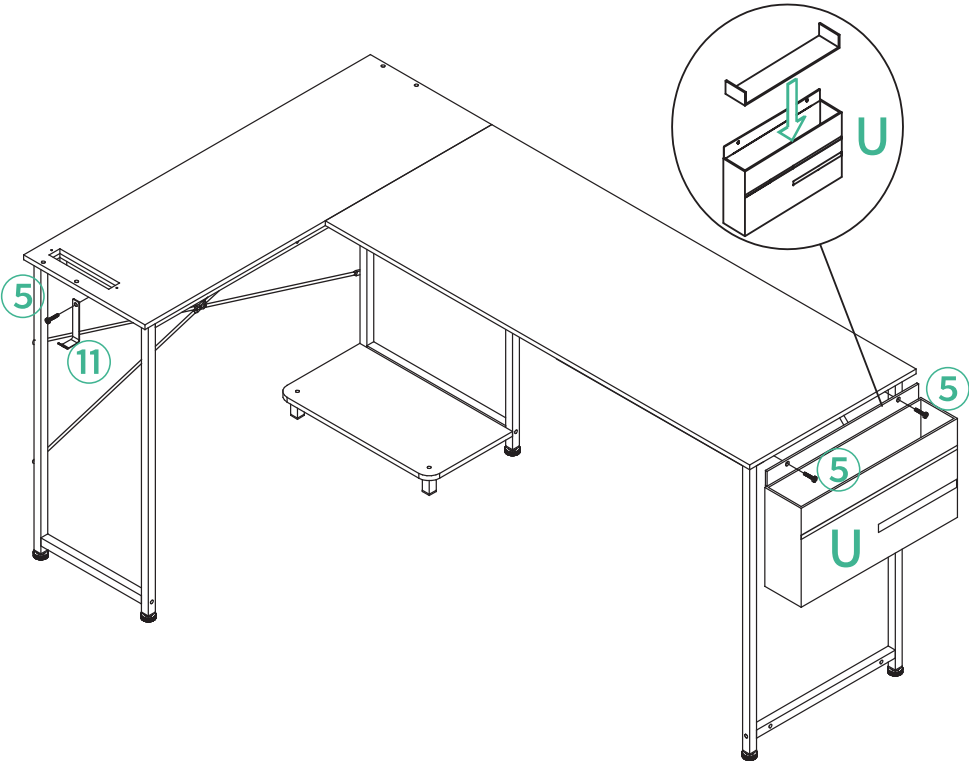


Assembly Instructions

 L-9 Pay attention to the direction of part J; the marked hole should face upward.

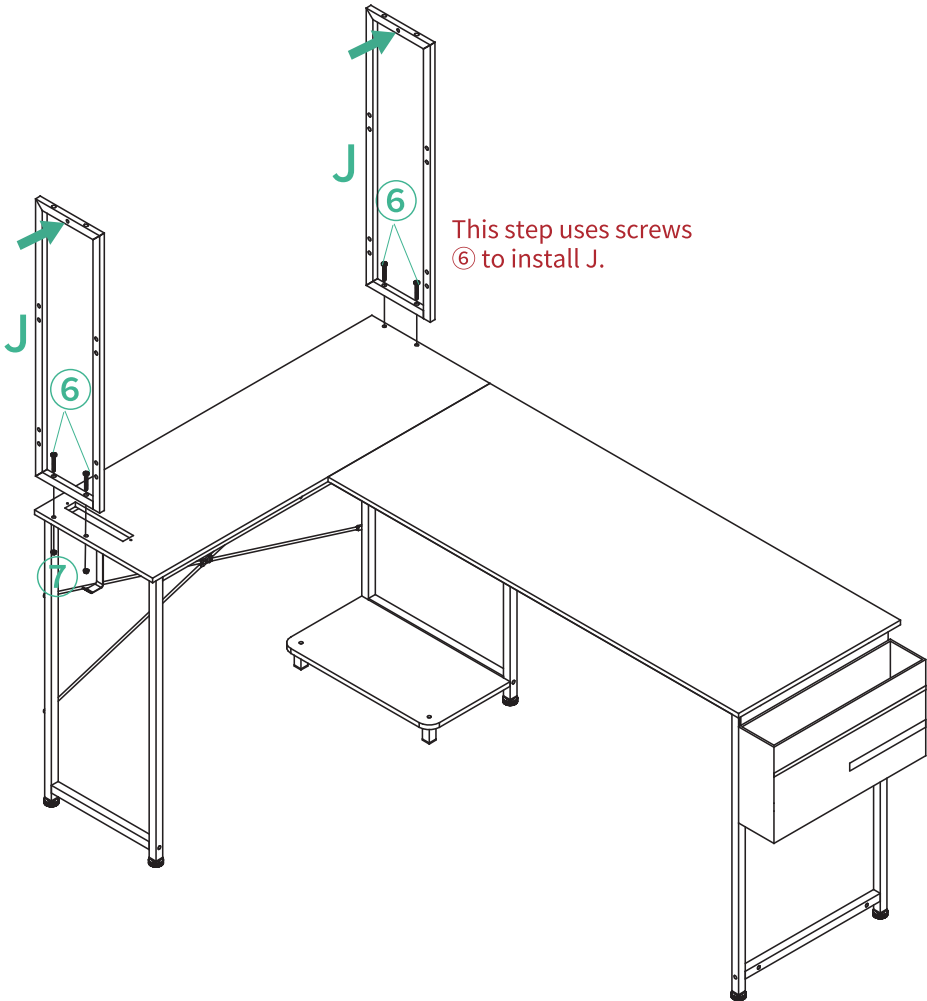


J x2		6 x4		7 x4		8 x1		10 x1	
----------------	--	----------------	--	----------------	--	----------------	--	-----------------	--

 L-10

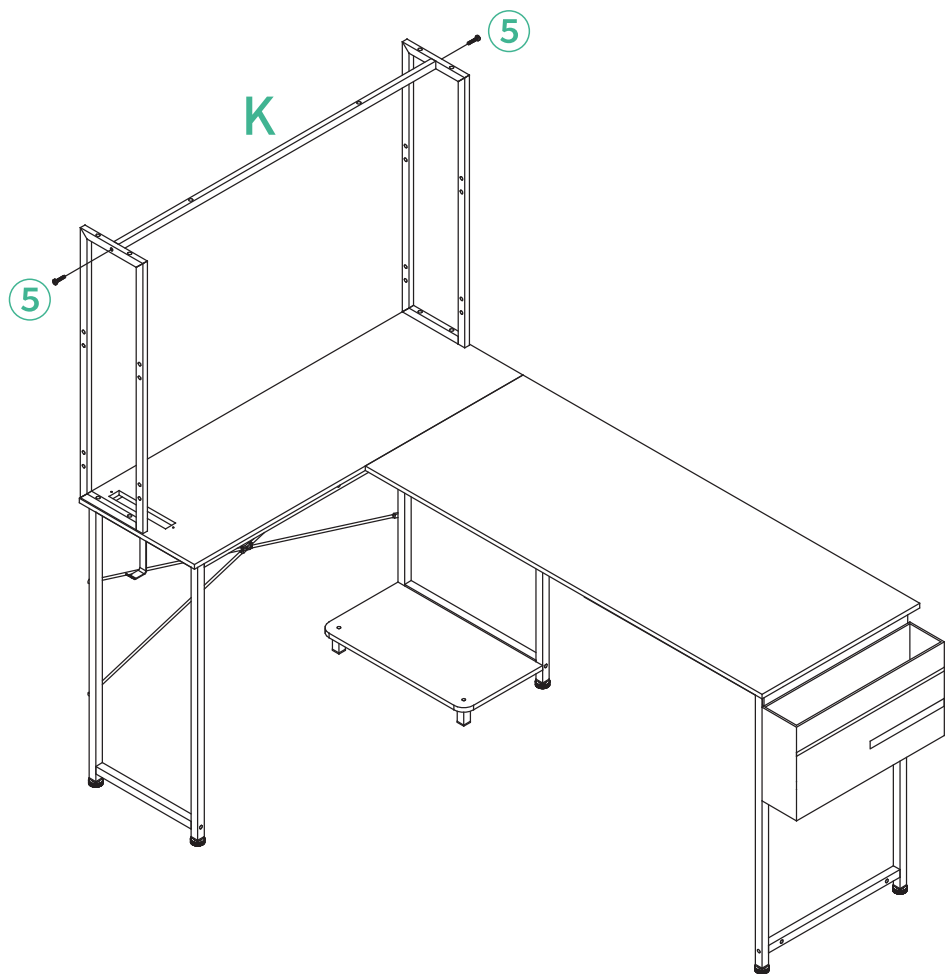

K x1		5 x2		8 x1	
----------------	---	----------------	---	----------------	---

 L-11

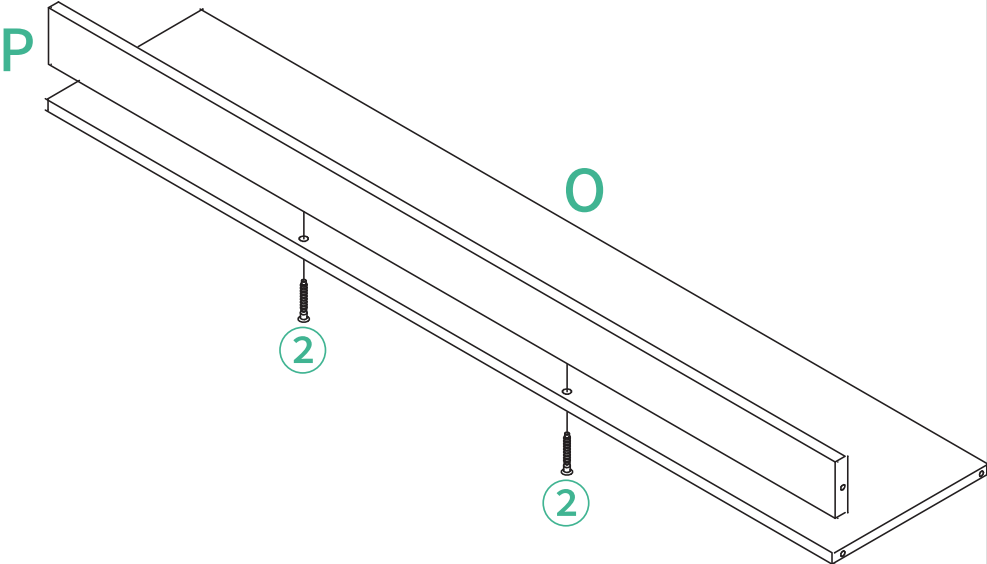


O x1		P x1		2 x2		8 x1	
----------------	--	----------------	--	----------------	--	----------------	--

Assembly Instructions

L-12





When installing P&O, if the steel frame is rather tight, loosen the installation screws on part K for adjustment.

 O and P can be mounted at different heights to meet different using needs.


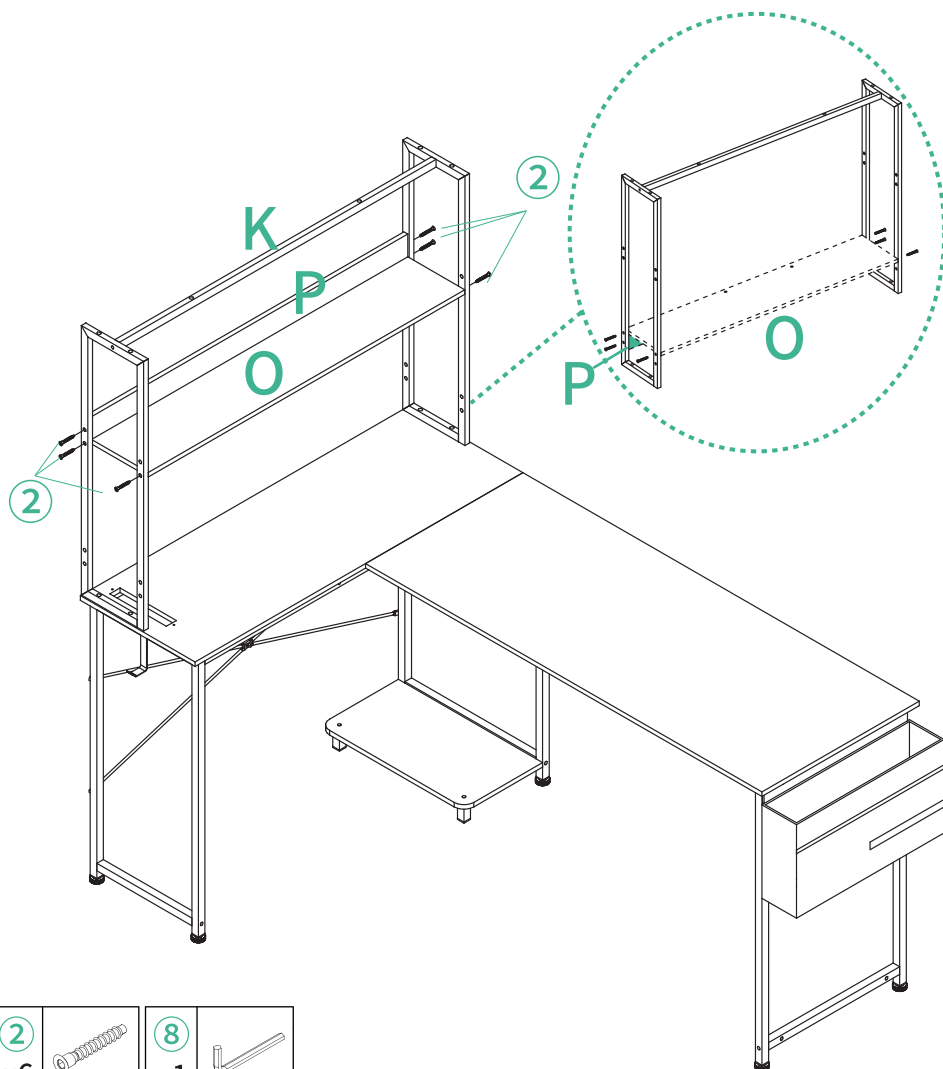


Assembly Instructions

    L-13

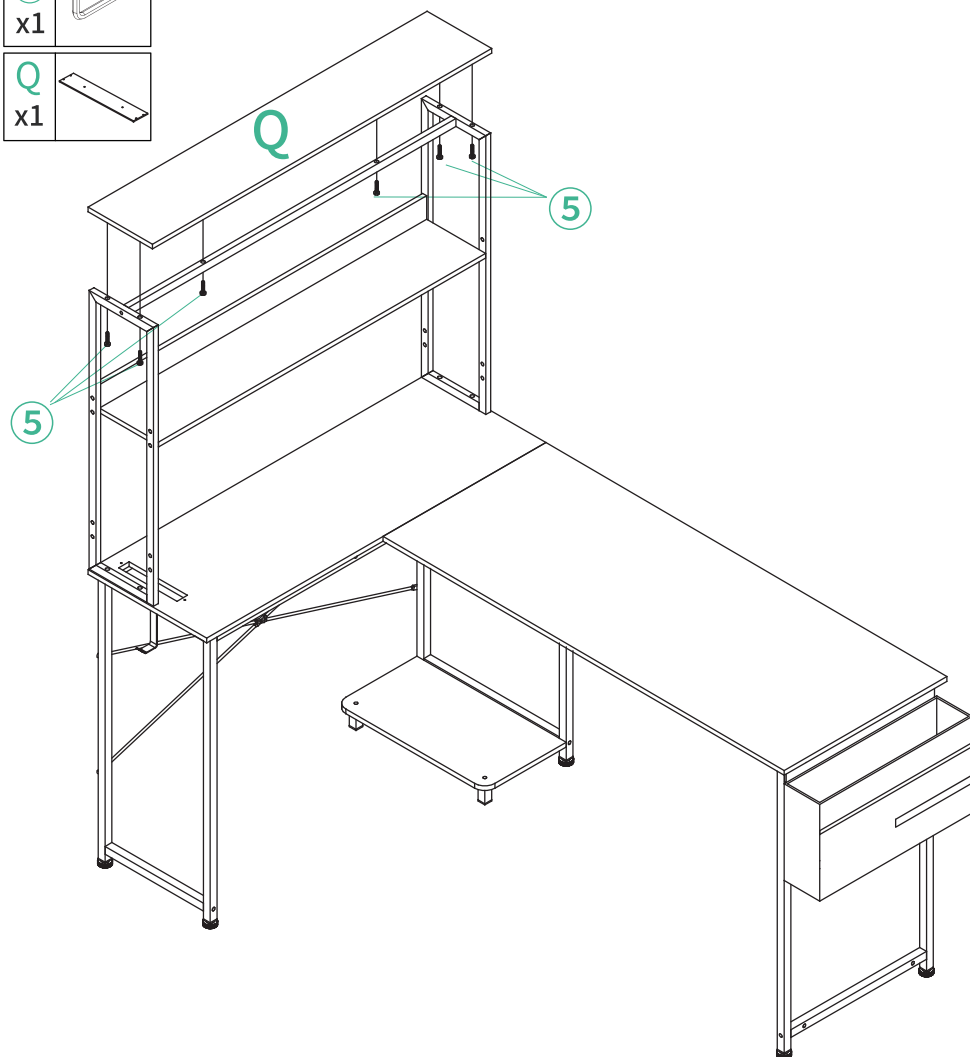




L-14

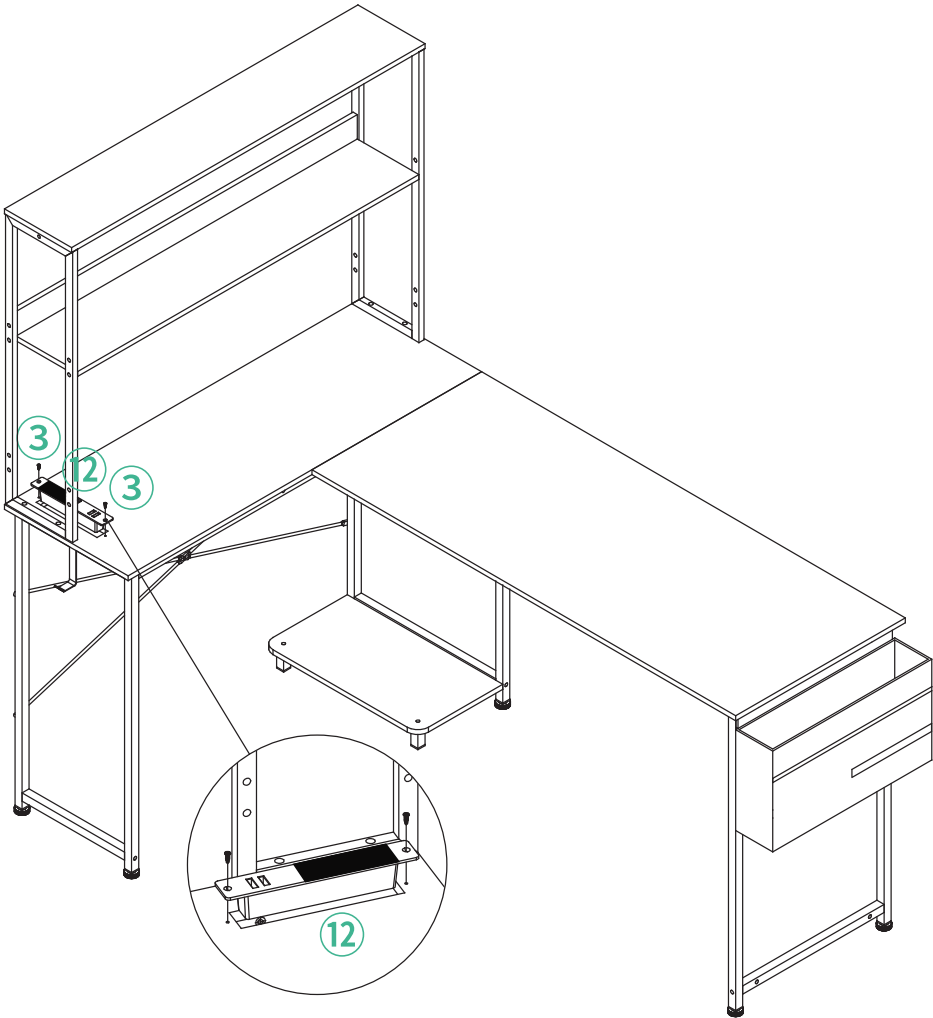  

Assembly Instructions

L-15

   The light strip can be attached to any position according to personal preference, and the strap is used to fix the wires of the light strip.

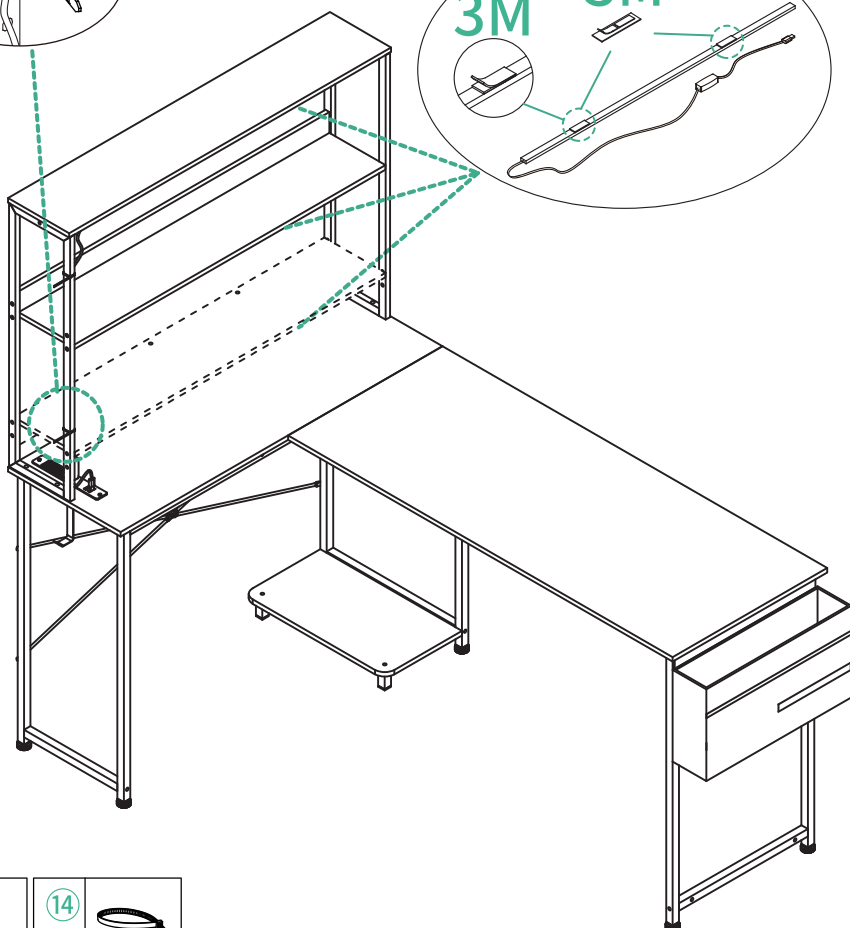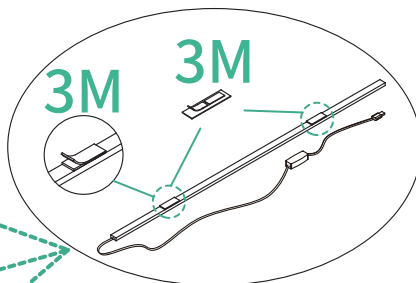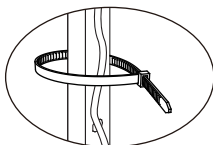

C

Static Color Button

 
M

Dynamic Mode Button



S / B

Speed & Brightness
and Power Button

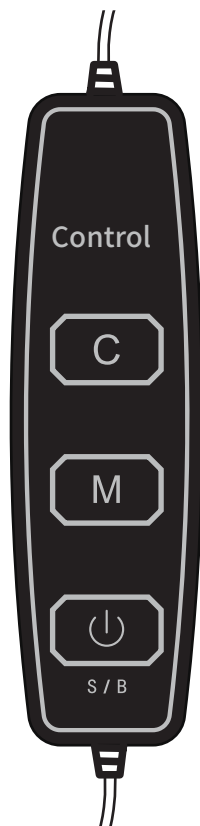

STATIC COLOR BUTTON

Press this button once to switch to the static color mode, and then each pressing can change the color.

DYNAMIC MODE BUTTON

Press this button once to switch to the dynamic mode effect, and then each pressing can change the dynamic mode.

Press this button for more than 3s to switch to the demo mode; In the demo mode, the strip will automatically cycle through various dynamic modes.

SPEED & BRIGHTNESS AND POWER BUTTON

A. In the static mode, press this button to adjust the brightness of the light bar; each press can switch to a brightness level.

B. In the dynamic mode, press this button to adjust the dynamic mode speed; each press can switch to a speed level.

C. Press and hold this button to shut it down when the strip is on. Press this button to turn it on when the strip is off.

The product has a power-off memory function; the strip can restore the color, brightness, and mode in the next power-on.



30 DAY Return Policy

If you're not completely satisfied with your purchase, please return the merchandise via our Official Customer Support. Unused merchandise can be refunded or exchanged within 30 days of purchase.



1-Year Warranty

We guarantee your product is free from defects in product material and workmanship for one (1) year starting from the date of purchase during normal use of household conditions. If your appliance fails to operate properly within our warranty period, we will arrange a new one. Replacement is free and all shipping costs are covered.



Quick Response within 24 Hours

If you are still unable to resolve the issue you are experiencing, please contact us immediately via our support email. It doesn't matter if the product has been installed or not, our customer support team will respond within 24 hours and assist you quickly and efficiently. The most efficient way to confirm your problem to us is to attach a video, which illustrates your product issues.

Problems You May Encounter

PART	PROBLEM	SOLUTION
Whole Product	Parts are missing, defective or having wrong parts in package.	Contact us via our after-sales phone or email. We will respond within 24 hours.
	Having issue(s) while reading the instruction or completing the assembly.	Contact us via our after-sales phone or email. We will respond within 24 hours.
	Encountering non - human caused damage during use.	If the product is damaged due to non - human causes, please keep the product and send us photos of it. We will ascertain the cause of the product damage within 48 hours and provide you with a satisfactory solution.
Furniture Surface	Surface is broken, scratched or lack of some screw holes.	Contact us via our after-sales phone or email. We will respond within 24 hours.
	The screw holes that on the board and the frame don't line up.	1. Tighten the screws only 70% of the way. Do not fully tighten the screws until all parts are aligned. 2. Adjust the board and frame until the holes align, then fully tighten all screws.
	Surface is uneven or not tight that has gaps after being assembled.	1. Loosen the screws in the uneven or gap positions; adjust until the surface is flat and tight, and then tighten the screws. 2. If your problem still can't be solved, please feel free to contact us.
Structure Frame	Components are bent, broken, chipped, rusted, or damaged.	Contact us via our after-sales phone or email. We will respond within 24 hours.
	The furniture is unstable after being assembled.	1. Check if all screws are fully tightened. 2. Read through the manual and check if any parts are installed incorrectly or missing. 3. If the problem persists, please contact us.
	Encountering non - human caused damage during use.	If the product is damaged due to non - human causes, please keep the product and send us photos of it. We will ascertain the cause of the product damage within 48 hours and provide you with a satisfactory solution.

We are committed to providing our customers with premium quality products and convenient customer service.

MADE IN CHINA