Assembly Instruction Sheet

Tools Required: Flathead screwdriver, Phillips screwdriver, pliers, wire cutters, wire strippers, electrical tape, safety glasses. **Light Source:** (5) B10 Candelabra Base Bulbs 60W Maximum

Estimated Assembly Time: 30-45 minutes


Preparation: Identify and inspectall parts before beginning installation. Check package content list and diagrams below to be sure all parts are present. If any parts are missing or damaged, do not attempt to assemble, install, or operate the fixture. Contact customer service for replacement parts.

Δ Warnings and Cautions

Turn off electricity at circuit breaker or main fuse box before installation. Consult a licensed electrician if in doubt.

These instructions are provided for your safety. It is very important you read them completely before installing the fixture. We strongly recommend that a licensed, professional electrician perform the installation.


Disconnect fixture from power source before replacing bulbs. Make sure bulbs are given sufficient time to cool before removal.

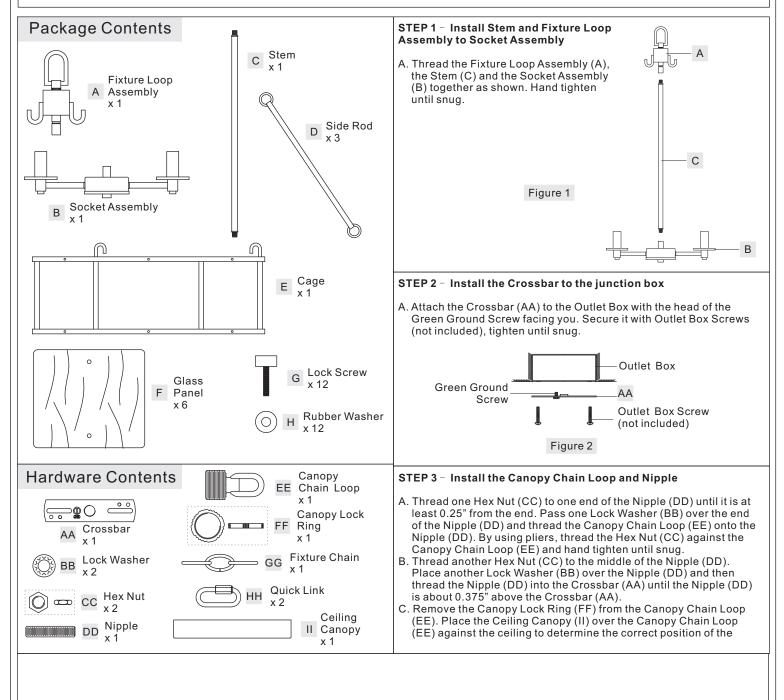

(Step 3 Continued) Nipple (DD). Thread the Canopy Lock Ring onto the Canopy Chain Loop (EE). BB Adjust the Nipple (DD) to Step B CC α α allow the Ceiling Canopy (II) AA to rest against the ceiling when held in place by the DD Canopy Lock Ring (FF). D. Remove the Canopy Lock Ring (FF) and the Ceiling CC Canopy (II). Tighten the Hex BB Step A Nut (CC) against the Crossbar (AA) to secure in place. EE Ш Figure 3 FF

STEP 4 - Install the Fixture Chain and Ceiling Canopy


- A. Adjust the Fixture Chain (GG) to your desired length by removing links if needed.
- B. Pull the supply wires through the Fixture Chain (GG) alternating links. After the wires are through the Fixture Chain (GG), pull the Supply Wires and the Ground Wire through the Canopy Lock Ring (FF) and the Ceiling Canopy (II) in order.
- C. Attach one end of the Fixture Chain (GG) to the Fixture Loop with one Quick Link (HH). Lift the fixture and Fixture Chain (GG) up and attach the other end of the Fixture Chain (GG) onto the Canopy Chain Loop (EE) with another Quick Link (HH). The fixture will now hang safely.
- D. Feed the Supply Wires and Ground Wire through the Canopy Chain Loop (EE) and Nipple (DD) into the Outlet Box. Cut the wires leaving approximately 8" of wire extending from the Outlet Box.
- E. Go to Step 5 for wire connections and follow the directions. Return to Step F in this step when complete with Step 5.
- F. Raise the Ceiling Canopy (II) and Canopy Lock Ring (FF) up the Fixture Chain (GG) and over the Canopy Chain Loop (EE). Tighten

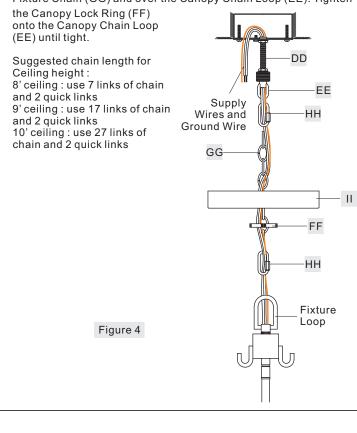

STEP 5 - Making the Wire Connections

A. Use standard wire connectors (not included) to make all wire connections. Twist connectors until wires are tightly joined together. Wrap each connection with approved electrical tape and carefully stuff all the connected wires into outlet box.

Note: If the electrical wire is going to be cut shorter than provided you will need to identify the "L" line wire and the "N" neutral wire before you cut the excess wire off. One is labeled N and the other labeled L. To do this separate the "L" line wire and the "N" neutral wire as far as you need to. Re-label the wire near where you want to make the cut. Be sure to mark the wire on the side of the fixture and not on the excess wire being cut and removed.

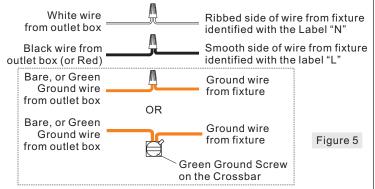

A

Hook

D

ß

STEP 6 - Install Cage

A. Attach one ends of Side Rods (D) to the hooks on the top edge of the Cage (E). Lift the Side Rods with the Cage upward and attach another ends of Side Rods (D) to hooks on the side of the Fixture Loop Assembly (A).

Figure 6

STEP 7 - Install Glass Panels and Bulbs

A. Align holes on the Glass Panel (F) to mounting holes on the Cage (E). Place the Rubber Washer (H) onto the Lock Screw (G) and thread Lock Screws with Rubber Washers into the mounting holes on the frame to secure the Glass Panel (F). Hand tighten until snug.

Hook

Е

R

