



 
Ceiling Fan
Installation Instruction



SAFETY INFORMATION

Please read all safety information and instructions before installing the ceiling fan and save this manual for future reference.

SAFETY INFORMATION	01
PRE-INSTALLATION	02
PARTS LIST	03
INSTALLATION INSTRUCTION	04
OPERATION INSTRUCTION	06
TROUBLESHOOTING	09





SAFETY INFORMATION



WARNING

- Before connecting the power supply, make sure that the power supply used matches the specifications of the ceiling fan.
- All wiring must comply with national and local electrical codes ANSI/NFPA70. If you are not familiar with wiring, please use a qualified electrician.
- To reduce the risk of fire or electric shock, turn off the power to the fuse box or circuit breaker before installing the fan.
- To reduce the risk of personal injury, attach the fan directly to the building's support structure and ensure that it can accept at least 35 pounds (15.9 kg).
- Make sure that the installation location allows the fan blades to rotate without obstacles.

Installation Location

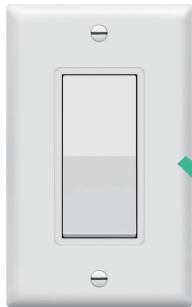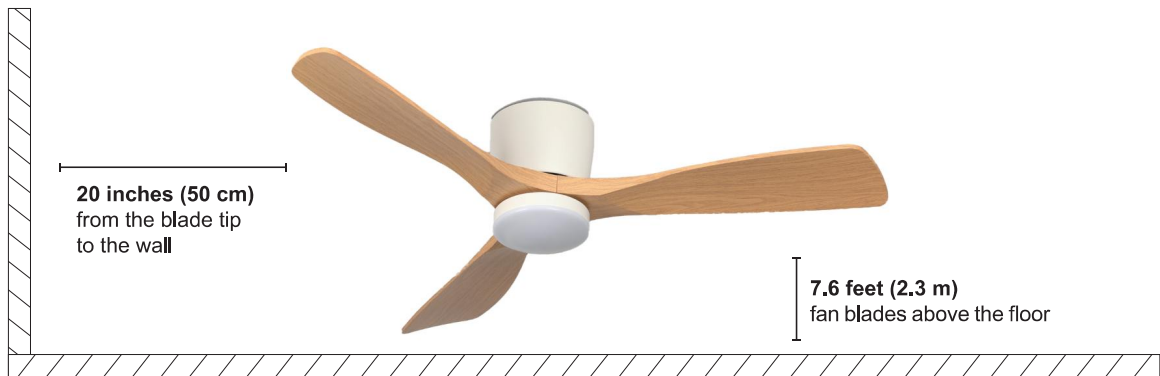

WARNING


- Do not operate this fan with a variable (Rheostat) wall controller or dimmer switch.
- Doing so could result in damage to the ceiling fan's remote control unit.

PRE-INSTALLATION


Tools Required (Not Included)



Power Drill

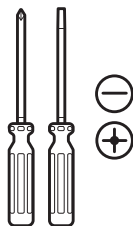


Screwdriver

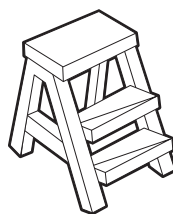


Step Ladder



Wire Stripper

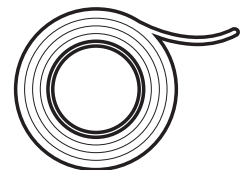

Electrical Tape

 


PARTS LIST



Fan blade X 3



 Motor and Receiver X 1



Mounting bracket X 1



Motor cover X 1



Lampshade X 1



LED light X 1



LED light pan X 1



Remote Control X 1



Remote Control Bracket X 1



Expansion Bolt X 2



Self-tapping Screw X 4



Remote Bracket Screw X 2



Blade screw X 6



Wire Cap X 2



Balance Kit X 2



INSTALLATION INSTRUCTION

Step1: Mounting Bracket Installation



Loosen the four screws on the mounting bracket



For the concrete ceiling:
begin by marking the location on the ceiling. Then, use the 2 expansion screws provided to drill 2 holes in the ceiling, which will help secure the ceiling bracket. Attach the mounting bracket to the building structure using the 2 expansion screws provided, and tighten them firmly.



For the wood ceiling:
Start by marking the location for the ceiling fan. Then, use the 4 wood screws provided to securely attach the mounting bracket to the building structure.

Step2: Motor Installation



① Secure the motor to the bracket with the screws you just removed.




② Snap on the motor cover and rotate to secure it to the bracket.

Step3: Fan Blade Installation




① Place the fan blade on the motor, align the holes and then screw in the screws to fix it.

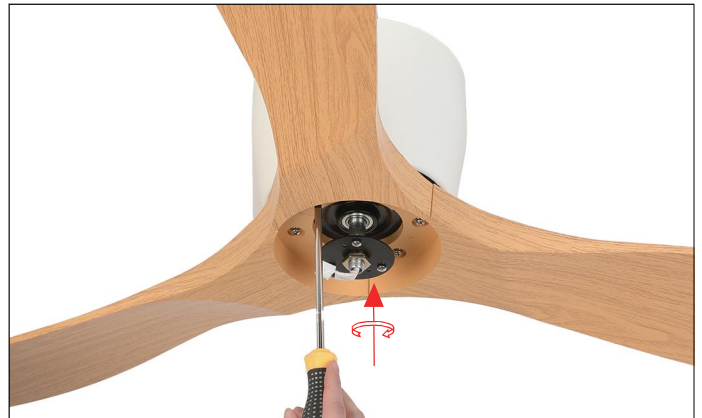


② Note:
The fan blades need to be aligned with the center position of the screw group. Do not lock the screws when installing the blades and then tighten all the screws after all the fan blades are installed



Step4: Light Kit Installation

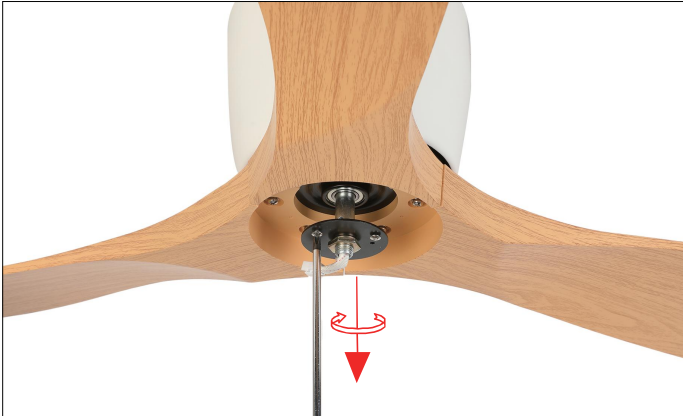

① Loosen the three screws on the round plate.

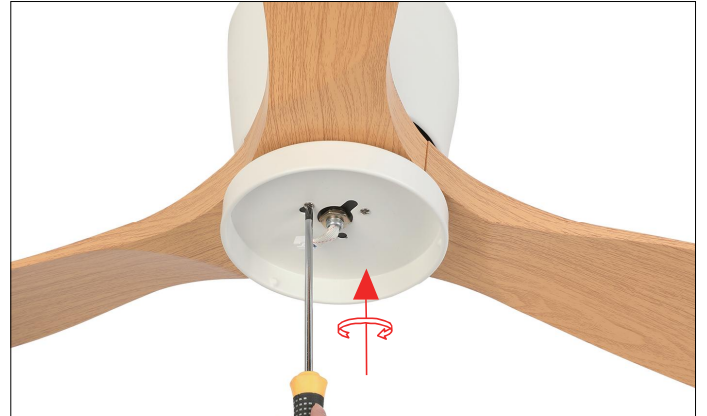


② After passing the light disk through the wires, align the holes in the LED light pan and on the round plate and secure with screws.



③ Insert the light line and the LED light line.



④ Put the lampshade to the LED light pan, tighten the lampshade clockwise.

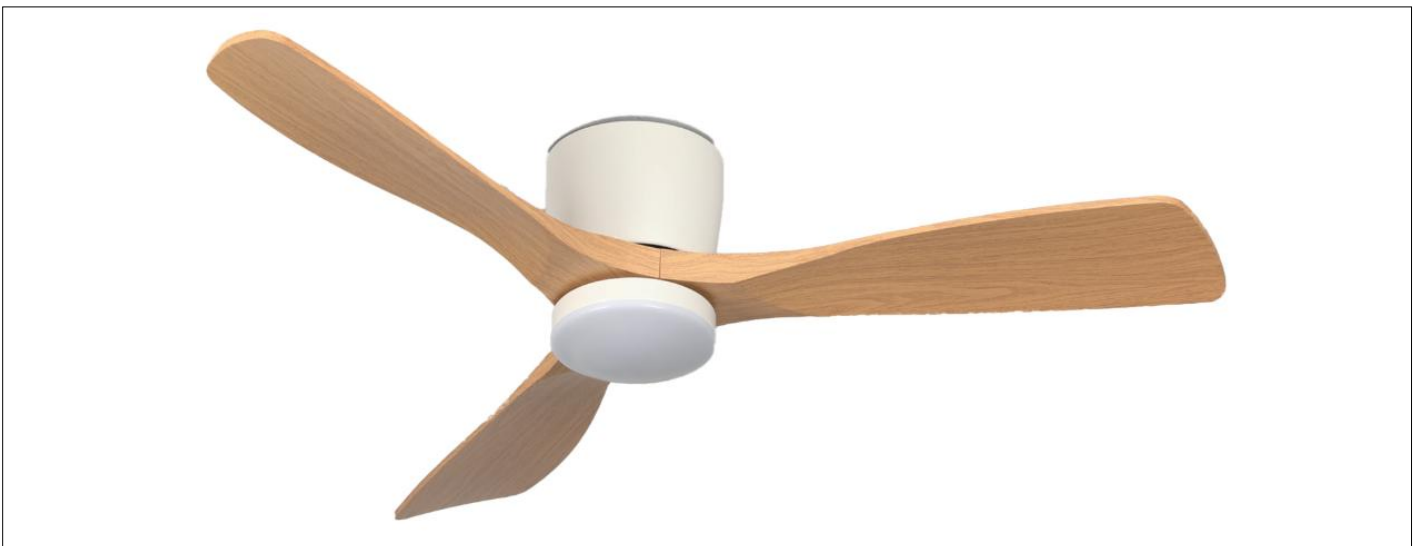


⑤ Complete



OPERATION INSTRUCTION

How to Operate Your Ceiling Fan

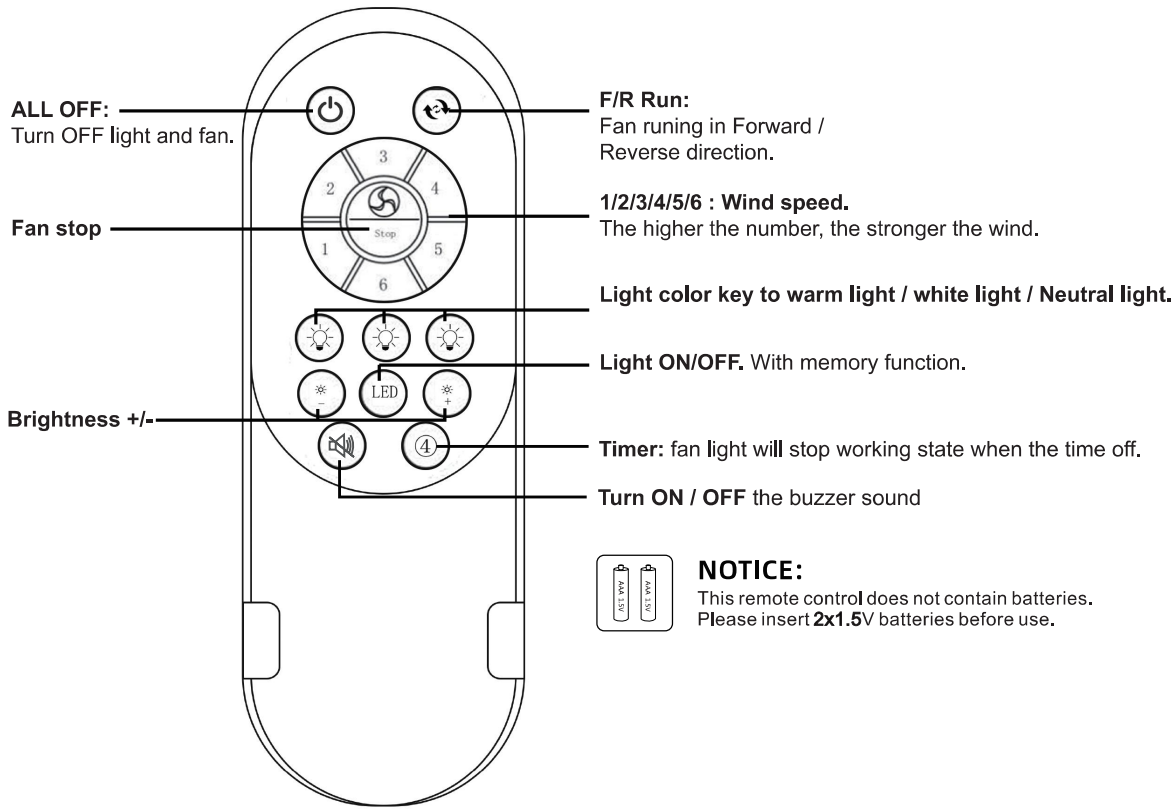

If remote control no function, please match code as below:


When the lamp is powered on, quickly press the  key within 5 seconds. The light flash, means the code matching is successful.

Otherwise, turn off the main power supply of the lamp and then reoperate this step until the light flashe and the code matching is successful.

Reversible Function



Summer (Forward):
A downward airflow creates a cooling effect.

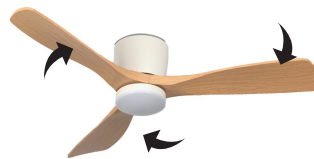

Winter (Reverse):
An upward airflow increases the indoor temperature.

PS: If you want to change the fan's rotation direction, please press the button while the fan is running.

Timing Control


4H: The fan will automatically shut off after 4 hours.

Close the Timing Control: Press the button "FAN ON/OFF"




How TO Use the Mobile APP


1. Download the APP.

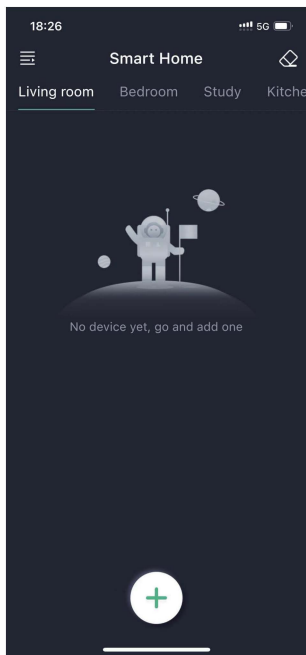


2. Choose the Language and Manage room information.

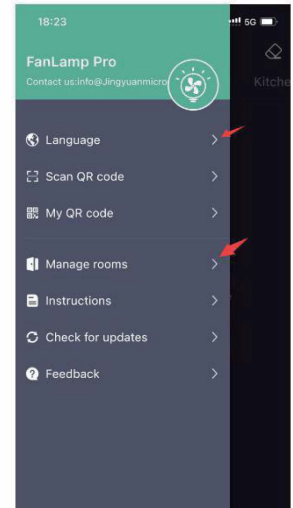


3. Add a new fan.

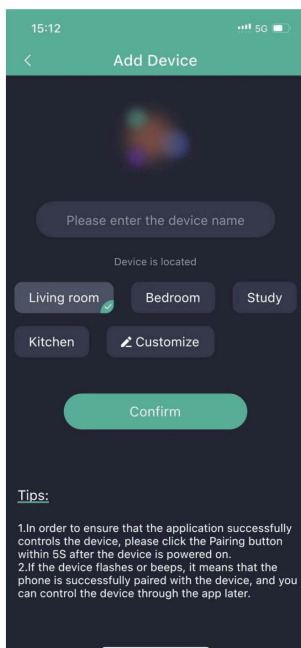

4. Choose a name for a new fan and select the room where it is located.


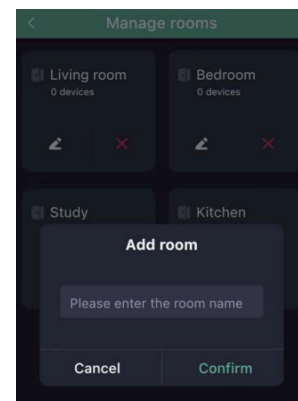


5. In case, it isn't located in one of the predetermined locations, select the Personalize option and add a new room.

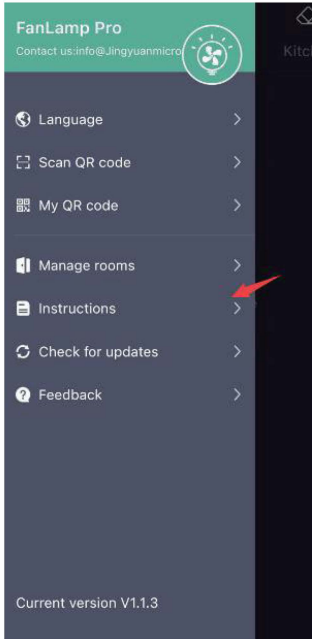

6. Follow APP's instruction to operate the ceiling fan.
NOTE: Only one device can be paired.
Once a new device is paired, the previous device will no longer be.

7. Enter the main control interface, turn on the Bluetooth from smart phone, turn off the electric power supply, and then turn on the electric power supply again, the LED of the ceiling fan is bright and the Bluetooth of device is ready for connecting to smart phone. Finally, click the Pairing Button in APP within 5 seconds of power. If the pairing button is green, the ceiling fan has been connected with smart phone. APP can control the ceiling fan now.

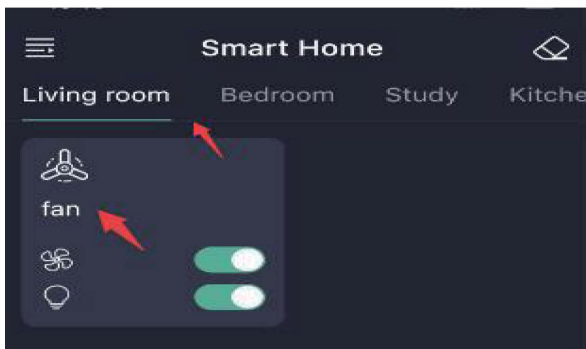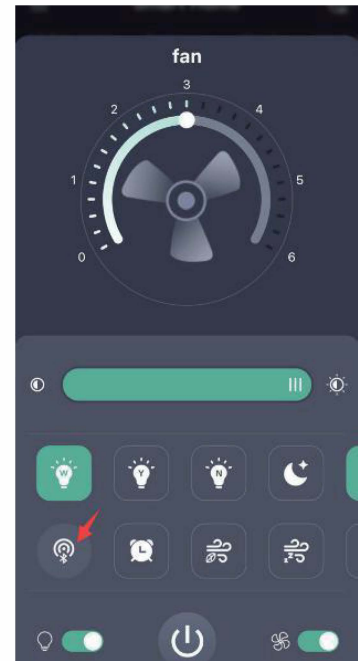

8. Enter room and Click the Fan control interface.



TROUBLESHOOTING

Warning: For your own safety turn off power at fuse box or circuit breaker before trouble shooting your fan.

TROUBLE	Probable Cause	Suggested Remedy
FAN AND LIGHT DO NOT WORK BUT WIRES CONNECTED WELL	The AC power from wall controller or dimmer switch.	Do not operate this fan with a variable (Rheostat)wall controller or dimmer switch. Choose the switch as this introduction showed.
FAN WILL NOT START	<ol style="list-style-type: none"> 1.Fuse or circuit breaker blown. 2.Loose power line connections to the fan, or loose switch wire connections in the switch housing. 3.Reversing switch in neutral position. 4. Dead battery in remote control. 	<ol style="list-style-type: none"> 1.Check main and branch circuit fuses or circuit breakers. 2.Check line wire connections to fan and switch wire connections in the switch housings. CAUTION: Make sure main power is turned off ! 3.Make sure reversing switch position is all the way to one side. 4.Replace with new battery.
FAN SOUNDS NOISY	<ol style="list-style-type: none"> 1.Loose screws in motor housing. 2.Wire connectors inside housing rattling. 3.Motor noise caused by solid state variable speed control. 	<ol style="list-style-type: none"> 1.Check to make sure all screws in motor housing are snug (do not overtighten). 2. Check to make sure wire connectors in switch housing are not rattling agai nst each other or against the interior wall of the switch housing. CAUTION: Make sure main power is turned off ! 3.Some fan motors are sensitive to signals from solid-state variable speed controls. Solid-state controls are not recommended, choose an alternative controlmethod.
FAN WOBBLES EXCESSIVELY	<ol style="list-style-type: none"> 1.Setscrew in downrod support is loose. 2.Setscrew in downrod/hanger ball assembly is loose. 3.The groove hanger ball not lined up with the tab. 4.Hanger bracket and/or ceiling outlet box is not securely fastened. 	<ol style="list-style-type: none"> 1.Tighten both setscrews securely in downrod support. 2.Tighten the setscrew in the downrod/hanger ball assembly. 3.Re-hanging the hanger ball secure the tab into the groove. 4.Tighten the hanger bracket screws to the outlet box, and secure outlet box.