


Dining Table with Legs

Assembly & Care Instructions

55" & 63" & 71" Dining Table

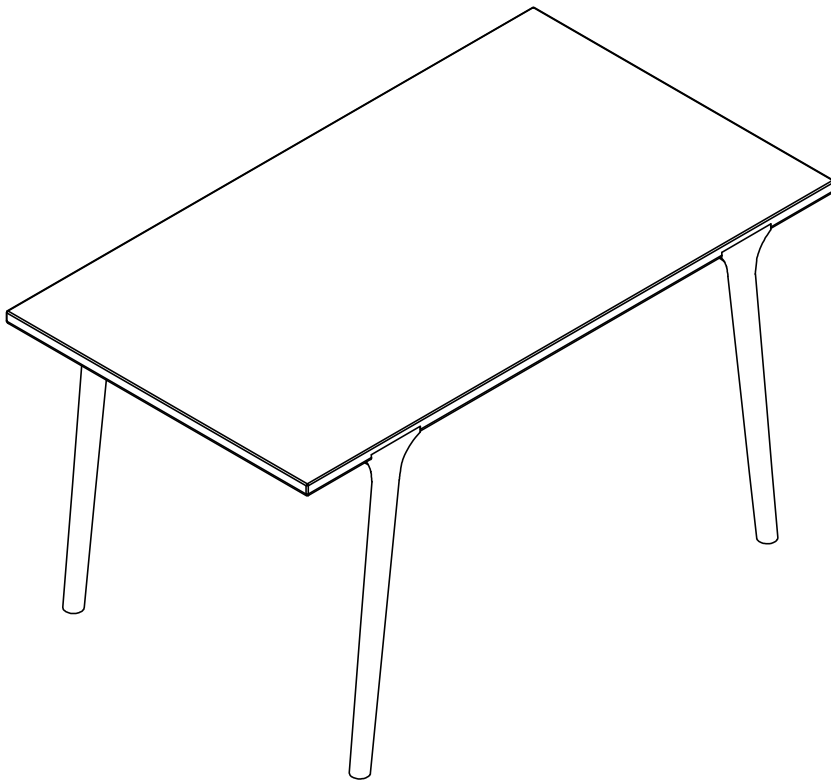

Before you begin:

Please review all your packing materials carefully before discarding.

Some assembly parts may be packaged separately.



Confirm you have all the parts required for assembly and installation of this dining table before discarding the packing materials.

Carton Contents are shown on the top of Page 2.

Carton Contents:

- A) Tabletop x 1PCS
- B) Left Legs x 2PCS
- C) Right Legs x 2PCS
- D) Hardware Bag, the details see the right

- 1) 5/16" * 22mm Bolts x 4PCS
- 2) 5/16" Lock Washers (black) x 4PCS
- 3) 5/16" * 19mm Washers (black) x 4PCS
- 4) 5mm Allen Wrench x 1PC
- 5) 5/16" * 100mm Threaded Bolt x 4PCS
- 6) 5/16" 12mm Hex nut x 4PCS
- 7) 5/16" * 21 * 12 * 7mm D-Square washer x 4PC
- 8) 12mm Wrench x 1PCS
- 9) 5/16" Lock Washers (yellow) x 4PCS

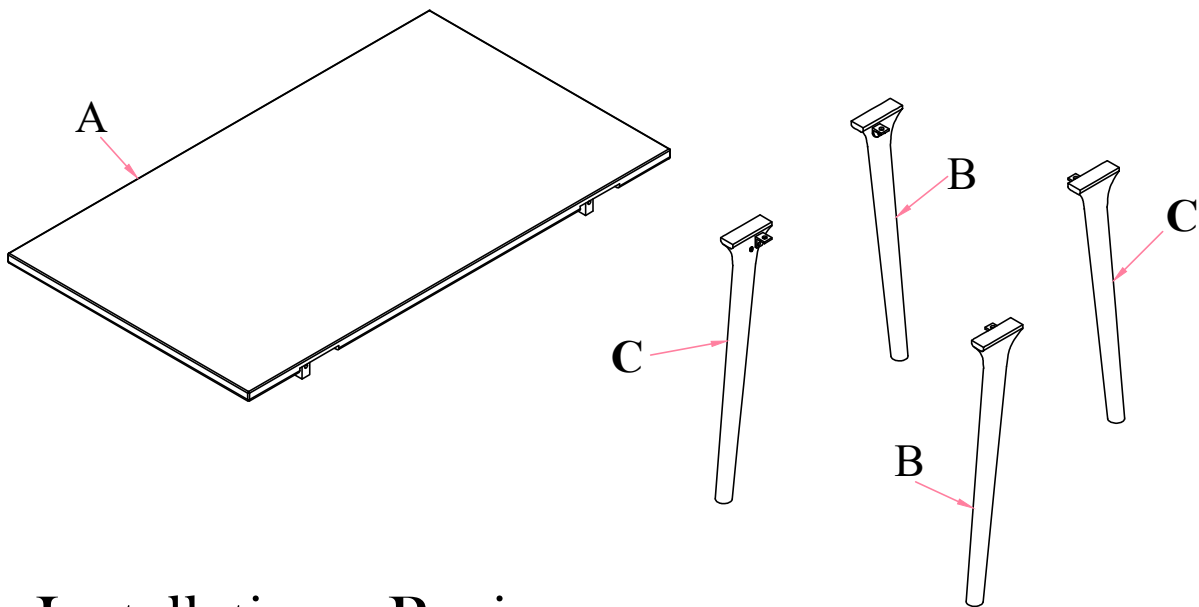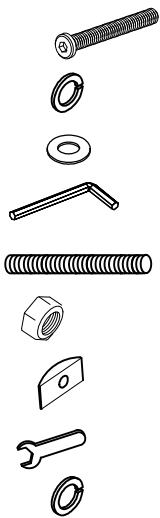

Pre-Installation - Review:

Recommended Tools and Equipment pictured below




Clean rag

Installation

For your safety and to achieve the best possible installation of this table,
We always that recommends you consult with a professional contractor.
Two or more people are required for the assembly and installation of this table.

Step 1 Notes:

Place the table top upside down on a blanket or other soft material to prevent scratching.
Secure the legs (B), (C) into the fixed positions using the threaded bolts (5) and D-Square washers (7), lock washer (9), then tighten them with the hex nuts (6) and the wrench (8).

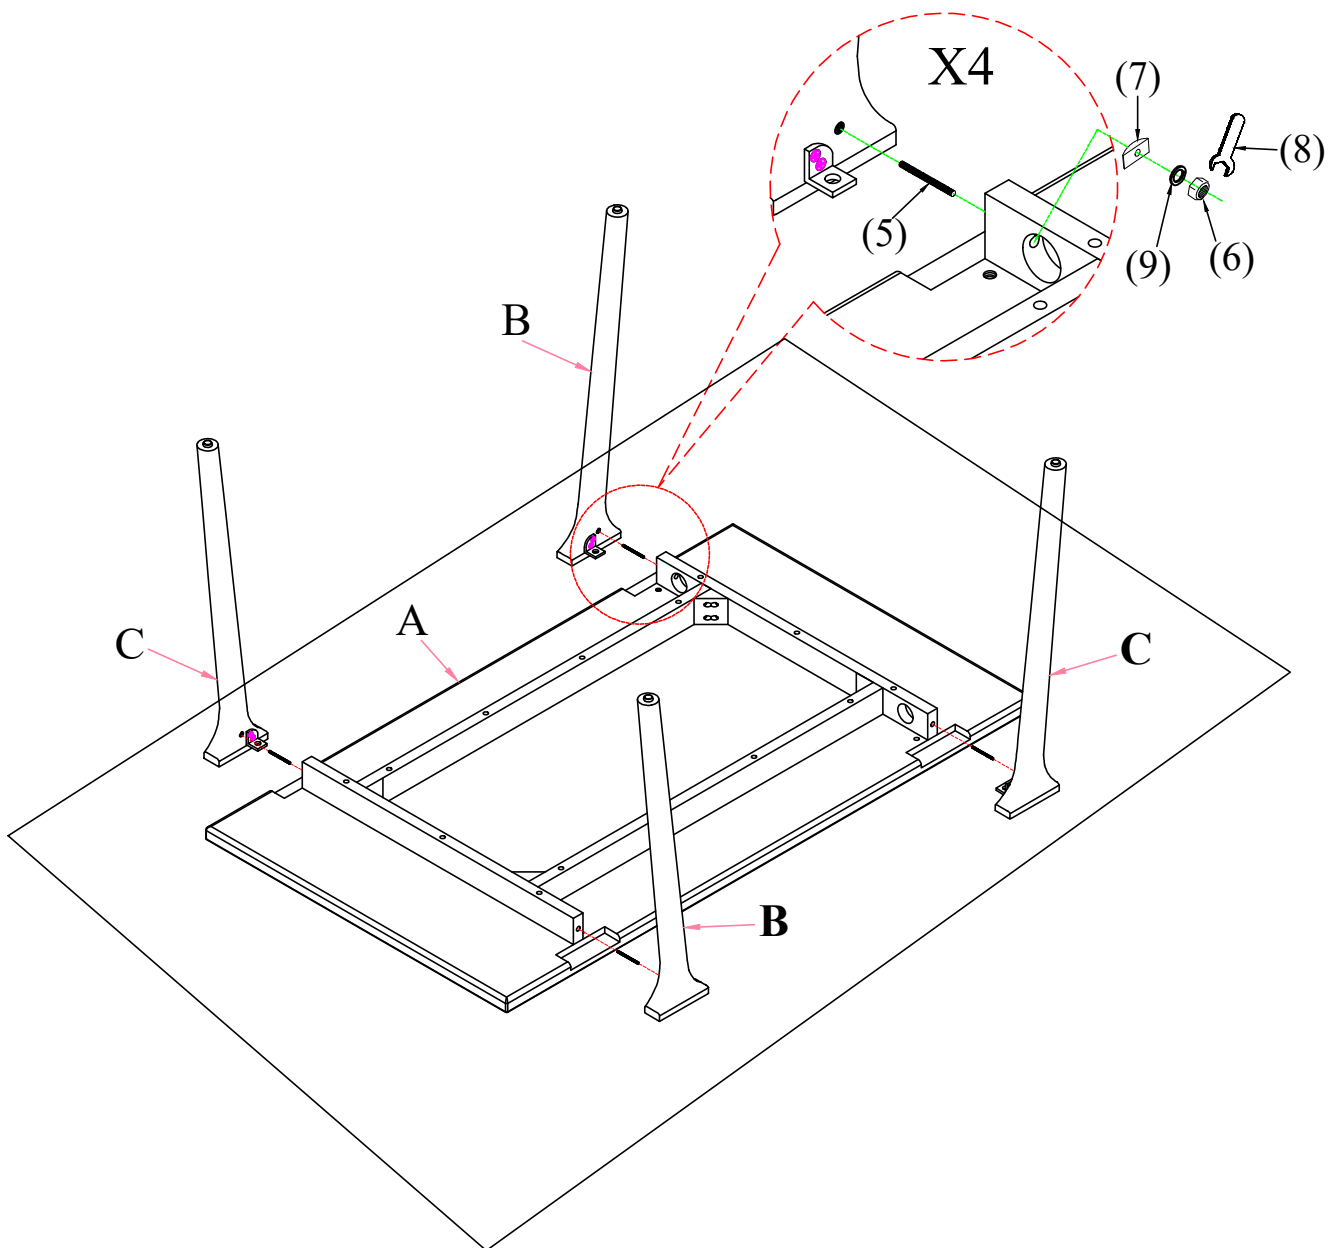

Installation

Step 2 Notes:

Secure the legs to the table using the bolt (1), lock washers (2), and washer (3), then tighten with the Allen wrench (4). Turn the dining table over and place it horizontally for use.

