

11”

Fold

17”

Fold

TROUBLE SHOOTING

PROBLEM	POSSIBLE CAUSE	SOLUTION
Light will not come on.	A. Fixture not properly connected. B. Pull chain not engaged. C. Fixture not receiving power.	A. Check wires to ensure proper connections. B. Pull chain to activate light. C. Check to make sure breaker is on and test another working electrical device to make sure it is receiving power.

FCC WARNING:

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user authority to operate the equipment.

NOTES: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

 
SKY RICH STAR LIMITED
UNIT E, 10/F, WORLDWIDE CENTRE,
123 TUNG CHAU STREET, TAI KOK TSUI,
KL, HONG KONG
Toll-free: 1-877-723-0723

Made in China
© 2019 Sky Rich Star Limited, all rights reserved.
The Honeywell Trademark is used under license from Honeywell International Inc.
Honeywell International Inc. makes no representations or warranties with respect to this product. This product is manufactured for Sky Rich Star Limited.

Honeywell

EN LED 4' LINKABLE SHOP LIGHT
Use And Care Guide
Read And Save This Instructions Before Use

Model: SH450505Q130

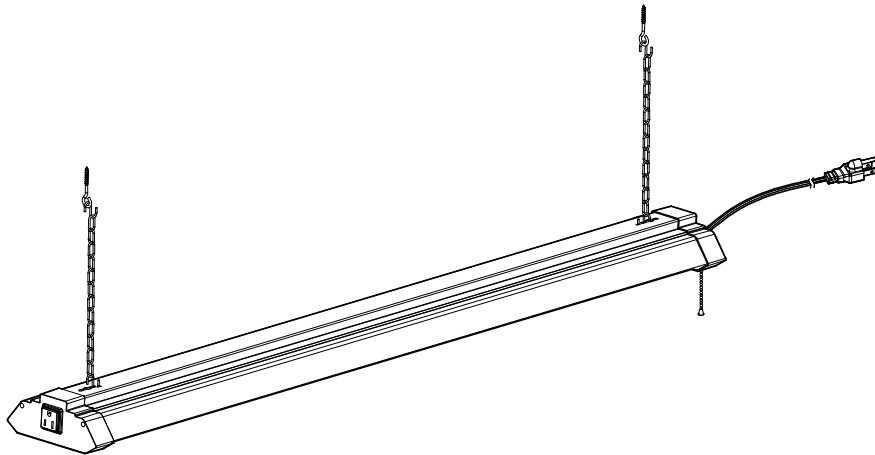

Honeywell

Fold

Fold

SAFETY INFORMATION

IMPORTANT: Read all safety precautions and installations carefully before installing or servicing this fixture.

IMPORTANT: lisez attentivement toutes les précautions de sécurité et les installations avant d'installer ou de réparer ce luminaire.

- 5.25 ft power cord with plug, link up to 10 shop lights together.
- Do not handle any energized fixture or attempt to energize any fixture with wet hands or while standing on a wet or damp surface or in water.
- Assure that the fixture is mounted onto a structurally sound surface that will support the fixture.
- The fixture is designed for use in a 120 VAC, 60Hz fused circuit. Do not use on a dimming circuit.
- Do not look into the lights.
- Product is intended for use in garages, basements, work areas, utility rooms and recreation rooms.
- Maximum distance to the receptacle is determined by the length of the cord provided. (5.25 ft, 3-prong, 120V grounded plug included)
- Includes a protective sleeve, such as 0.010-inch (0.25-mm) thick fiberglass, where the path of cord travel to the ceiling-mounted receptacle is not between the two supporting chains.
- The fixture is intended to be installed directly beneath a ceiling-mounted receptacle. Excess cord should be secured to one of the supporting chains with a cable tie to keep it out of the work space.
- Use hook to support chain, not the electrical cord.
- Do not install on radiant-heating type ceiling.
- Maximum distance to the receptacle is determined by the length of cord provided.

WARNING: Failure to comply with these instructions could result in a potentially fatal electric shock and/or property damage.

 
AVERTISSEMENT: le non respect de ces instructions peut entraîner un choc électrique et / ou des dégâts matériels potentiellement fatals.

PRE-INSTALLATION

PLANNING INSTALLATION

- Carefully remove the fixture from the carton and check to make sure that all hardware is included.
- Be careful not to misplace any of the hardware needed for installing the fixture. If all hardware is not included, call customer service number.

HARDWARE INCLUDED

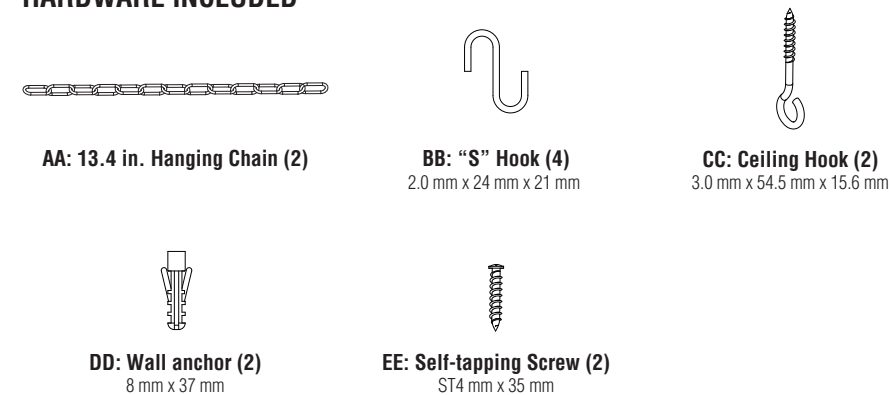

EN | 1

 
INSTALLATION

NOTE: The unit is intended to be installed near a ceiling-mounted receptacle. If there is excess cord, bind with string or a cable tie to keep it out of work space.


CEILING INSTALLATION

1. Choose desired location of light fixture and make sure it is within reach of an outlet. Use a pencil to place a mark on the ceiling where each wall anchor (Part DD) should go. Drill 8mm holes in marked areas. Insert wall anchor (Part DD) into the holes until secured. Then screw each self-tapping screw (Part EE) into each wall anchor (Part DD) and leave a small gap for mounting light fixture. The gap between wall and end of self-tapping screw should be between 4 to 5 mm. (Figure 1)

NOTE: The distance between the two wall anchors is 3.5 ft.

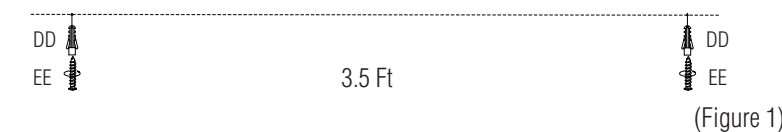

 
2. The shop light mounting holes should align with the self-tapping screws. Place shop light holes over installed screws and pull the shop light to the left or right according to the mounting holes. Make sure the shop light is completely secured on the mounting surface. (Figure 2)

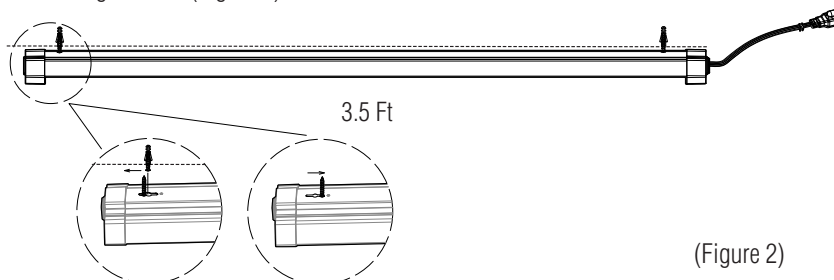

3. Plug power cord into an outlet and use pull chain to power on. (Figure 5)

HANGING CHAIN INSTALLATION

 
1. Choose desired location of light fixture and make sure it is within reach of an outlet. Use a pencil to place a mark on the ceiling where each wall anchor (Part DD) should go. Drill 8mm holes in marked areas. Insert wall anchor (Part DD) into the holes until secured. Then screw the ceiling hooks (Part CC) into the wall anchors (Part DD). (Figure 3)
2. Using two hanging chains (Part AA) attach a hanging chain to one of the "S" hooks (Part BB) previously attached to each side of the ceiling hooks. (Figure 3)

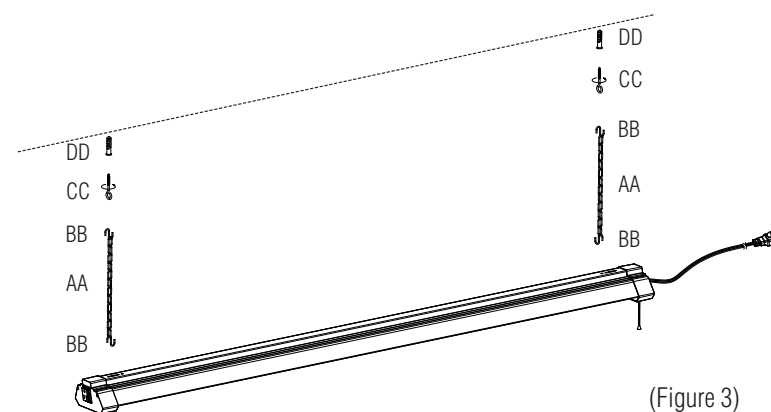

EN | 2


INSTALLATION

 3. Attach the remaining "S" hooks (Part BB) to the hanging chains and attach to the light fixture. (Figure 4)

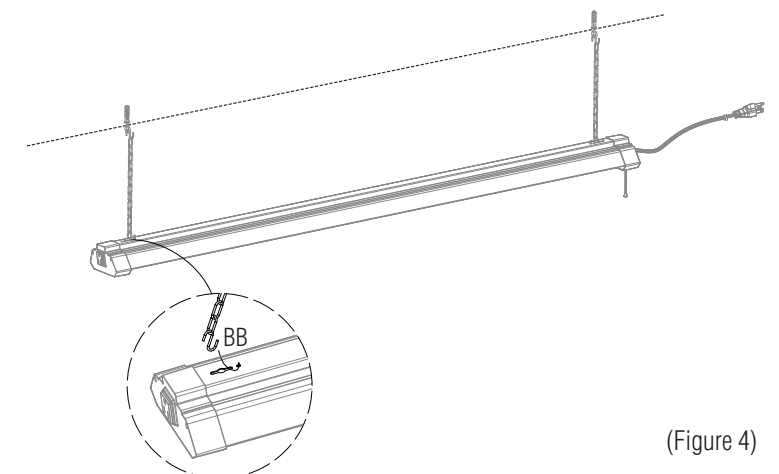

4. Determine whether a single or multiple lights are to be installed. If multiple lights will be installed follow steps in CONNECTION OPTIONS section. Connect lights per instructions and repeat steps 1-3 (under Attach the Hanging Chain) for each light connected.

 5. Plug power cord into an outlet and use pull chain to power on. (Figure 5)

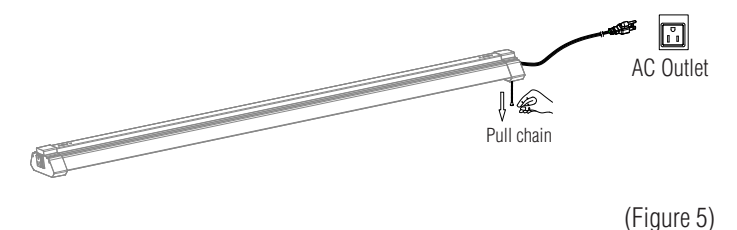


CONNECTION OPTIONS

NOTE: A maximum of 10 lights can be connected off of a single circuit.

1. LINKING CABLE

 Multiple lights can be connected using the 5.25 ft power cord. Once installed, plug the power cord into the end of linked shop light and repeat to add more lights. (Figure 6)

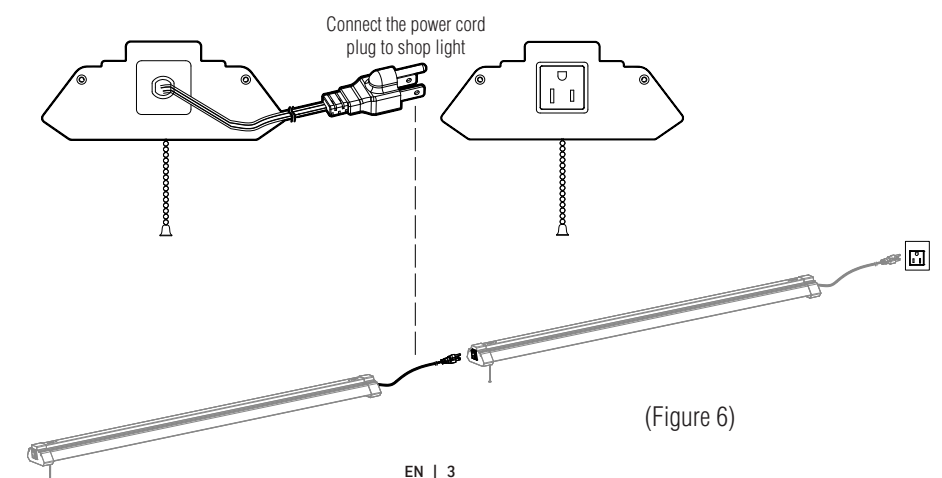

EN | 3