 


Assembly Instructions

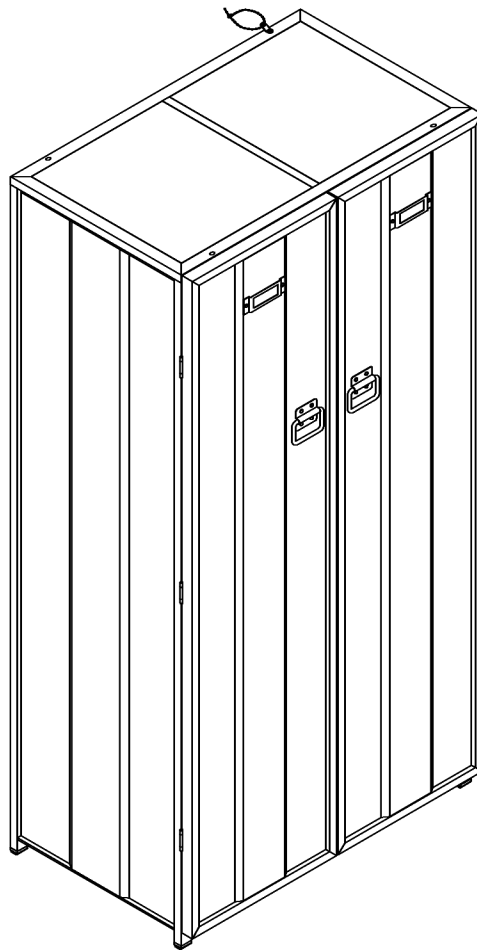

ASSEMBLY RATING

The Assembly Rating is a 5-point system that shows the degree of effort needed in assembling a specific product (with 1 being easy and 5 being difficult). For some products, two persons are recommended.

EASY



DIFFICULT

Tools Required For Assembly:

Allen Wrench



(Included)

Phillips Screwdriver



(Not Included)

 


2 PERSONS RECOMMENDED


ASSEMBLY & CARE ADVICE

FOR YOUR FURNITURE TO LAST, CORRECT ASSEMBLY AND PROPER MAINTENANCE ARE NECESSARY. PLEASE FOLLOW THE INFORMATION PROVIDED BELOW TO FULLY ENJOY YOUR FURNITURE.


BASIC ASSEMBLY TECHNIQUES

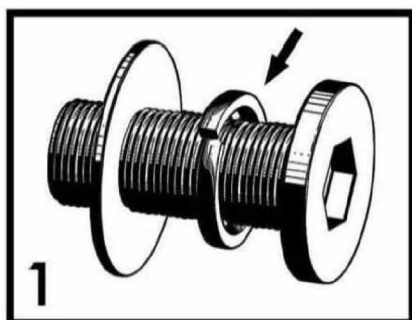

 
When lock or spring washer is used in an assembly, please make sure the lock or spring washer is placed between the larger flat washer and the head of the screw or bolt.

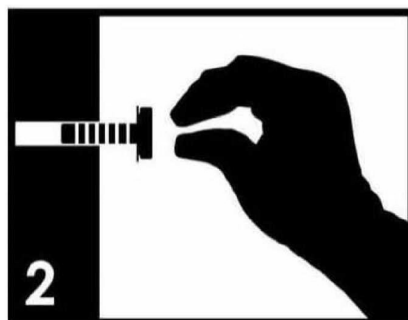

 
Position each part correctly and insert screws or bolts into their respective holes by hand tighten or using the proper hand tool. Only tighten when step is completed or when instructed to do so.

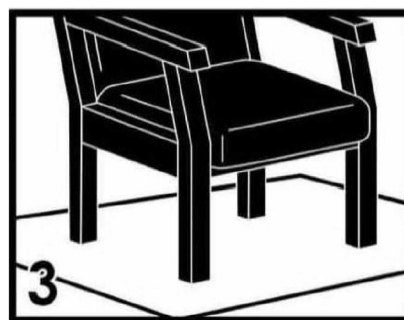

 
Use cardboard or carpet area when assembling furniture to prevent scratches. Make sure the furniture rests on a flat and level surface with each leg evenly touching the floor. No dragging of products/parts.

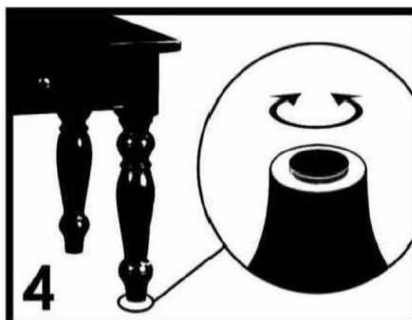

 Some furniture comes with height adjustment knobs underneath each leg. To lower or to raise each leg, you need to turn clockwise or counterclockwise, respectively.

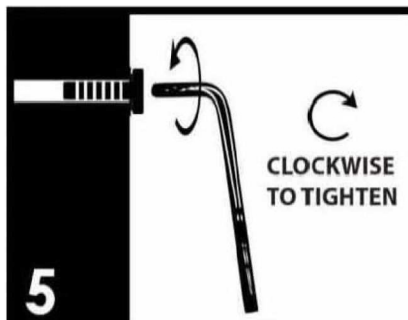

 Make sure all parts are properly aligned, then use the appropriate hand tool to completely tighten the bolts or screws. Do not use power tools and do not overtighten.

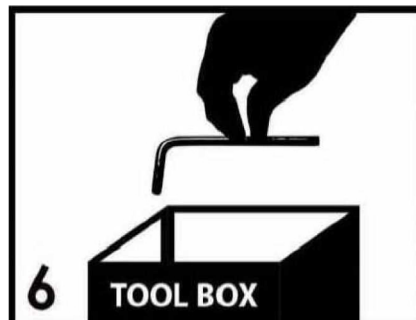


Save the instructions and store the Allen wrench or any supplied tool for later maintenance. After two weeks, check and tighten any loose hardware and repeat again every six months thereafter.

IT IS THE USER'S RESPONSIBILITY TO MAINTAIN THE FURNITURE. THE HARDWARE MAY LOOSEN OVER TIME AND MAY CAUSE THE FURNITURE TO BE WOBBLY AND UNABLE TO SUPPORT ITS INTENDED WEIGHT CAPACITY. THIS MAY LEAD TO COLLAPSE AND MAY CAUSE SERIOUS INJURY.



 
FAILURE TO FOLLOW THE GUIDELINES ABOVE MAY RESULT IN INJURY AND/OR PROPERTY DAMAGE.

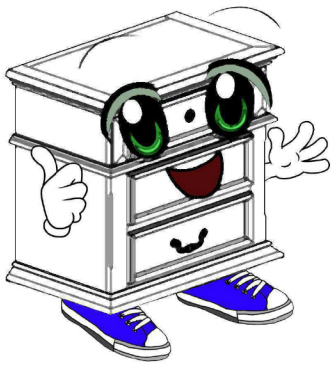

Before you begin, please read Page 2 of "Assembly and Care Advice".

And remember, do not tighten until each step is completed or instructed.

 Parts List



#1 x 1pc
Top Panel



 
#2 x 1pc
Left Side Panel



#3 x 1pc
Right Side Panel



#4 x 1pc
Middle Panel



#5 x 1pc
Back Panel



#6 x 1pc
Front Panel



#7 x 5pcs
Left Shelf



 
#8 x 1pc
Shelf Support plate



#9 x 2pcs
Right Shelf



#10 x 1pc
Clothing Bar

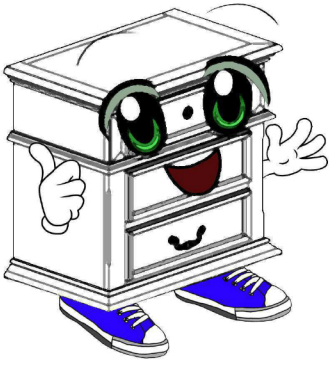

Before you begin, please read Page 2 of "Assembly and Care Advice".

And remember, do not tighten until each step is completed or instructed.

Hardware List



#A x 28pcs
Bolt M5x10



#I x 1pc
Girding



#B x 4pcs
Bolt 1/4" X 1-3/8"



#C x 2pcs
Bolt M4X8



#D x 1pc
Allen Wrench M4



#E x 2pcs
Nut M4



#F x 1pc
Screw M4x37



 
#G x 2pcs
Metal Plate




#H x 1pc
Anchor




Exploded View

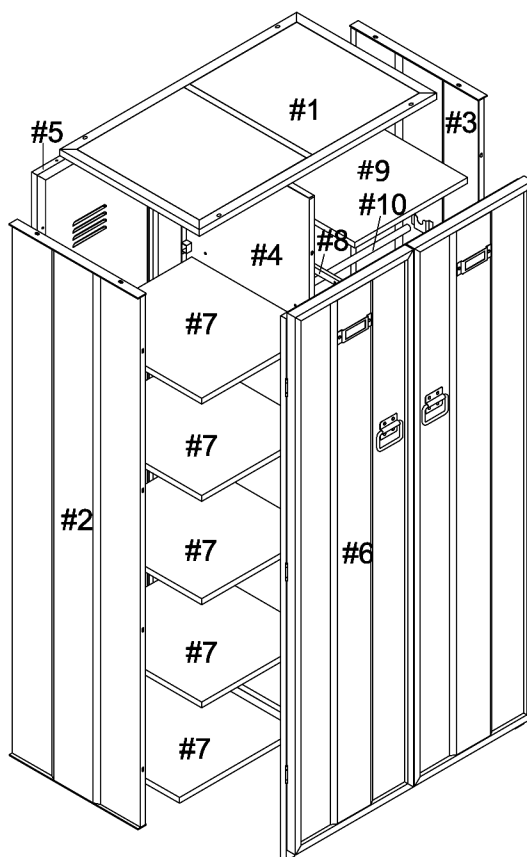

 
1) Align side and middle panels (#2,3,4) to the holes of the back panel (#5), then secure by using bolts (#A).

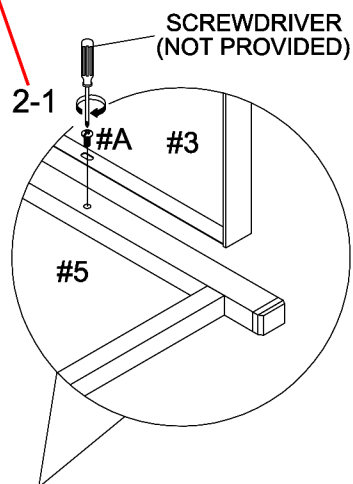

#A x 12pcs
#C x 2pcs
#E x 2pcs

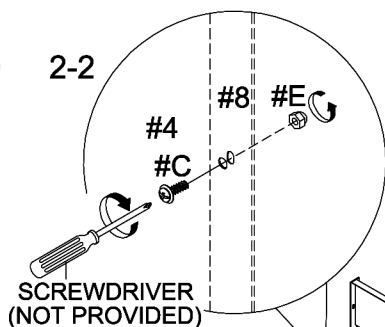 

 
2) Secure shelf support plate (#8) to the middle panel (#4) by using bolts (#C) with nuts (#E).

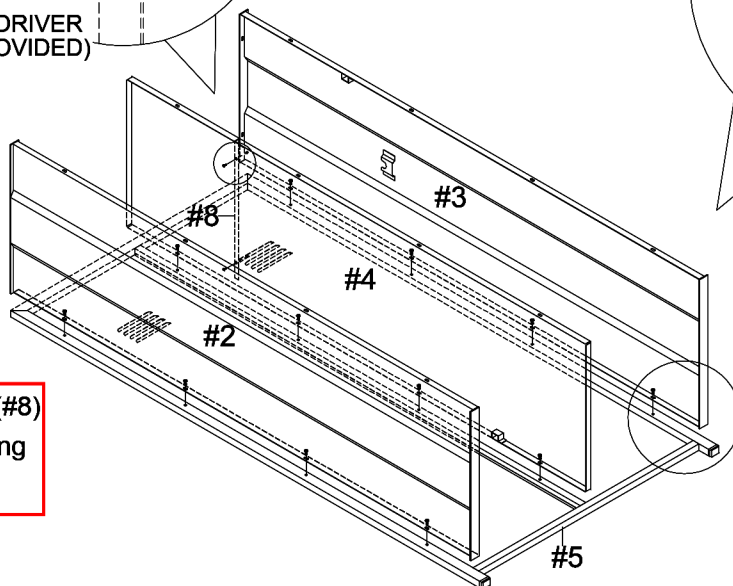




#A x 12pcs

 Align front panel (#6) to the holes of the unit, then secure by using bolts (#A).


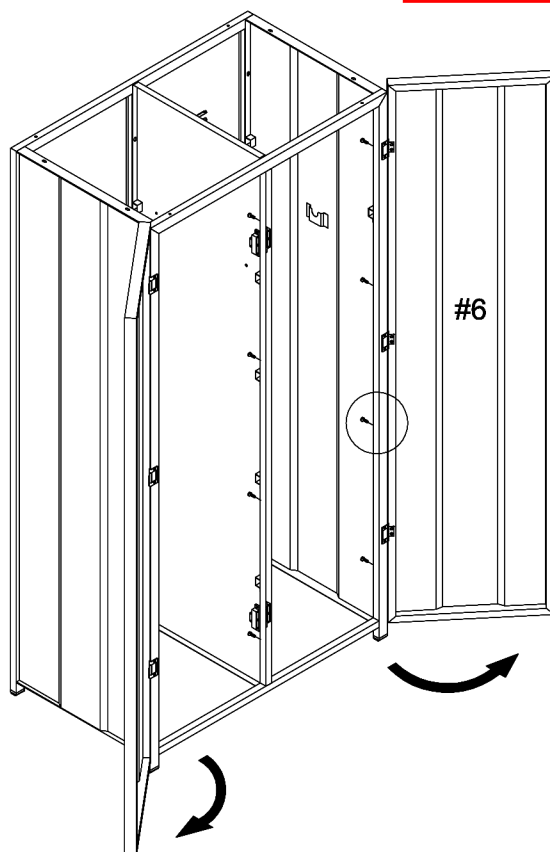


SCREWDRIVER
(NOT PROVIDED)

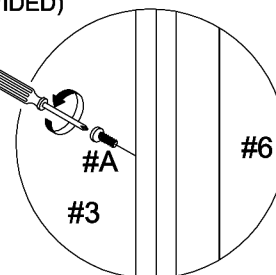 


#A x 4pcs
#B x 4pcs
#G x 1pc

 
 
Align top panel (#1) to the top holes of the unit, then secure by using bolts (#A).

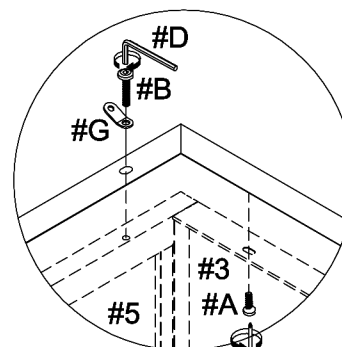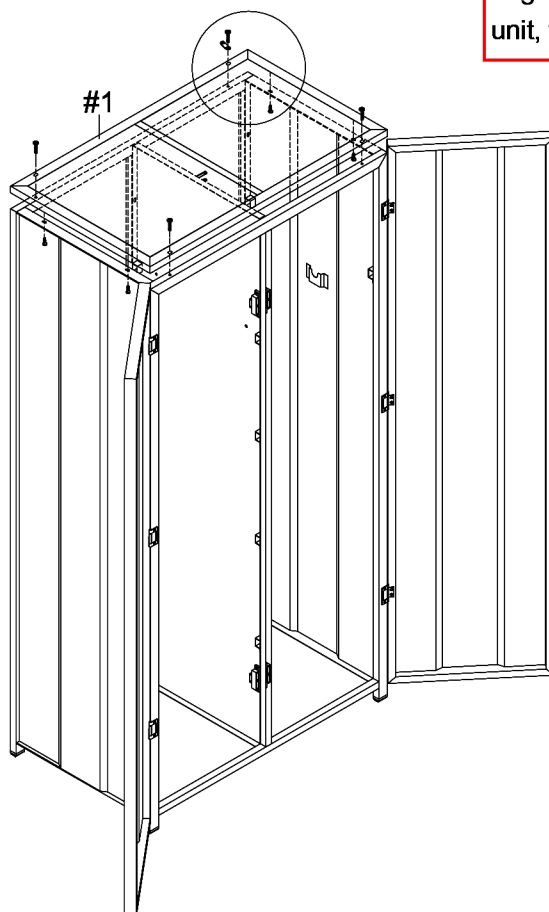


SCREWDRIVER
(NOT PROVIDED)

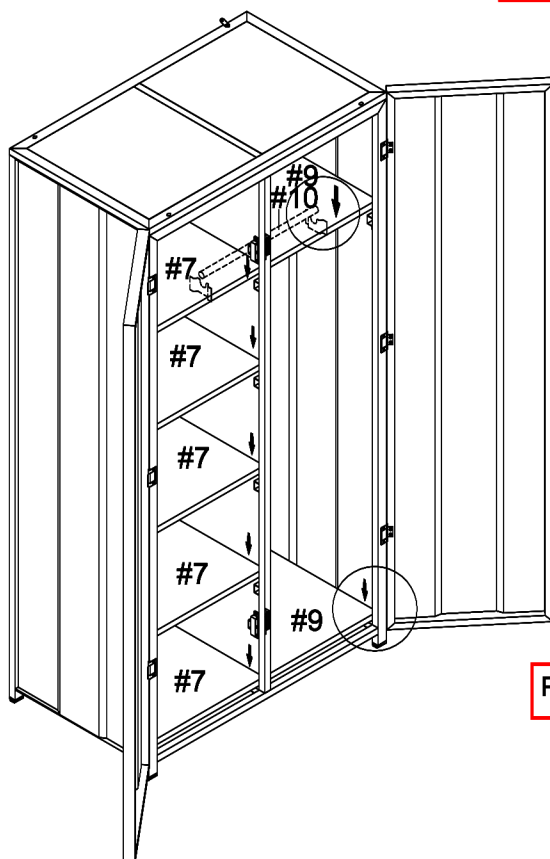 

  Place clothing bar (#10) to the brackets of the side panels.

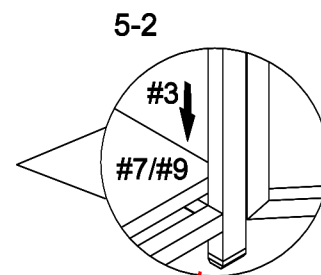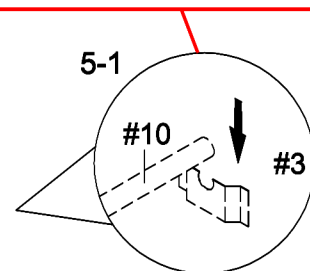


 Place the shelves (#7,9) inside the unit.

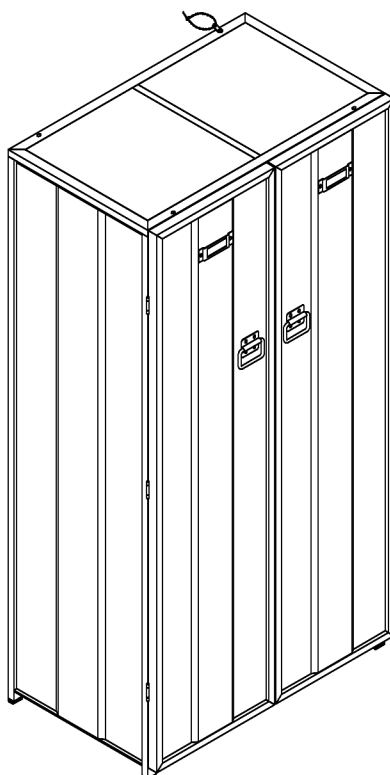




#F x 1pc
#G x 1pc
#H x 1pc

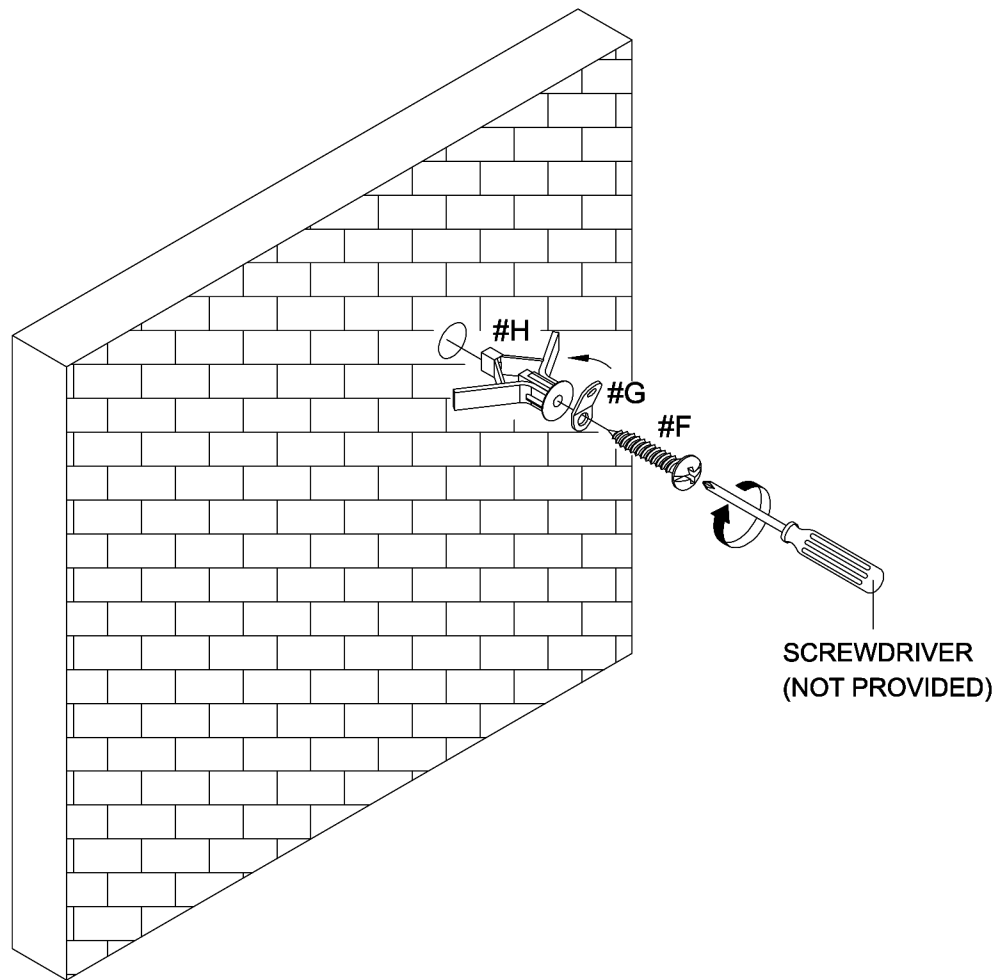 

#I x 1pc

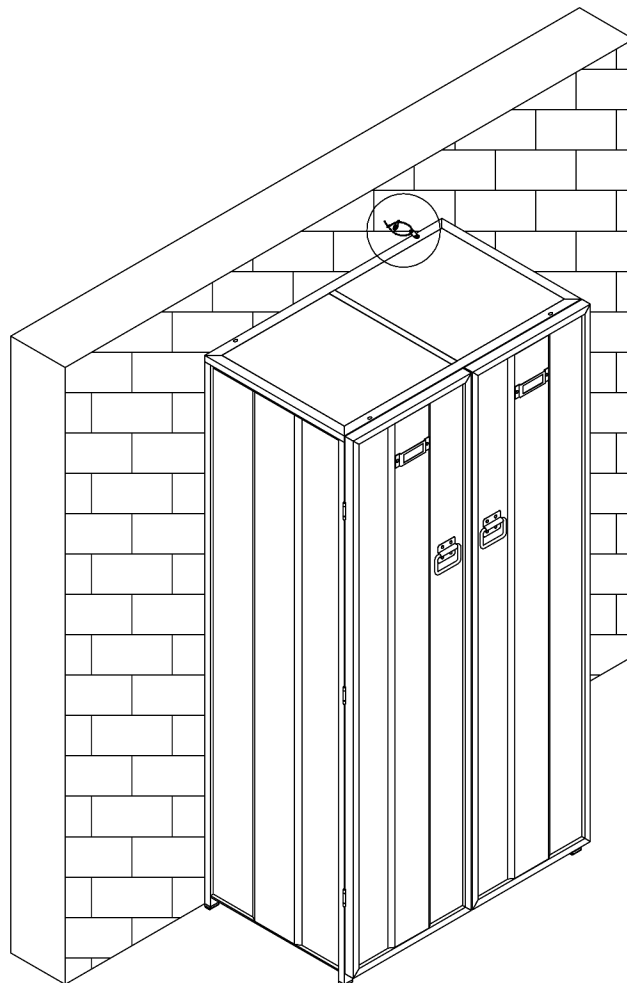 

To Prevent Tip over
Product Must Be
Attached To Wall

