 


Instruction Manual

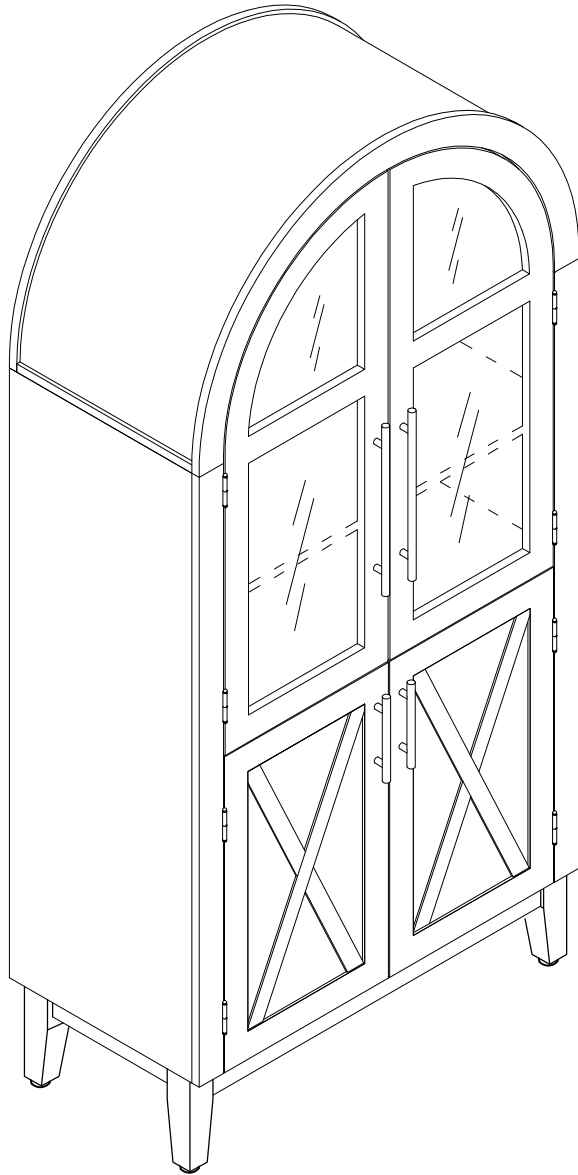

**Scan with Your Camera
App to Contact Our Customer
Support Team for Any Product
or Installation Issues !**



Installation Video

Notes:

1. ASSEMBLY PREPARATION AND TIPS FOR ASSEMBLY

- 1). Remove all packaging materials, screws and packing straps from the carton.
- 2). Refer to Parts List and Hardware List, and ensure parts and hardware are correct before assembly.
Contact customer service for missing parts.
- 3). Place all wooden parts on a clean, flat and soft surface (e.g. carpet or rug) to prevent scratch and damage to parts.
- 4). Allow ample room for assembly and assemble the product near where the product will be placed.
- 5). During assembly, do not over-tighten any fittings as this may cause damage.
- 6). Always place the product on a flat, level surface.

 
2. CARE AND MAINTENANCE

- 1). KEEP ALL HARDWARE PARTS OUT OF REACH OF CHILDREN.
- 2). Wipe clean with a soft, dry cloth; avoid the use of harsh chemicals or household cleaners as they may damage the exterior finish of the furniture.
- 3). Hardware may loosen over time. Periodically, check that all connections are tight; re-tighten as necessary.

3. TIPS TO PROTECT & CARE FOR YOUR FURNITURE

- 1). Avoid placing your furniture in direct sunlight, as sunlight causes fading.
- 2). Use a protective pad when writing on the furniture surface.
- 3). Use cutting boards and trivets for food preparation in order to avoid damaging the top for the unit.


Instructions For Fastening CAM-BOLT and CAM-LOCK




CAM-BOLT



 
CAM-LOCK

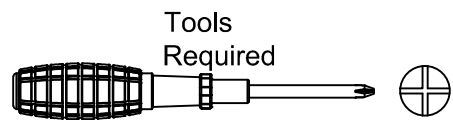


INSERTING AND TIGHTENING CAM-BOLT

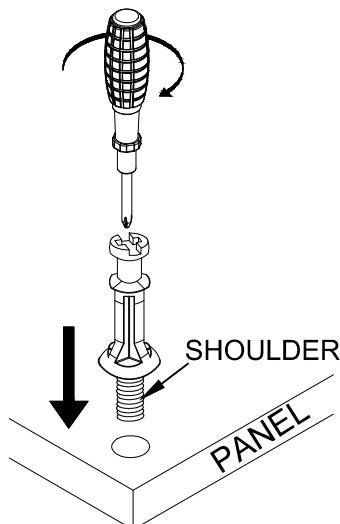 

 Place Cam-bolt on pre-drilled hole and screw in vertically

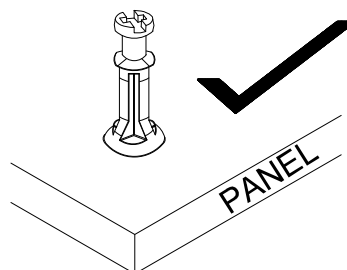


  The middle of the screw is flush with the panel

 
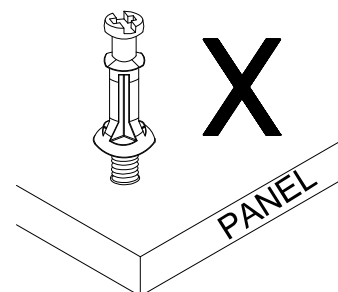 

 


















The middle of the screw is above the panel




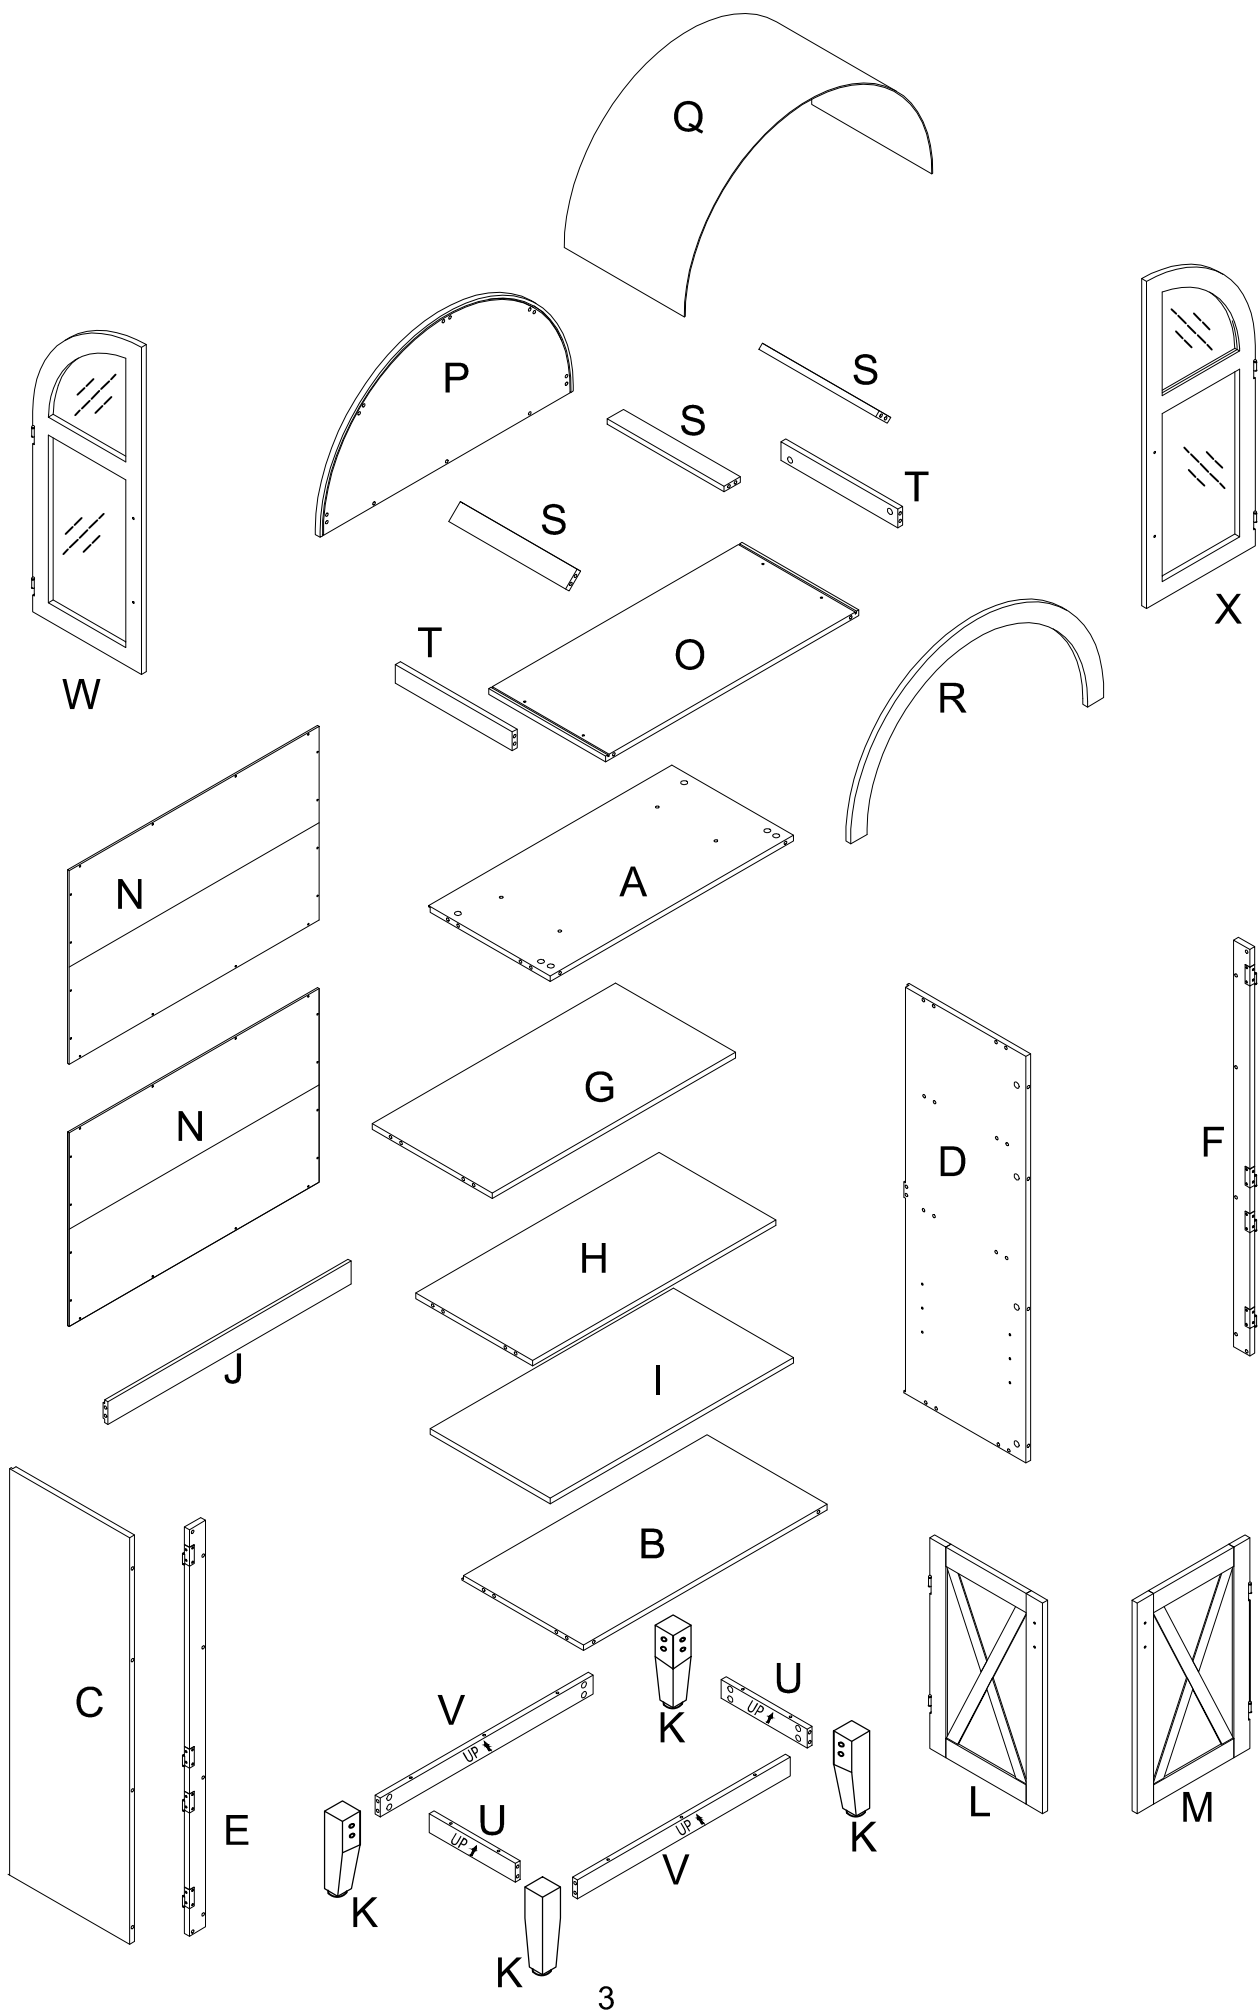
Using a screwdriver, place the cam bolt over the designated pre-drilled hole in the panel and screw in vertically until the middle of the screw is flush with the panel

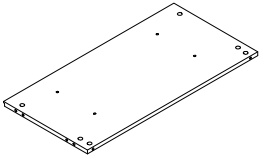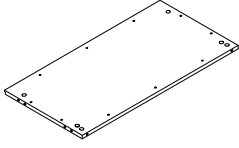

                  PART LIST

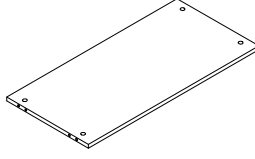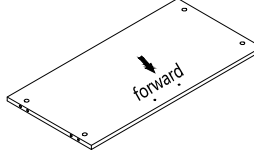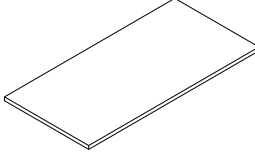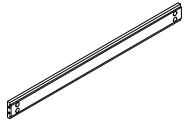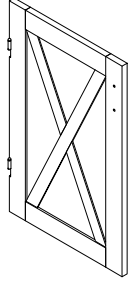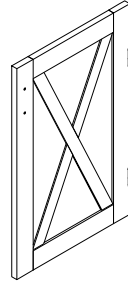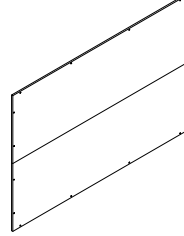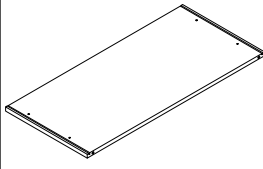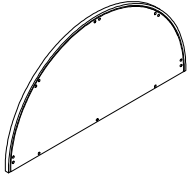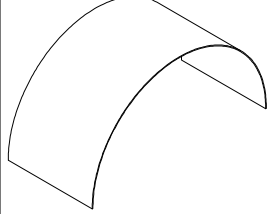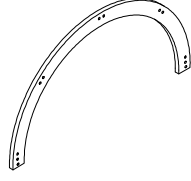 

 

 
 
 

 
 

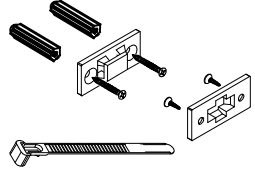 




<p>A</p> 	<p>B</p> 	<p>C</p> 	<p>D</p> 	<p>E</p> 
<p>Top panel 1 PC</p>	<p>Bottom panel 1 PC</p>	<p>Left side panel 1 PC</p>	<p>Right side panel 1 PC</p>	<p>Left vertical bar 1 PC</p>
<p>F</p> 	<p>G</p> 	<p>H</p> 	<p>I</p> 	<p>J</p> 
<p>Right vertical bar 1 PC</p>	<p>Upper fixed layer board 1 PC</p>	<p>Lower fixed layer board 1 PC</p>	<p>Movable Shelf 1 PC</p>	<p>Rear fixing strip 1 PC</p>
<p>K</p> 	<p>L</p> 	<p>M</p> 	<p>N</p> 	<p>O</p> 
<p>Leg 4 PCS</p>	<p>Left door panel 1 PC</p>	<p>Right door panel 1 PC</p>	<p>Back panel 2 PCS</p>	<p>Upper arc bottom plate 1 PC</p>
<p>P</p> 	<p>Q</p> 	<p>R</p> 	<p>S</p> 	<p>T</p> 
<p>Arc back panel 1 PC</p>	<p>Upper back panel 1 PC</p>	<p>Arc front panel 1 PC</p>	<p>Horizontal bar on arc 3 PCS</p>	<p>Fixed bar under circular arc 2 PCS</p>

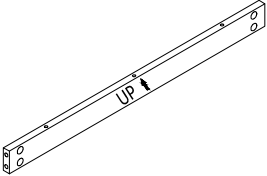PART LIST


U 	V 	W 	X 
Left and right foot strips 2 PCS	Front and rear foot strips 2 PCS	Left door panel 1 PC	Right door panel 1 PC



  
HARDWARE LIST

<p>#1</p> 	<p>#2</p> 	<p>#3</p>  <p>Φ8*30mm</p>	<p>#4</p>  <p>L=150mm</p>	<p>#5</p>  <p>5/32"*20mm</p>
<p>Cam-bolt 63 PCS(Extra1)</p>	<p>Cam-lock 63 PCS(Extra1)</p>	<p>Wood Dowel 26PCS(Extra1)</p>	<p>Handle 2 PCS</p>	<p>Round Head Bolt 8 PCS</p>
<p>#6</p> 	<p>#7</p>  <p>6*3*12mm</p>	<p>#8</p>  <p>8*3*15mm</p>	<p>#9</p> 	<p>#10</p>  <p>M6*20mm</p>
<p>Magnet 2 PCS</p>	<p>Round Head Screw 4 PCS</p>	<p>Short Screw 32 PCS(Extra2)</p>	<p>Blocking point 4 PCS</p>	<p>Bolt 4 PCS</p>
<p>#11</p>  <p>8*4*30mm</p>	<p>#12</p> 	<p>#13</p>  <p>4mm</p>	<p>#14</p>  <p>L=300mm</p>	<p>#15</p>  <p>M6*45mm</p>
<p>Long Screw 4 PCS</p>	<p>Safety Strap Kit 1 SET</p>	<p>Allen Wrench 1 PCS</p>	<p>Handle 2 PCS</p>	<p>Bolt 10 PCS</p>
<p>#16</p>  <p>Card strip removal tool 1 PCS</p>				

 
Step 1. First, lock the # 1 screw onto 4 parts K, then connect part U and tighten it with # 2; Finally connect part V and lock it with # 2

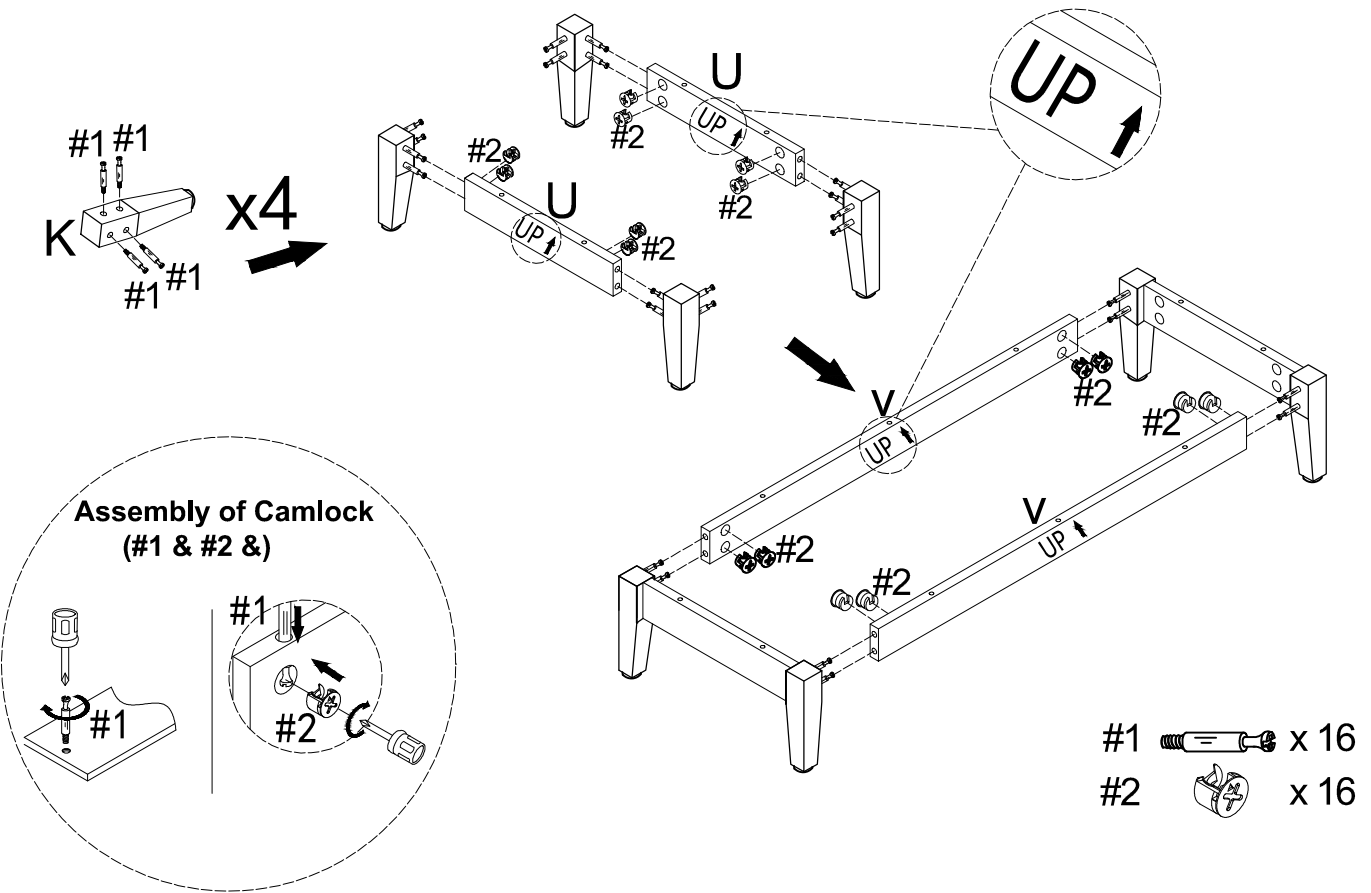

 
Step 2. Assemble the three in one screw # 1 clockwise onto the left and right side panels (part C&D)

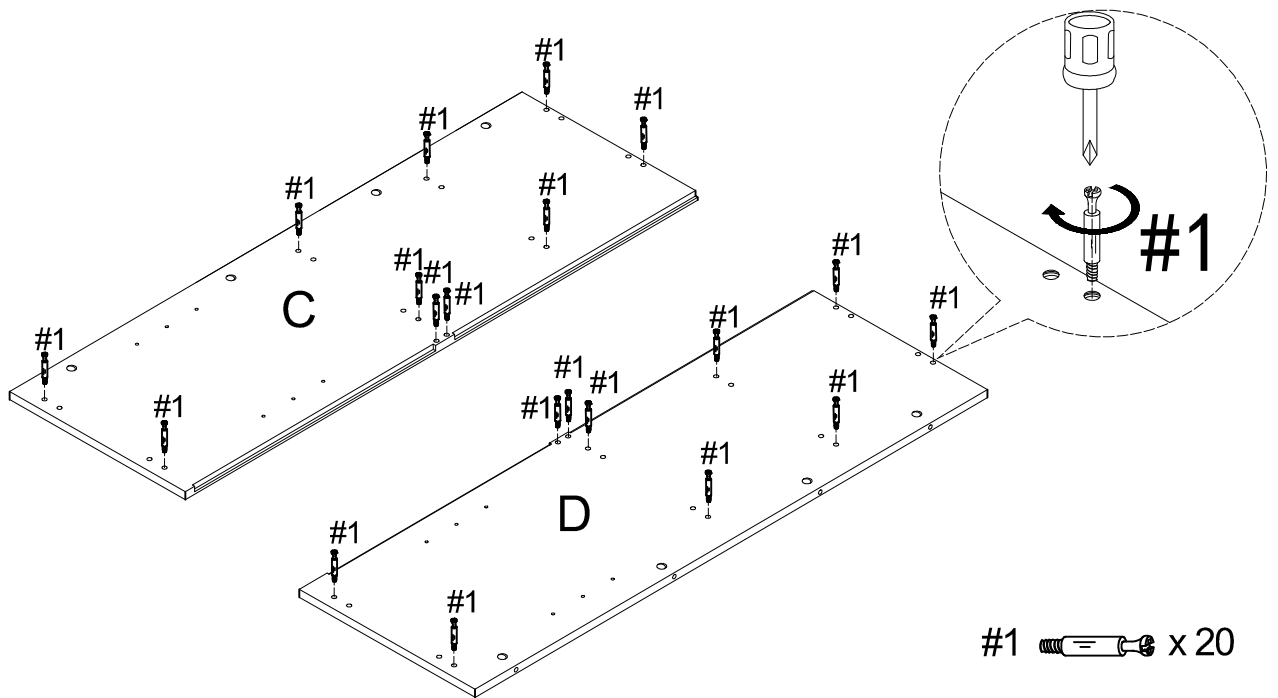

 
Step 3. Use wooden tenon#3 and three in one nut#2 to connect the left and right side panels (part C&D), the top plate (part A), bottom plate(part B), upper and lower fixed layer plates (part G&H), and back tension bar (part J) , then tight the three in one nut#2 clockwise

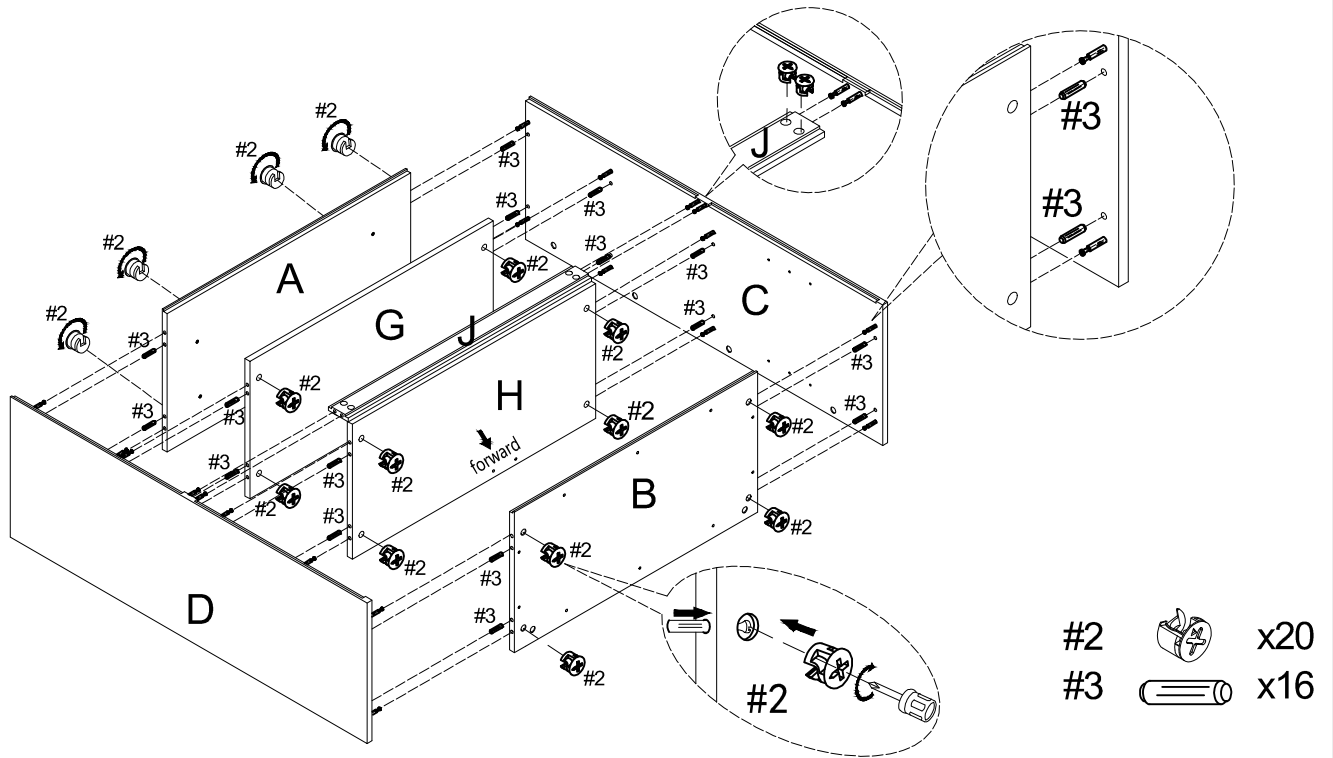


 Step 4. Fix the back panel (part N)to the assembled cabinet with screws#8

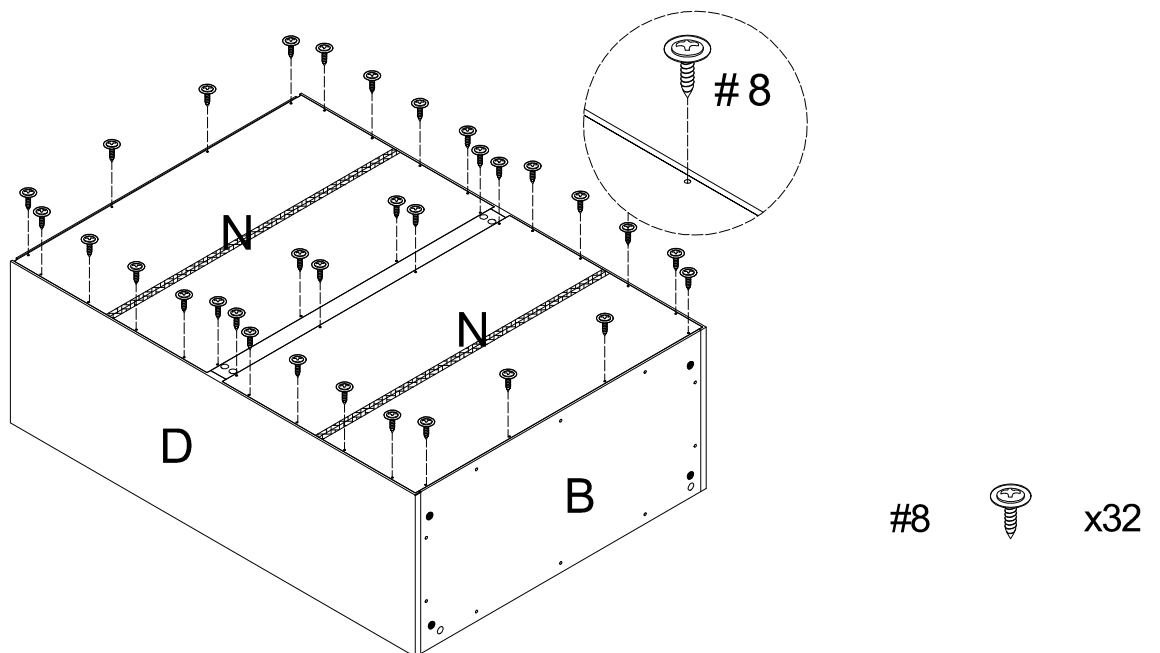


  Step 5. Install the left and right fixing strips(part E&F) with screw#1

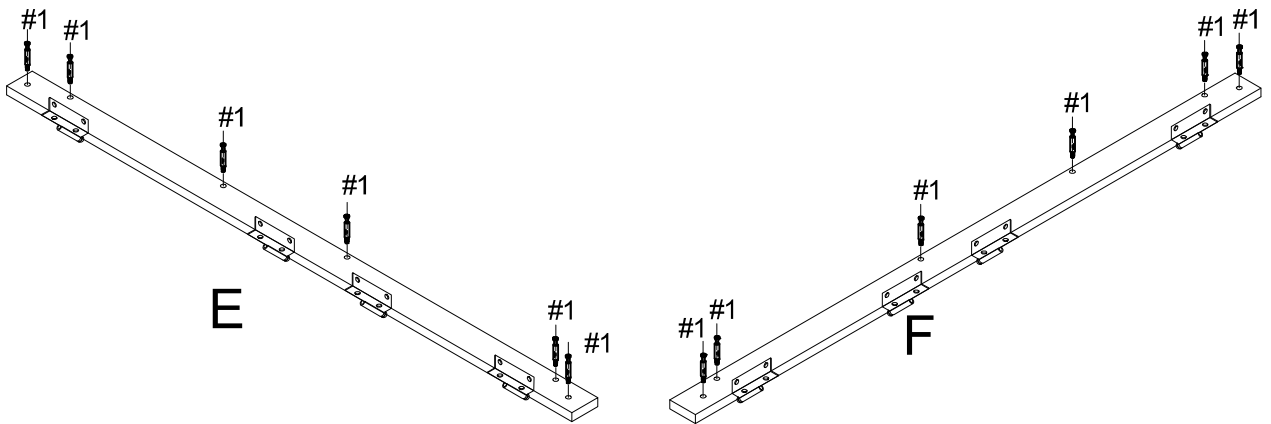


#1  x 12

 Step 6. Turn over the assembled cabinet and fixed the left and right fixing strips(part E&F) by using screws#2 clockwise

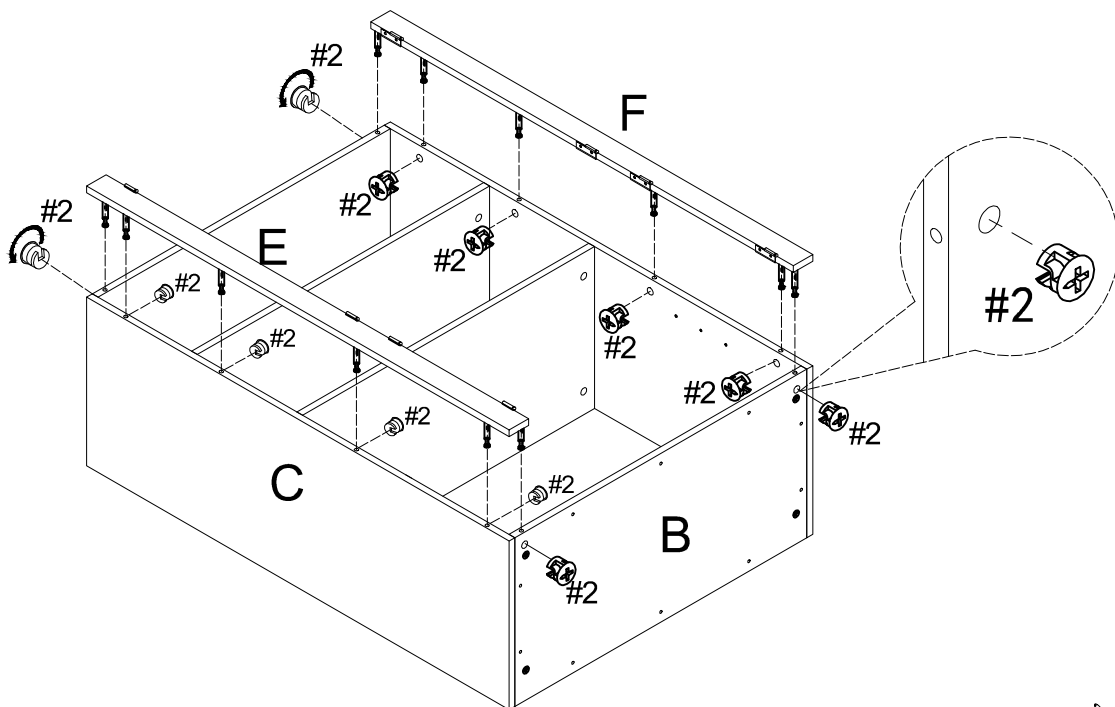


#2  x12

 
Step 7. Connect the assembled bottom frame to the assembled lower cabinet by using hex screws #15 and hex wrenches #13

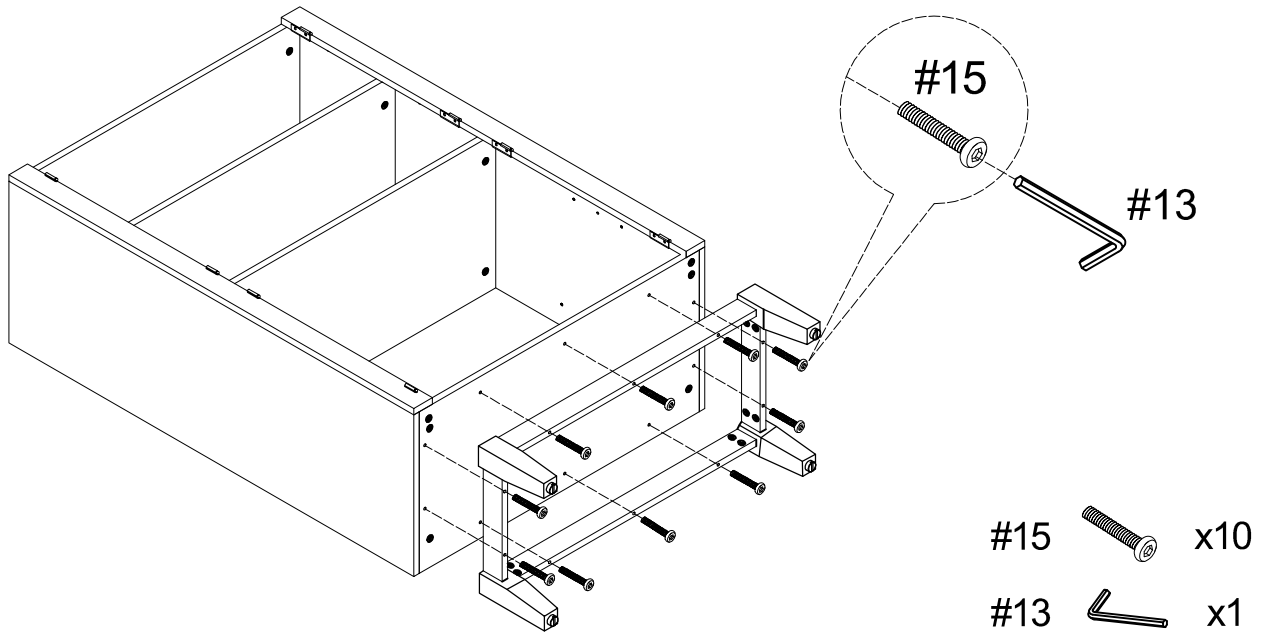

 Step 8. Connect the arch bottom plate (part O), arch back plate (part P), arch middle horizontal bar (part S), and arch left horizontal bar (part T) by using screw #1 and wooden tenon #3, then tight the nut #2 clockwise

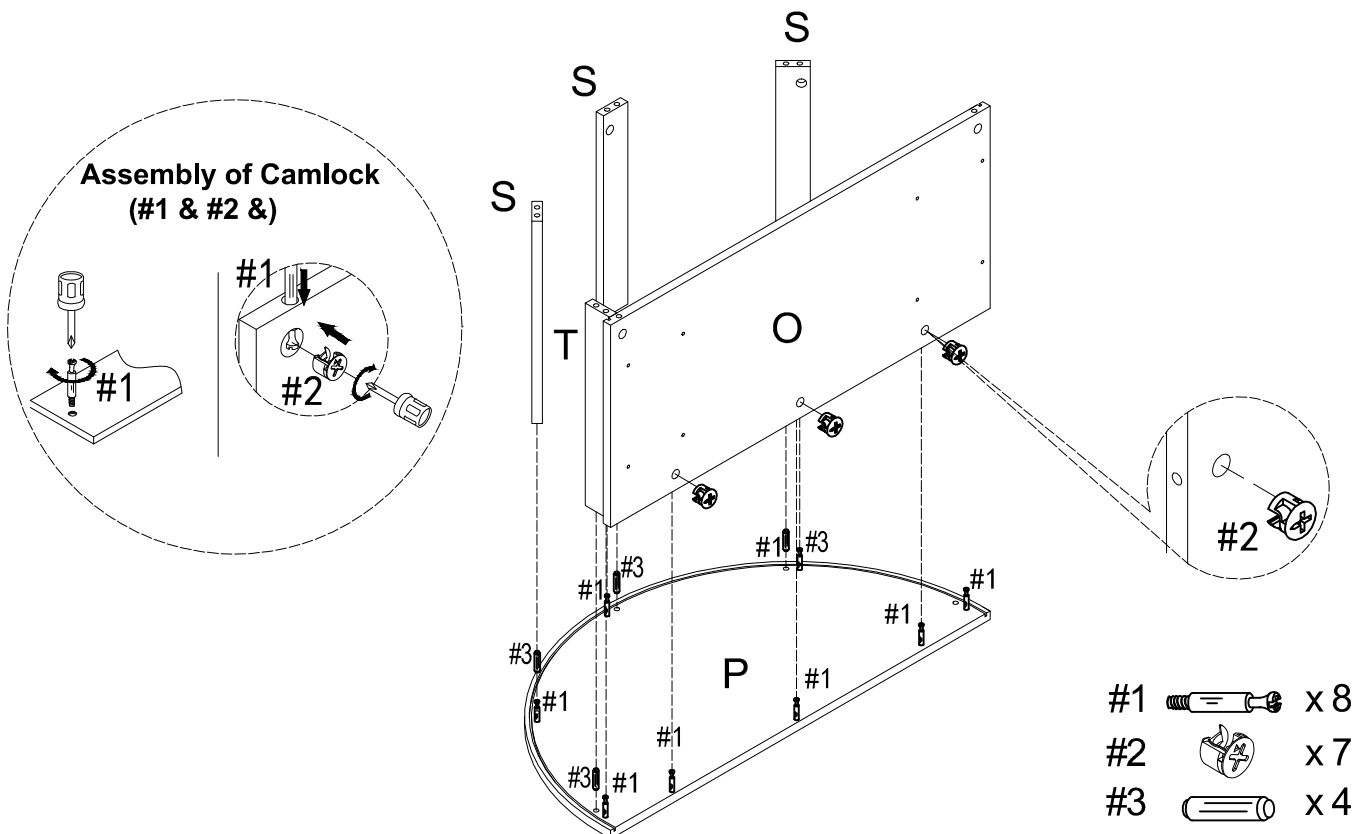


 Step 9. Tighten the # 11 screw clockwise and secure the left tie rod (part&T) first

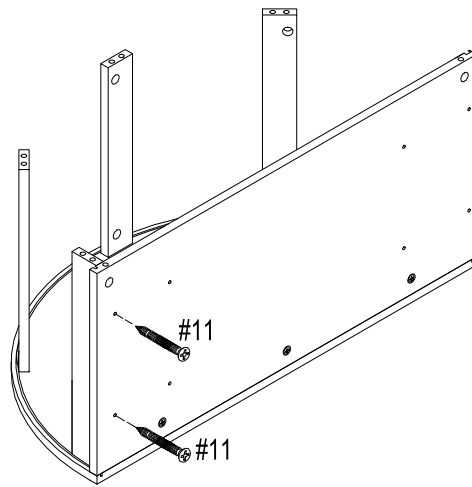


#11  x2

  Step 10. Insert the upper back panel (part Q) into the slot from left to right according to the circular arch slot

 
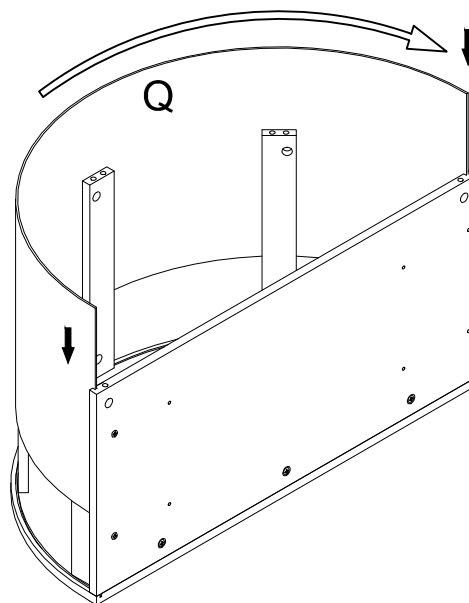 


 

 

Step 11. Insert the right fixing strip (part T) by using wooden tip #3 and screw #2

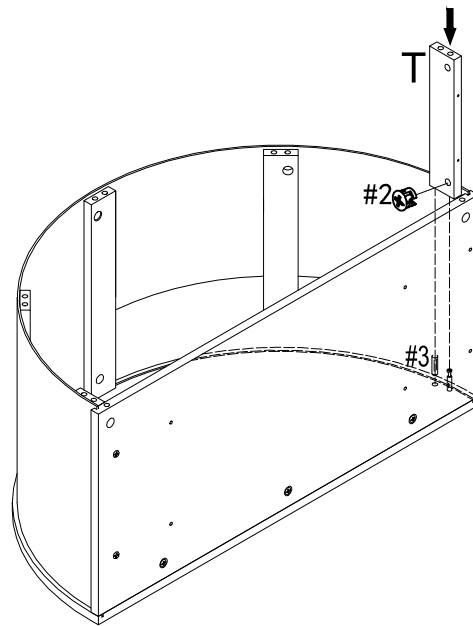


- #2  x 1
- #3  x 1

Step 12. Use wooden tenon # 3, three in one screw # 1, and nut # 2 to fix the arch front plate (part R) to the assembled arch cabinet body; Connect the right horizontal bar (part T) with screw # 11

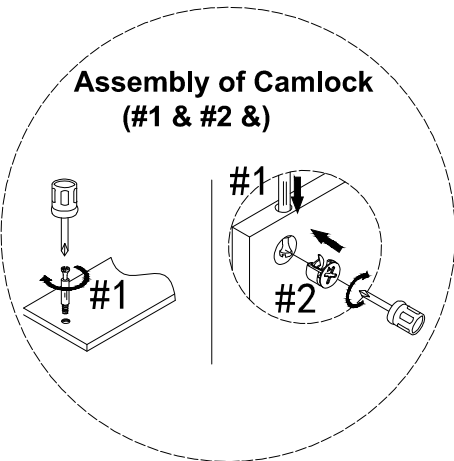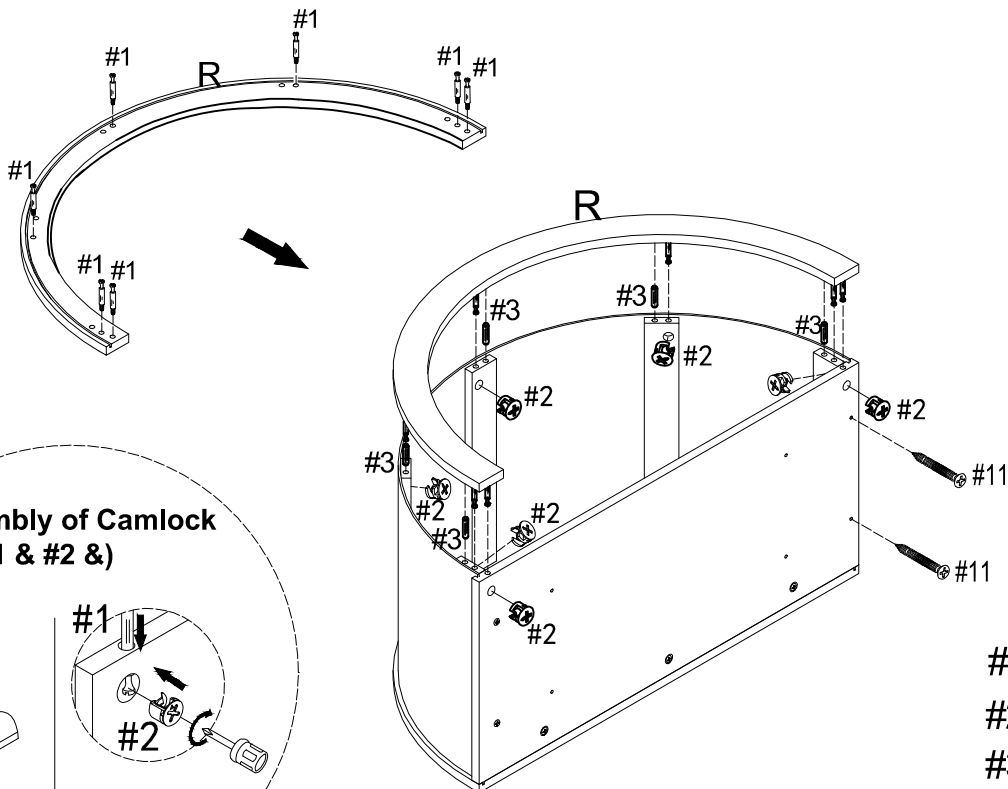

 
- #1  x 7
- #2  x 7
- #3  x 5
- #11  x 2

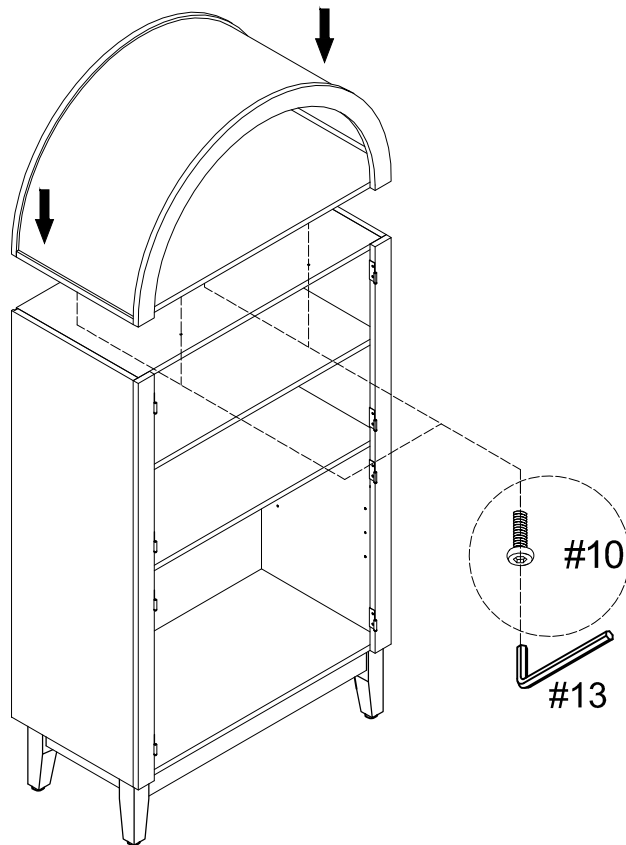


Step 13. Connect the assembled upper circular arch cabinet to the lower cabinet by using hexagon socket screw#10 and hexagon socket wrench#13




- | | | |
|-----|--|-----|
| #10 |  | x 4 |
| #13 |  | x 1 |

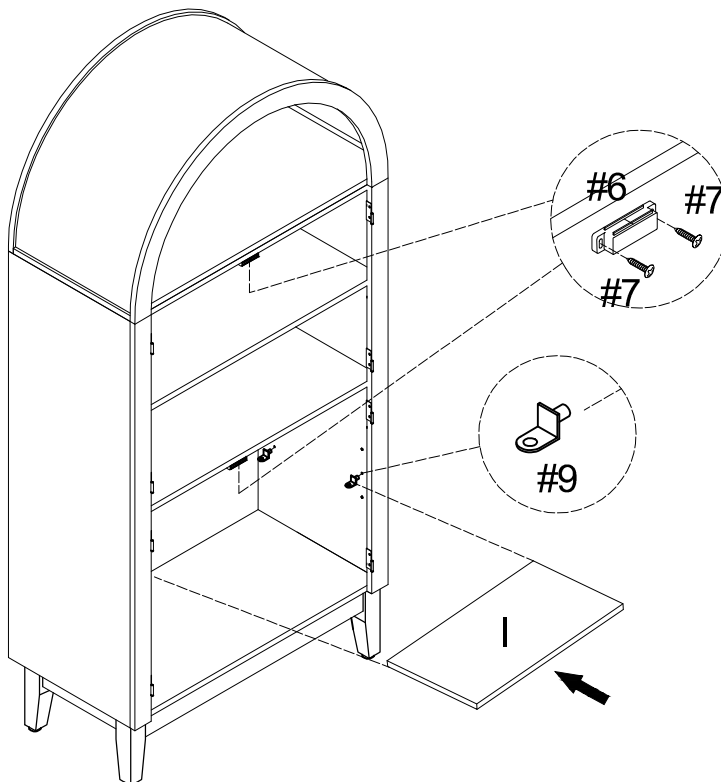 Step 14. Install the shelf holder#9 into the cabinet and place the movable shelf (part I) on it. Use screws#7 to install the magnetic attraction#6 on the back of the lower fixed shelf and the back of the top panel




- | | | |
|----|---|-----|
| #6 |  | x 2 |
| #7 |  | x 4 |
| #9 |  | x 4 |

 
Step 15. Install handle#4 onto the left and right door panels (part L&M)of the lower cabinet and install handle#14 onto the left and right door panels (part W&X)of the upper cabinet (using #5 screw)

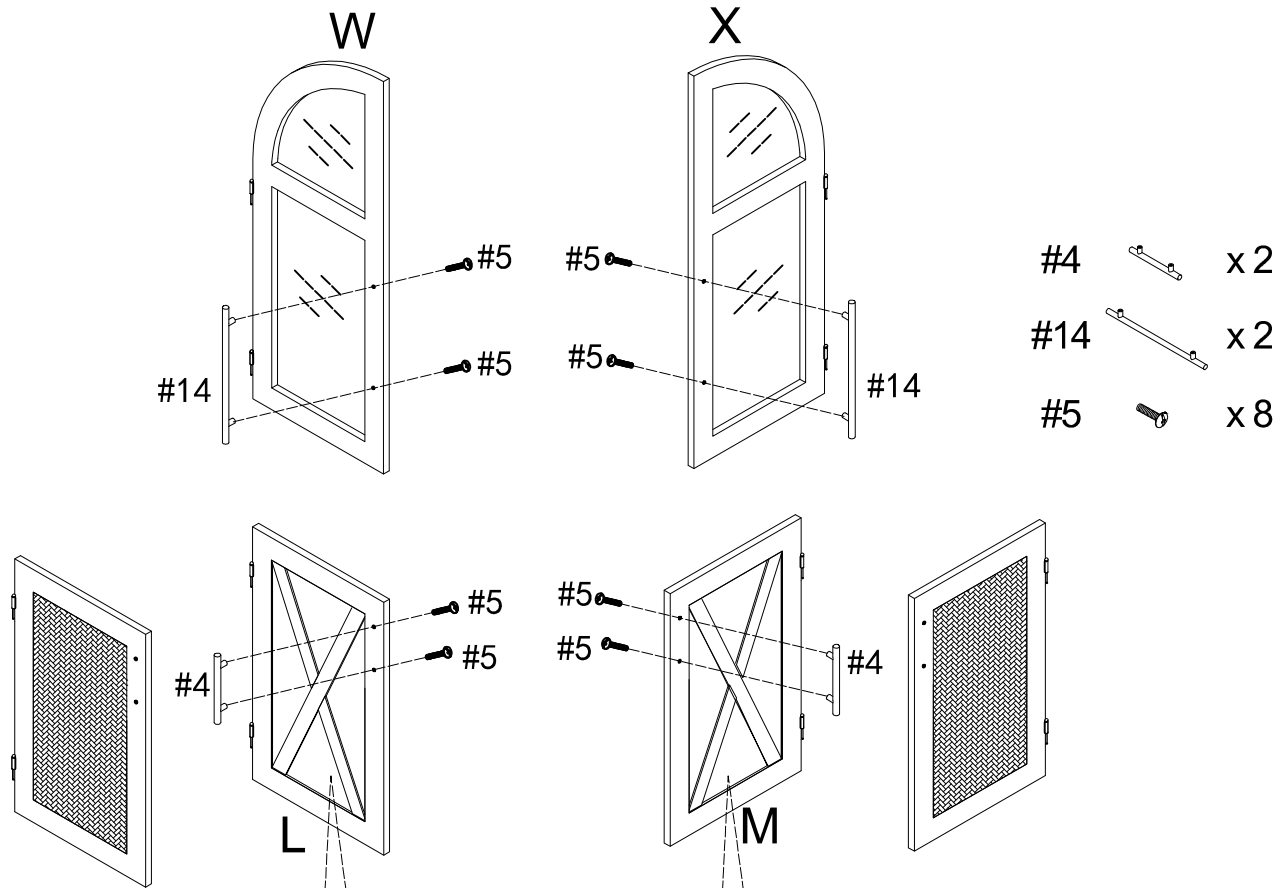

 Attention: The interchangeable core board design of the L&M cabinet door should be operated according to the following steps, and protection should be taken during replacement to avoid damaging the door panel!

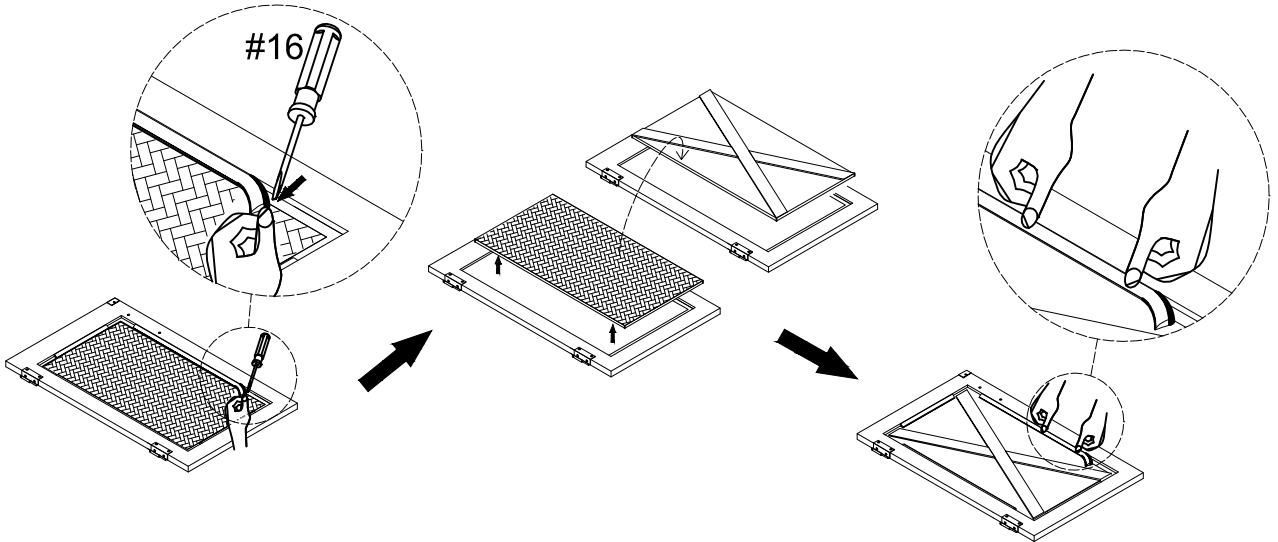


 
Step 16. Align the lower cabinet door panel (part L&M) and upper cabinet glass door (part W&X) vertically with the pin holes and install them onto the cabinet.

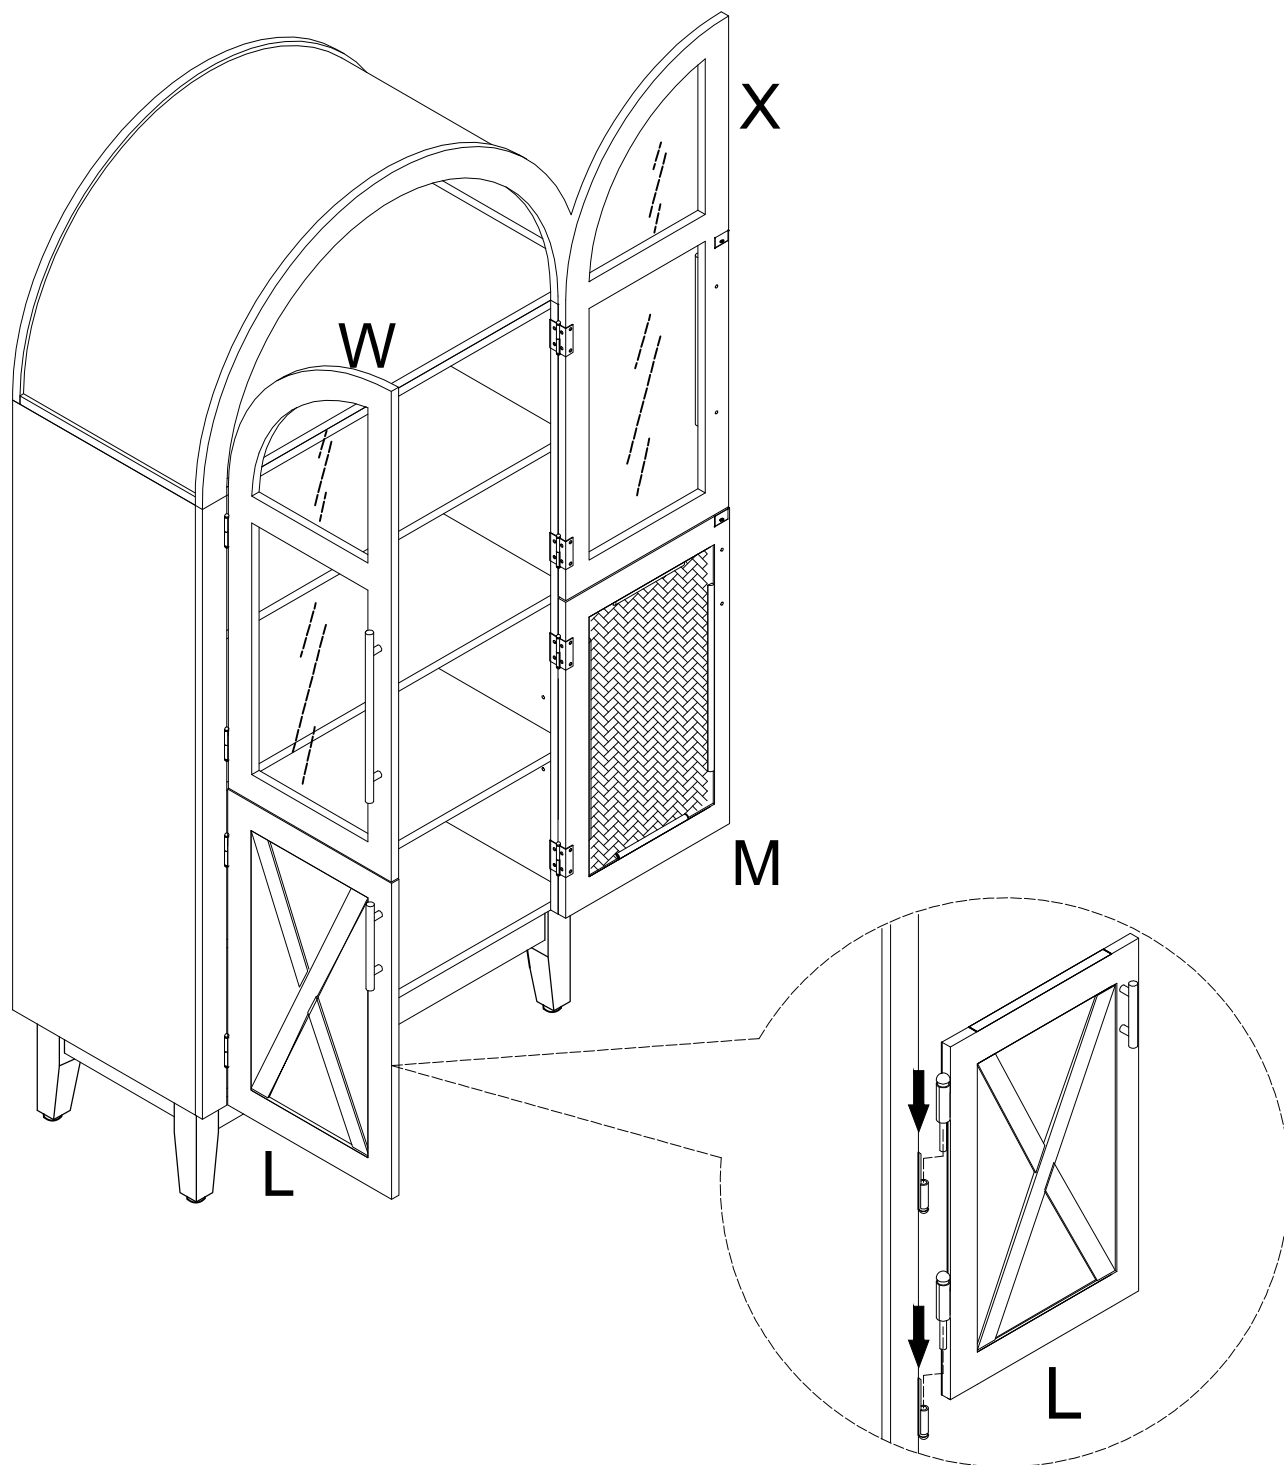




Instructions for using the anti fall device

  1. Use expansion tubes and long screws to fix plastic components on the wall.
2. Use self tapping screws to fix plastic components to the back of furniture (located in thick areas such as panels, backboard frames, etc.).
3. Thread the nylon tie through the two holes, tie it tightly, and cut off any excess parts

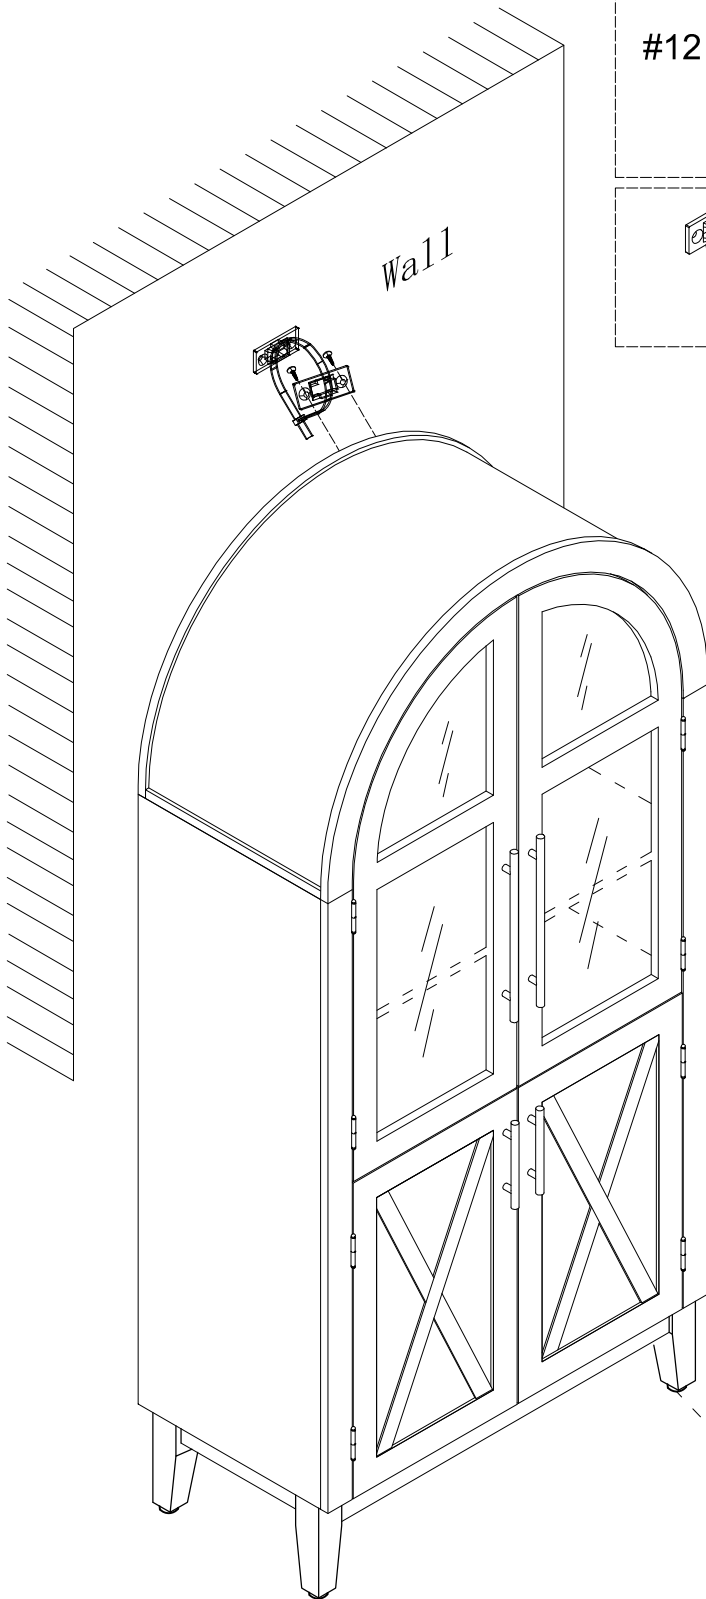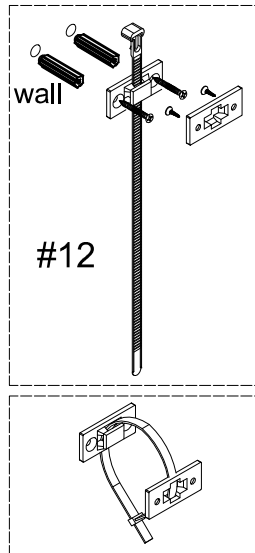

⚠ WARNING	
	<p>Children have died from furniture tipover. To reduce the risk of furniture tipover:</p> <ul style="list-style-type: none"> · ALWAYS install tipover restraint provided. · NEVER put a TV on this product. · NEVER allow children to stand, climb or hang on drawers, doors, or shelves. · NEVER open more than one drawer at a time. · Place heaviest items in the lowest drawers.
	<p><i>This is a permanent label. Do not remove!</i></p>

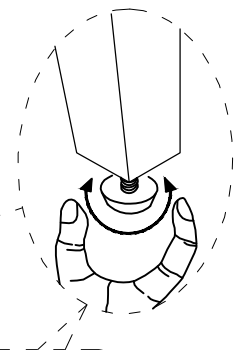 

After installation, adjust the adjustable foot to keep the cabinet balanced and align the door.