















Installation & Assembly




Ax1 	Bx1 	Cx1 	Dx4 
Ex5  M6x40MM	Fx5 	Gx1 	Hx1 
Ix1 	Jx1 		


SPARE (Ersatzteile)

Ex1  M6x40MM	Gx1 
Fx1 	Hx1 

STEP 1

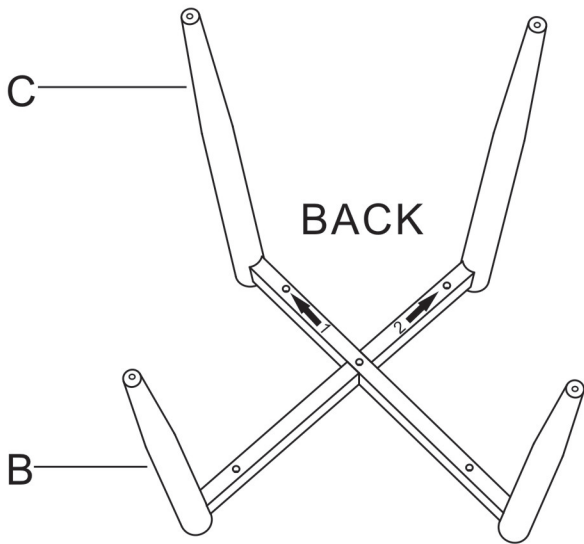

STEP 3

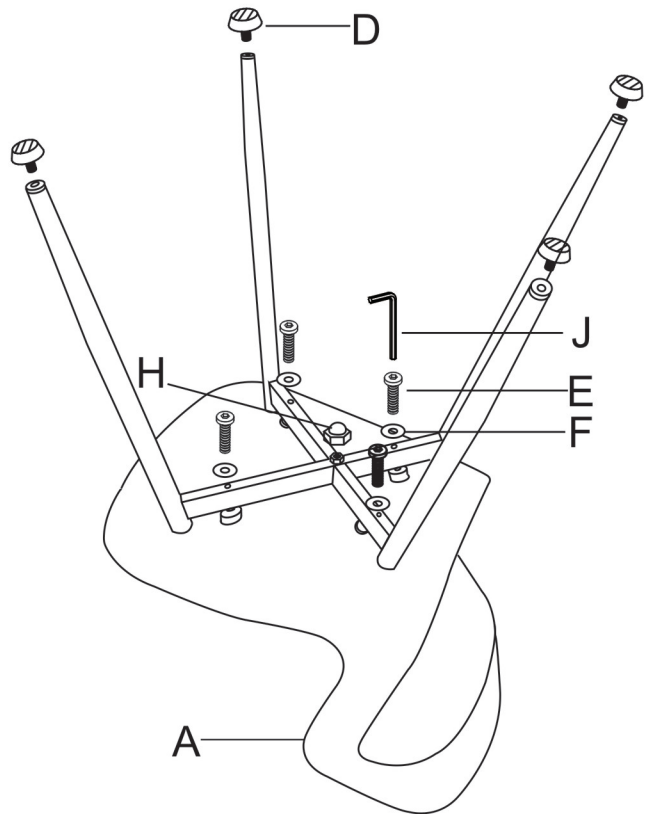

STEP 2

