 


Assembly Instructions

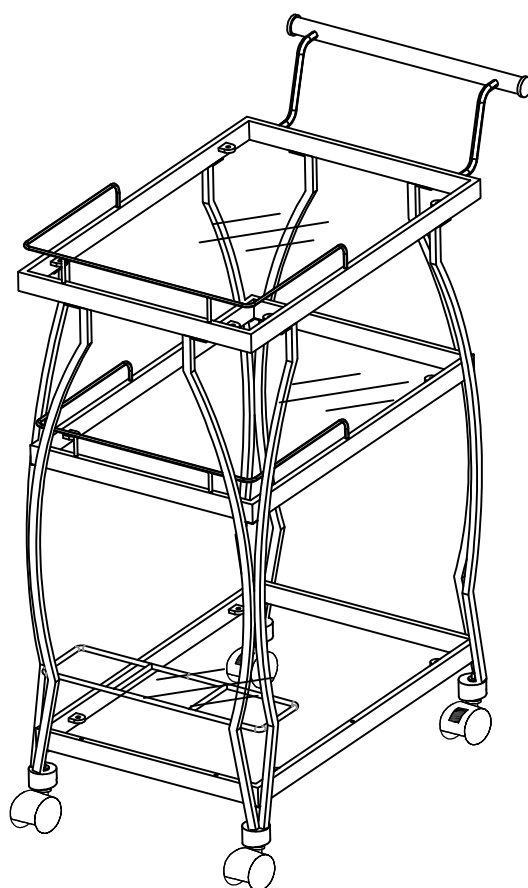

ASSEMBLY RATING

The Assembly Rating is a 5-point system that shows the degree of effort needed in assembling a specific product (with 1 being easy and 5 being difficult). For some products, two persons are recommended.

 
EASY



DIFFICULT

Tools Required For Assembly:

Allen Wrench




(Included)

Phillips Screwdriver



 (Not Included)

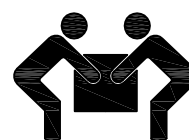


2 PERSONS RECOMMENDED


ASSEMBLY & CARE ADVICE

FOR YOUR FURNITURE TO LAST, CORRECT ASSEMBLY AND PROPER MAINTENANCE ARE NECESSARY. PLEASE FOLLOW THE INFORMATION PROVIDED BELOW TO FULLY ENJOY YOUR FURNITURE.

 
BASIC ASSEMBLY TECHNIQUES

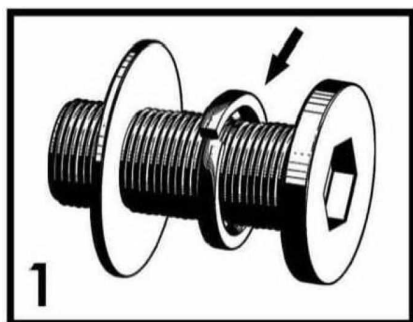

 When lock or spring washer is used in an assembly, please make sure the lock or spring washer is placed between the larger flat washer and the head of the screw or bolt.

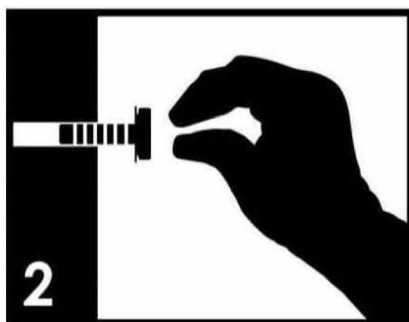

 
Position each part correctly and insert screws or bolts into their respective holes by hand tighten or using the proper hand tool. Only tighten when step is completed or when instructed to do so.

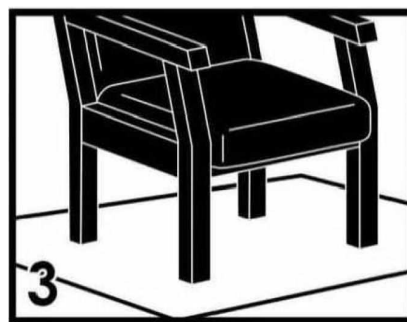


Use cardboard or carpet area when assembling furniture to prevent scratches. Make sure the furniture rests on a flat and level surface with each leg evenly touching the floor.



 Some furniture comes with height adjustment knobs underneath each leg. To lower or to raise each leg, you need to turn clockwise or counterclockwise, respectively.

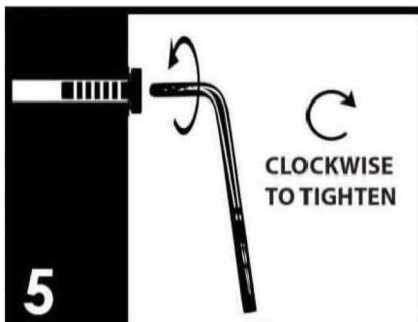


 Make sure all parts are properly aligned, then use the appropriate hand tool to completely tighten the bolts or screws. Do not use power tools and do not overtighten.

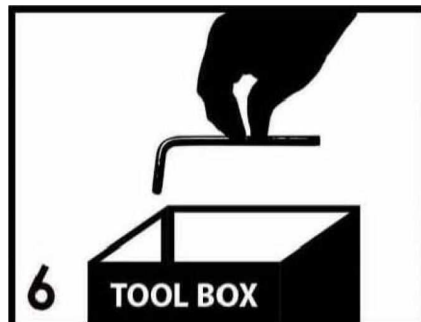


Save the instructions and store the Allen wrench or any supplied tool for later maintenance. After two weeks, check and tighten any loose hardware and repeat again every six months thereafter.

 IT IS THE USER'S RESPONSIBILITY TO MAINTAIN THE FURNITURE. THE HARDWARE MAY LOOSEN OVER TIME AND MAY CAUSE THE FURNITURE TO BE WOBBLY AND UNABLE TO SUPPORT ITS INTENDED WEIGHT CAPACITY. THIS MAY LEAD TO COLLAPSE AND MAY CAUSE SERIOUS INJURY.

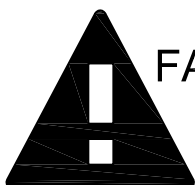



 
FAILURE TO FOLLOW THE GUIDELINES ABOVE MAY RESULT IN INJURY AND/OR PROPERTY DAMAGE.

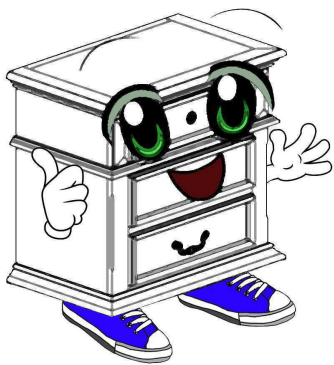




Before you begin, please read Page 2 of "Assembly and Care Advice".

And remember, do not tighten until each step is completed or instructed.

   
Parts List

	# 1 x 1pc Wine Frame
	# 2 x 4pcs Back Leg
	# 3 x 1pc Left Leg
	# 4 x 1pc Right Leg
	# 5 x 1pc Glass Top
	# 6 x 1pc Glass Shelf
	# 7 x 1pc Bottom Mirror
	# 8 x 1pc Top Frame
	# 9 x 1pc Middle Shelf Frame
	# 10 x 1pc Bottom Shelf Frame
	# 11 x 2pcs Caster W/Brake
	# 12 x 2pcs Caster

   Hardware List

	# A x 26pcs Bolt 1/4" x 13mm
	# B x 12pcs Glass Bumper
	# C x 2pcs Bolt 3/16" x 10mm
	# D x 1pc Allen Key

 
Exploded View

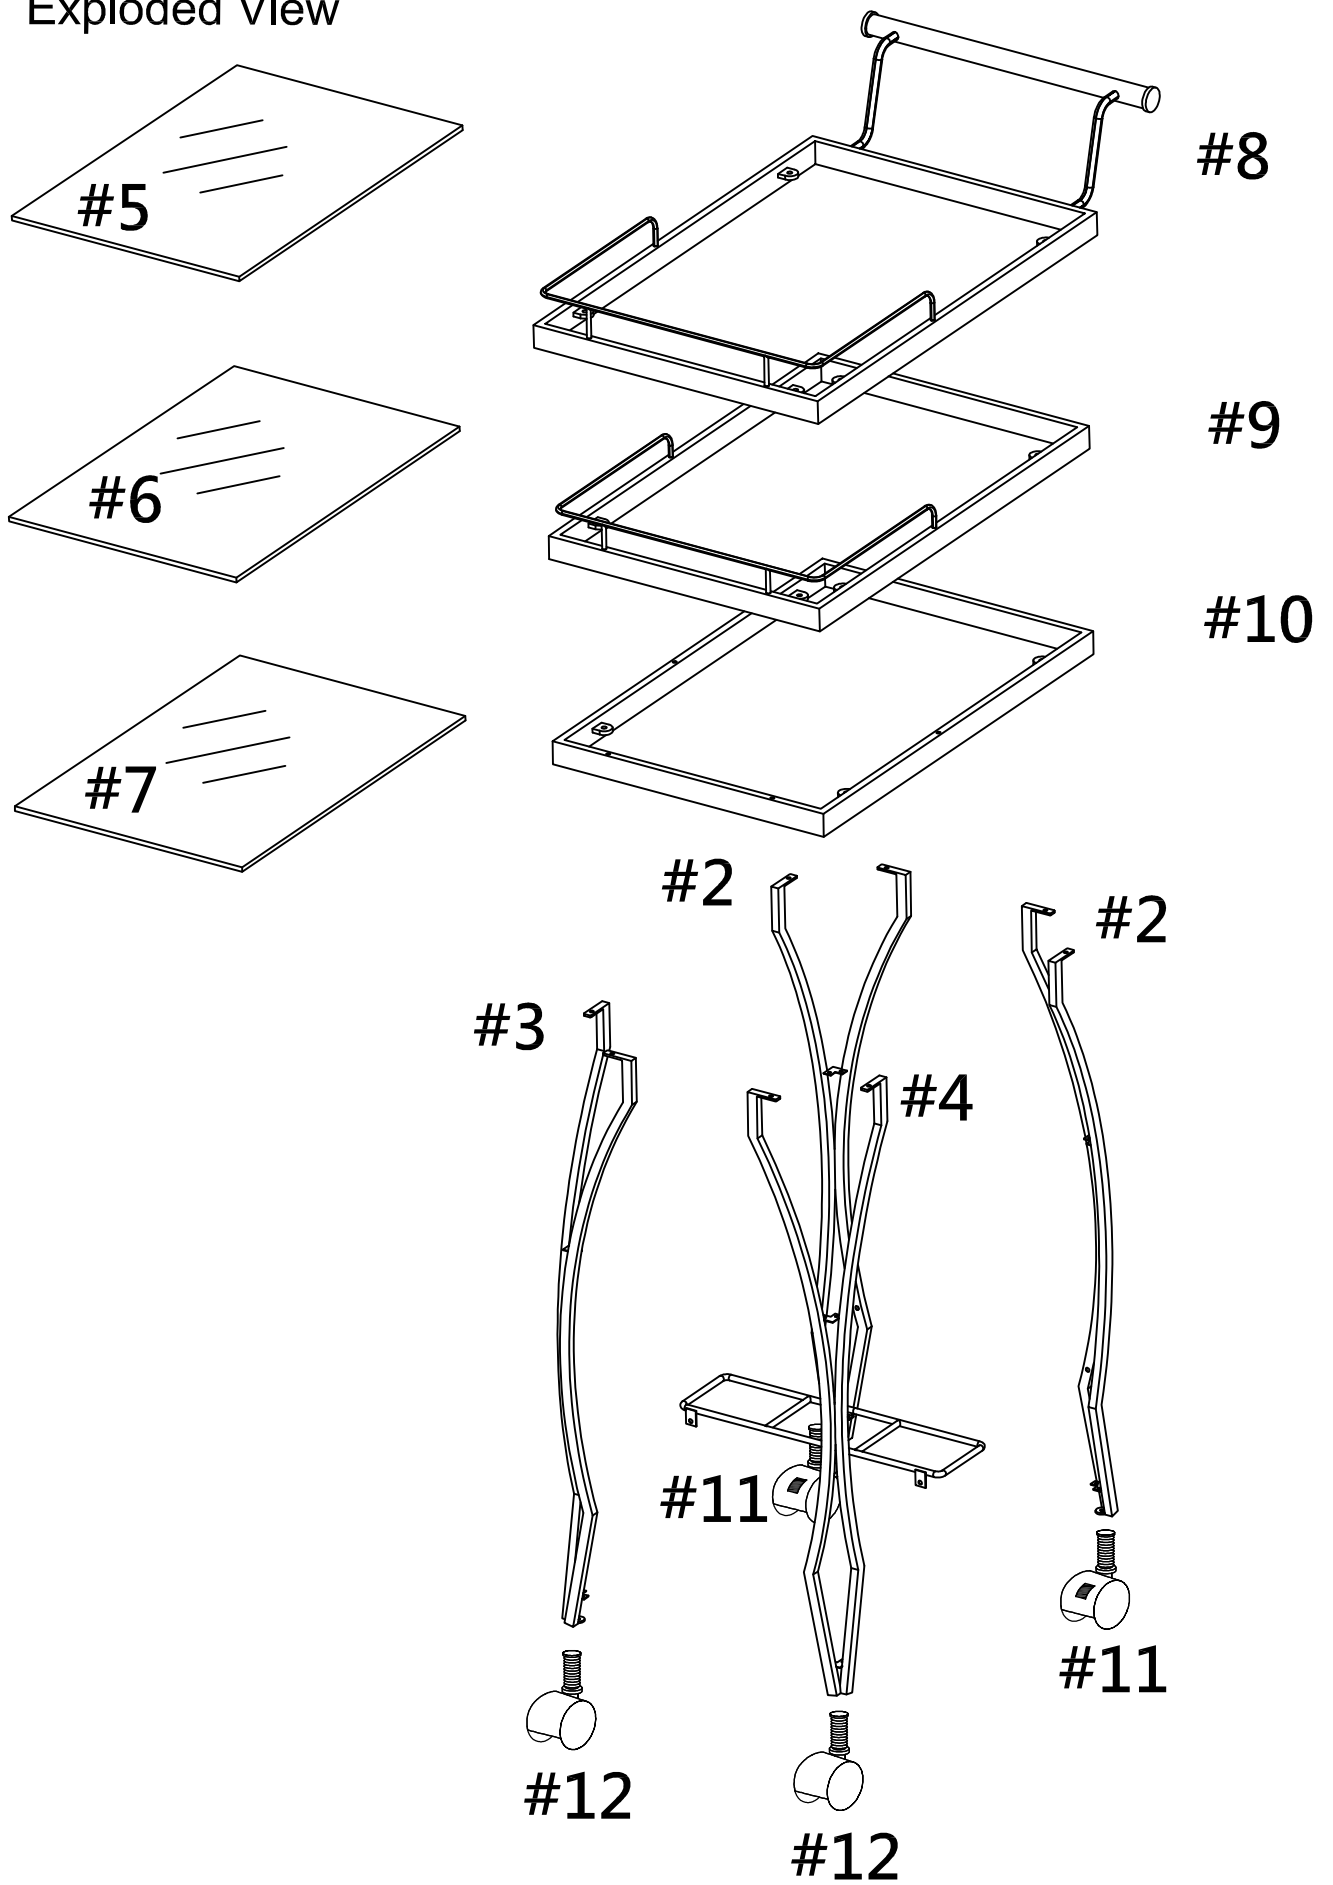



#A 8pcs

 
DO NOT FULLY TIGHTEN ALL BOLTS
UNTIL ASSEMBLY COMPLETED.

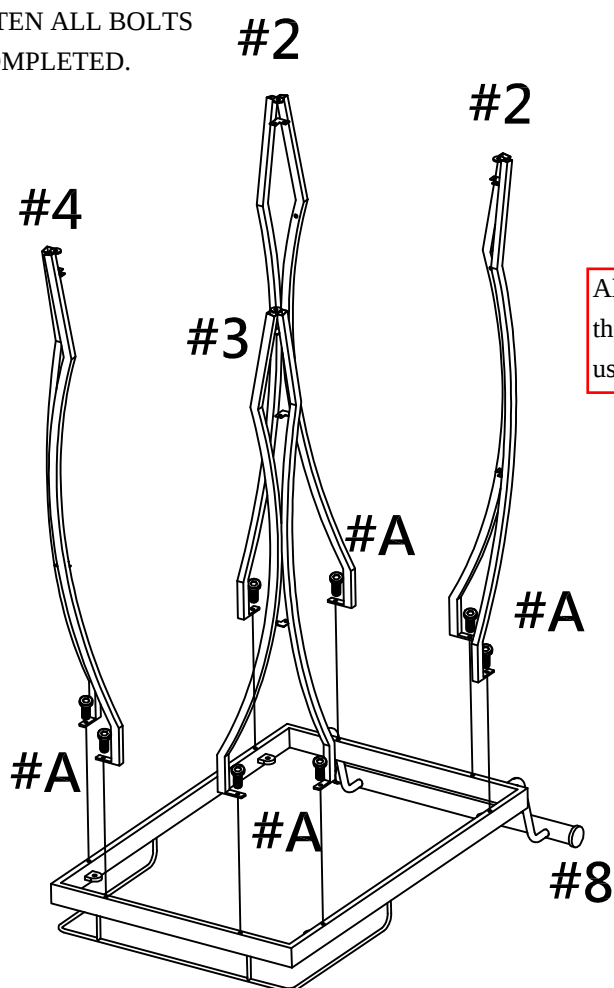

Align legs (#2,3,4) to the holes of
the top frame (#8), then secure by
using bolts (#A).



#A 8pcs

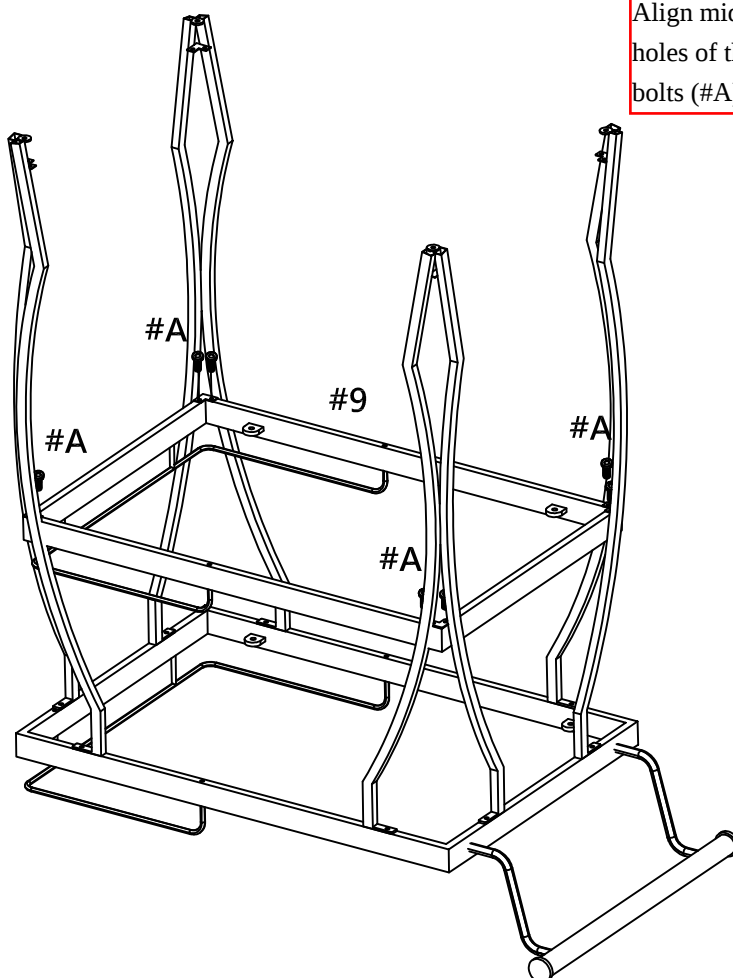 


Align middle shelf frame (#9) to the
holes of the legs, then secure by using
bolts (#A).




Align bottom shelf frame (#10) to the holes of the legs, then secure by using bolts (#A).

#A 8pcs

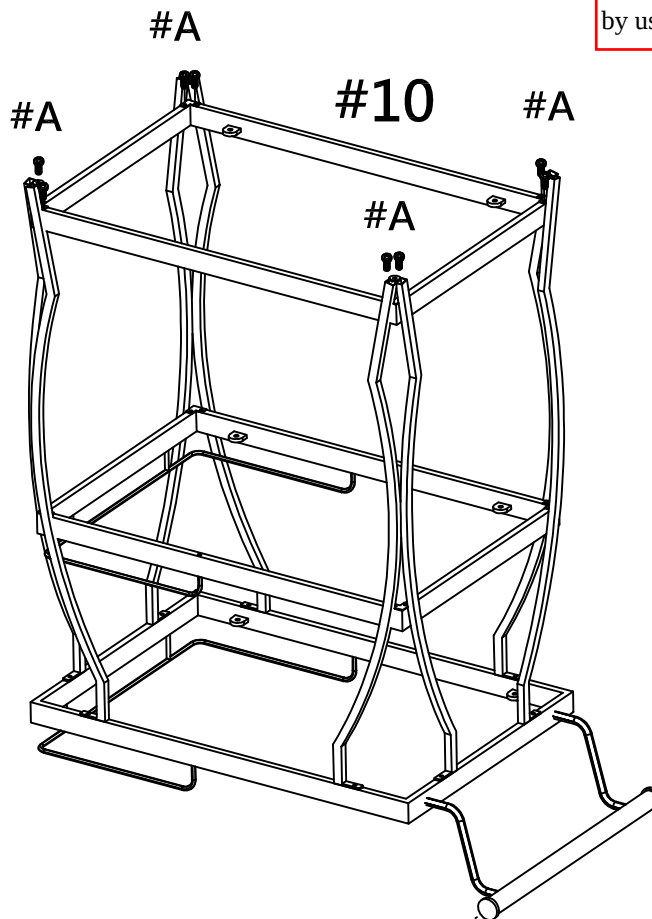 


Align wine frame (#1) to the holes of the legs (#3,4). Secure by using bolts (#C).

#C 2pcs

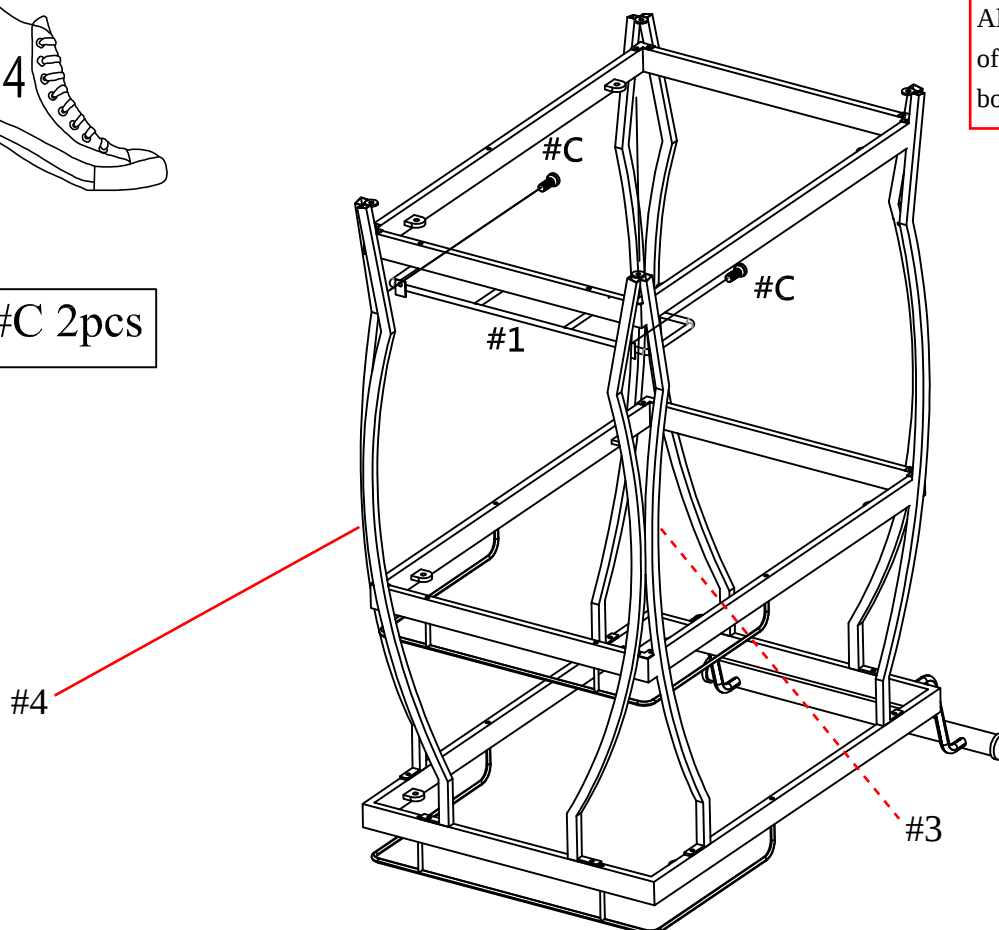 




 Align wheels (#11,12) to the holes of the legs. Make sure it is firmly in place.

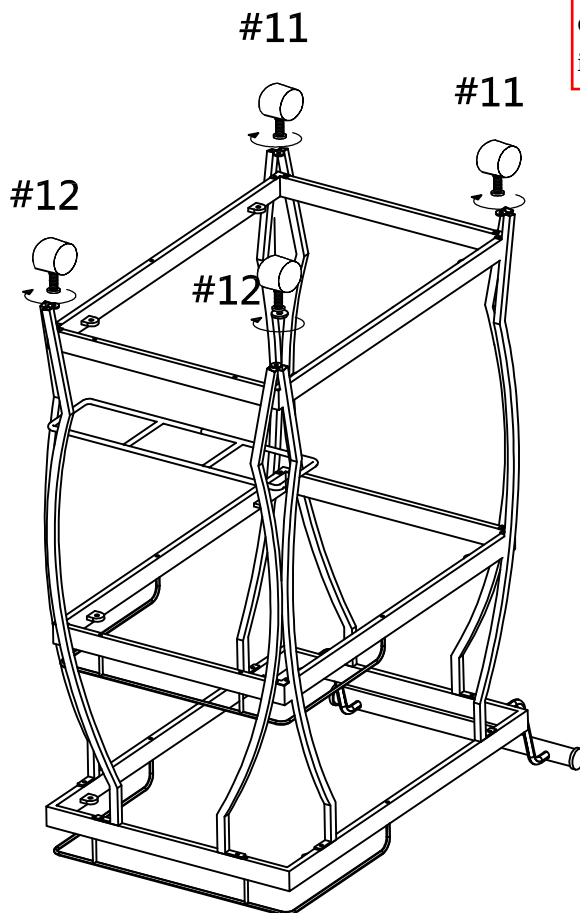

#B 12Pcs

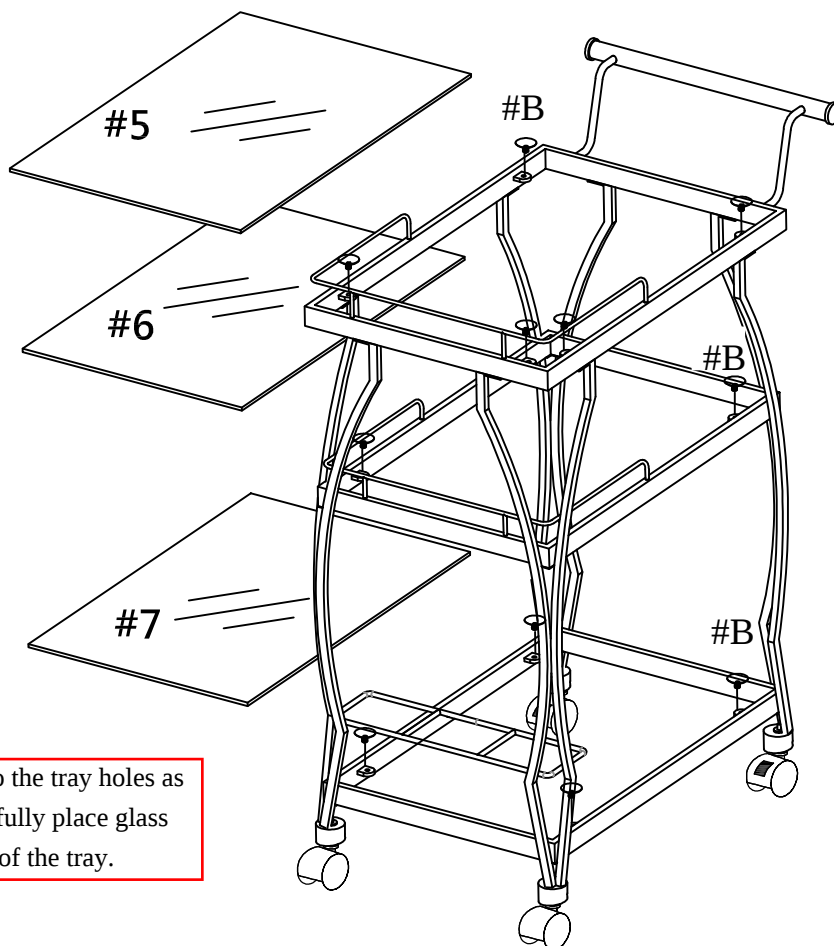 

Attach suction cups (#B) to the tray holes as shown in the diagram. Carefully place glass (#5,6,7) to the suction cups of the tray.