 
 


PARTS AND HARDWARE

 
Avoid using sharp objects such as a knife to cut open packing as you may accidentally damage the upholstery.




A. Right Arm
2x



B. Left Arm
2x



 C. Seat
2x

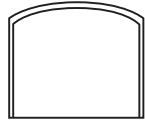

D. Backrest
2x



E. Cushion
2x



 
F. Bolt
24x




G. Washer
24x



H. Table Frame
1x



 I. Table Legs
2x

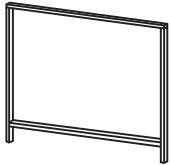


J. Table Side
2x



K. Table Bolt
12x



 L. Table
Washer 12x







M. Allen Key
1x





ASSEMBLY INSTRUCTIONS

Do not fully tighten bolts until assembly is complete.

    
- 1 Assemble the Chair Arms (A) and (B) to the chair Seat (C) and Chair Back (D) using bolts (F) and Washers (G)

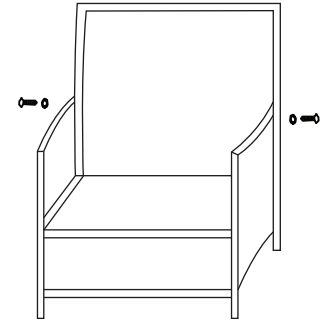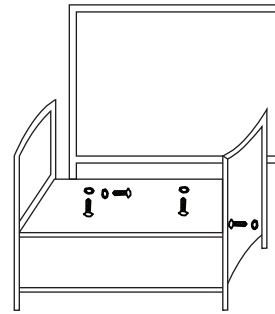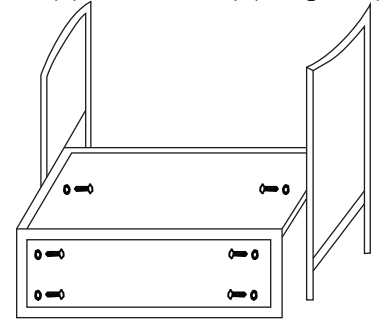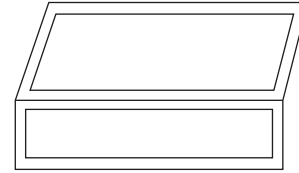

    
- 2 Assemble the table legs (I) to the table Sides (J) to the table frame (H) using bolts (K) and Washers (L)

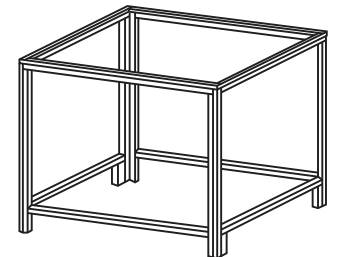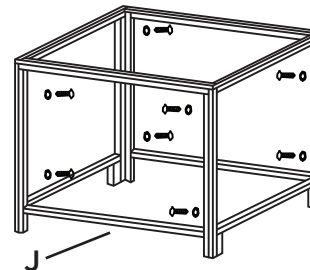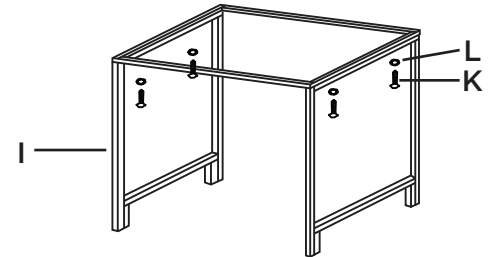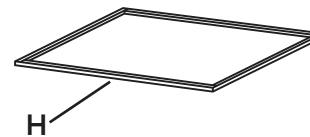

 3 Place seat cushions on chair frames and enjoy your new outdoor dining set.

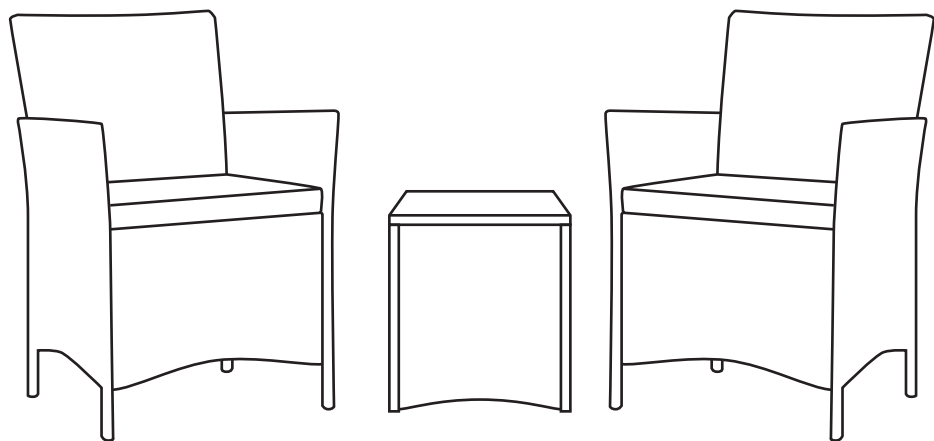

 If you encounter problems like unbalanced/rocking chairs after assembling, please contact our customer service or try to hit it lightly against the floor a few times until it is balanced again.

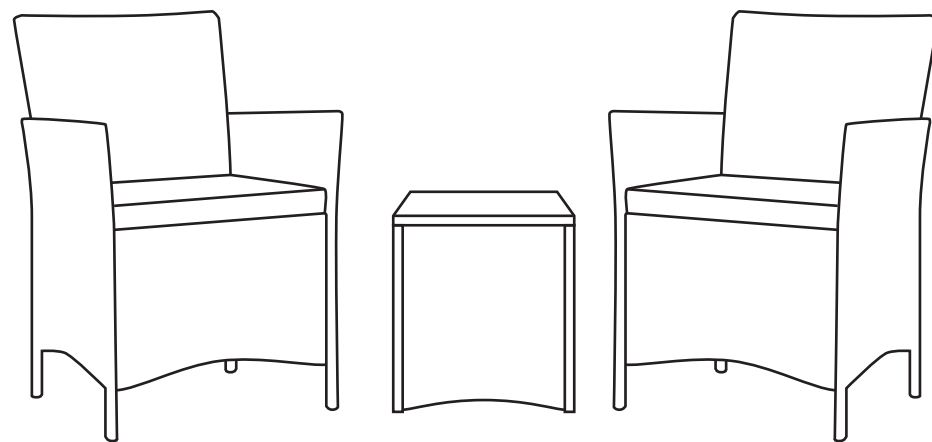

ASSEMBLY INSTRUCTIONS