



Maintenance and storage

- Cut off the power supply before maintenance
- When the body is oily, it must be cleaned up to avoid discoloration and damage.
 - After maintenance and cleaning, put the parts in the packaging box according to the original packaging order, and place them in a dry place for safekeeping.
 - This machine only needs general external cleaning and maintenance
 - Wipe with a neutral detergent and then wipe with a clean soft cloth.
 - Never rinse directly with water.
 - Avoid wiping with thinner, toluene, acid lotion, oil, etc. to avoid discoloration or deterioration.

Common Malfunction and Troubleshooting

Failure phenomenon	Common reasons and problems	Confirmation
Can not turn on	The adapter is not plugged in or has poor contact	Plug in the adapter to ensure good contact
	The on/off button is not pressed	Press the on/off button to make the machine work
Can not shut down	Body damage	Send to maintenance station for repair
	Body damage	Send to maintenance station for repair
There is a abnormal sound when the electric fan starts	Whether the mesh cover is deformed and touches the wind blade	Send to maintenance station for repair

Name and content of harmful substances in products:

Parts name	Hazardous substance or element					
	(Pb)	(Hg)	(Cd)	(Cr (VI))	(PBB)	(PBDE)
Body components	○	○	○	×	×	×
	○	○	○	×	○	○

This form is prepared following SJ/T11364

O: Indicates that the content of the hazardous substance in all homogeneous materials of the part is within the limit requirement of GB/T26572.

X: Indicates that the content of the hazardous substance in at least a certain homogeneous material of the part exceeds the limit requirement of GB/T26572.

Warranty

1.Contact after-sales service, set "Some goods repair, replacement, return responsibility regulations" to enjoy the comprehensive "three guarantees" service. Explain the reasons for return and exchange, and reach an agreement on return and exchange. Users who buy Edon series products will comply with relevant national regulations

2.Warranty principle

- Within 30 days after receipt, if the product cannot be used normally due to quality problems, we shall enjoy free replacement service;
- The product is guaranteed for one year free of charge, and the starting date of the warranty is based on the purchase date of the product;
- When replacing parts or enjoying free maintenance service, the warranty card and purchase voucher picture should be provided to online customer service;
- If there are quality problems, you can take pictures to retain evidence to consult online customer service or call 4008-948-698 to provide after-sales guidance.

3.No return or exchange service is provided in the following cases

- The products without the warranty card and with incomplete accessories (the gifts given with the products must be sent back together and the products are not damagedartificially)
- Damage caused by improper use, storage and maintenance by consumers.
- Damage caused by disassembly and repair not by the company's designated maintenance department
- Damage caused by force majeure.

Warranty card

be sure to fill in the warranty card, please place it in a place where the returning personnel can find it in time, so as not to delay replacement

Order No	
Purchase channel	
Reason for Return	
How do you hope our company to deal with the return and replacement of goods	returned purchase ☐ barter ☐ repair ☐
Details of returned items	
Name	
Address	
Contact information	

Maintenance Records


Maintenance Date	Maintenance Items	Maintenance Unit	Signature of maintenance personnel

mollie

CHARGING FAN


Product instruction manual

A25-TBF-003-6IN-WH

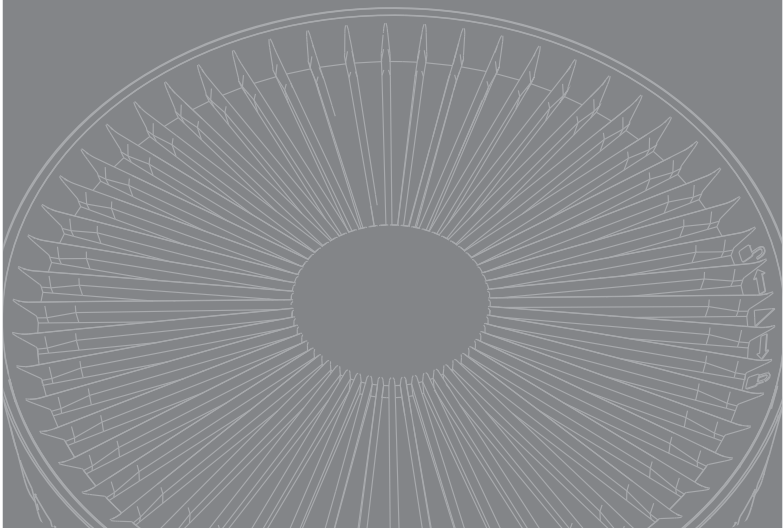


Basic introduction

- The home fans of young people use the space aesthetics of young people to complete a cool experience.
- The unprecedented elegant appearance of E813 allows E813 to feel the beauty of space design no matter where it is placed indoors.
- All-round streamlined appearance design, elegant curve never seen before.
- The curve triggers your desire to use, use your body to feel the coolness that belongs to you.
- The soft natural wind brings you comfort and admiration from the heart.

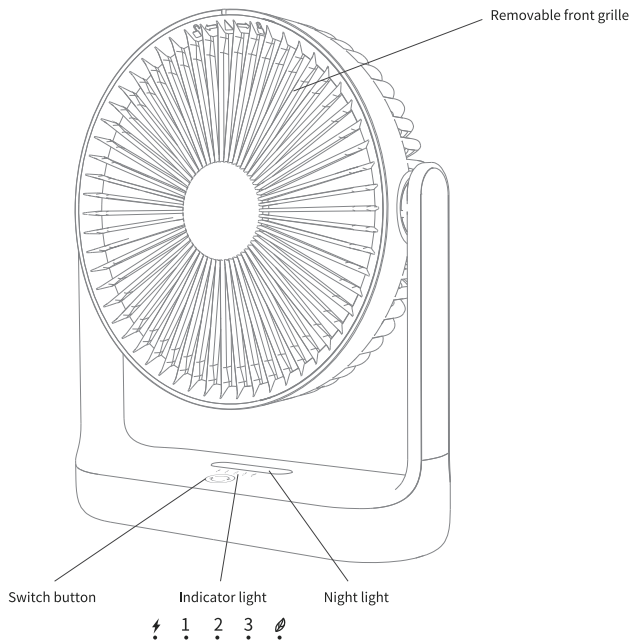

External dimension


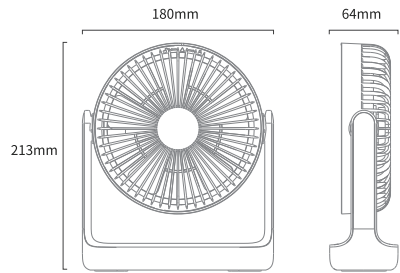


Technical parameter

Product name	CHARGING FAN				
Product model	A25-TBF-003-6IN-WH	Charging time	4~6h		
Rated voltage	3.7V =	Operating hours	2~12h		
Rated power	5W	Product net weight	380±20g		
Gear	Four gear shift	Charging input	5V=0.8A		
Execution standard	GB 4706.1-2005	GB 4706.27-2008	GB 4343.1-2018	GB 17625.1-2012	

Charging instructions

- When the fan is out of power, ⚡ indicator light flashes red, indicating that the fan is out of power and needs to be charged.
- Connect the electric fan to the output DC 5V charger for charging. When charging, ⚡ indicator light will be red. When the power is too low, the maximum air volume is the second gear air volume. When the charging reaches 80%, the full function returns to normal.
- After fully charged, ⚡ indicator light will stay on white.

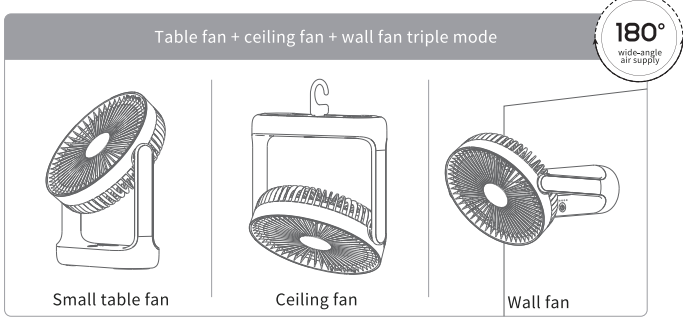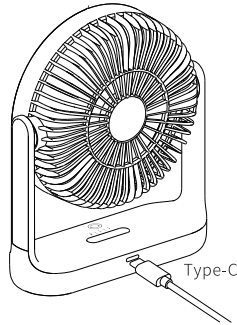


Instructions

Switch button

- Press the switch button once, the fan will turn on the first speed, and the indicator light under 1 will be white;
- Press the switch button twice, the fan turns on the second gear wind speed, and the indicator light under 2 will be white;
- Press the switch button three times, the fan turns on the third gear wind speed, and the indicator light under 3 will be white;
- Press the switch button four times, the fan enters the natural wind mode, the indicator light under ⚡ is white, and the wind speed will be strong and weak at this time;
- Press the switch button five times to turn off the fan; press the power button again to turn on the fan again and enter the first gear, and so on;
- Press and hold for 2 seconds in any gear to turn on/off the night light.

Indicator light

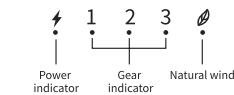

Matters needing attention

- Please make sure that the input voltage is consistent before use.
- In order to avoid electric shock, no part should be in contact with water.
- There can be no objects blocking the air inlet/outlet.
- Please do not give the elderly, infants or people with mobility impairments direct blows in a fixed direction for a long time to avoid discomfort.
- Please don't put the fan in the bathroom, humid and very high temperature place, so as not to damage the product.
- Keep the fan away from soft objects such as curtains and door curtains to avoid getting caught in the fan.
- If the power cord or product is found to be damaged or unsafe, please suspend use and contact the product's repair center for inspection and repair. Do not repair and inspect by yourself.
- Please unplug the power plug before cleaning, repairing or moving the product.
- When the fan is not used for a long time, please unplug the power plug to avoid shortening the life of the product and causing accidents or dangers in the standby state for a long time.
- Please do not let children touch or play with this product.
- Products are kept clean and maintained regularly.
- Please do not allow people (including children) who are physically disabled, mentally unsound, or inexperienced with the product to use this product alone. If you need to use it, you must use it under the supervision of a responsible adult.
- Do not disassemble the product by yourself to avoid damage to the product and electric , shock!
- Do not put fingers, other body parts or debris into the air inlet/outlet to avoid injury and damage to the product.
- Do not put wet towels or wet wipes on the product, to avoid electric leakage and electric shock accidents.
- Please unplug the power plug when cleaning the product to avoid electric shock accidents.
- Before removing the protective casing, make sure that the fan is disconnected from the power supply to avoid accidentally touching the button, and store after putting on an anti-touch sticker.

Cleaning and storage

- Before cleaning, maintaining or moving the product, the product must be turned off and then the power plug must be unplugged.
- The fan must be completely stopped before cleaning to avoid injury.
- Do not immerse the power cord or main unit in water for cleaning or wash it under a faucet, and the internal parts of the fan must not be wetted.
- Do not use detergent, wire brush, gasoline, alcohol, vinegar or other volatile corrosive liquids to clean the product to avoid damage to the product.
- Clean the surface of the fan with a slightly damp cloth.
- After cleaning, the product must be completely dry before it can be connected to the power supply.
- If you will not use it for a long time, please store the product back in the box and store it in a dry, cool and safe place.