


ASSEMBLY TIPS

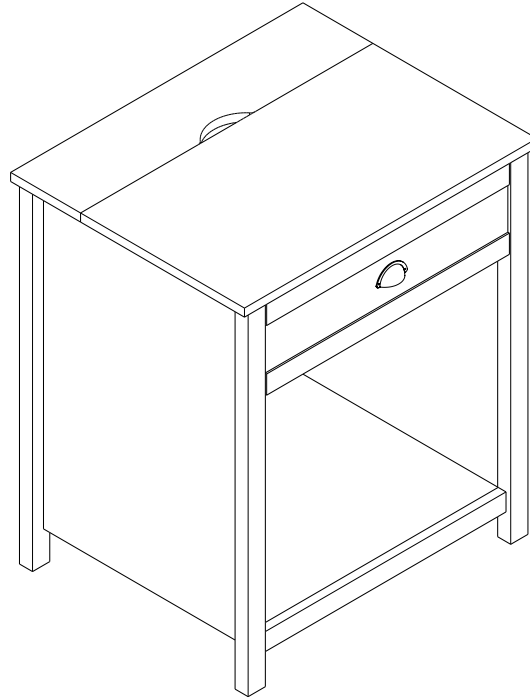

WARNING:


- Do not allow children to climb on unit
- Serious or fatal crushing injuries can occur from furniture tip-over. To prevent this furniture from tipping over, it must be permanently fixed to the wall. Fixing devices for the wall are not included since different wall materials require different types of fixing devices. Use fixing devices suitable for the walls in your home. For advice on suitable fixing systems, contact your local specialized dealer
- Avoid sharp objects or corrosive chemicals to prevent damage to the product
- During assembly, keep parts and packaging materials away from children and pets as there could be potential injury and choking hazards

Caution:

1. This product is designed for home use and not intended for commercial use.
2. This product contains small components. Please ensure that they are kept away from small children.
3. Be careful when using power tools to assemble your furniture. Power tools may strip or damage the parts.


IDENTIFY PARTS

One unit per box

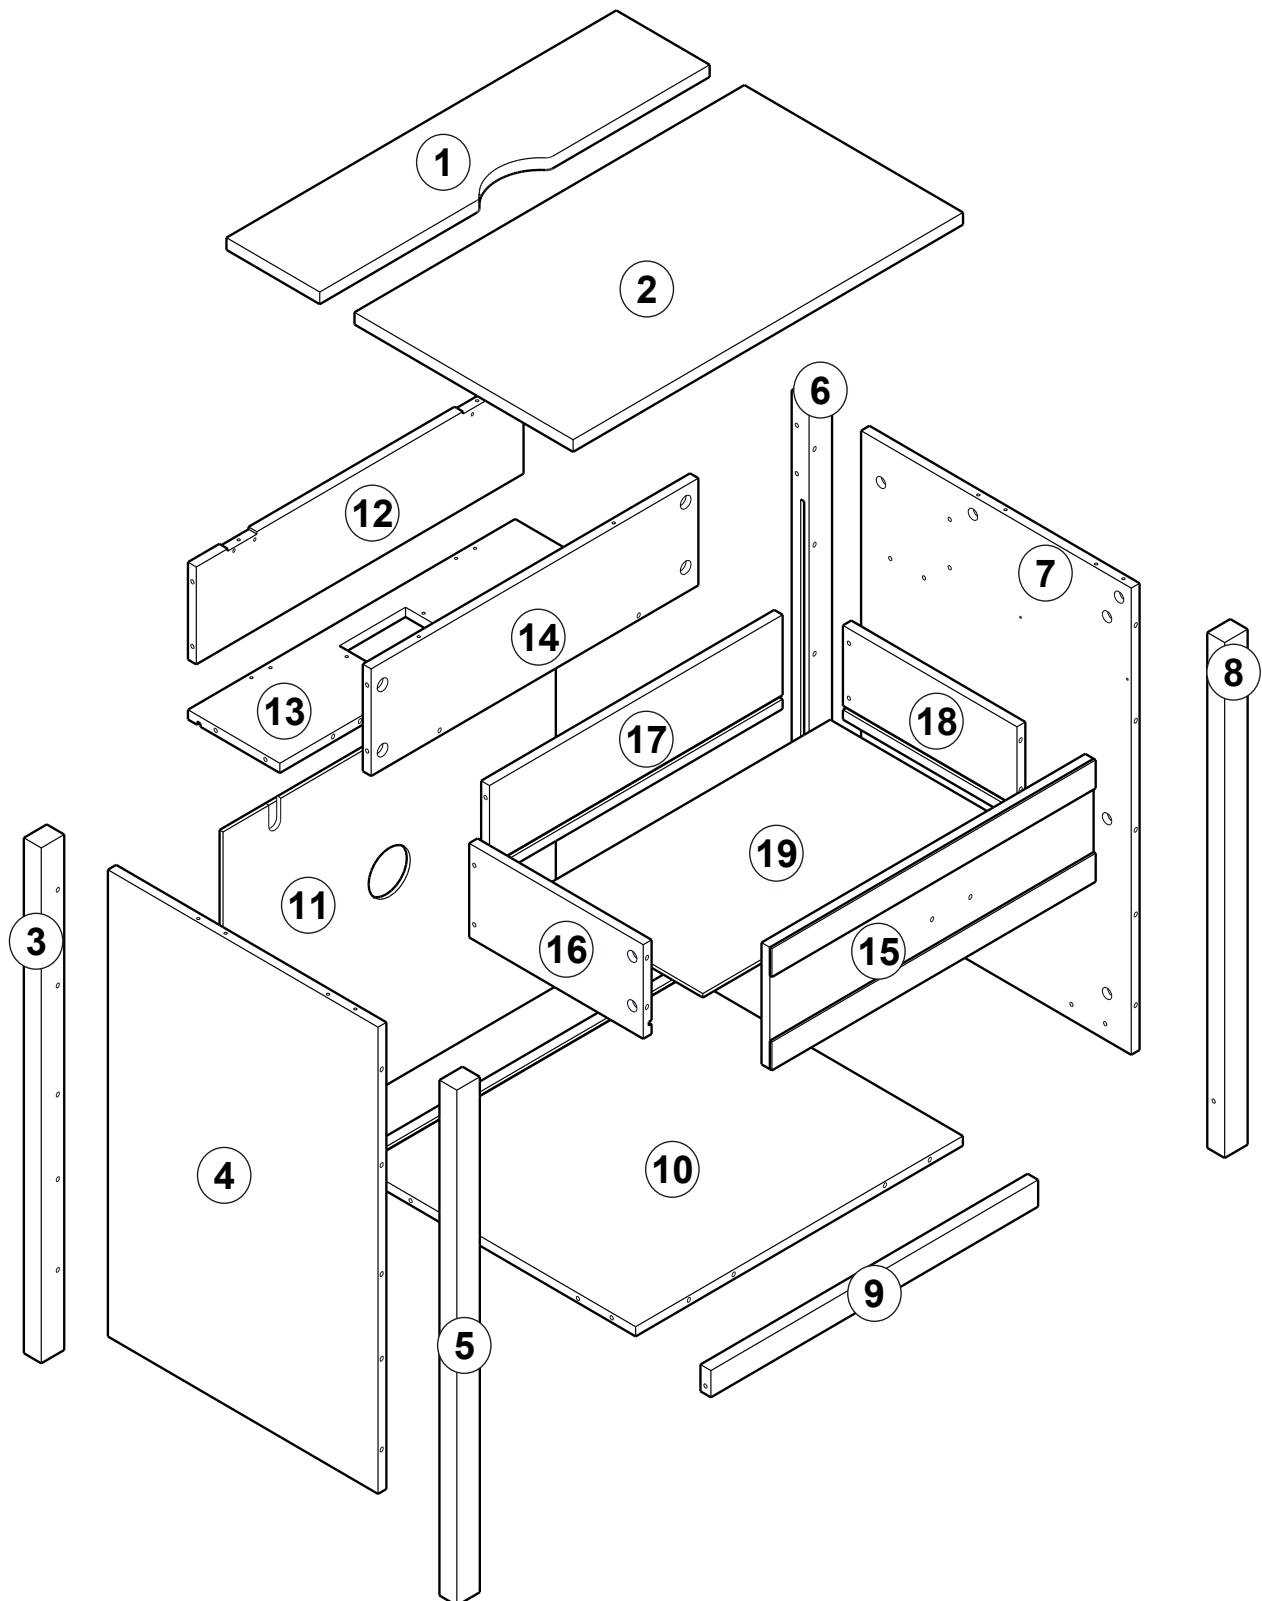

COMPONENTS


1

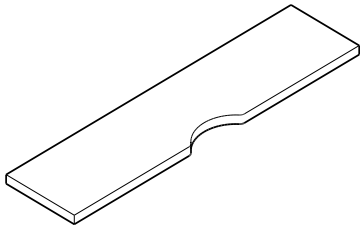

560x134x15mm

Top Panel x1


2

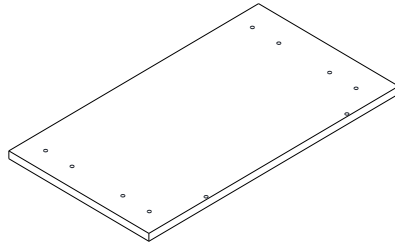

560x314x15mm

Top Panel x1


3

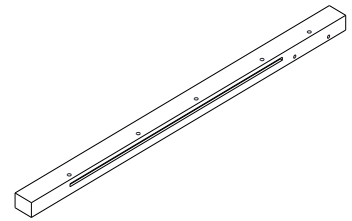

635x33x25mm

Leg Panel x1


4

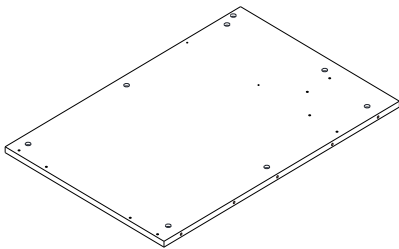

575x388x12mm

Left Side Panel x1


5

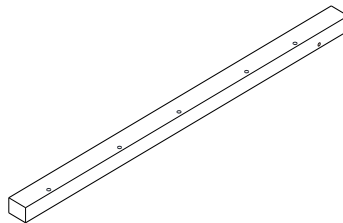

635x33x25mm

Leg Panel x1


6

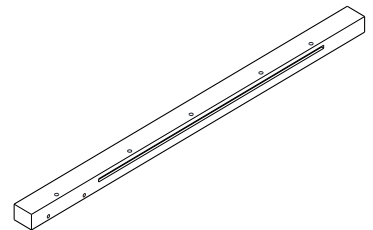

635x33x25mm

Leg Panel x1


7

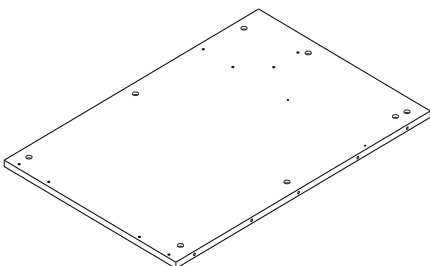

575x388x12mm

Right Side Panel x1


8

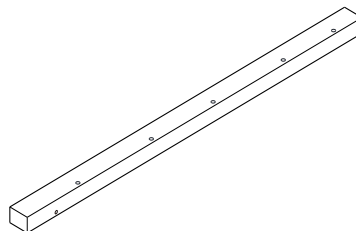

635x33x25mm

Leg Panel x1

9

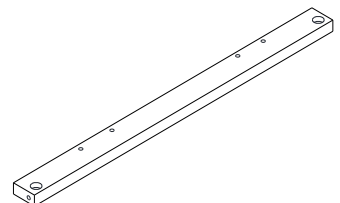


470x33x15mm

Bottom pull strips x1

COMPONENTS


10

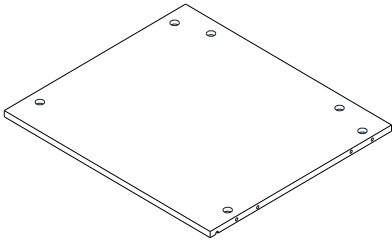

470x414x12mm

Bottom Panel x1


11

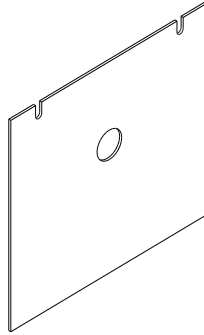

425x478x5mm

Back Panel x1


12

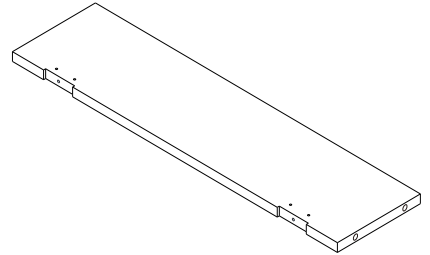

470x120x12mm

Back Panel x1


13

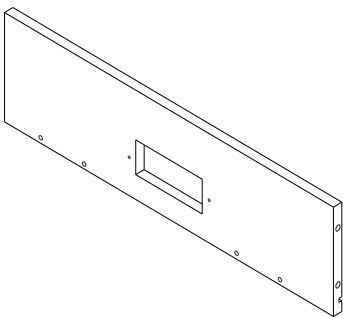

470x132x12mm

Clapboard x1


14

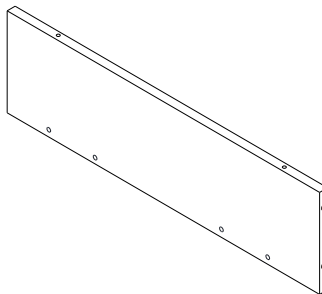

470x132x12mm

Clapboard x1


15

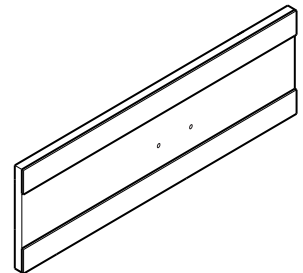

465x150x15mm

Drawer Left Side Panel x1


16

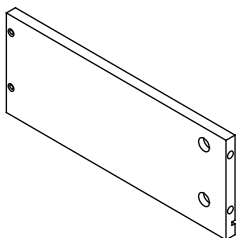

250x116x12mm

Drawer Left Side Panel x1


17

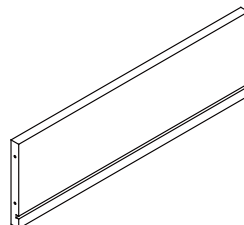

421x116x12mm

Drawer Back Panel x1

18

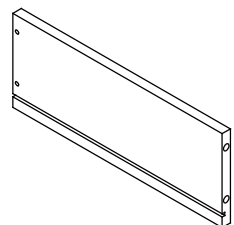


250x116x12mm

Drawer Right Side Panel x1

COMPONENTS

19

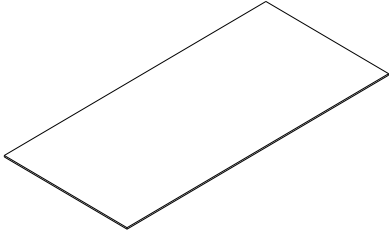

429x246x5

Drawer Bottom Panel x1

COMPONENTS

A



+1(spare)

M6x35mm

Cam Bolt x40

B




+1(spare)

M15x10mm

Cam Lock x40

C

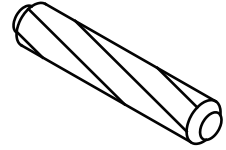


+1(spare)

M6x30mm

Wood Dowel x24

 D




+1(spare)

M3x12mm

Screw x18

E

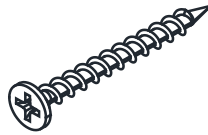


+1(spare)

M4x35mm


Screw x8

F

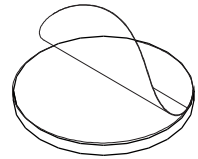


Foot Pad x4

G

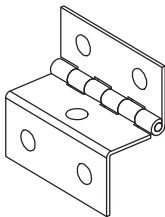

Hinge x2

 
H



M3.5x12mm


Screw x4

I

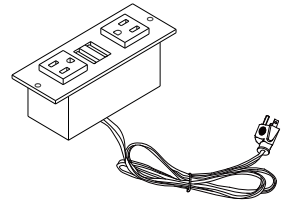


Sockets x1

 J




Mending Wedge & Screw x4

K

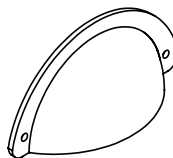

Knob x1


L

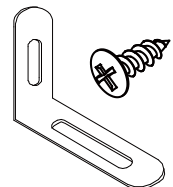

L-Shaped Bracket & Screwx2


COMPONENTS

M

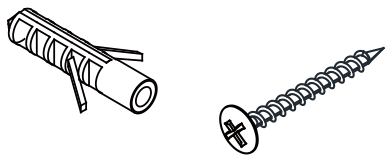

Drawer Right slide x2


DR

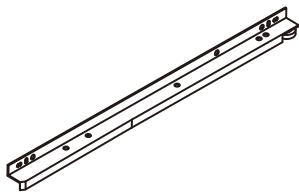

M250

Drawer Right slide x1


DL

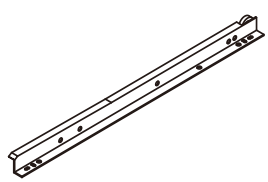

M250

Drawer Left slide x1


CR

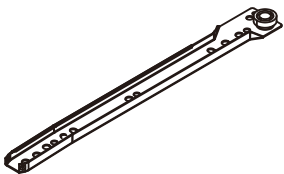

M250

Cabinet Right Slide x1

CL

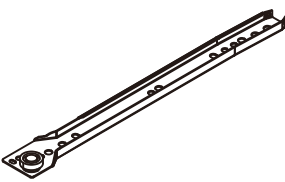

M250

Cabinet left Slide x1







ASSEMBLY STEPS

A x14



STEP 1

Screw the cam bolt (A) into the Panel (3,6,8,5,9).

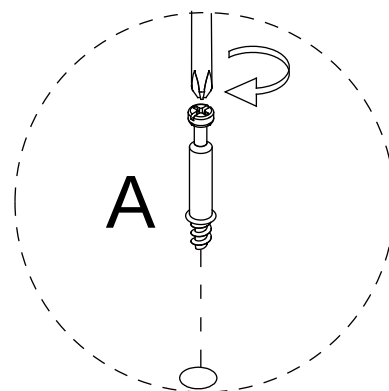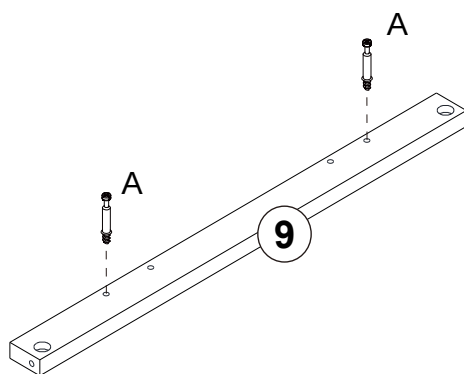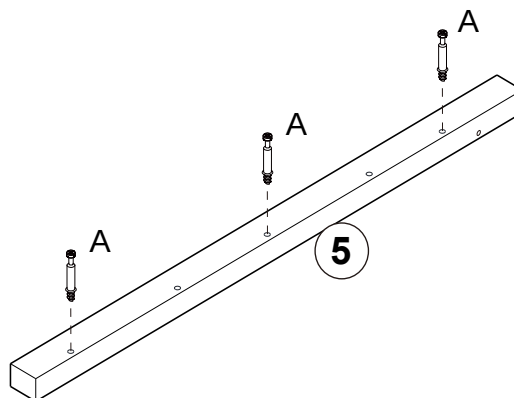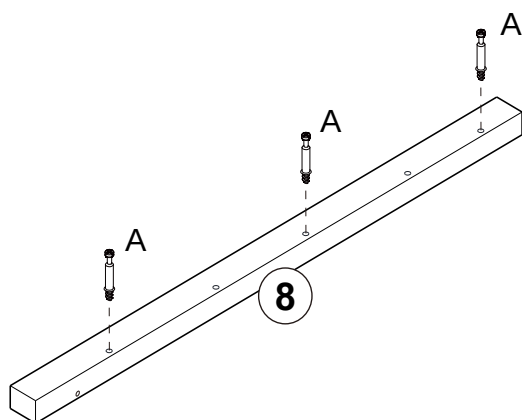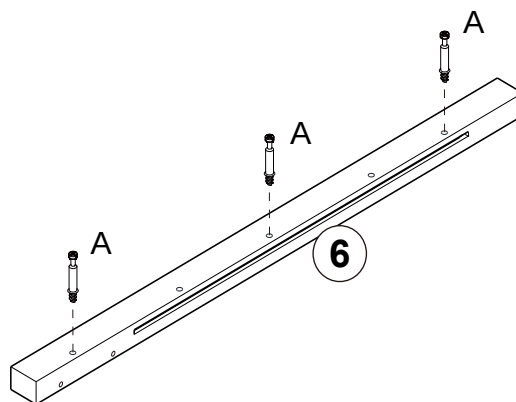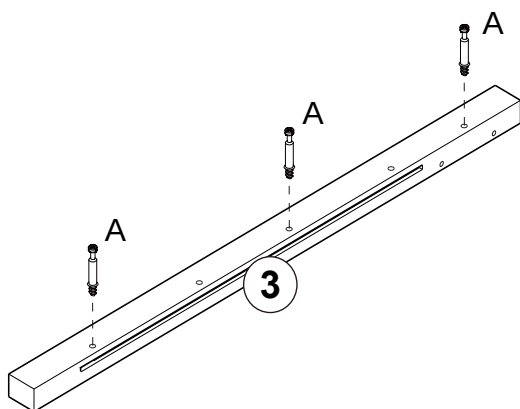

ASSEMBLY STEPS

B x 6





C x 4



STEP 2

Use Wood Dowel (C) to secure Panel (6) and (8) to Panel (7), and then tighten with Cam Lock (B).

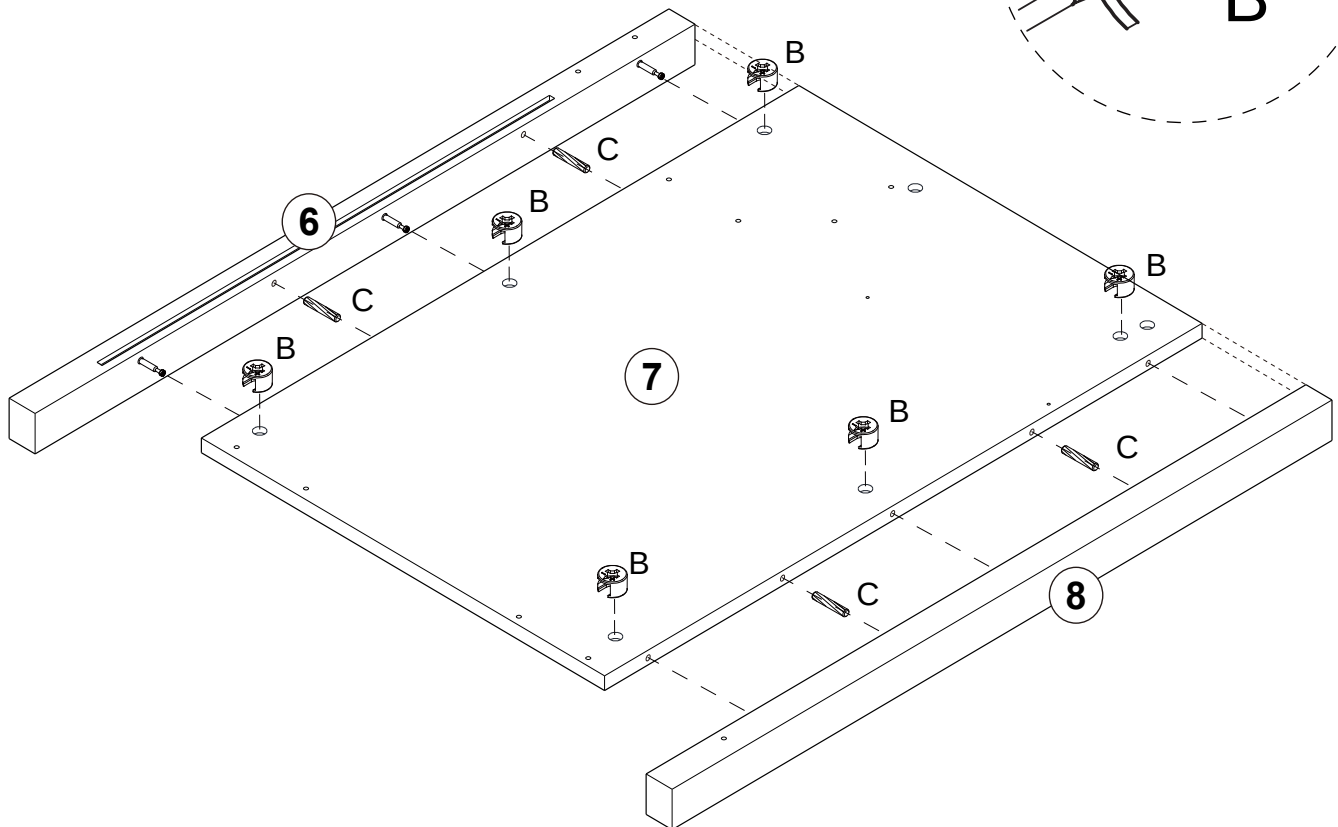
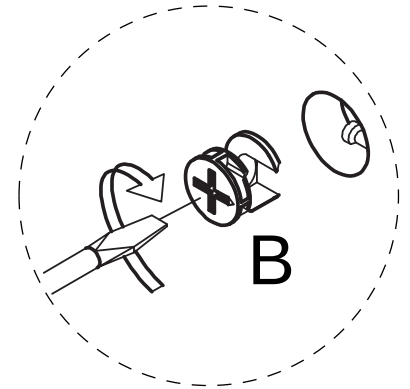


ASSEMBLY STEPS

A x 9		D x 2	 M3x12	CR x 1	
-------	---	-------	---	--------	--

STEP 3

1. Screw the Cam Bolt (A) into the assembled Panel (7).
2. Align the holes on the Drawer Slide (CR) with the holes on the assembled Panel (7), and then fix the Drawer Slide on Panel (7) with Screw (D).

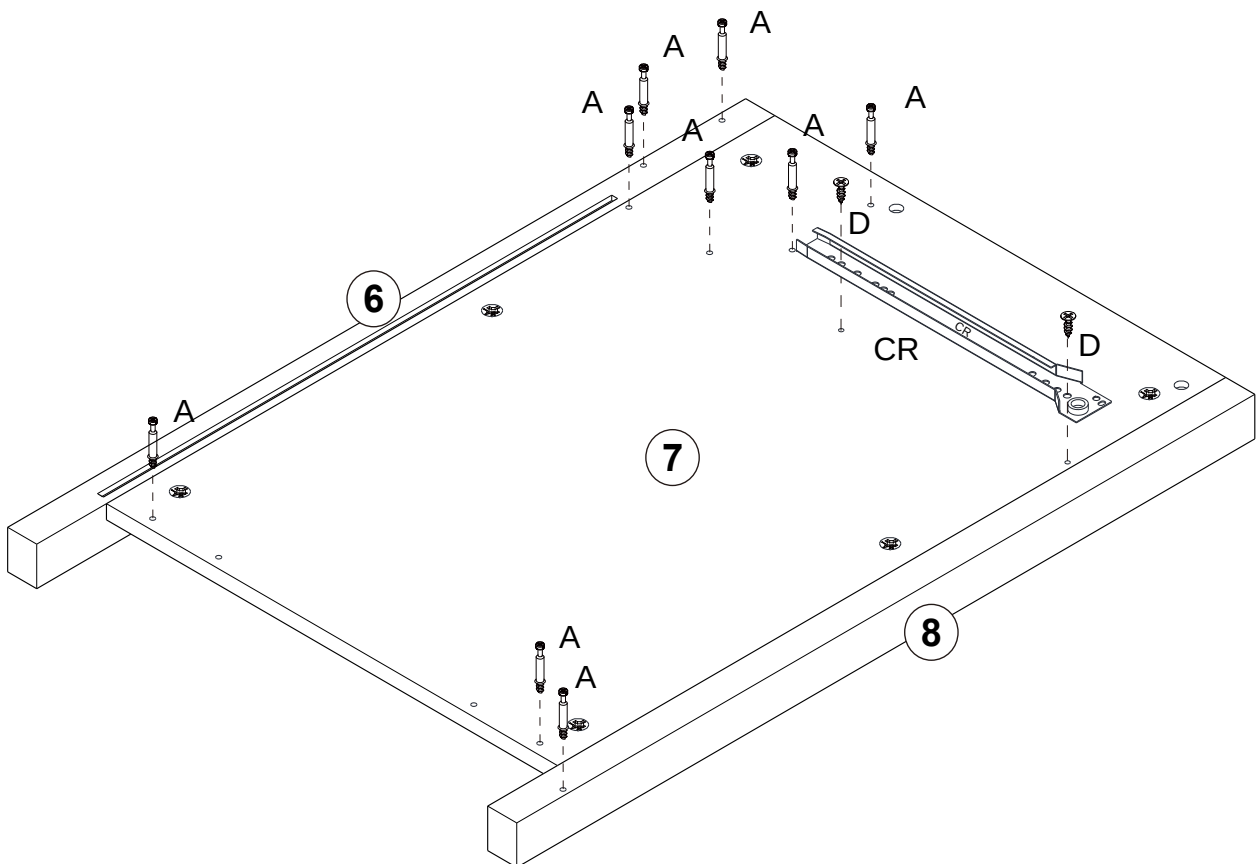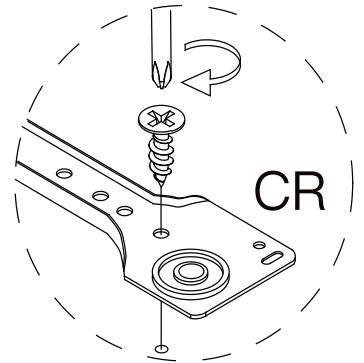

ASSEMBLY STEPS

B x 6




C x 4



STEP 4

Use Wood Dowel (C) to secure Panel (5) and (3) to Panel (4), and then tighten with Cam Lock (B).

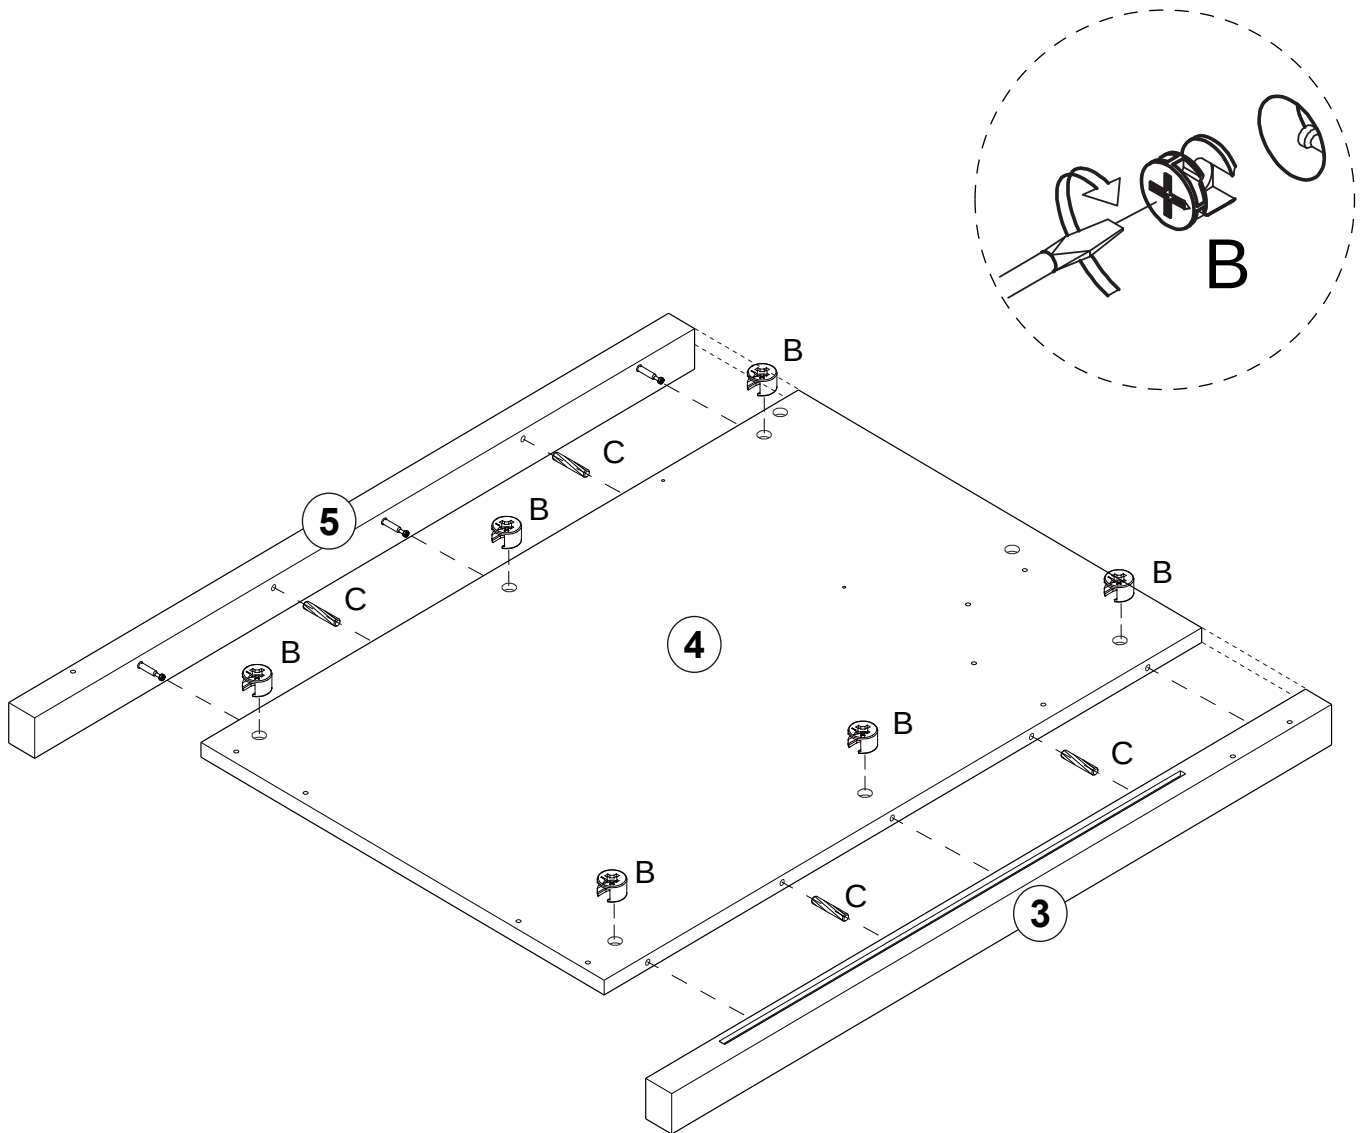


ASSEMBLY STEPS

A x 9		D x 2	 M3x12	CL x 1	
-------	---	-------	---	--------	--

STEP 5

1. Screw the Cam Bolt (A) into the assembled Panel (4).
2. Align the holes on the Drawer Slide (CL) with the holes on the assembled Panel (4), and then fix the Drawer Slide on Panel (4) with Screw (D).

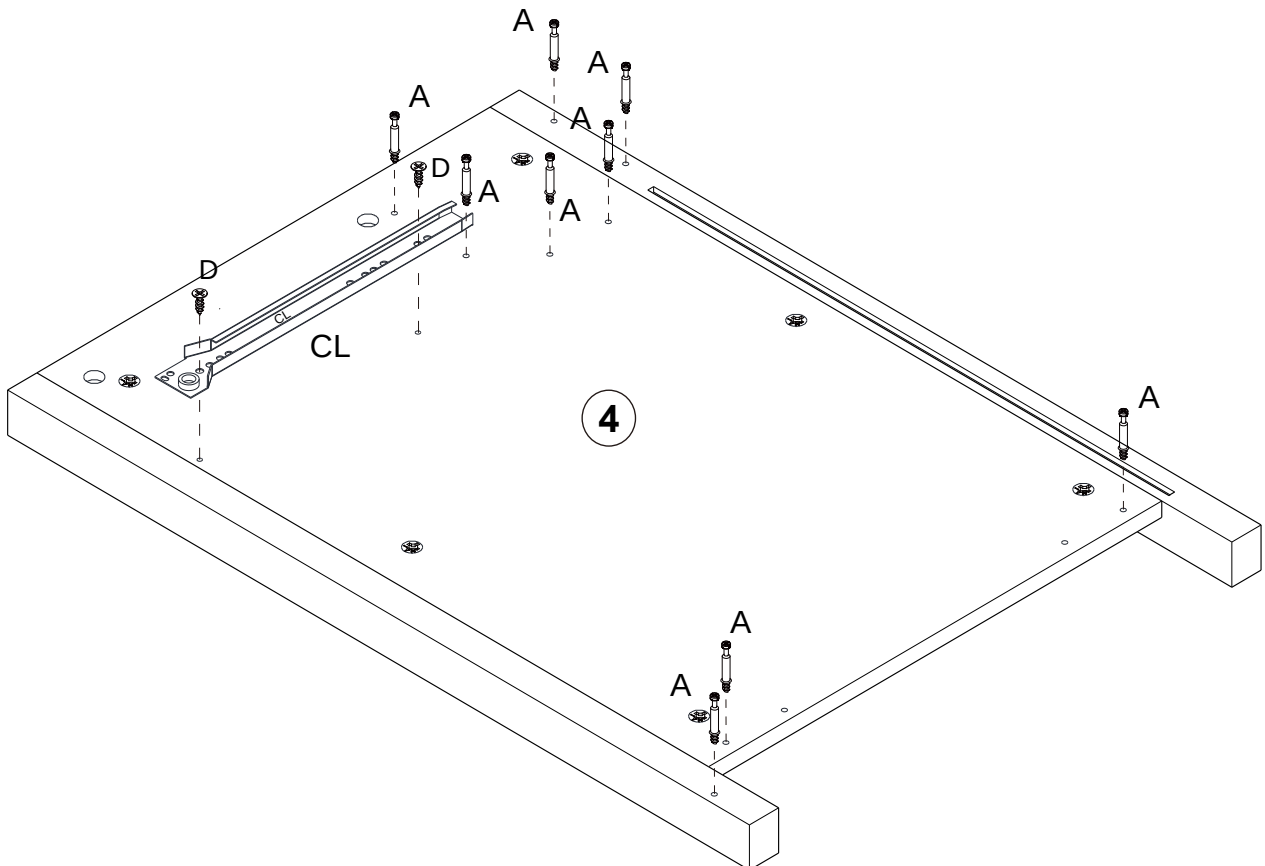


ASSEMBLY STEPS

E x 2




 C x 2



STEP 6

Install the Panel (12,13) with Wood Dowel (C) and Connect the Panels with Screw (E).

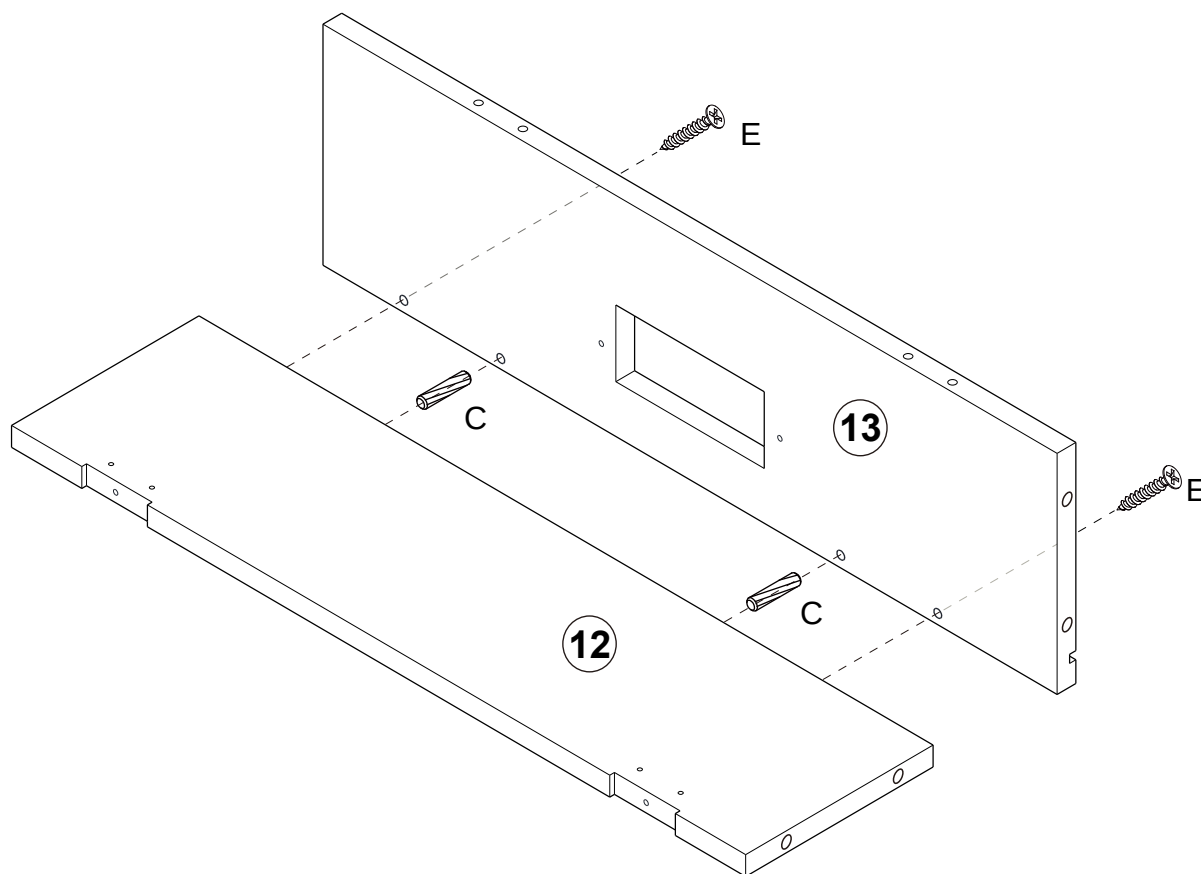


ASSEMBLY STEPS

D x 6	 M3x12	G x 2	
-------	---	-------	---


STEP 7

Use Screws (D) to secure the Hinge (G) to Panel (12).

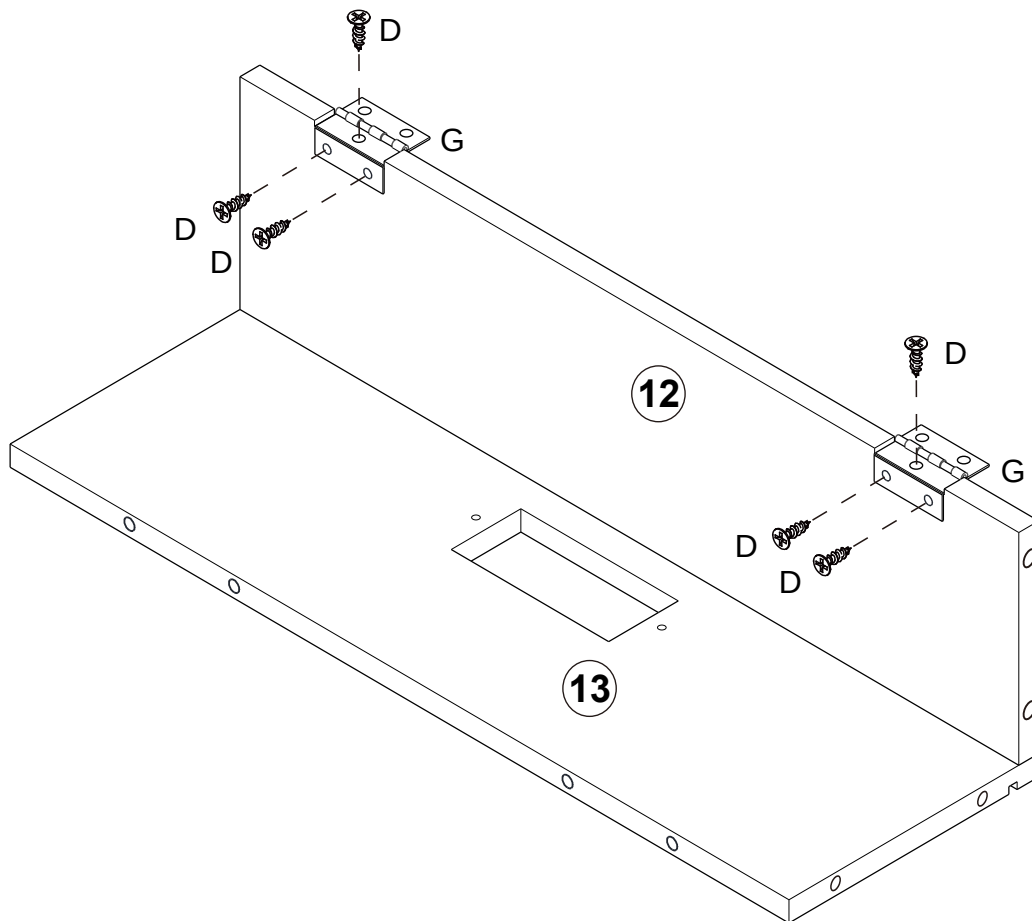


ASSEMBLY STEPS

 E x 2




C x 2

 

STEP 8

Install the Panel (14,13) with Wood Dowel (C) and Connect the panels with Screw (E).

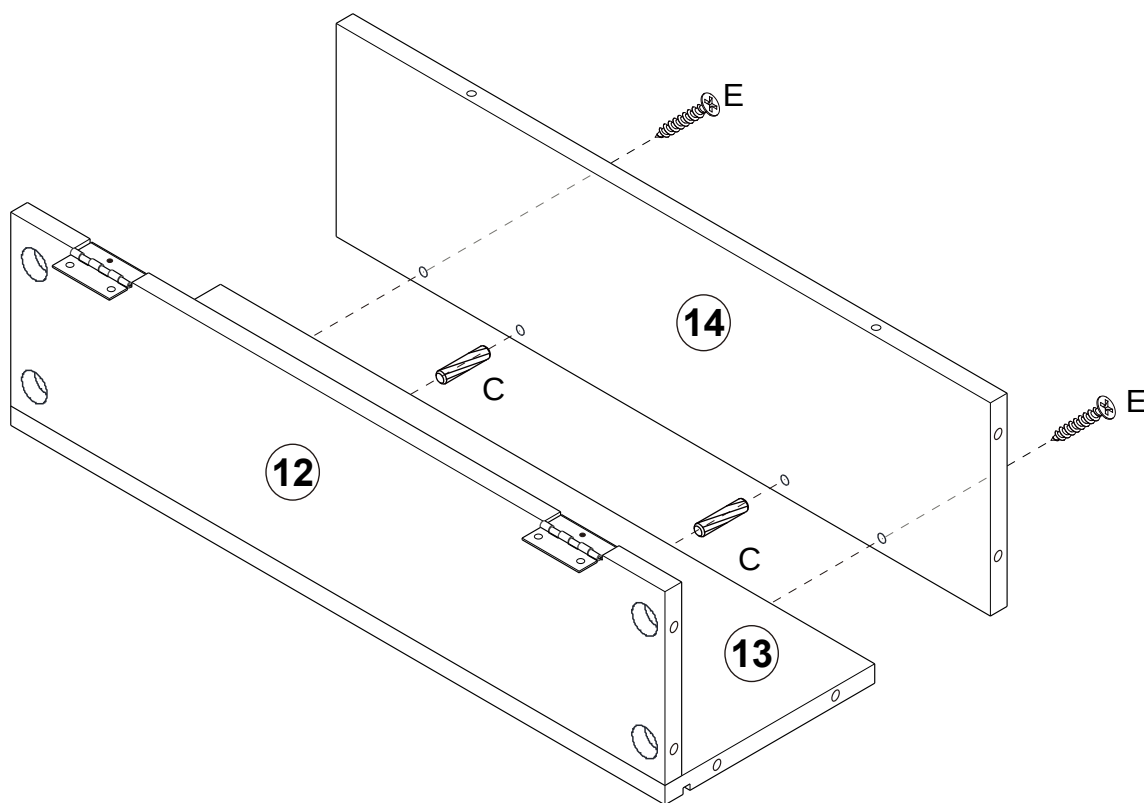

ASSEMBLY STEPS

B x 2




C x 2



STEP 9

Use Wood Dowel (C) to secure Panel (9) to Panel (10), and then tighten with Cam Lock (B).

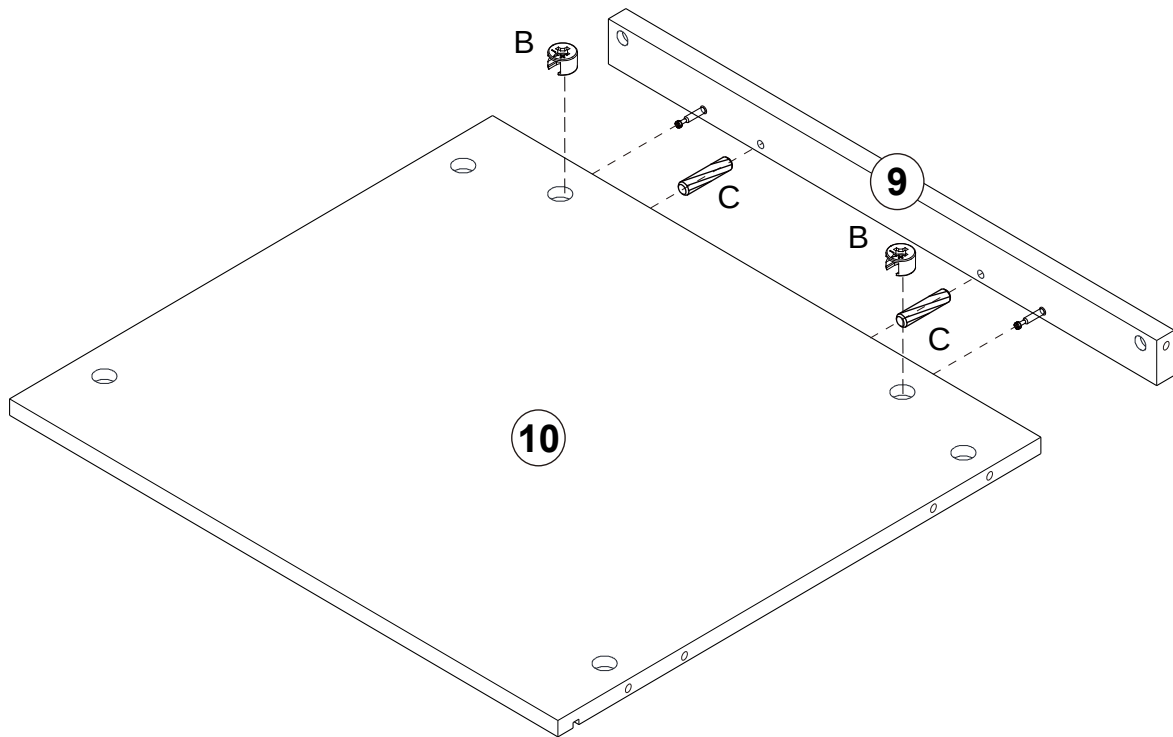

ASSEMBLY STEPS

B x 9




C x 2



STEP 10


Use Wood Dowel (C) to secure Panel (10) and 9 to Panel (5), and connect the Panels (12,13,14,10,9) with Cam Lock (B).

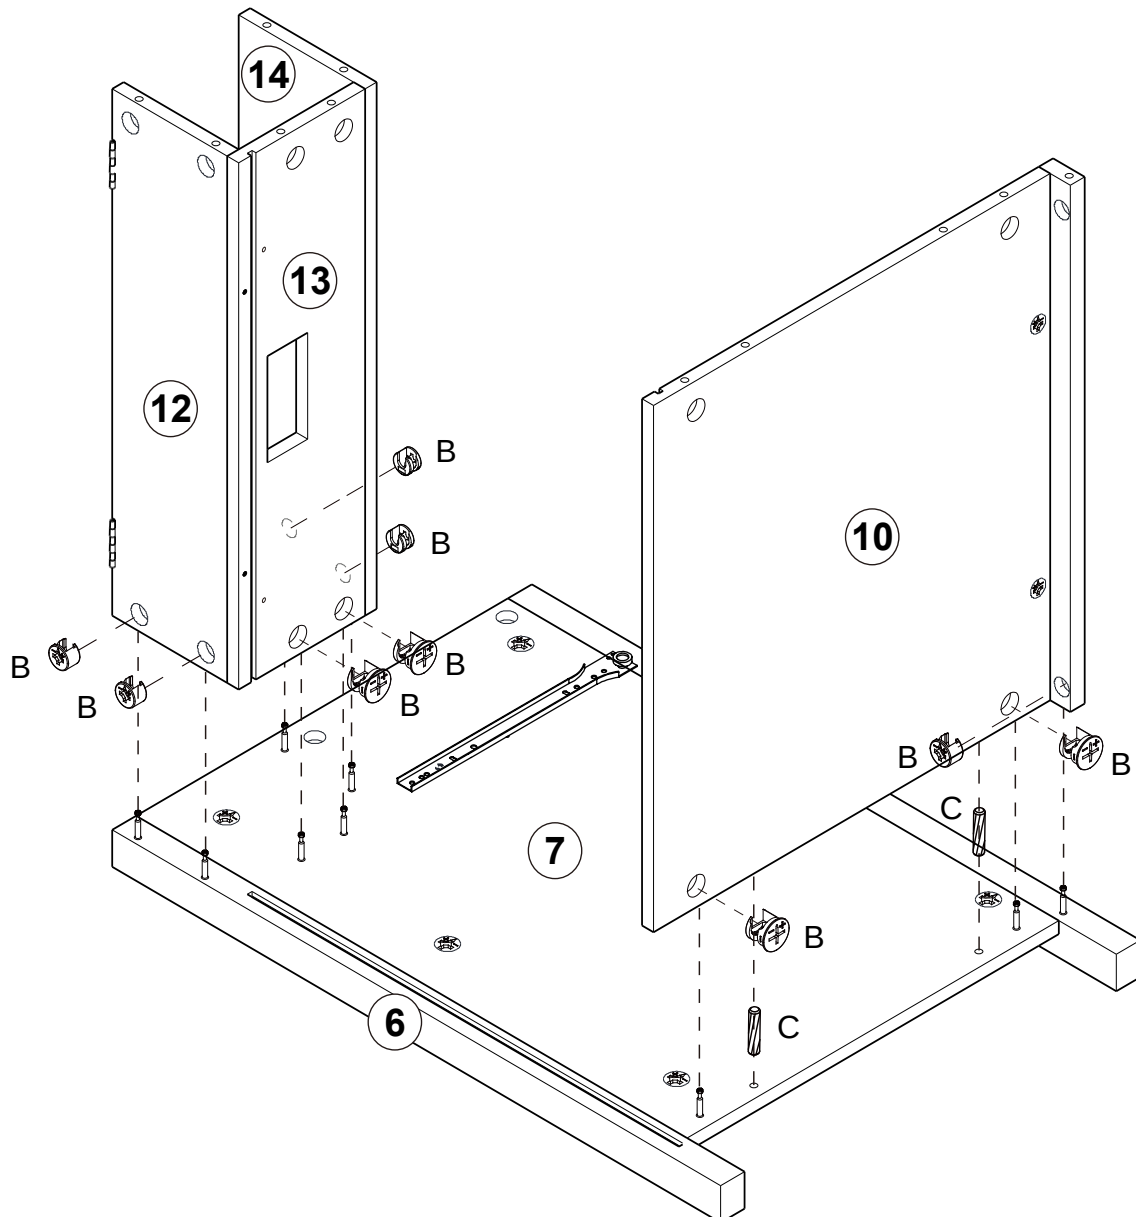

ASSEMBLY STEPS

STEP 11

Insert the Panel (11) along the groove.

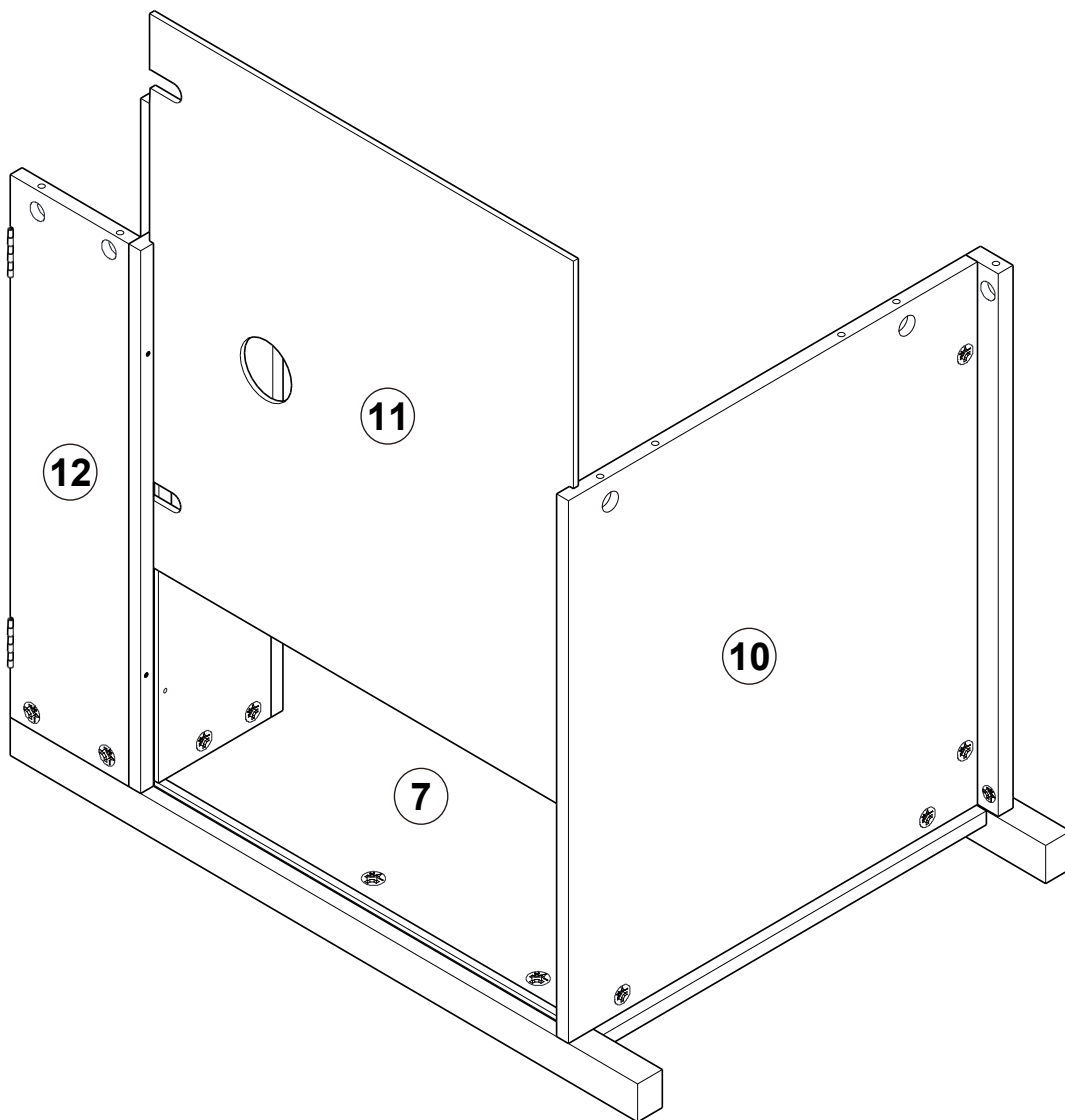


ASSEMBLY STEPS

L x 2



STEP 12

Fix the L-Shaped Bracket (L) on the Panel (13) with Screw (L).

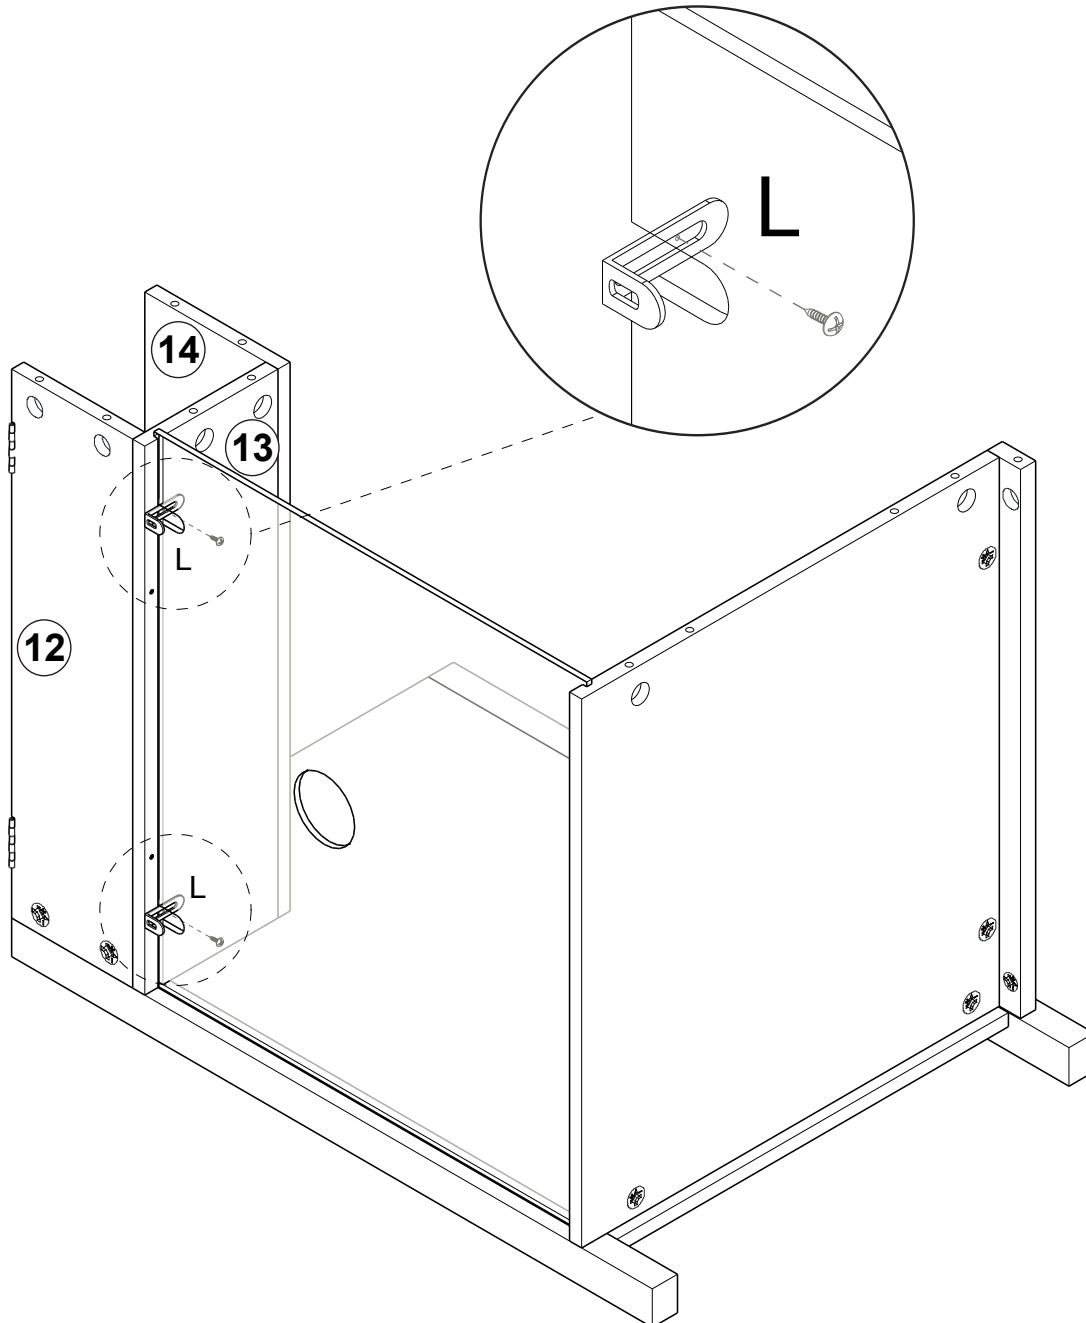

ASSEMBLY STEPS

B x 9



C x 2




F x 4



STEP 13

1. Use Wood Dowel (C) to secure Panel (3) and (5) to Panel (4), and connect the Panels (12,13,14,10,9) with Cam Lock (B).
2. Stick the Foot Pad (F) on the bottom of legs (3,5,6,8).

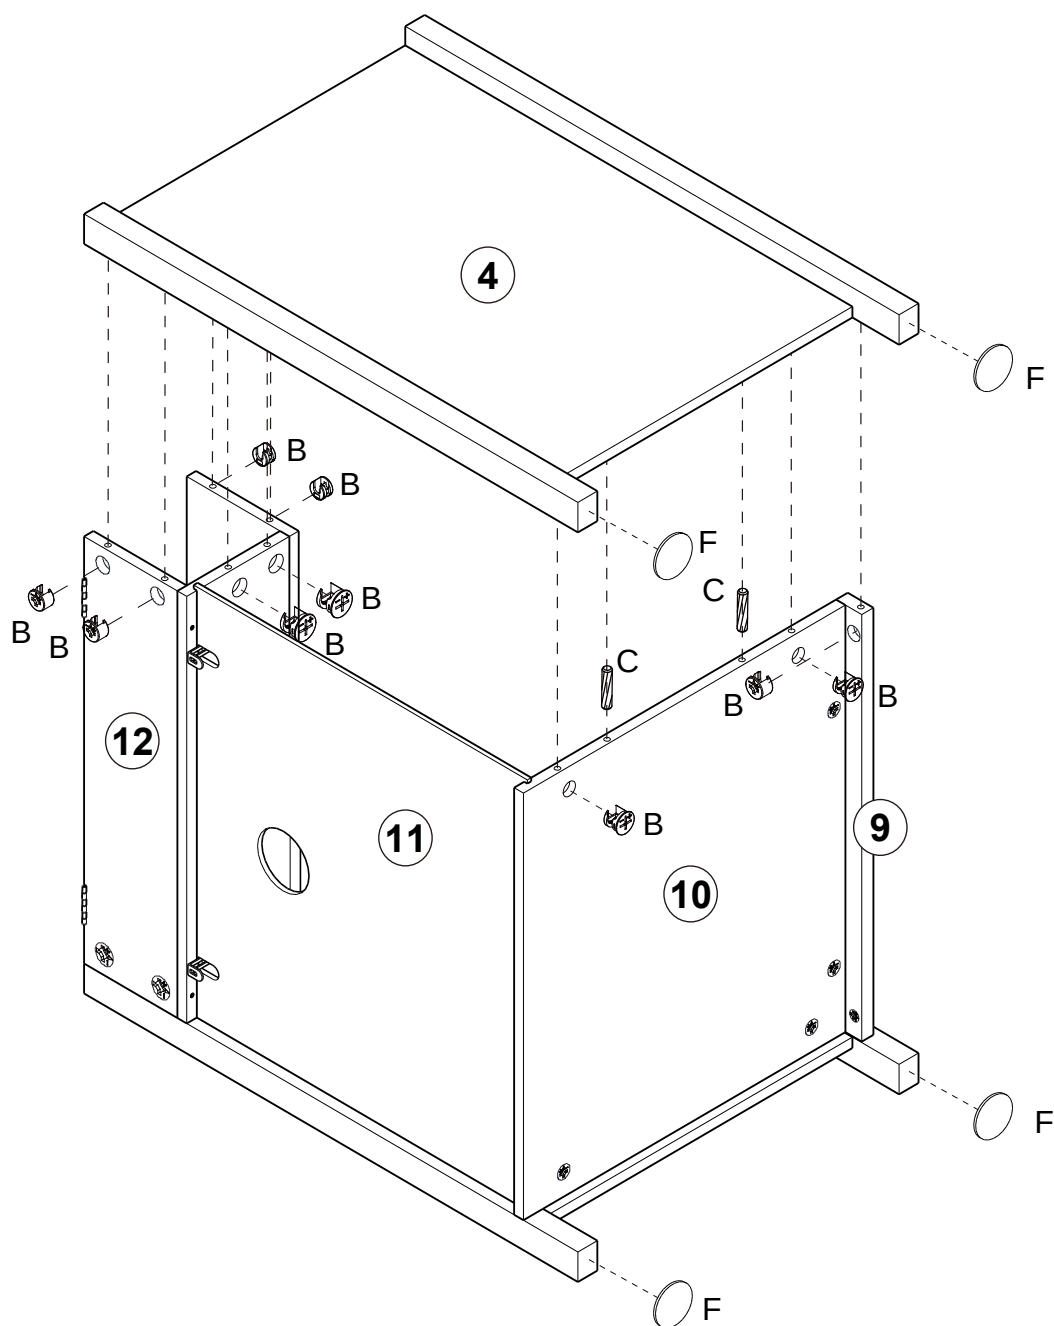


ASSEMBLY STEPS

A x 4



STEP 14

Screw the Cam Bolt (A) into the Panel (2).

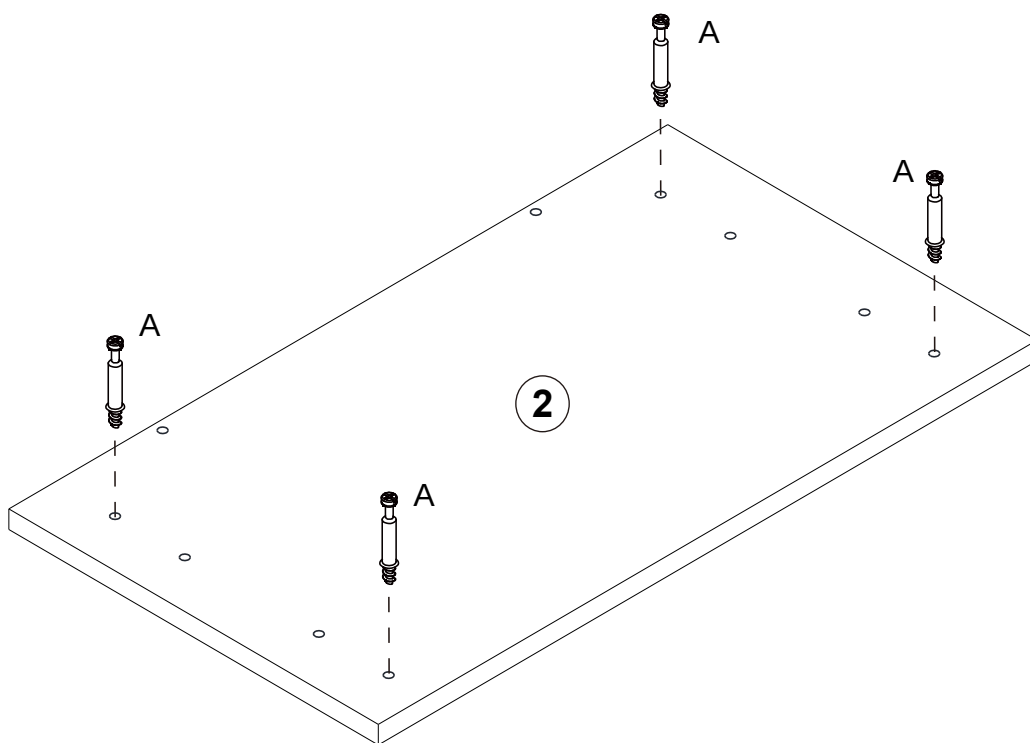

ASSEMBLY STEPS

B x 4




C x 6



STEP 15

Install the Panel (2) with Wood Dowel (C) and Cam Lock (B).

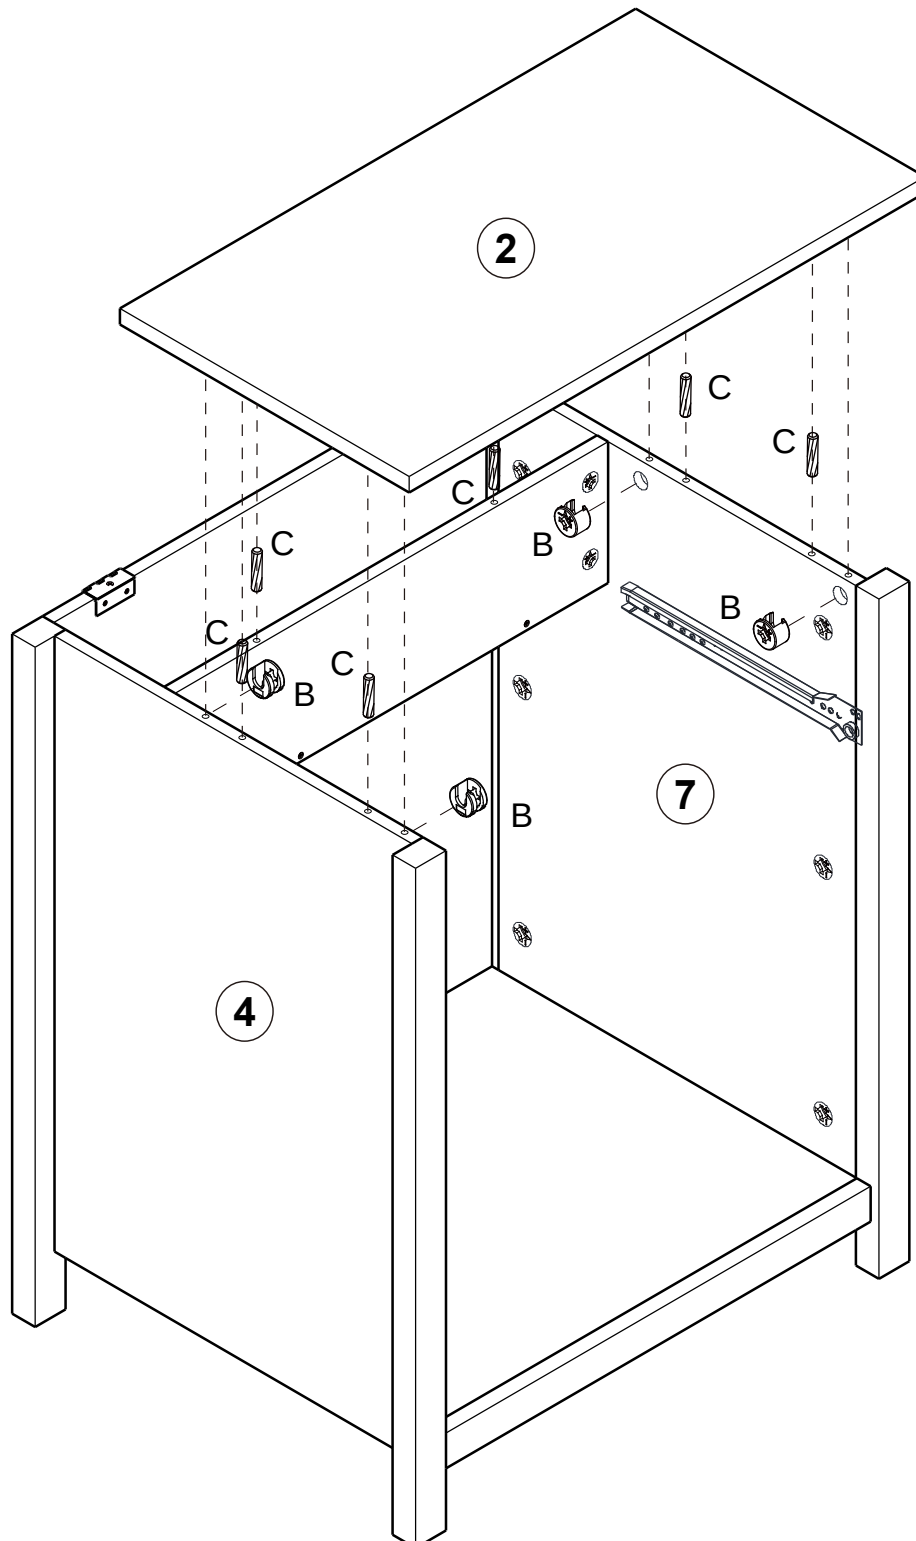


ASSEMBLY STEPS

D x 4	 M3x12	I x 1		H x 2	 M3.5x12
-------	---	-------	---	-------	--

STEP 16

1. Use Screws (D) to secure the hinge with Panel (1).
2. Use Screws (H) to secure the socket strip to Panel (13).

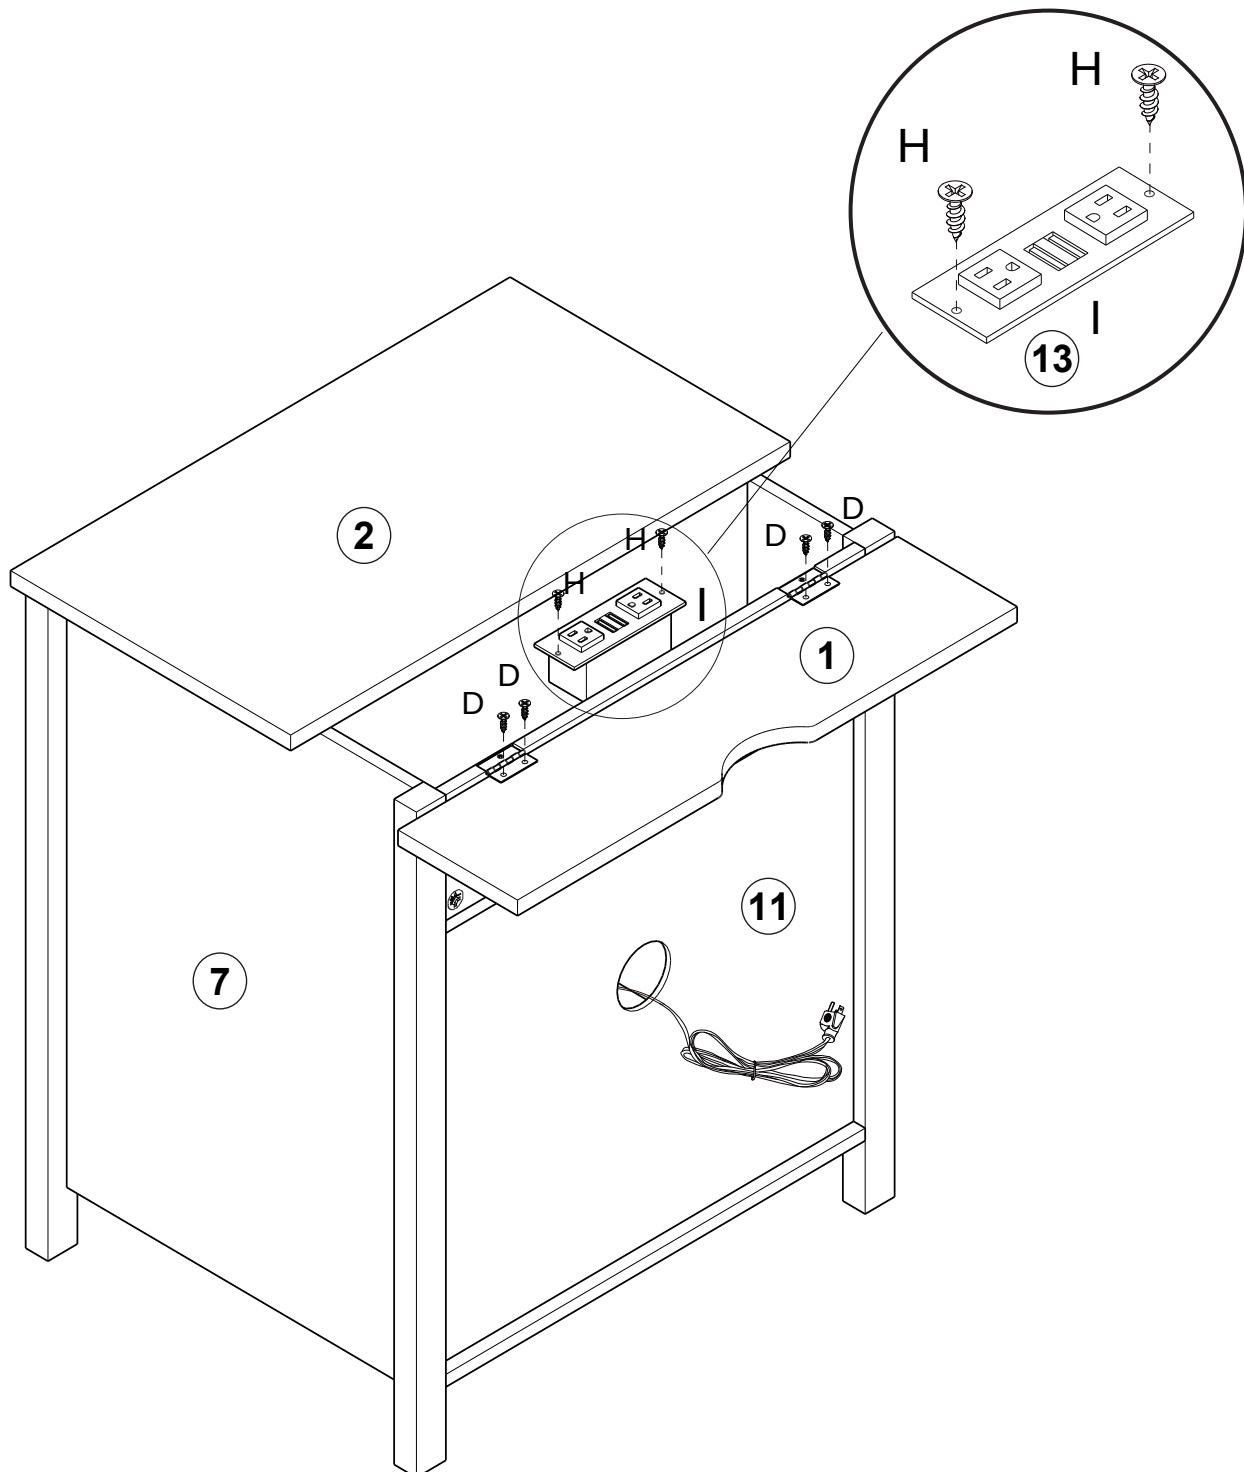

ASSEMBLY STEPS



J x 4

J-1



STEP 17

Insert the Mending Wedge (J-1) into the gap in the back Panel and fix it with Screw (J-2).

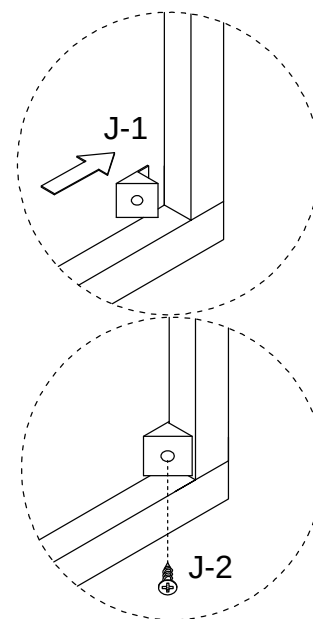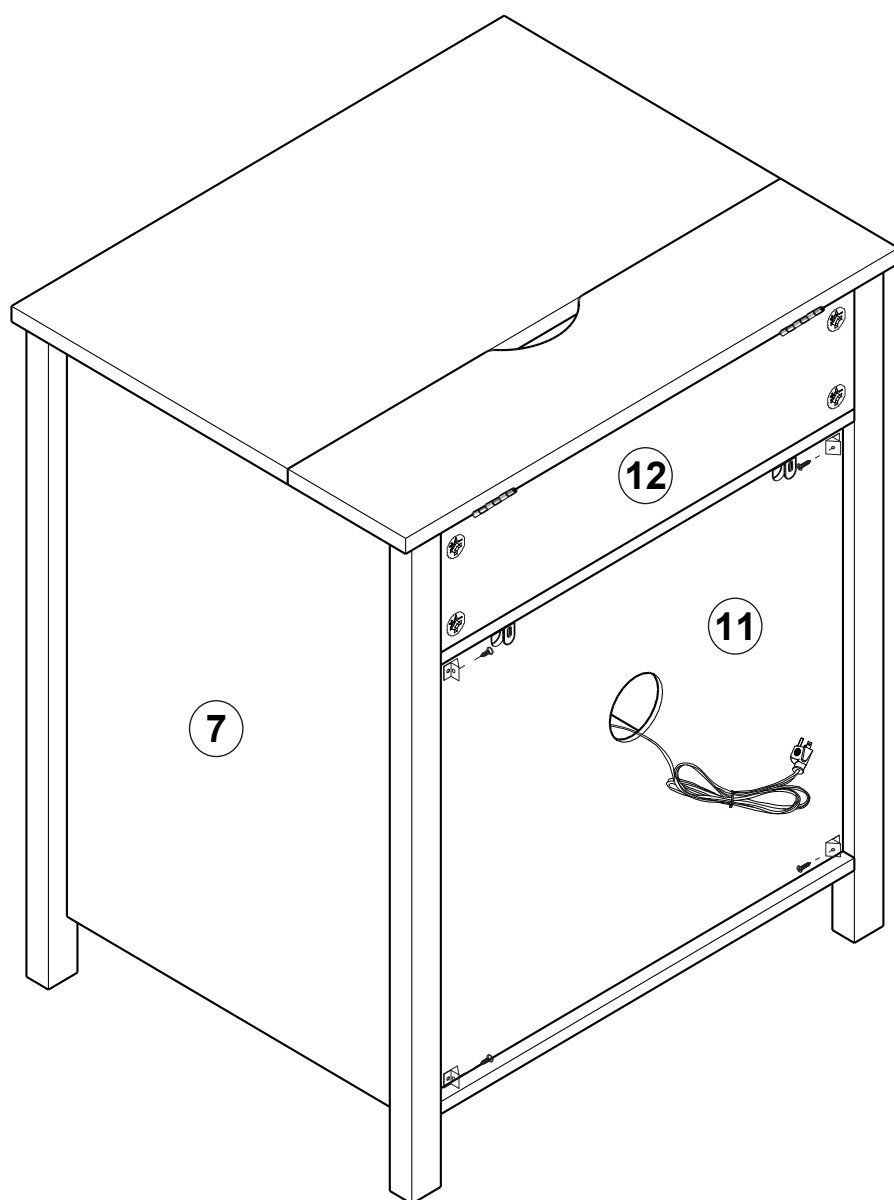

ASSEMBLY STEPS

M x 2





M4x40



STEP 18

1. Drill two holes in the wall and insert the Plastic Anchor (I) into the holes.
2. Use the Screw (I) to pass through the L-Shaped Bracket and lock the cabinet onto the wall.

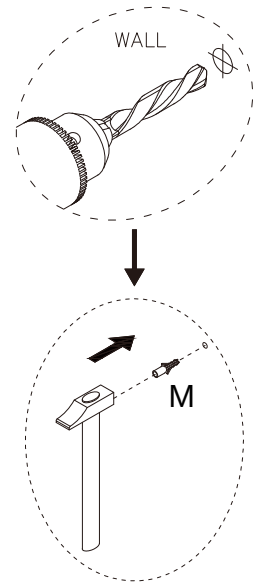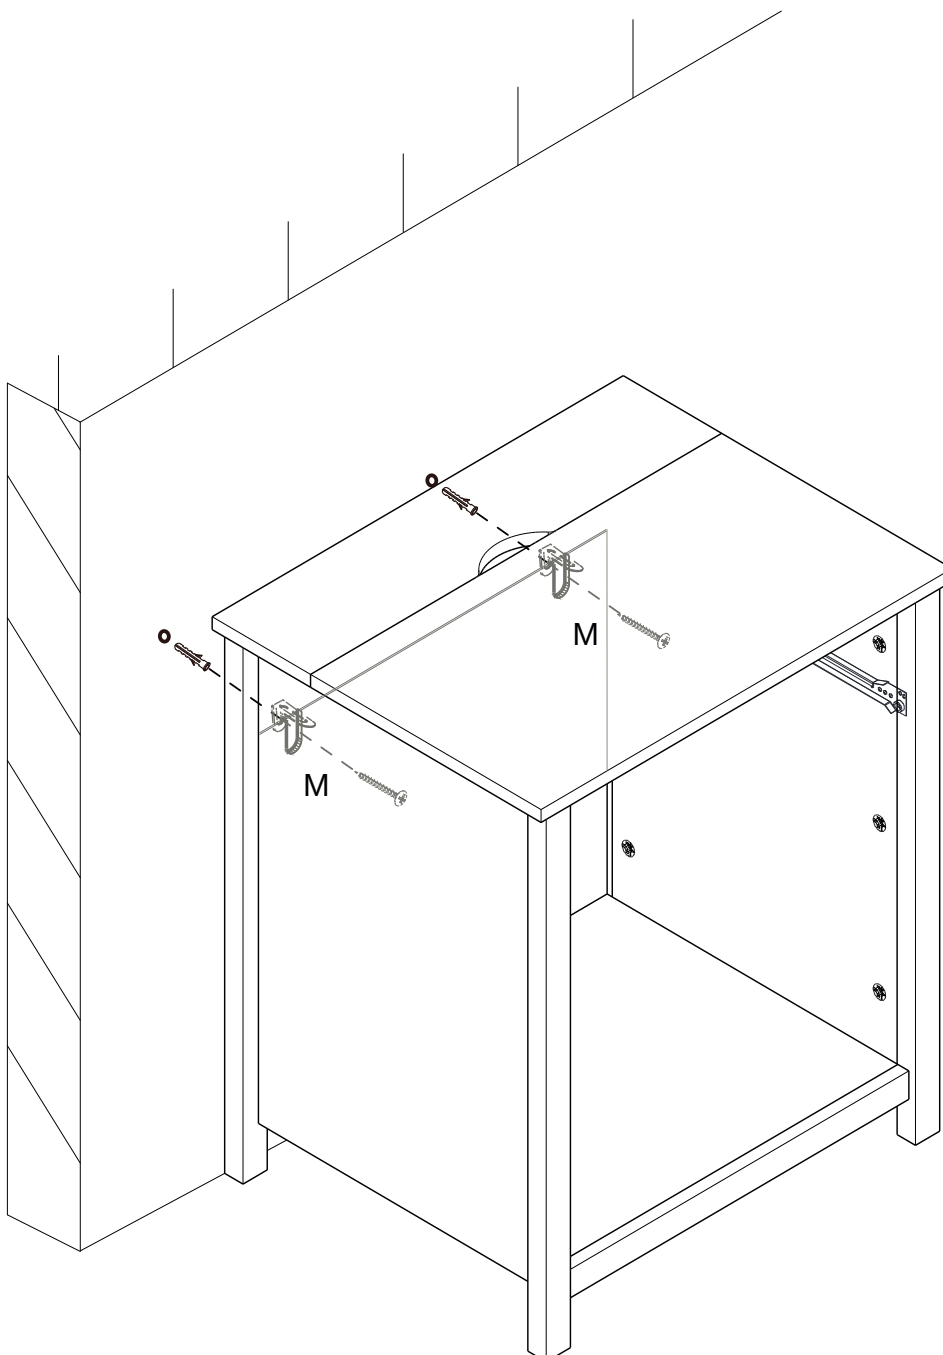

ASSEMBLY STEPS

A x 4




E x 4



STEP 19

1. Screw the Cam Bolt (A) into the Panel (15).
2. Connect the Panels (16,17,18) with Screw (E).

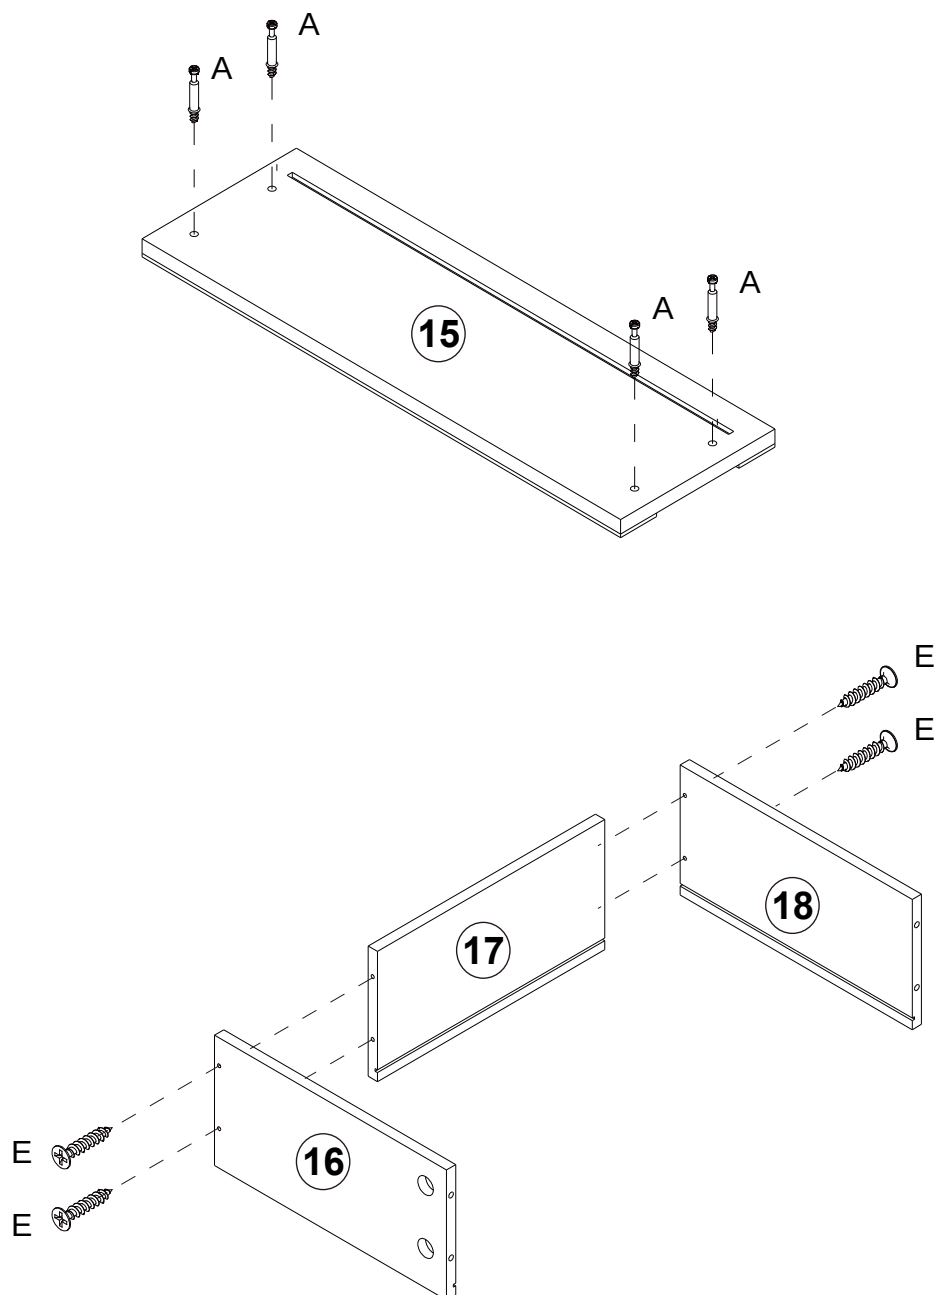



ASSEMBLY STEPS

B x 4





STEP 20

1. Insert the Panel (19) along the groove.
2. Install the Panel (15) with Cam Lock (B).


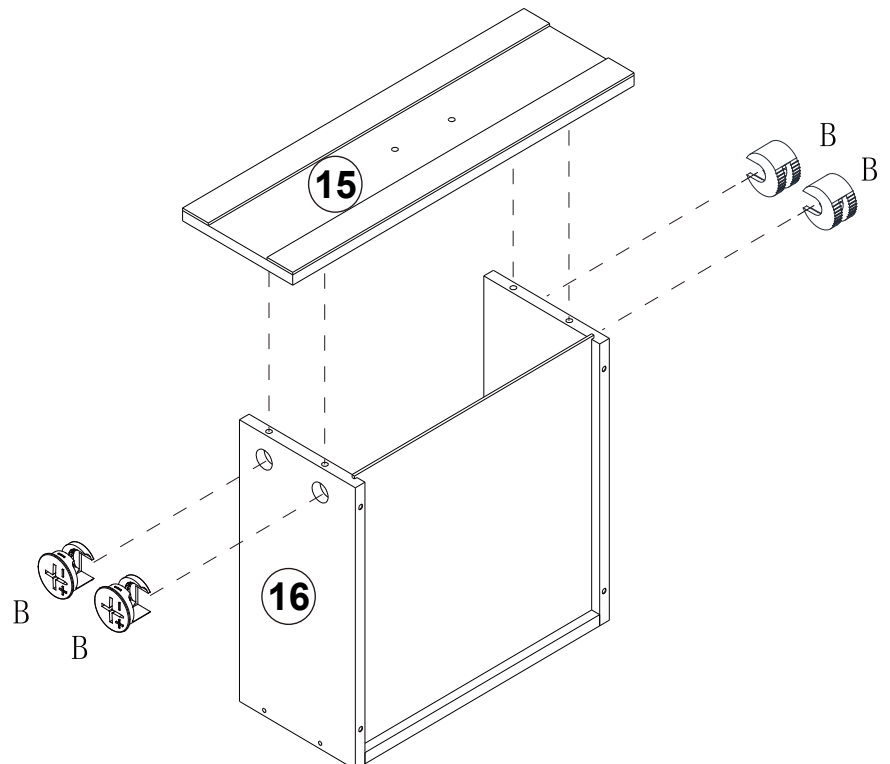
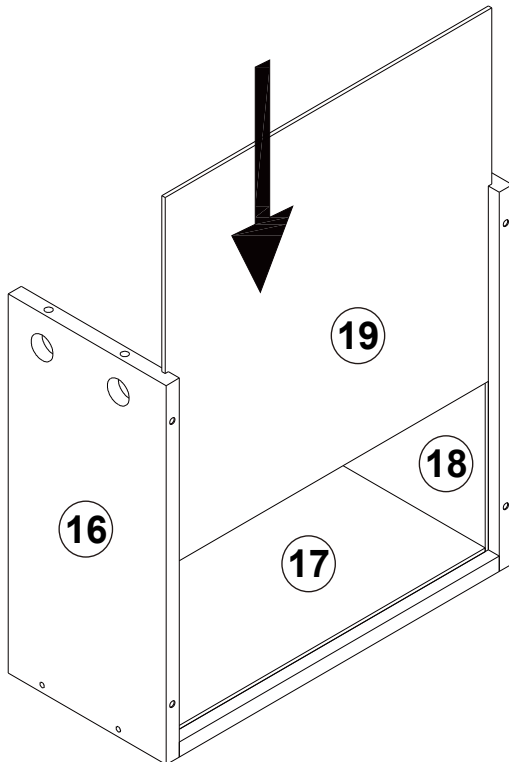


ASSEMBLY STEPS

  DLx 1		DRx 1		D x 4	 M3x12	K x 1		H x 2	 M3.5x12
-------	---	-------	---	-------	---	-------	---	-------	---

STEP 21



1. Align Slide Rail (DR) with Panel (18) and Rail (DL) with Panel (16), then secure with Screw (D).
2. Attach the Handle (K) to the Panel (15) with handle Screw (H).

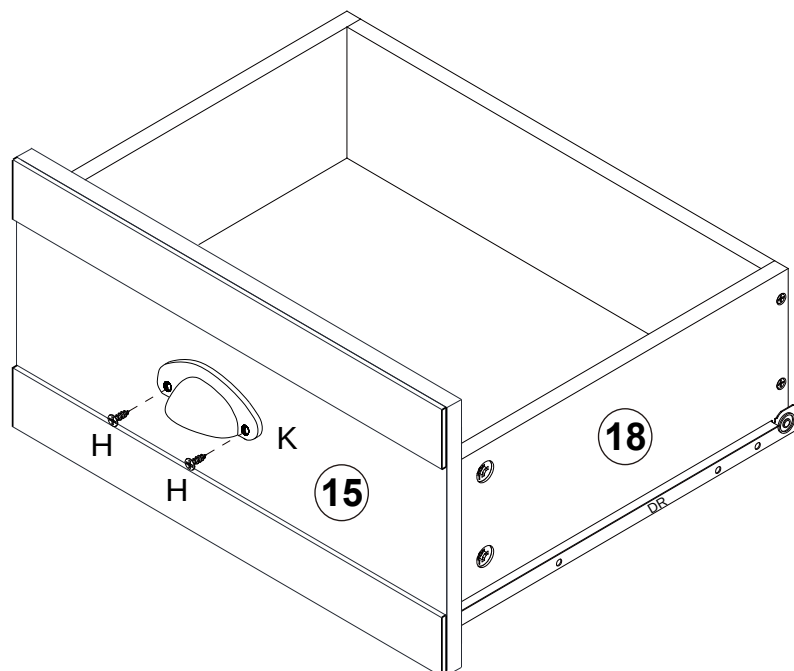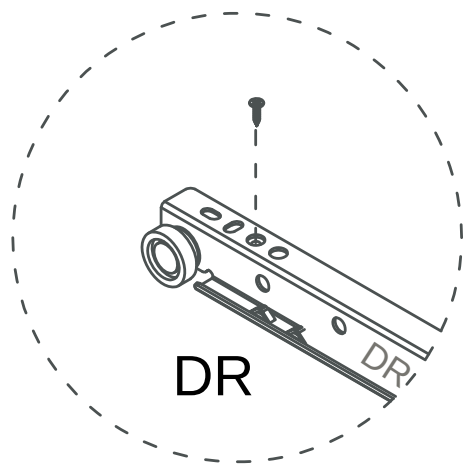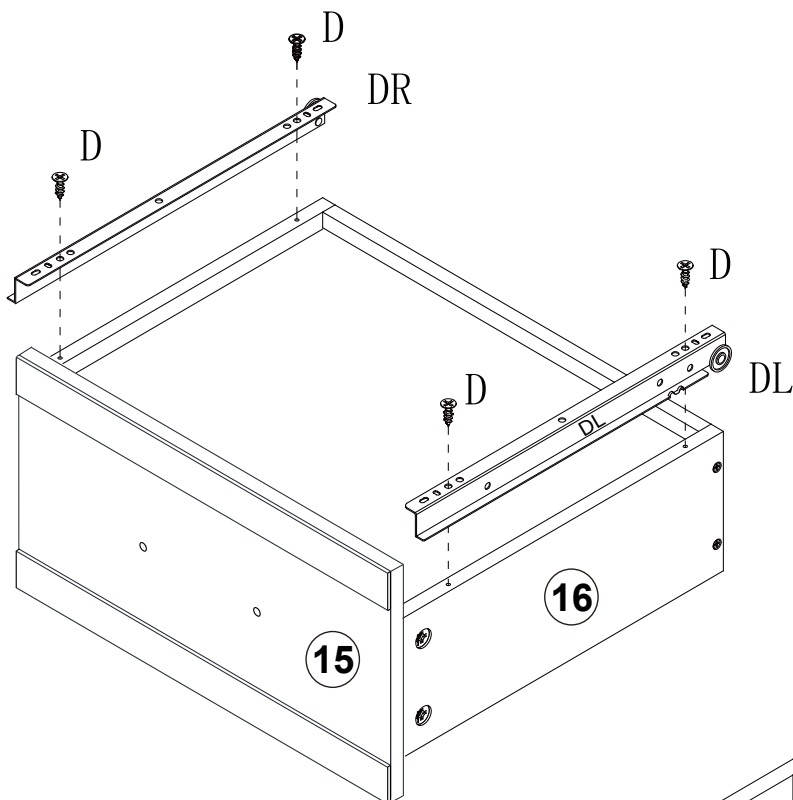

ASSEMBLY STEPS

STEP 22

Align the slides on the drawer and cabinet, then push the drawer into the cabinet.

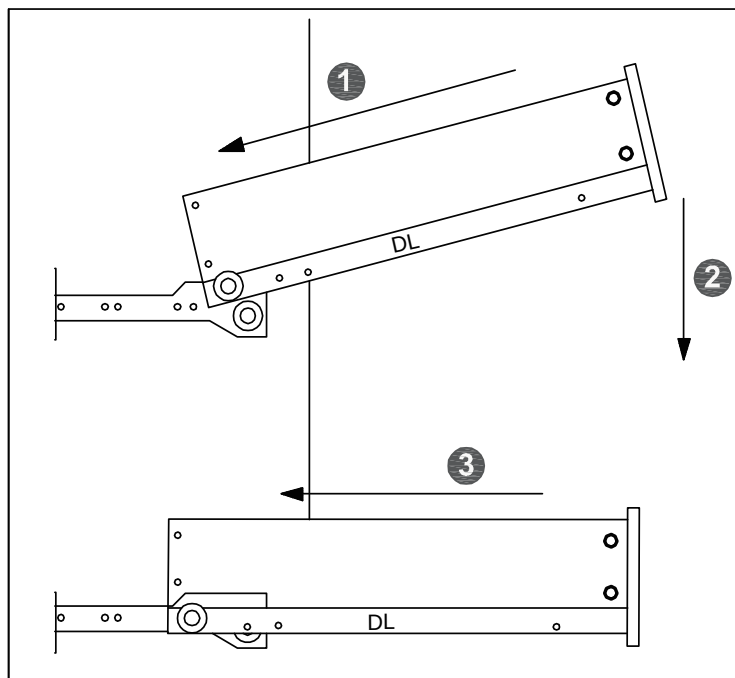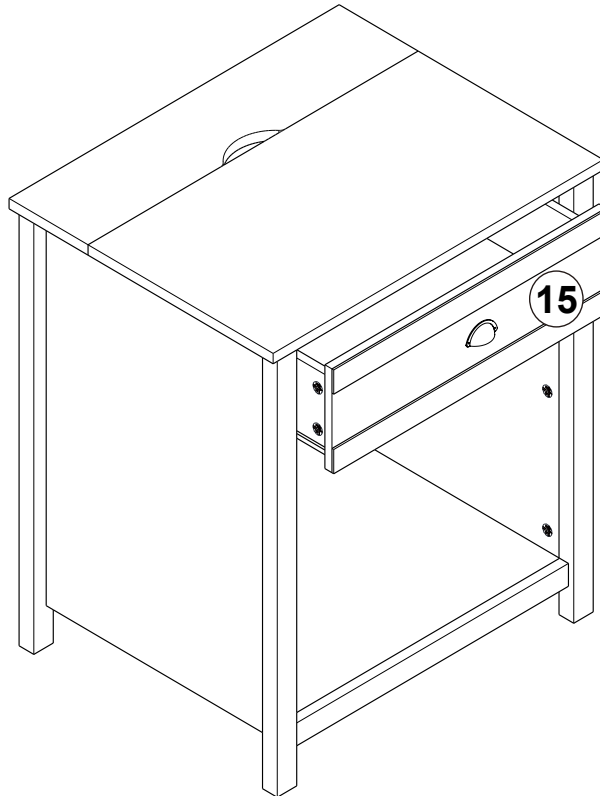

Supplementary Instructions for Safe Use

English

WARNING



Children have died from furniture tipover. To reduce the risk of furniture tipover:

- ALWAYS install tipover restraint provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.
- Do not defeat or remove the drawer interlock system.

This is a permanent label.

Do not remove!

French

ATTENTION



Des enfants sont morts du basculement des meubles. Pour réduire le risque de basculement des meubles:

- TOUJOURS installer la retenue de basculement fournie.
- NE JAMAIS mettre de téléviseur sur ce produit.
- NE JAMAIS permettre aux enfants de se tenir debout, de grimper, ou de s'accrocher à des tiroirs, des portes ou des étagères.
- N'ouvrez JAMAIS plus d'un tiroir à la fois.
- Placez les objets les plus lourds dans les tiroirs les plus bas.
- Ne désactivez pas et ne retirez pas le système de verrouillage du tiroir.

Ceci est une étiquette permanente.

Ne pas enlever!

German

WARNUNG



Kinder sind an einem Möbelkippen gestorben. So verringern Sie das Risiko eines Umkippens von Möbeln:

- Installieren Sie IMMER die mitgelieferte Kipprückhaltevorrichtung.
- Stellen Sie NIEMALS einen Fernseher an dieses Produkt.
- Lassen Sie Kinder NIEMALS an Schubladen, Türen oder Regalen stehen klettern oder hängen.
- Öffnen Sie NIEMALS mehr als eine Schublade gleichzeitig.
- Legen Sie schwerste Gegenstände in die untersten Schubladen.
- Besiegen oder entfernen Sie das Schubladenverriegelungssystem nicht.

Dies ist ein dauerhaftes Etikett.

Nicht entfernen!