



SEASONS
FIRE PITS

READ MANUAL BEFORE USE

Check Local fire regulations and municipal bylaws to ensure your fire pit meets all local regulations.

Wood burning fire pits may be regulated in some dry environments.

As your Seasons Fire Pit ages to a natural rust patina, some patina transfer could occur, which may leave stains on some surfaces.

Fire Pit is for outdoor use only.

CARBON MONOXIDE HAZARD

Burning wood produces carbon monoxide, which has no odor. Using this fire pit in an enclosed space can cause serious injury or fatality. Never use this in an enclosed space such as a camper, tent, car or home.

WARNINGS

- This fire pit is intended for outdoor use only. Do not use on wooden deck, composite decks or asphalt. High temperatures produced by the fire could damage these surfaces or catch the surfaces on fire.
- Fire pit should be a minimum of 25 feet away from any buildings, trees, covered porches, vehicles, and flammable items.
- Never use under low hanging trees or overhangs of any kind. Smoke and embers could damage or ignite overhead objects.
- Never use gasoline, alcohol or volatile fluids to start fires. Property damage, serious injury or death could result if used.
- Keep children and pets away from the fire pit.
- Fire pit is not to be operated by anyone under the age of 18.
- Never leave a burning fire pit unattended. Always extinguish the fire completely before leaving the fire pit.
- Inspect fire pit completely for any signs of wear or damage before each use. Call customer service at 205-371-2212 if there are any signs of wear or damage.
- All parts of the fire pit will be hot during and after burning. Do not touch the hot fire pit with bare hands. Allow the fire pit to cool completely before touching.
- Fire pit and lid are extremely heavy and can cause injury if lifted improperly or dropped.