 


INSTALLATION

 
 
Product Manual

Version: 390179US-02-26A-RY

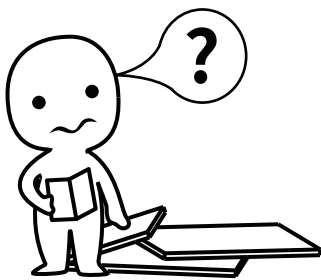


IMPORTANT INFORMATION!

please read the entire manual before starting to assemble and/or using this product. follow the manual thoroughly and keep it for further reference.

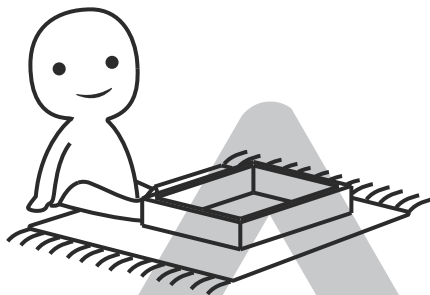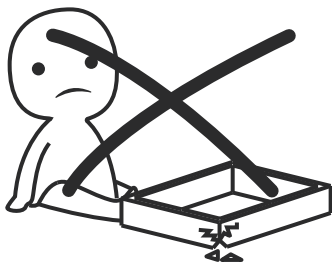



AVOID SCRATCHES!

 In order to avoid scratching this furniture should be assembled on a soft layer - could be a rug.

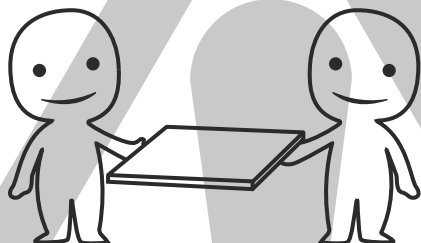

IMPROVE EFFICIENCY !

  Try to find a partner to install with you, which can speed up the installation efficiency and shorten the time.

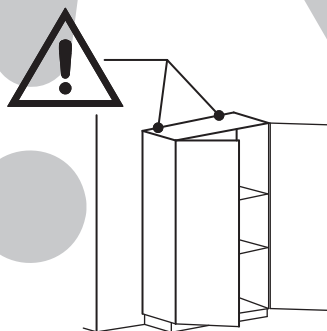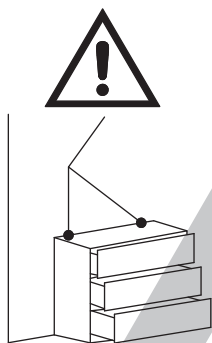

ANTI-TOPPLE WARNING !

 
Overturned furniture can cause serious or fatal crush injuries. To prevent tipping over, be sure to use the wall attachment, if not included with this product. Please purchase the wall attachment that fit your wall. If unsure, seek professional advice. Please read and follow each step of the instructions carefully.

IMPORTANT !




It is important that any product which is assembled using any kind of screw is re-tightened 2 weeks after assembly, and once every 3 months - in order to assure stability through-out the lifespan of the product.

For regular maintenance and cleaning of the product, for the frame, please use a rag dipped in neutral detergent to fully wipe it, and then dry it with a clean rag. For glass materials, wipe with a rag dampened with water glass cleaner, and then dry with a dry rag.

Do not use an electric screwdriver, and do not use too much force when installing, because the board is easy to break.

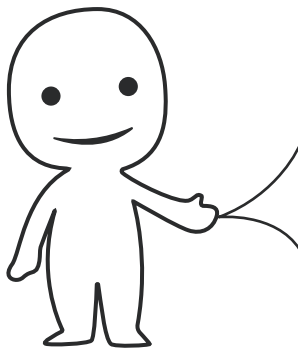


Please prepare the following tools

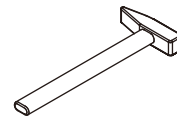   

When installing, please carefully confirm whether each screw corresponds to the manual, accessories with similar shapes can be distinguished by size

 A x 96

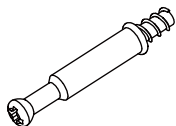


Ø 6 x 35 mm

B x 98




Ø 15 x 12 mm

 C x 120




Ø 3 x 12 mm

 E x 20




Ø 4 x 16 mm

 F x 10



H x 14

 

Ø 6 x 30 mm

K x 28



 
Ø 4 x 30 mm

L x 4




Ø 35 mm

M x 1

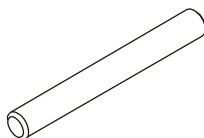

Ø 6 x 50 mm

 N x 1

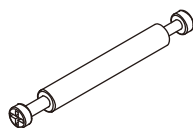


Ø 5 x 68 mm

P x 12



 
R x 12

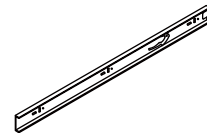

T x 4



 Ø 35 mm

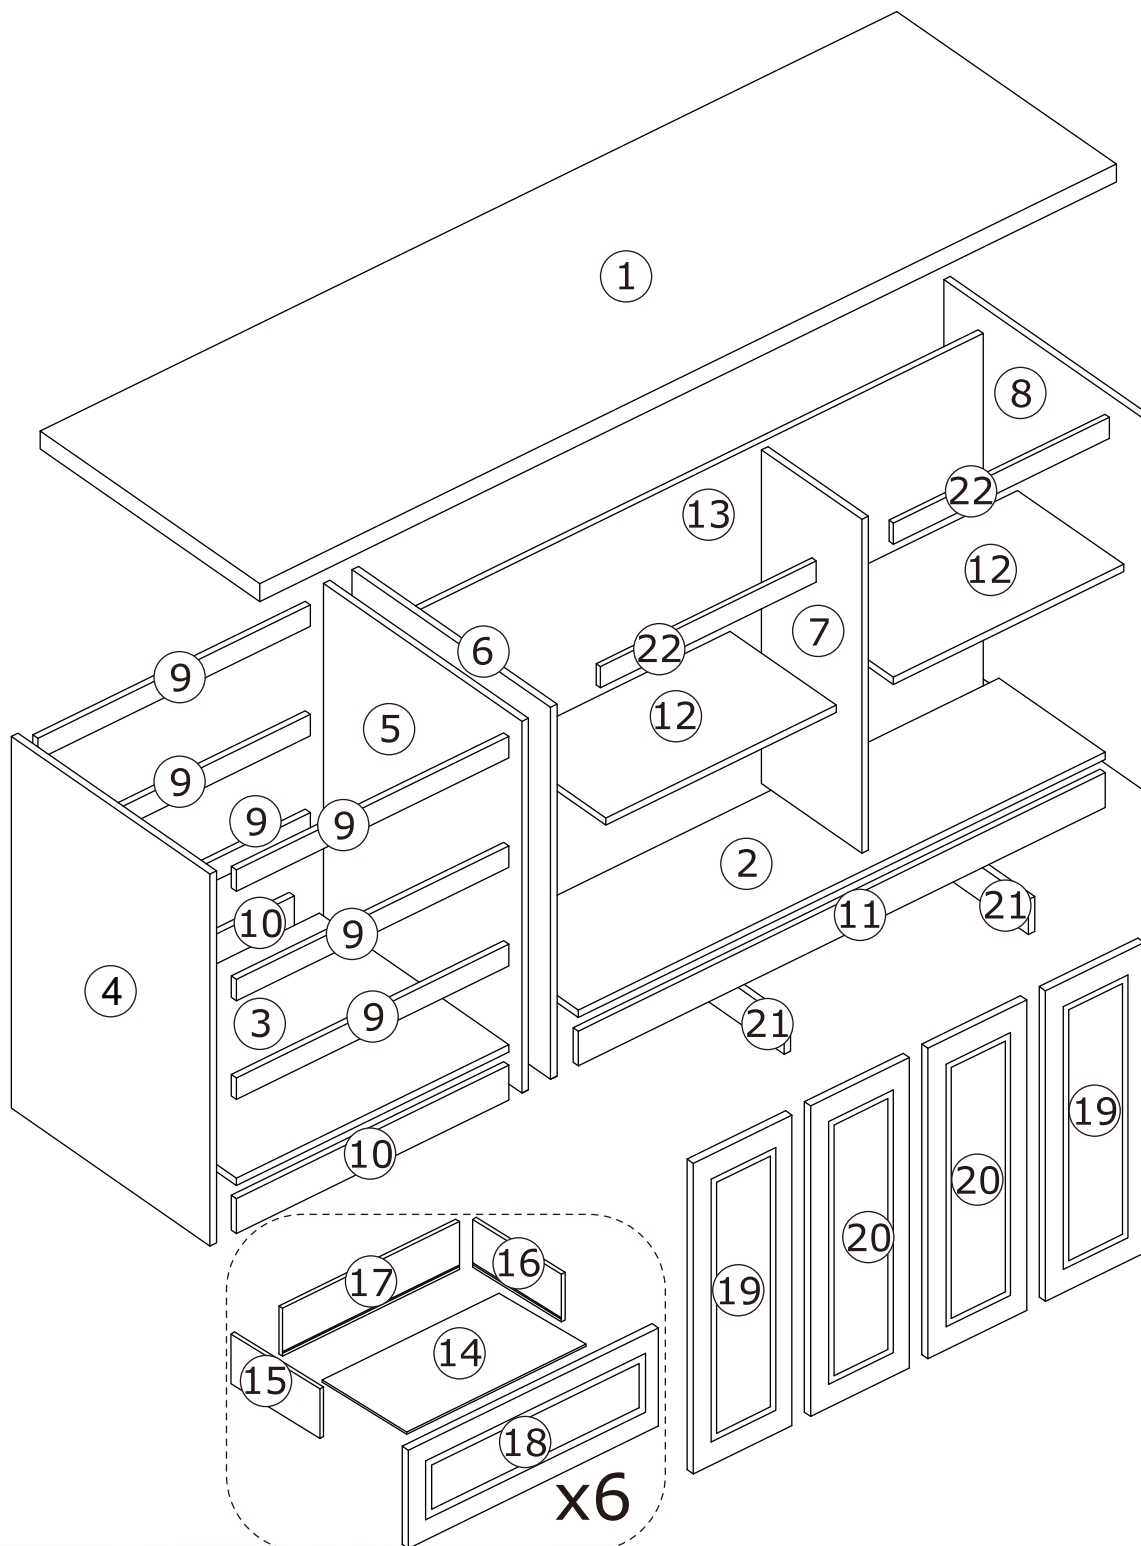


⚠ WARNING
















Children have died from furniture tipover. To reduce the risk of furniture tipover:

- ALWAYS install Anti-tip device provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.

 
*This is a permanent label.
Do not remove!*

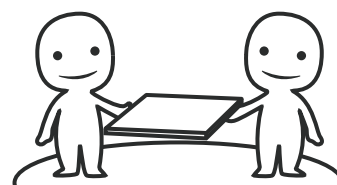


ASSEMBLED BY 2 ADULTS

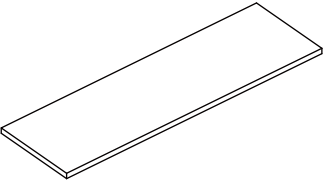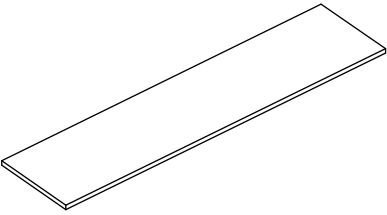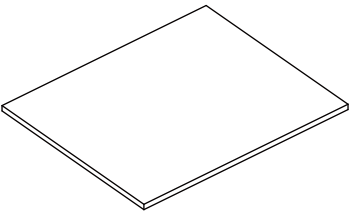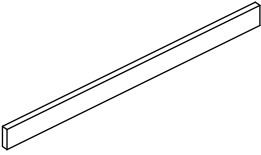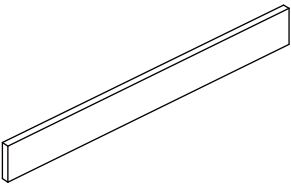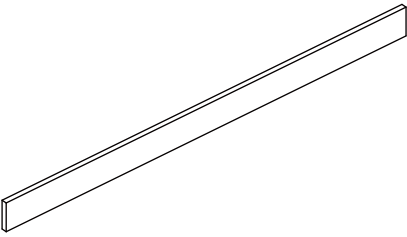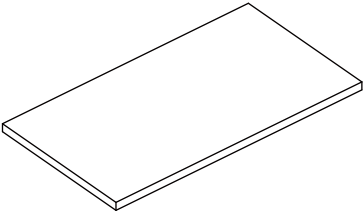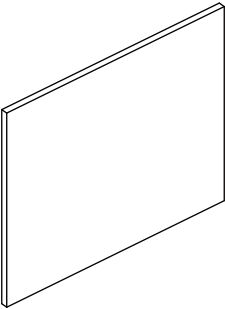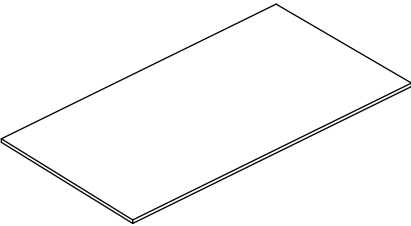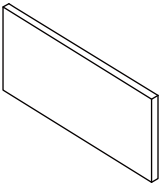               ①x1 	②x1 	③x1 
④x1 	⑤x1 	⑥x1 
⑦x1 	⑧x1 	⑨x6 
⑩x2 	⑪x1 	⑫x2 
⑬x1 	⑭x6 	⑮x6 

 
16x6

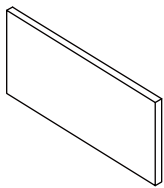


17x6

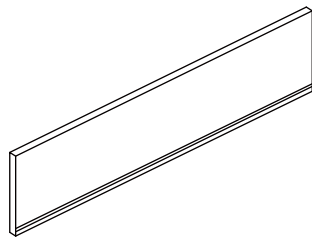 


18x6

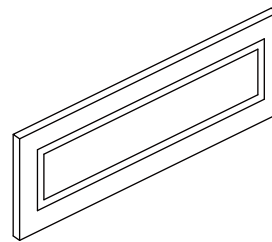 


19x2

 


20x2

 

21x2

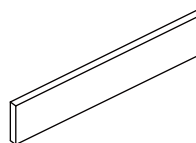 


22x2

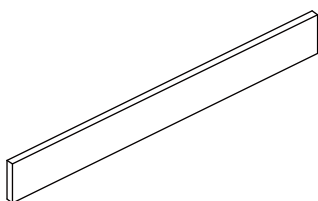 


**Slides Must Be Separated Before Assembly.
After Separated, Set Aside Until Needed for Assembly.**

Las diapositivas deben separarse antes del montaje.
Después de la separación, déjelo a un lado hasta que sea necesario.


 
Les glissières doivent être séparées avant l'assemblage.
Après la séparation, mettez de côté jusqu'au moment de l'assemblage.

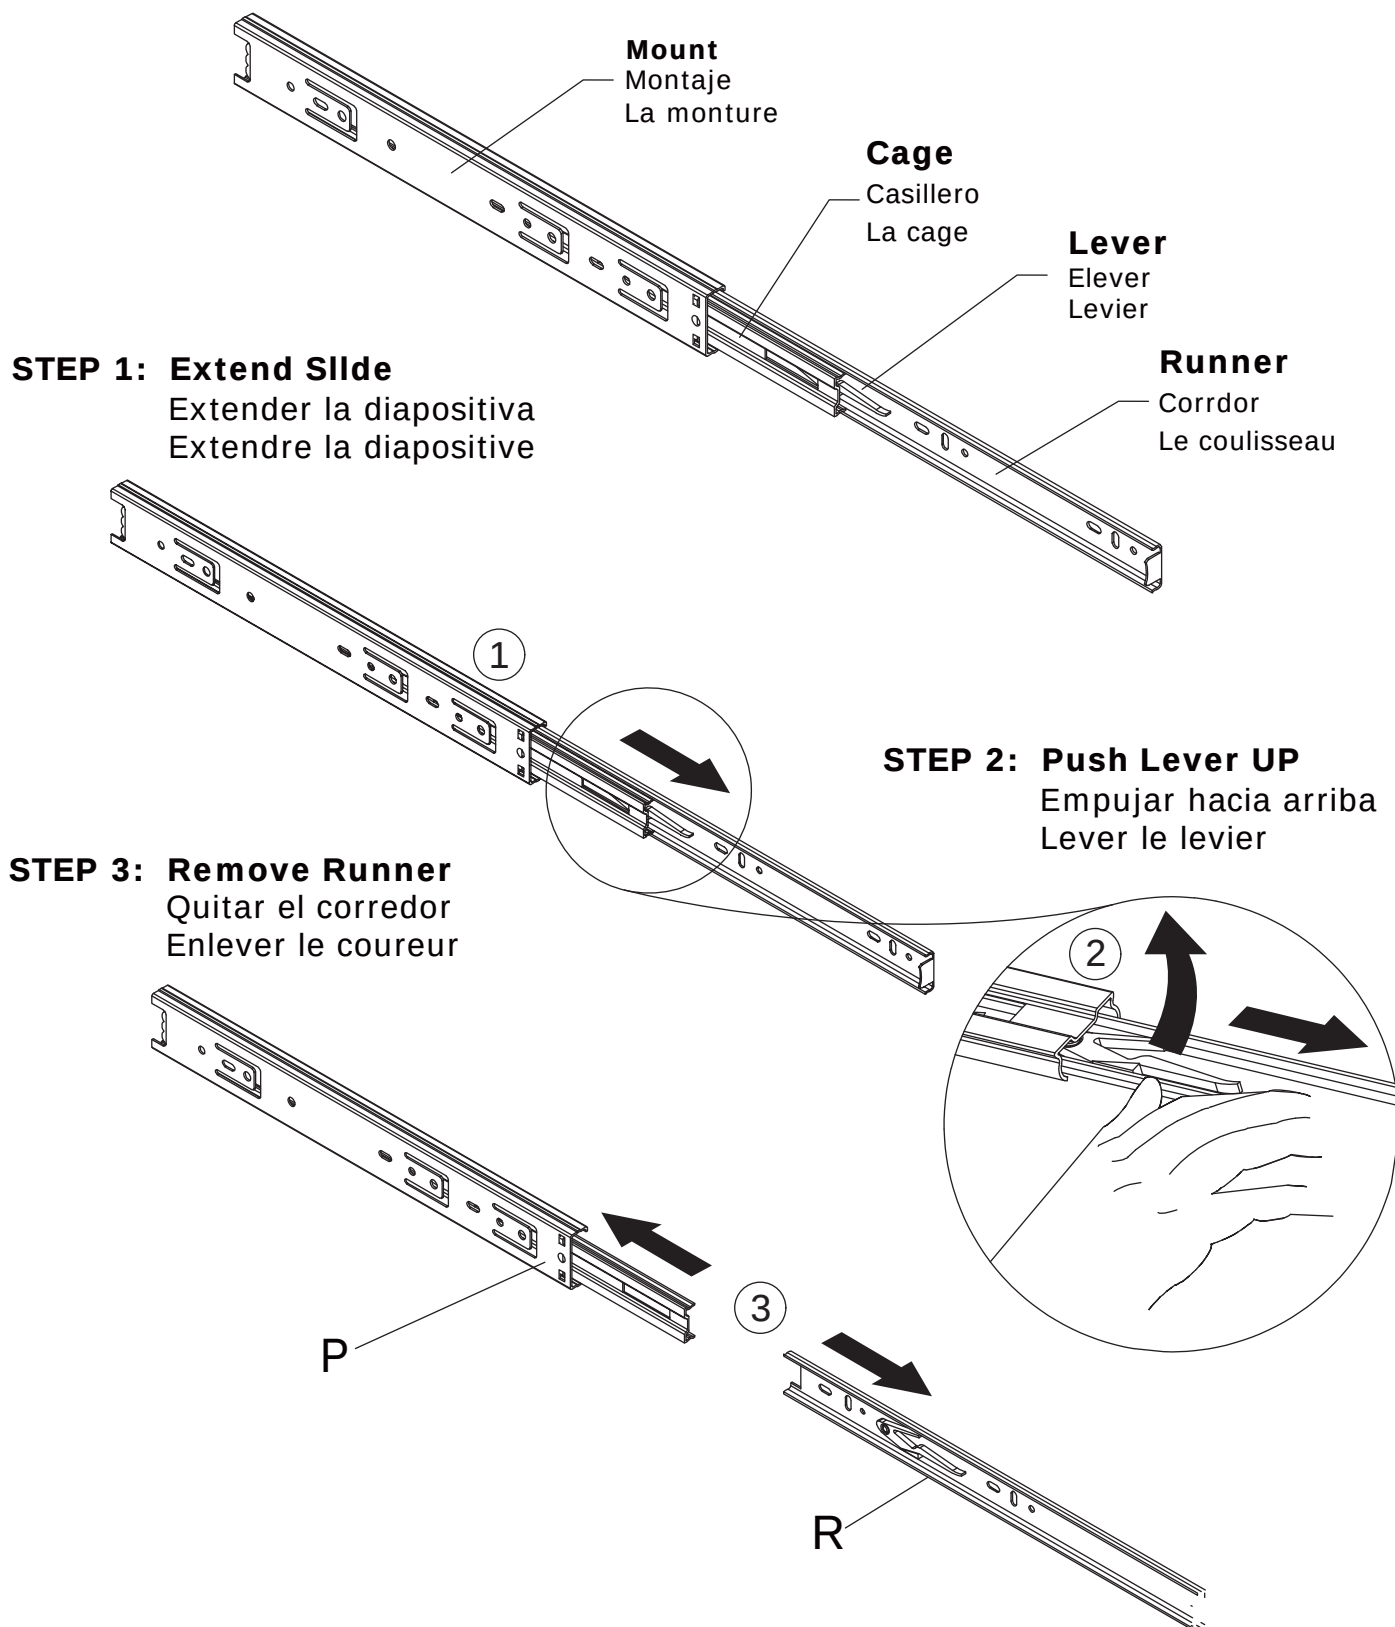



1

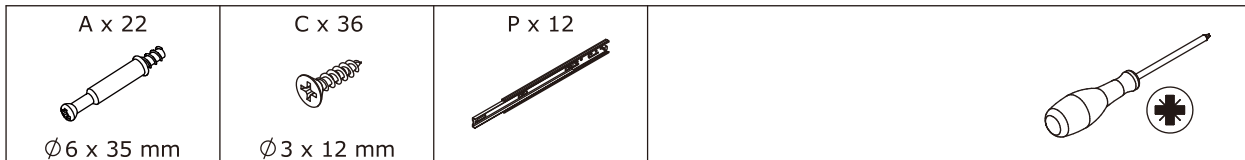 

 
 
Screw self-tapping rod (A) onto panel 4,5 and secure slide rail (P) to panel 4,5 using screw (C) as shown.

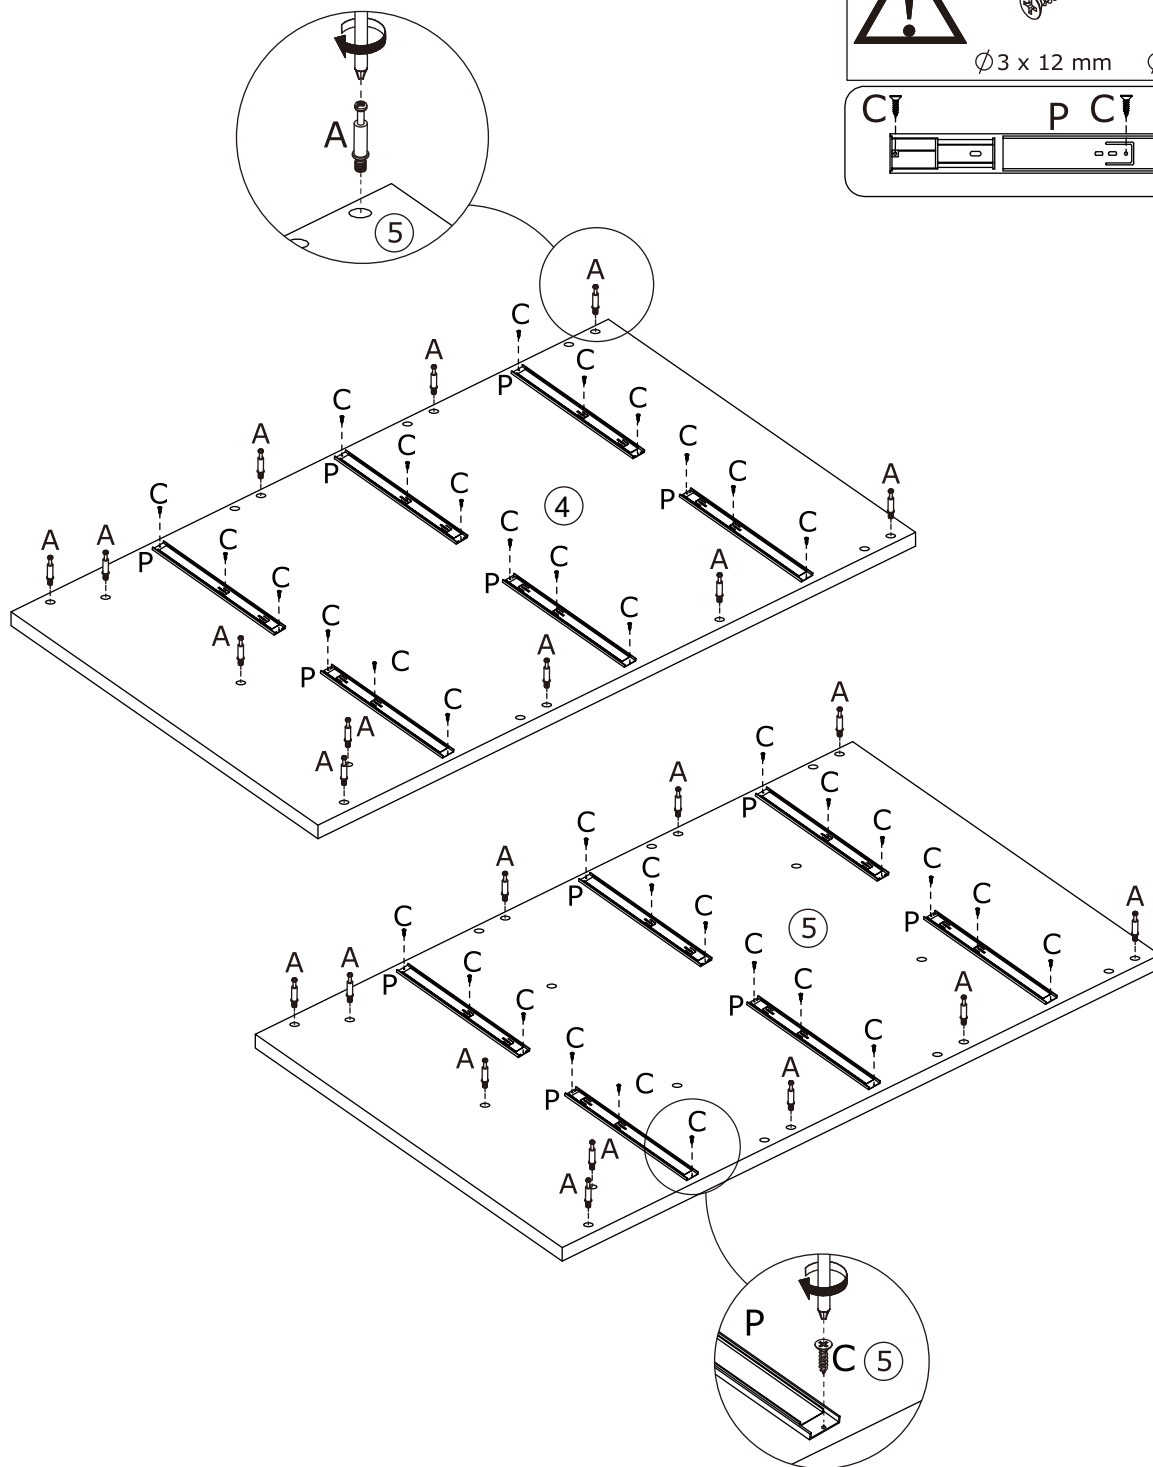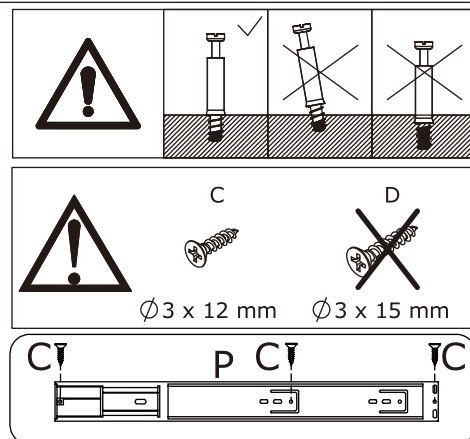



2

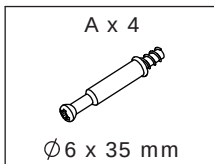  

 
 
Screw self-tapping rod (A) onto panel 3.

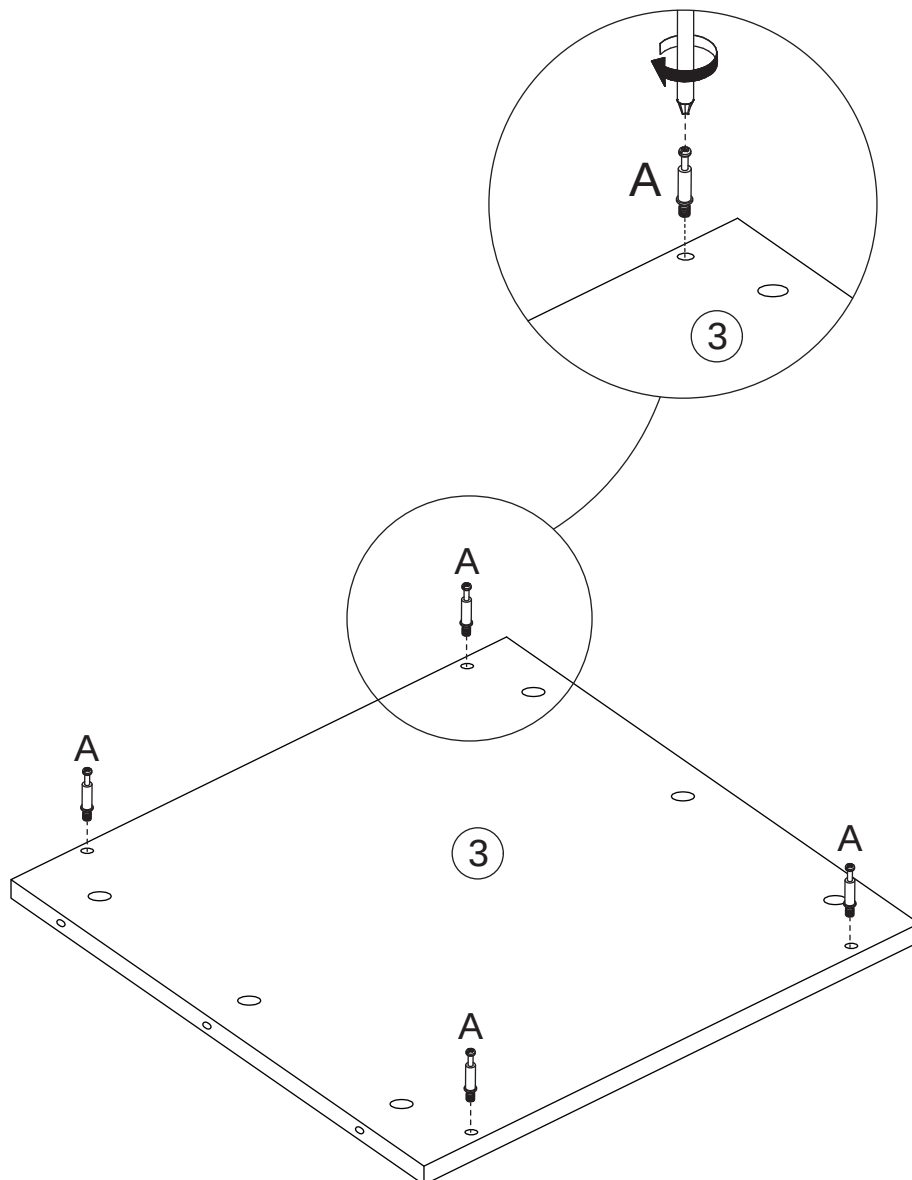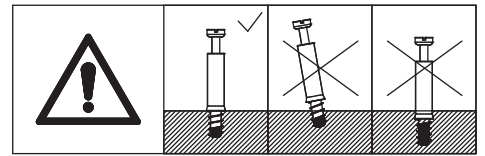

3

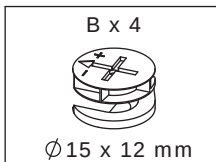  

  Connect panel 10 to panel 3, and tighten by turning eccentric wheel (B) clockwise.

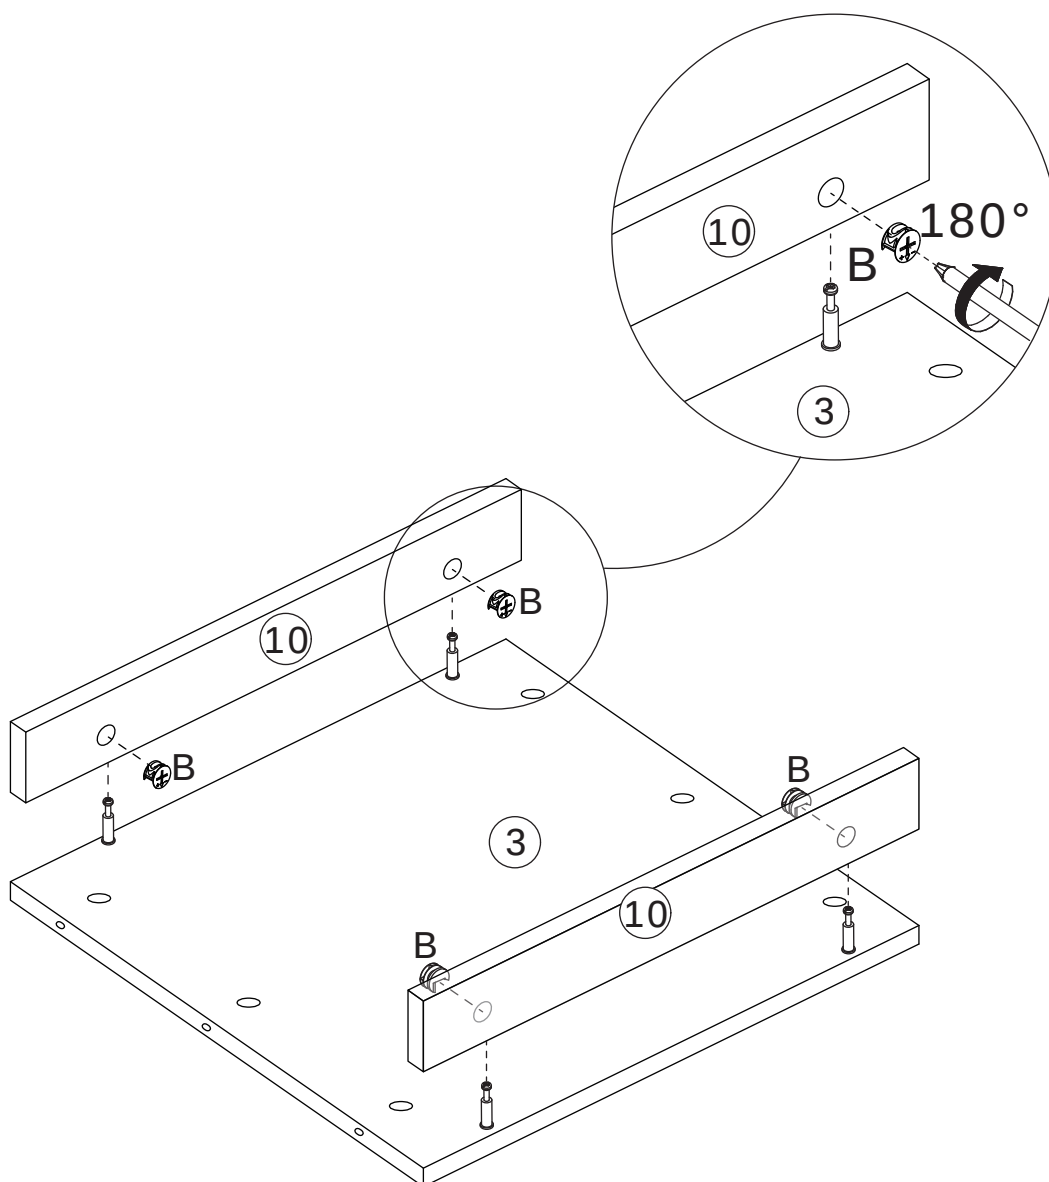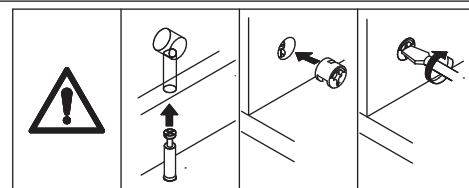


4

B x 11




Ø 15 x 12 mm

 H x 6






Ø 6 x 30 mm


 


Insert wooden dowel (H) into panel 9 first.

   Connect panels 9, 10 and 3 to panel 5, and tighten by turning eccentric wheel (B) clockwise.

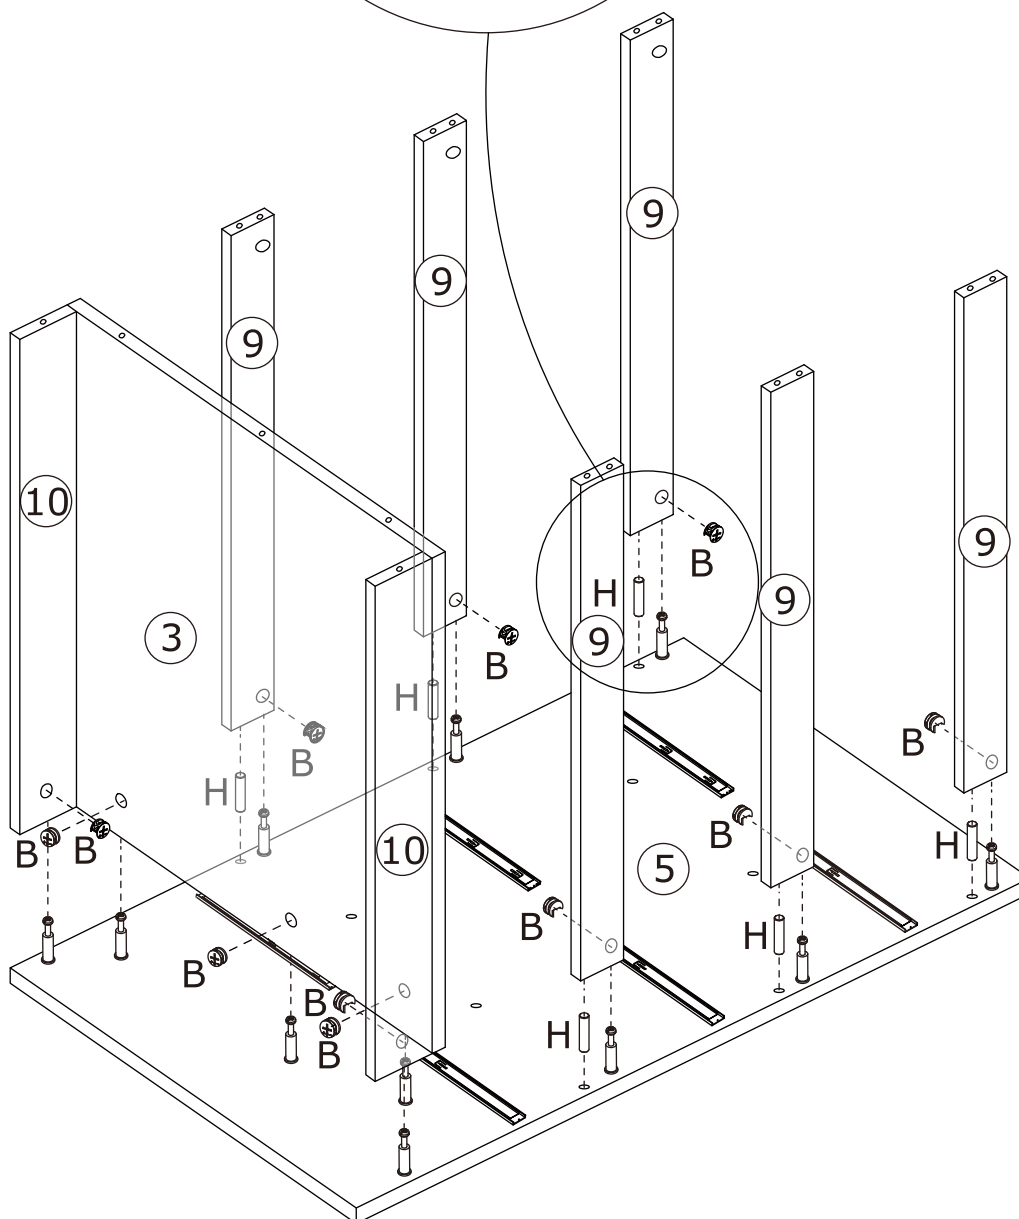
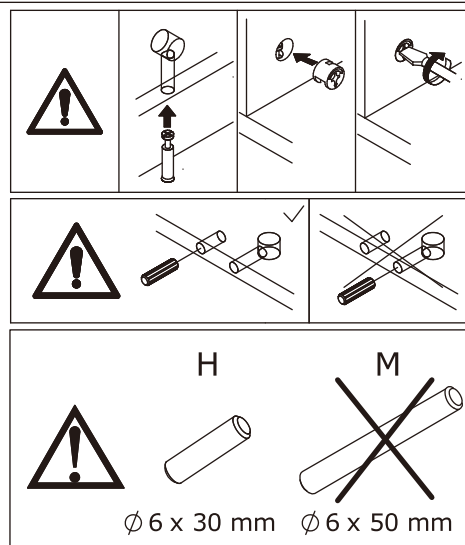
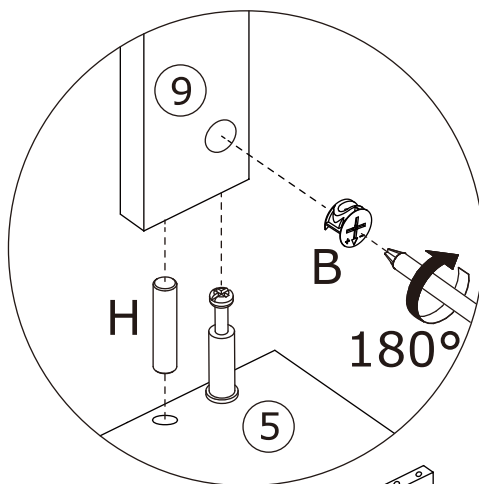


5

 
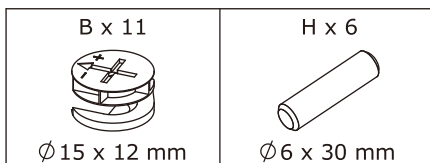 


Insert wooden dowel (H) into panel 9 first.

  
 
Connect panels 9, 10 and 3 to panel 4, and tighten by turning eccentric wheel (B) clockwise.

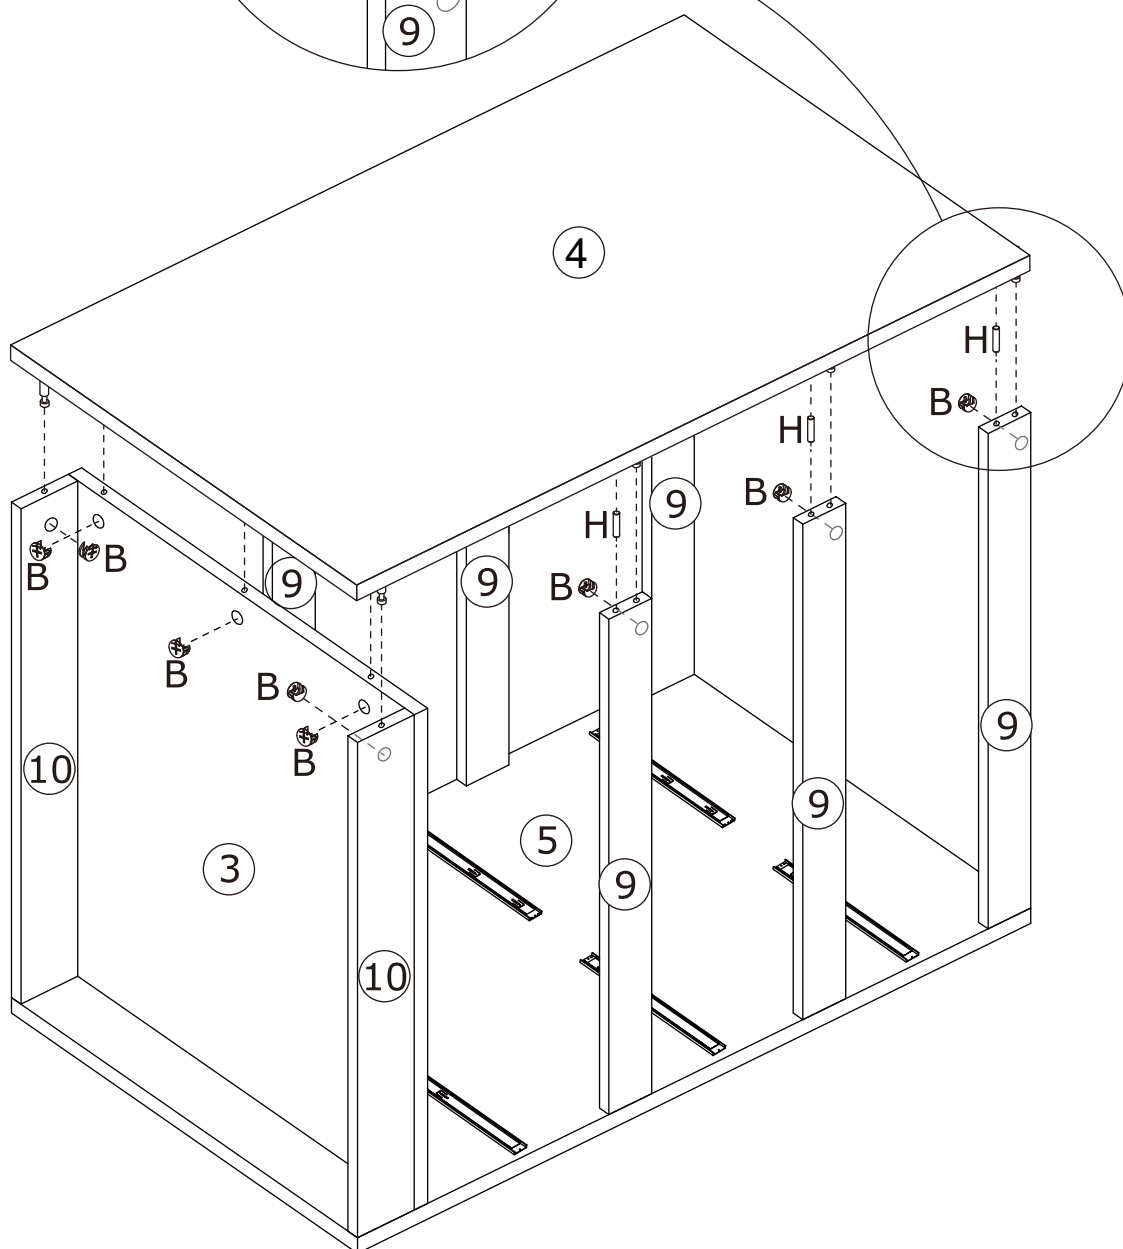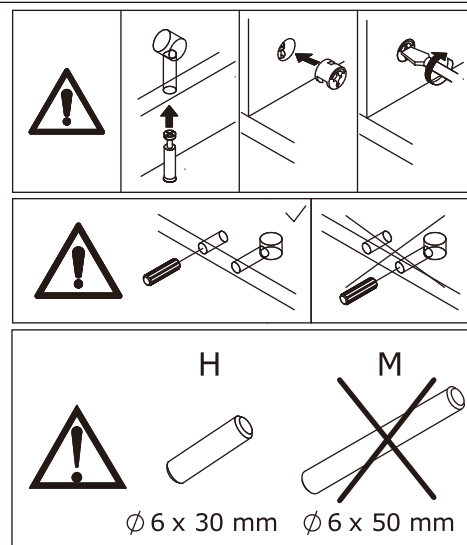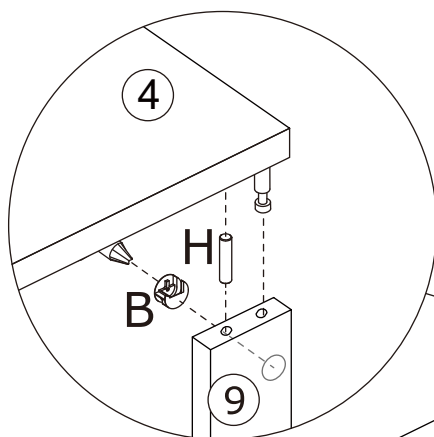



6

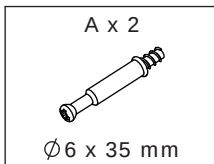  

 
 
Screw self-tapping rod (A) onto panel 11.

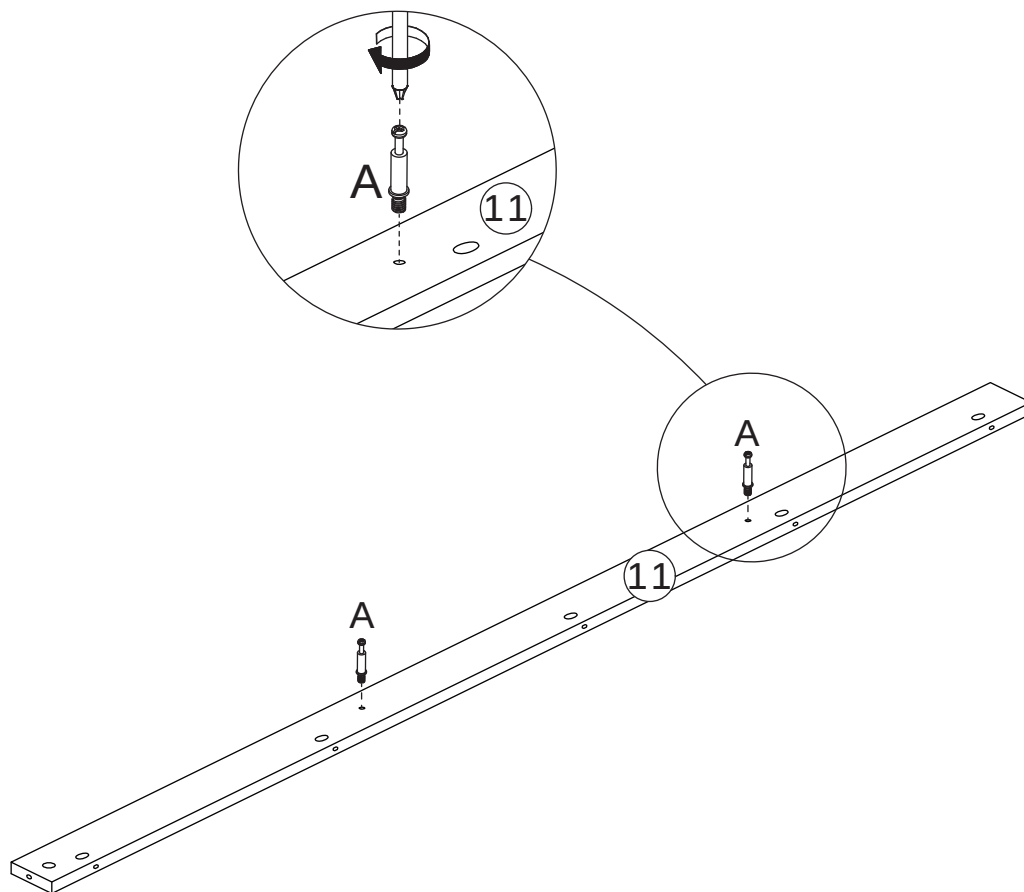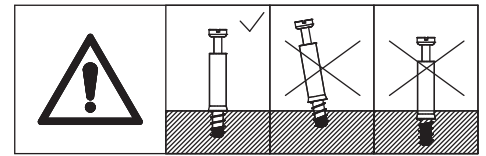



7

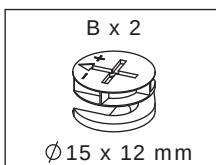  

 
 
Connect panel 21 to panel 11, and tighten by turning eccentric wheel (B) clockwise.

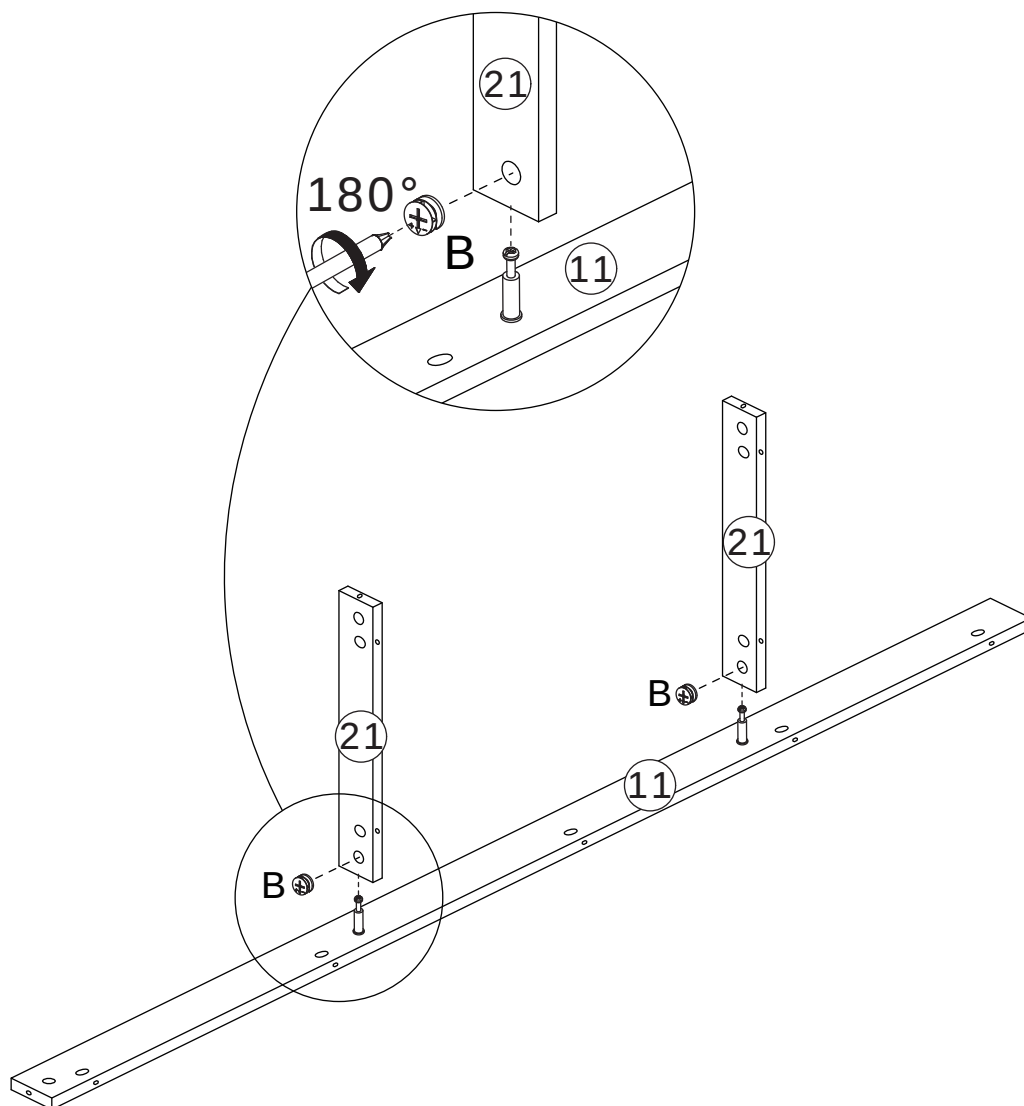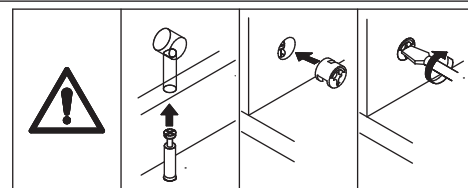



8

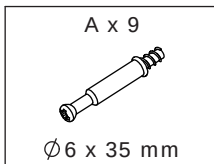  

 
 
Screw self-tapping rod (A) onto panel 2.

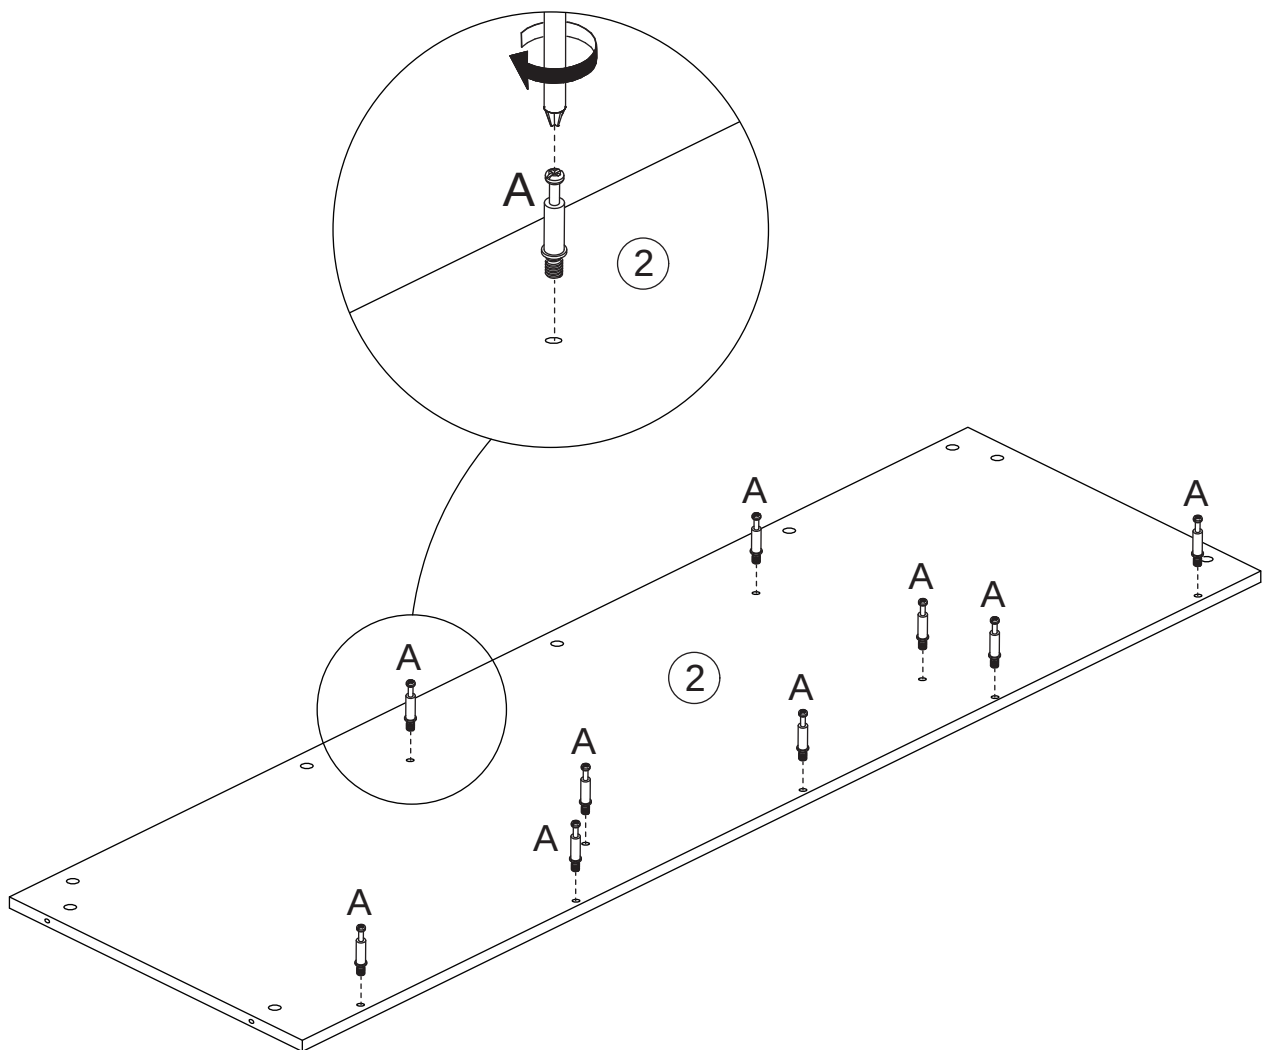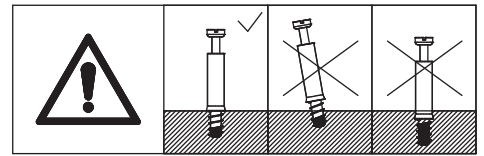



9

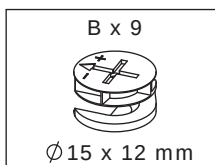  

 
 
Connect panel 2 to panels 11 and 21,
and tighten by turning eccentric wheel (B)
clockwise.

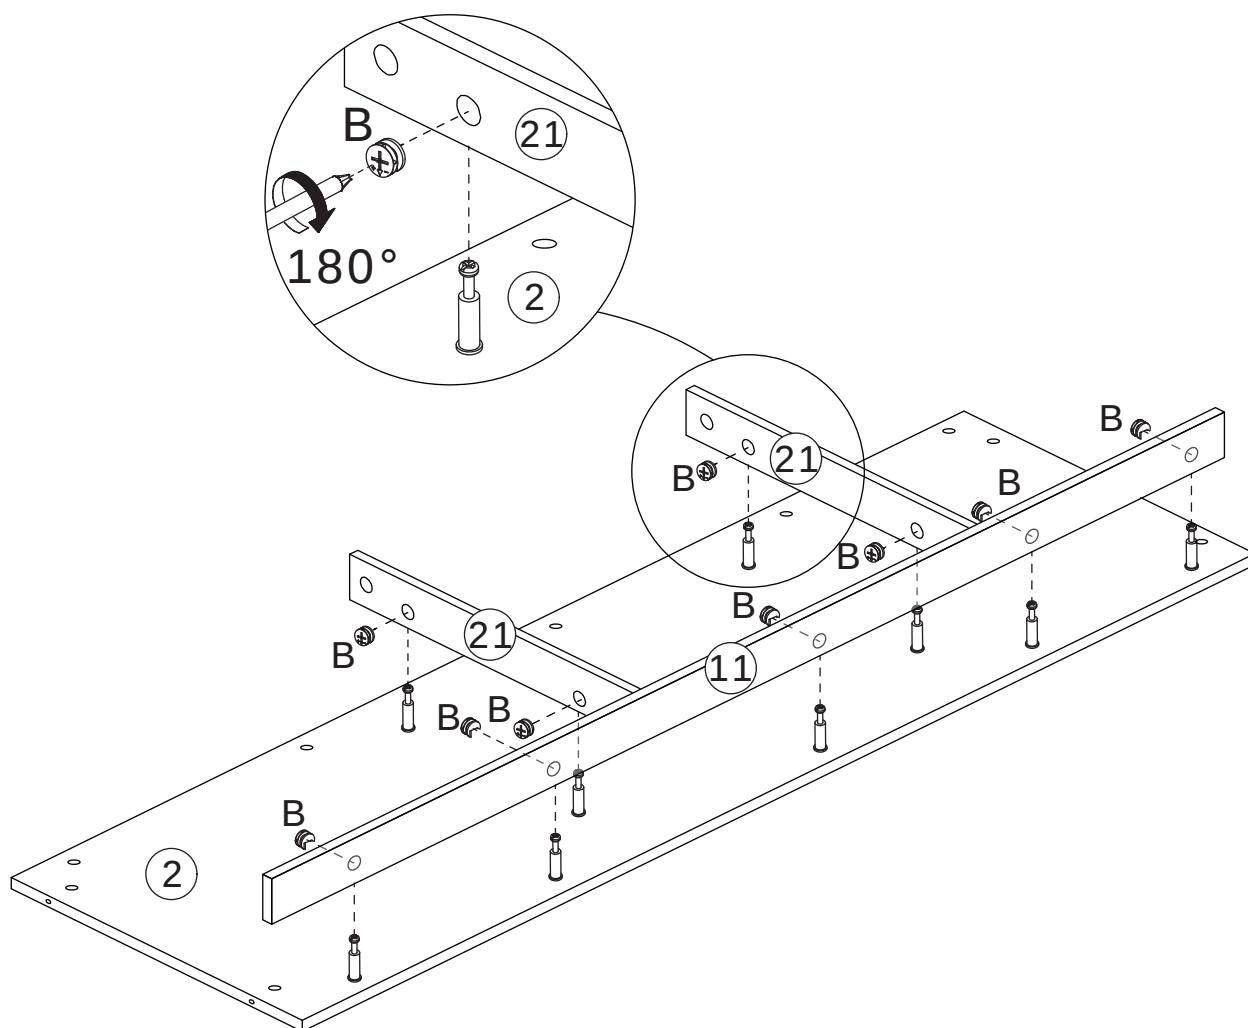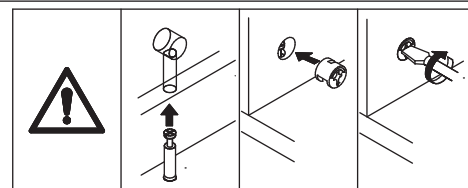

10

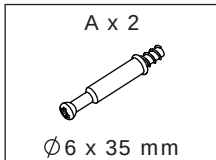  

  
Screw self-tapping rod (A) onto panel 2.

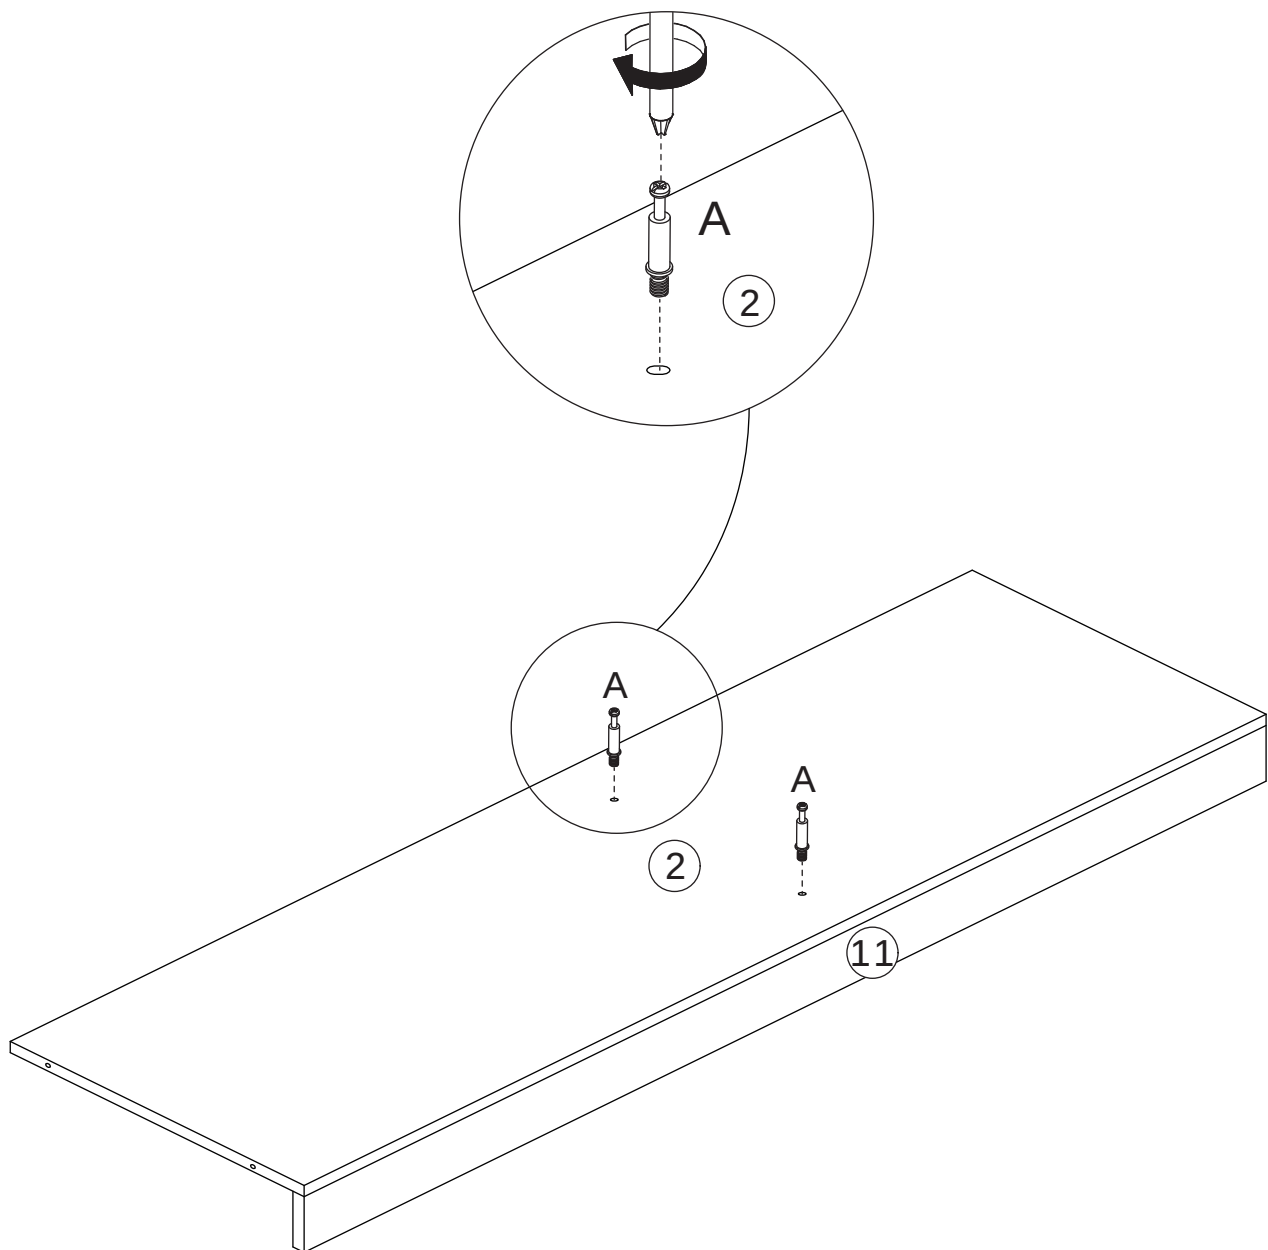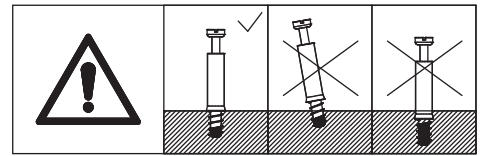



11

A x 4


 
 Ø6 x 35 mm



 
 
Screw self-tapping rod (A) onto **both sides** of panel 7.

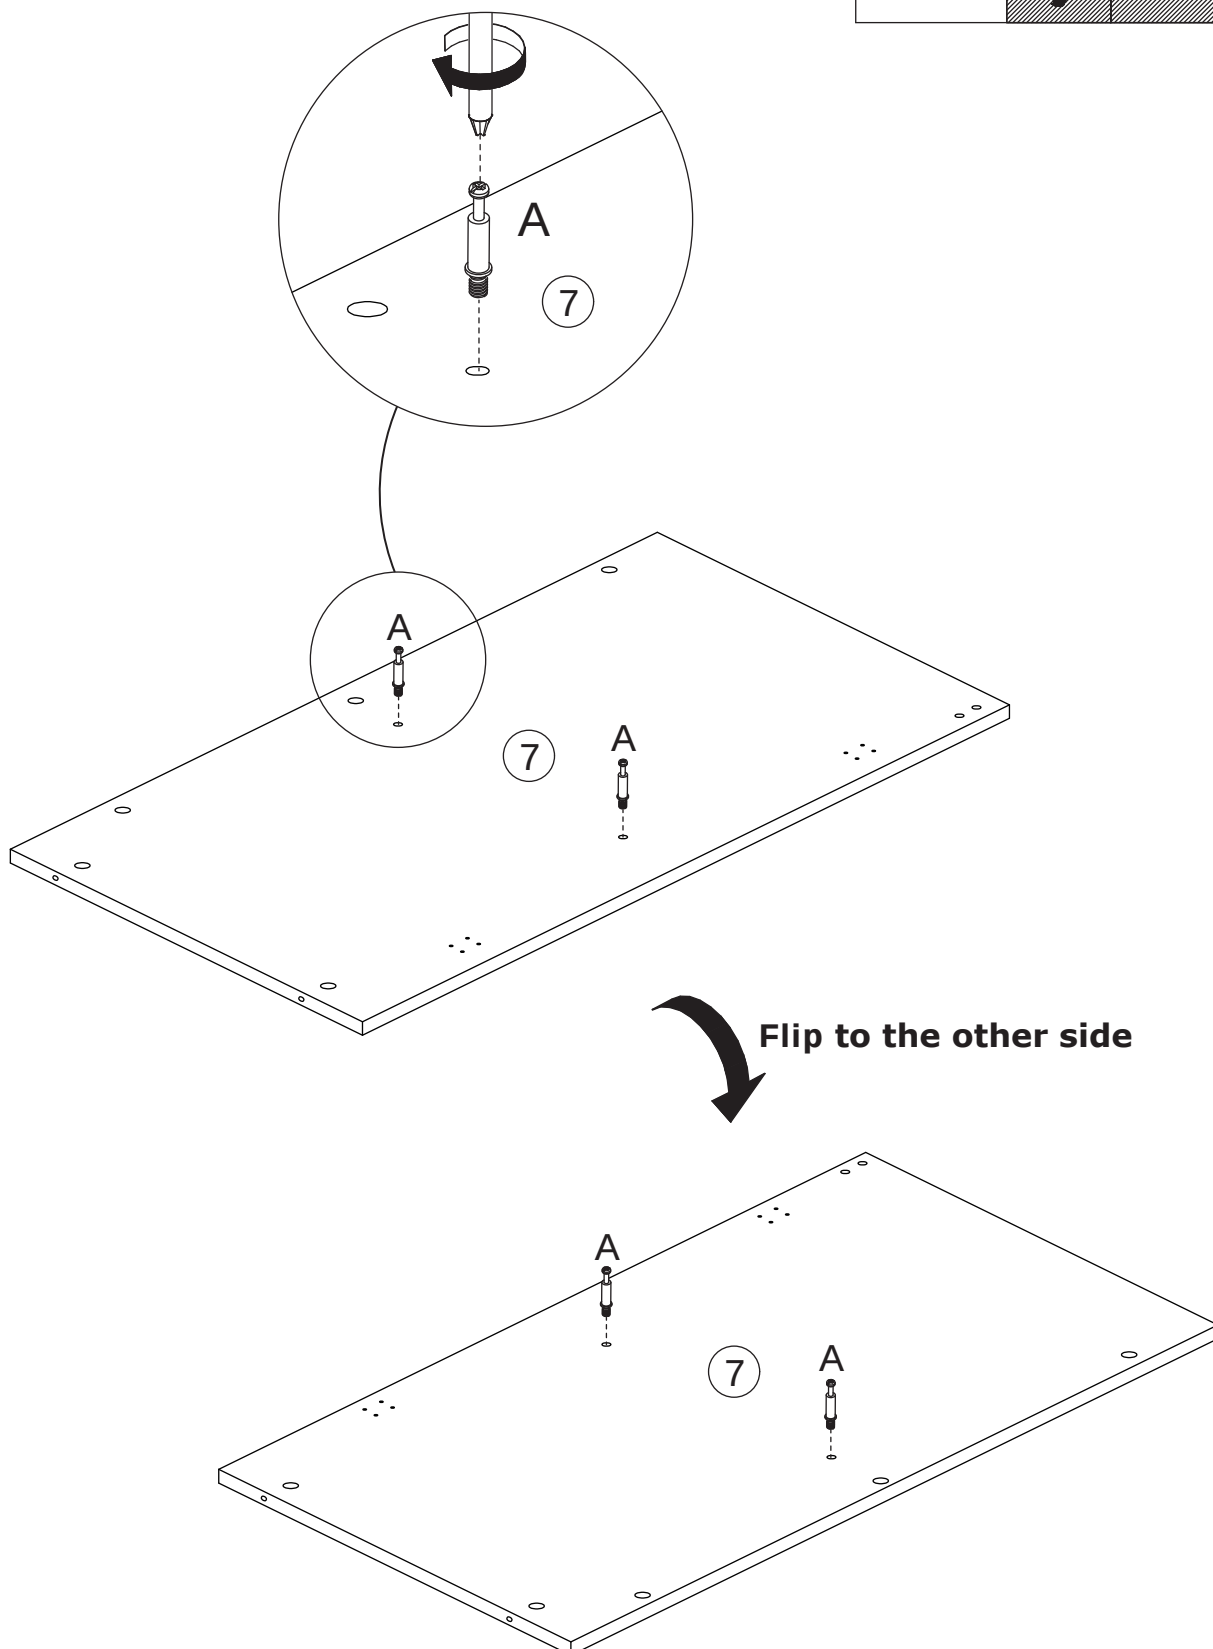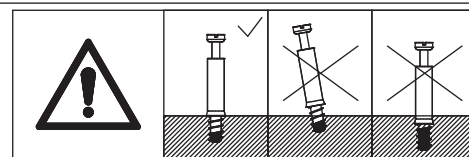



12

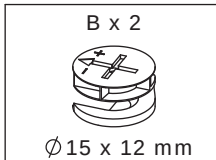  


 
 
Connect panel 7 to panel 2, and tighten by turning eccentric wheel (B) clockwise.

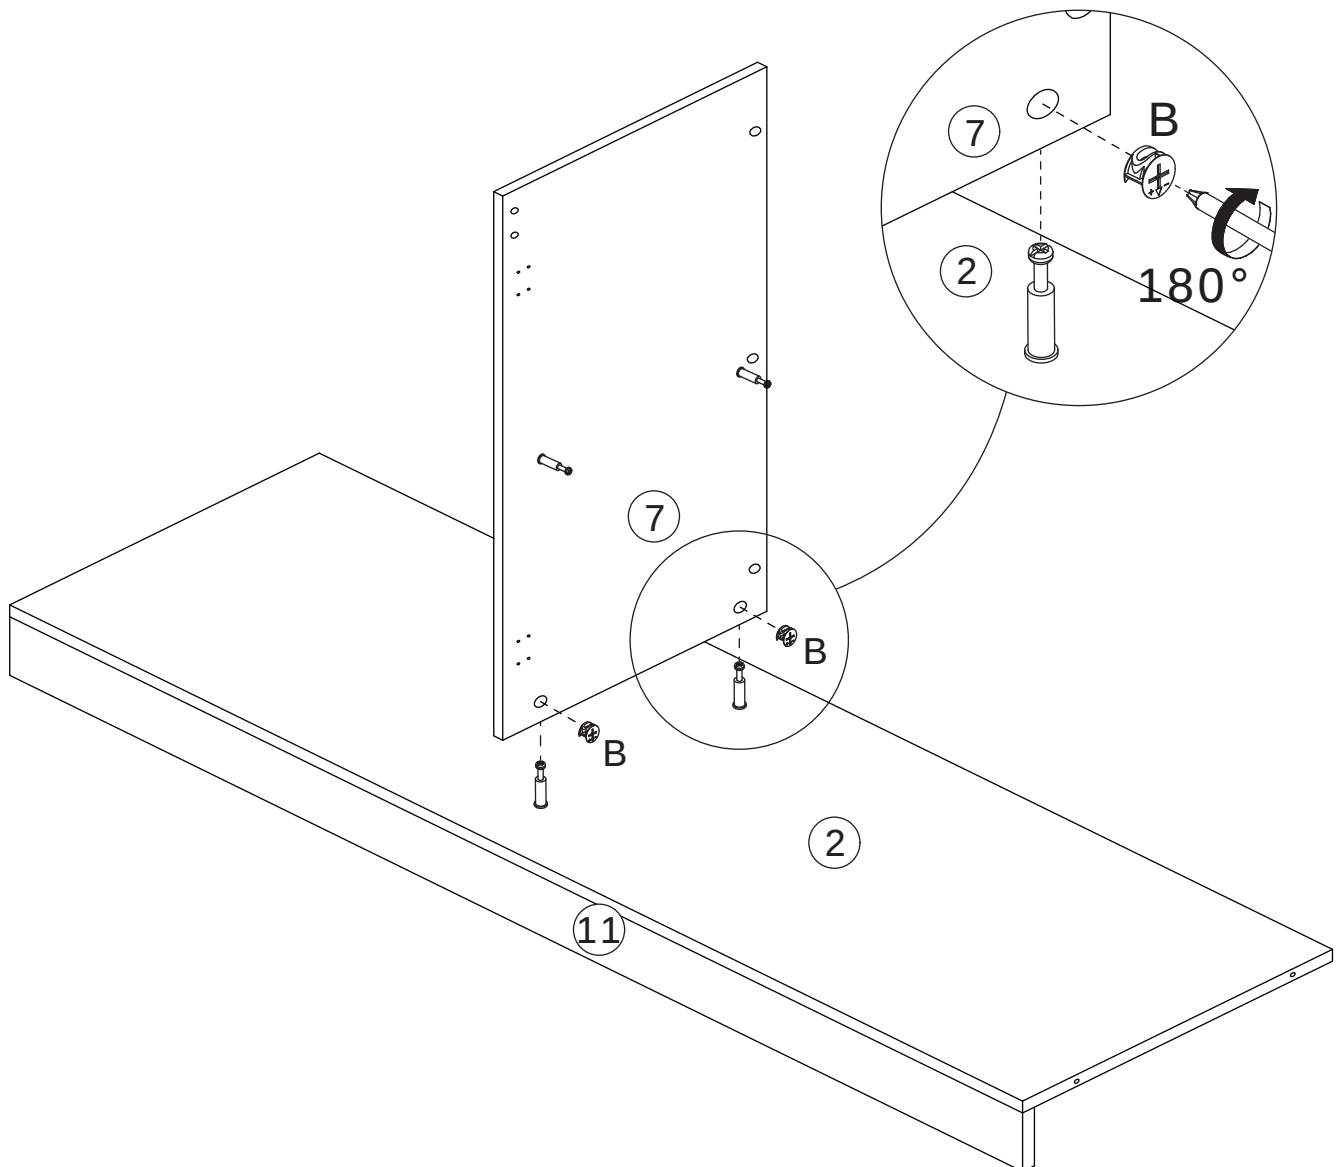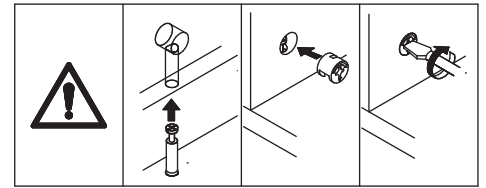


13

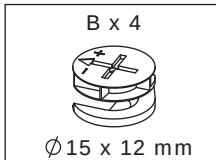  

 
 
 
Connect panel 12 to panel 7, and tighten by turning eccentric wheel (B) clockwise.

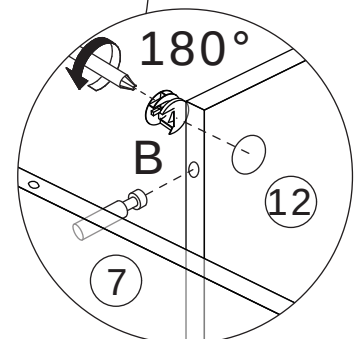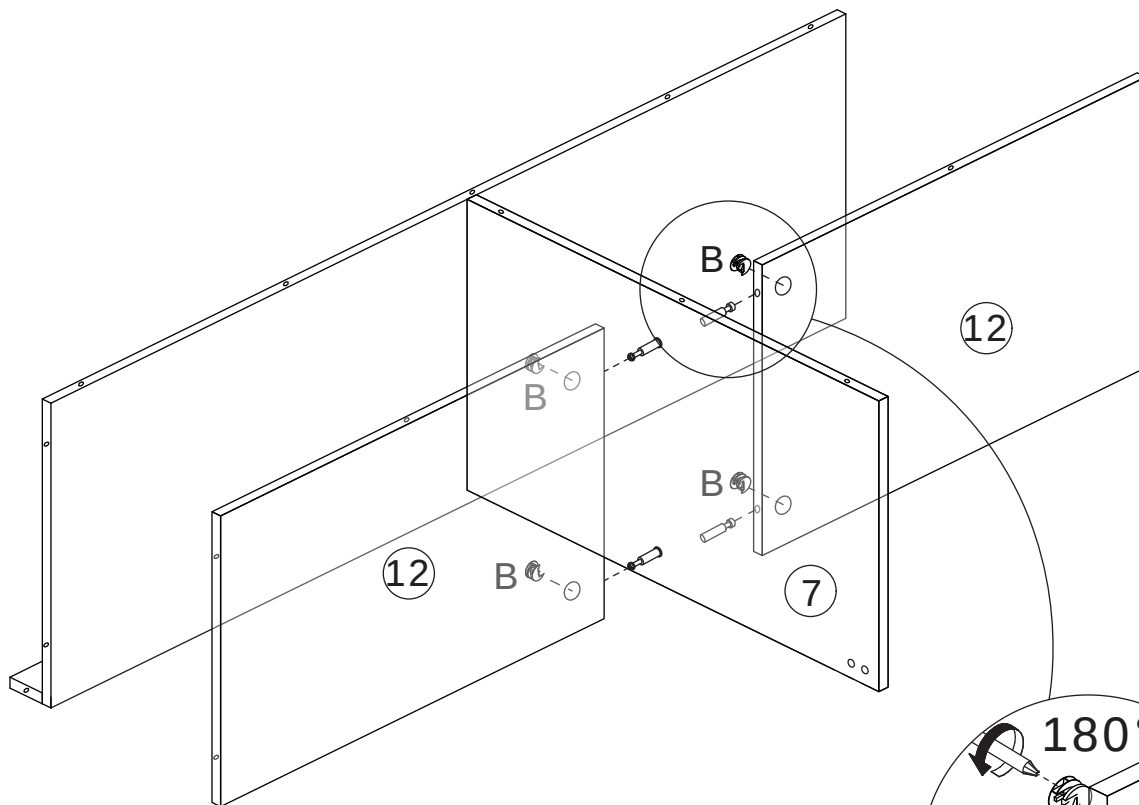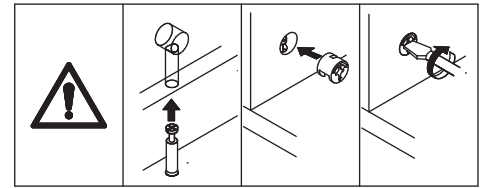



14

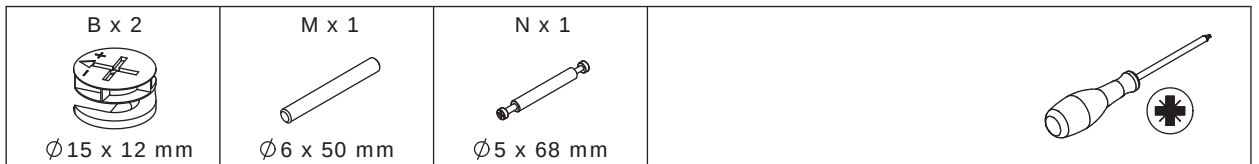 

  
 
Connect panel 22 to panel 7 using long wooden dowel (M) and rod (N), then tighten by turning eccentric wheel (B) clockwise.

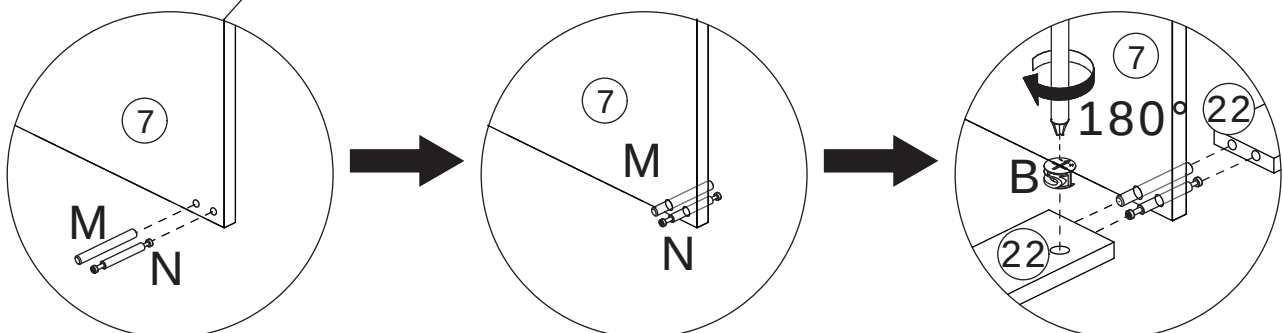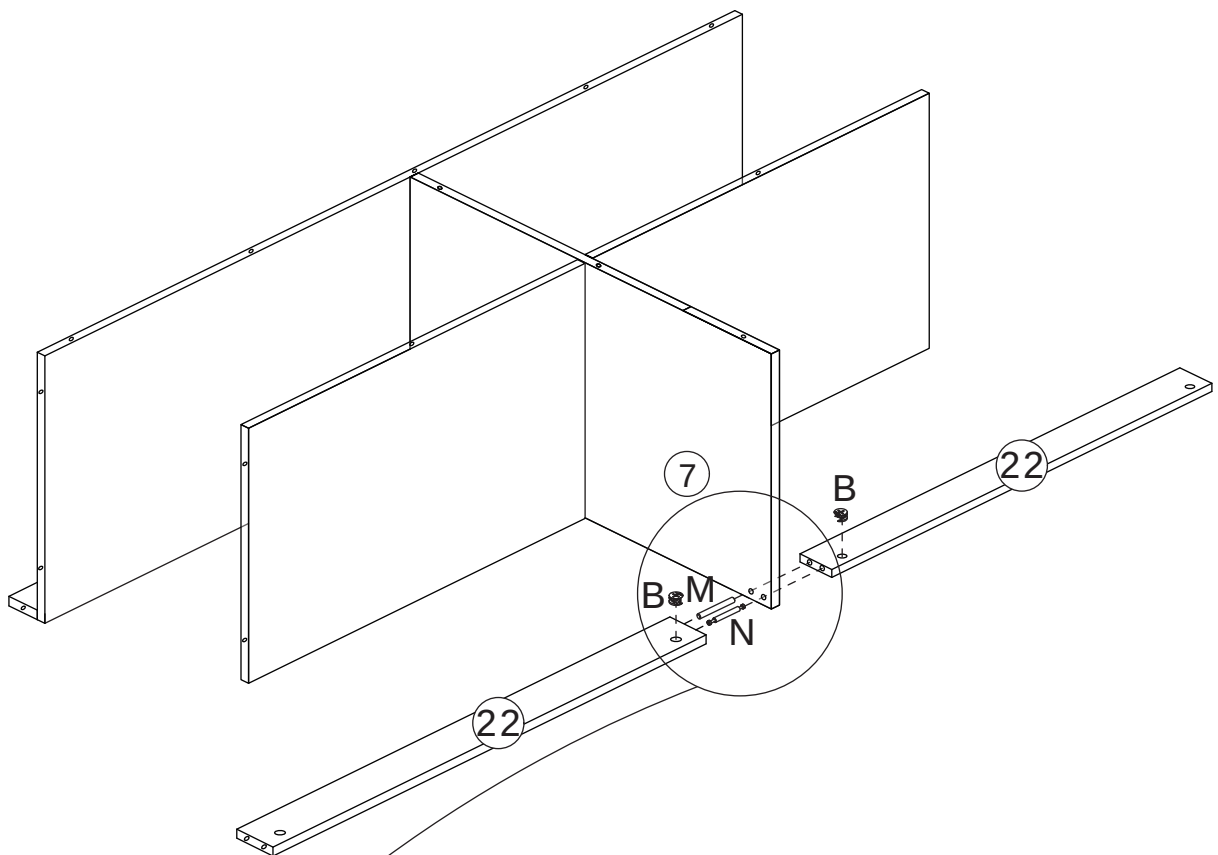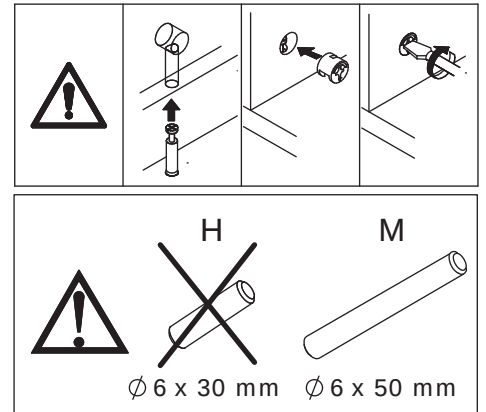



15

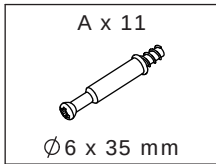  

 
 
Screw self-tapping rod (A) onto panel 13.

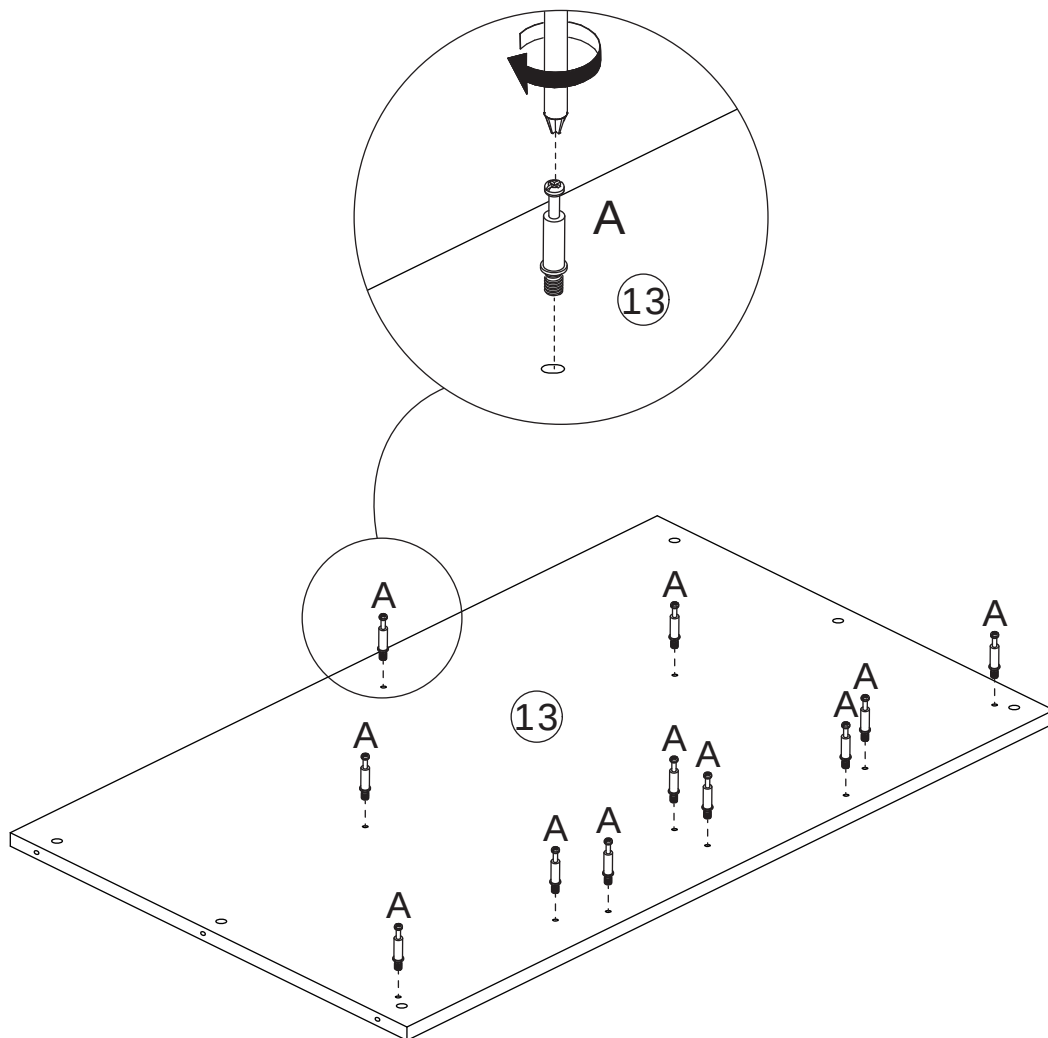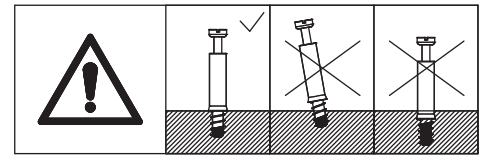



16

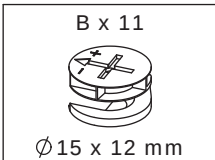  

 
 
Connect panel 13 to the assembled component, and tighten by turning eccentric wheel (B) clockwise.

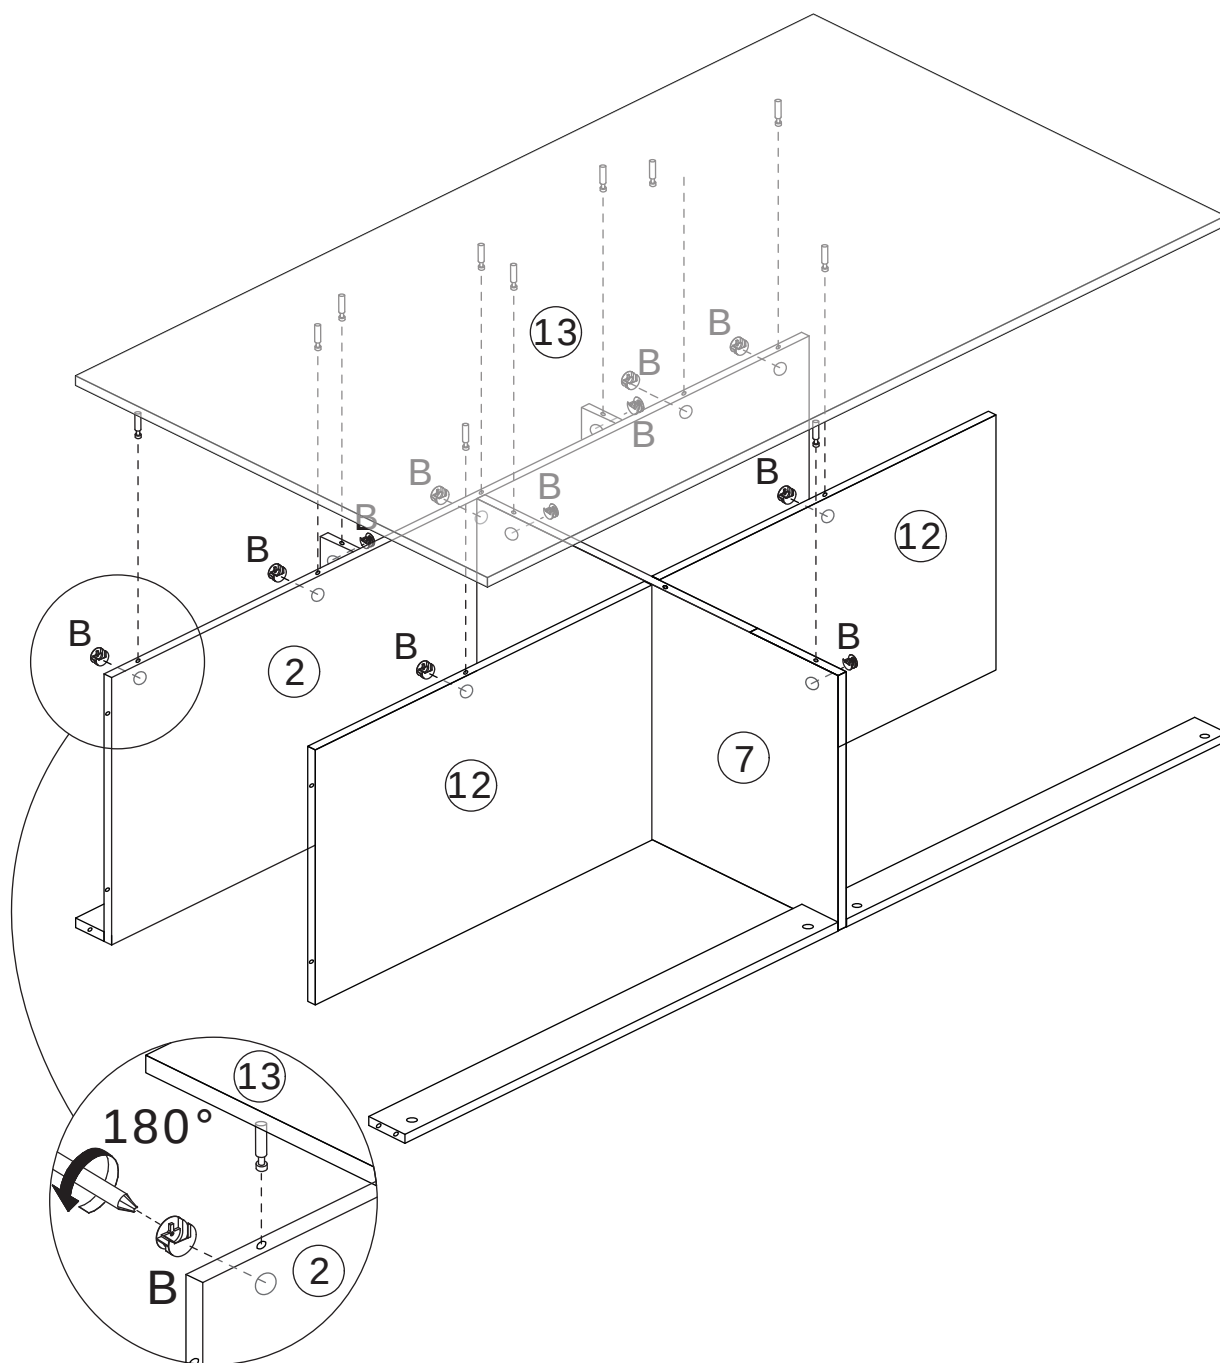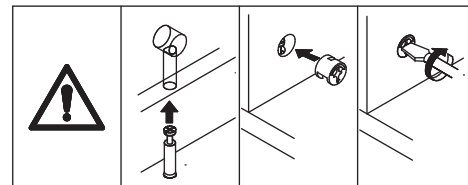



17

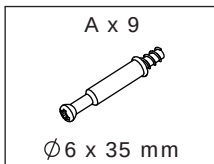  

 
 
Screw self-tapping rod (A) onto panel 8.

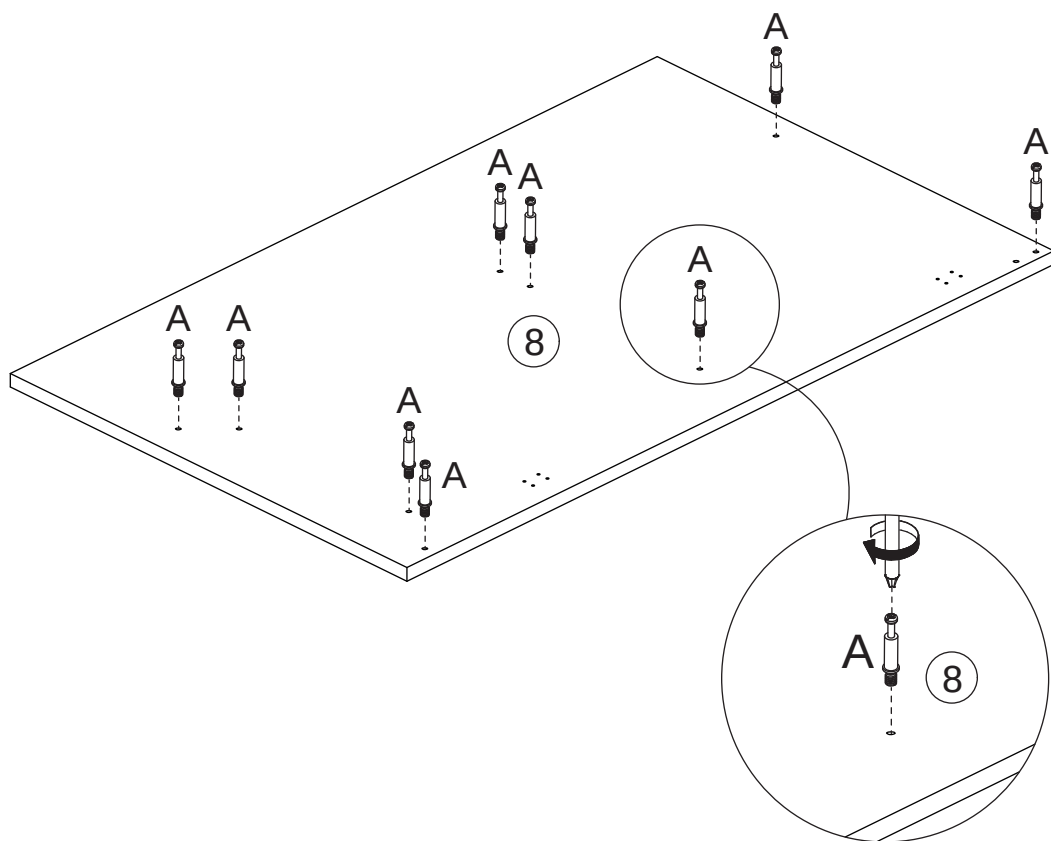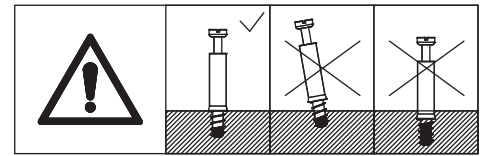

18

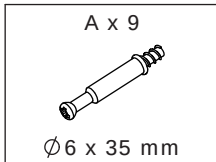  

  Screw self-tapping rod (A) onto panel 6.

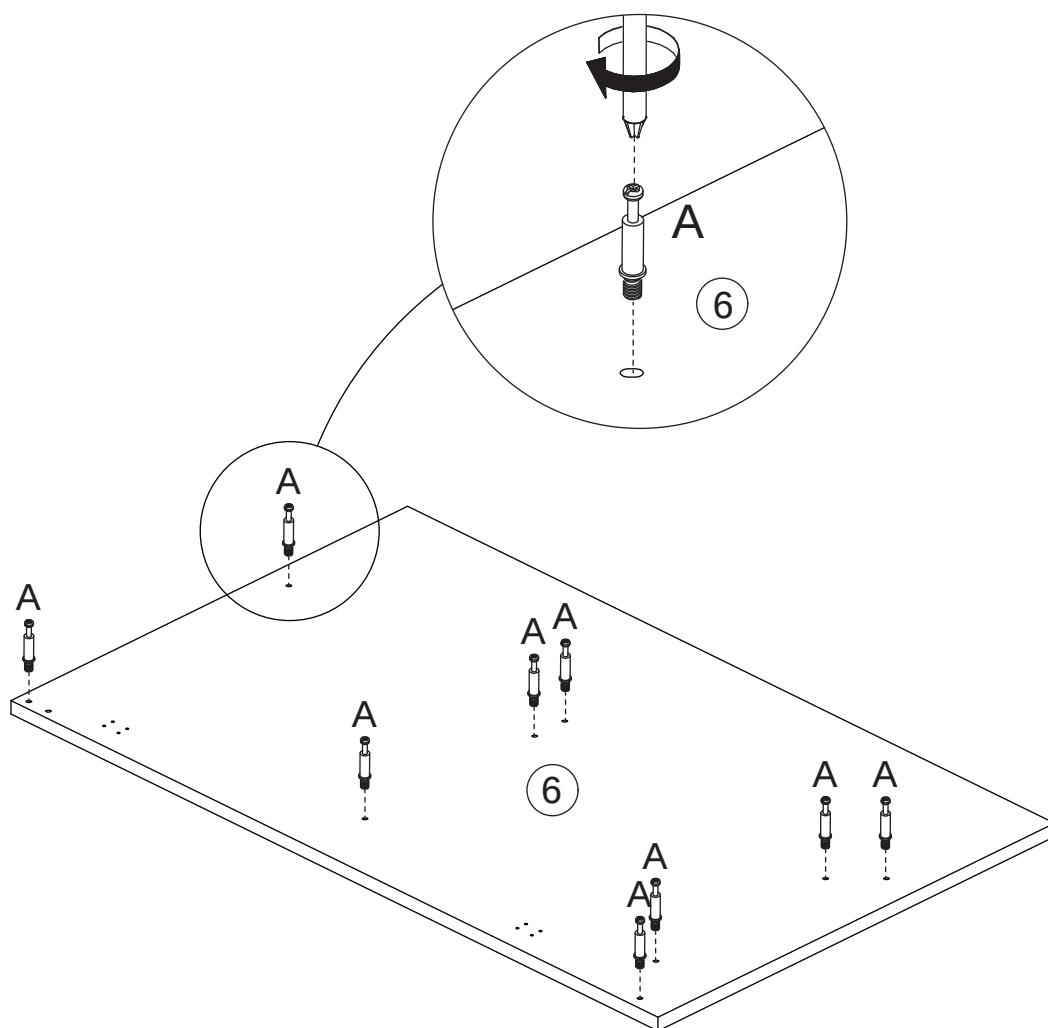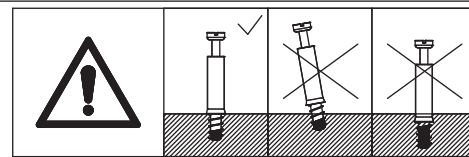


19

B x 6




Ø 15 x 12 mm

 H x 1





Ø 6 x 30 mm

 

Insert wooden dowel (H) into panel 22 first.

  Connect panel 8 to the assembled component, and tighten by turning eccentric wheel (B) clockwise.

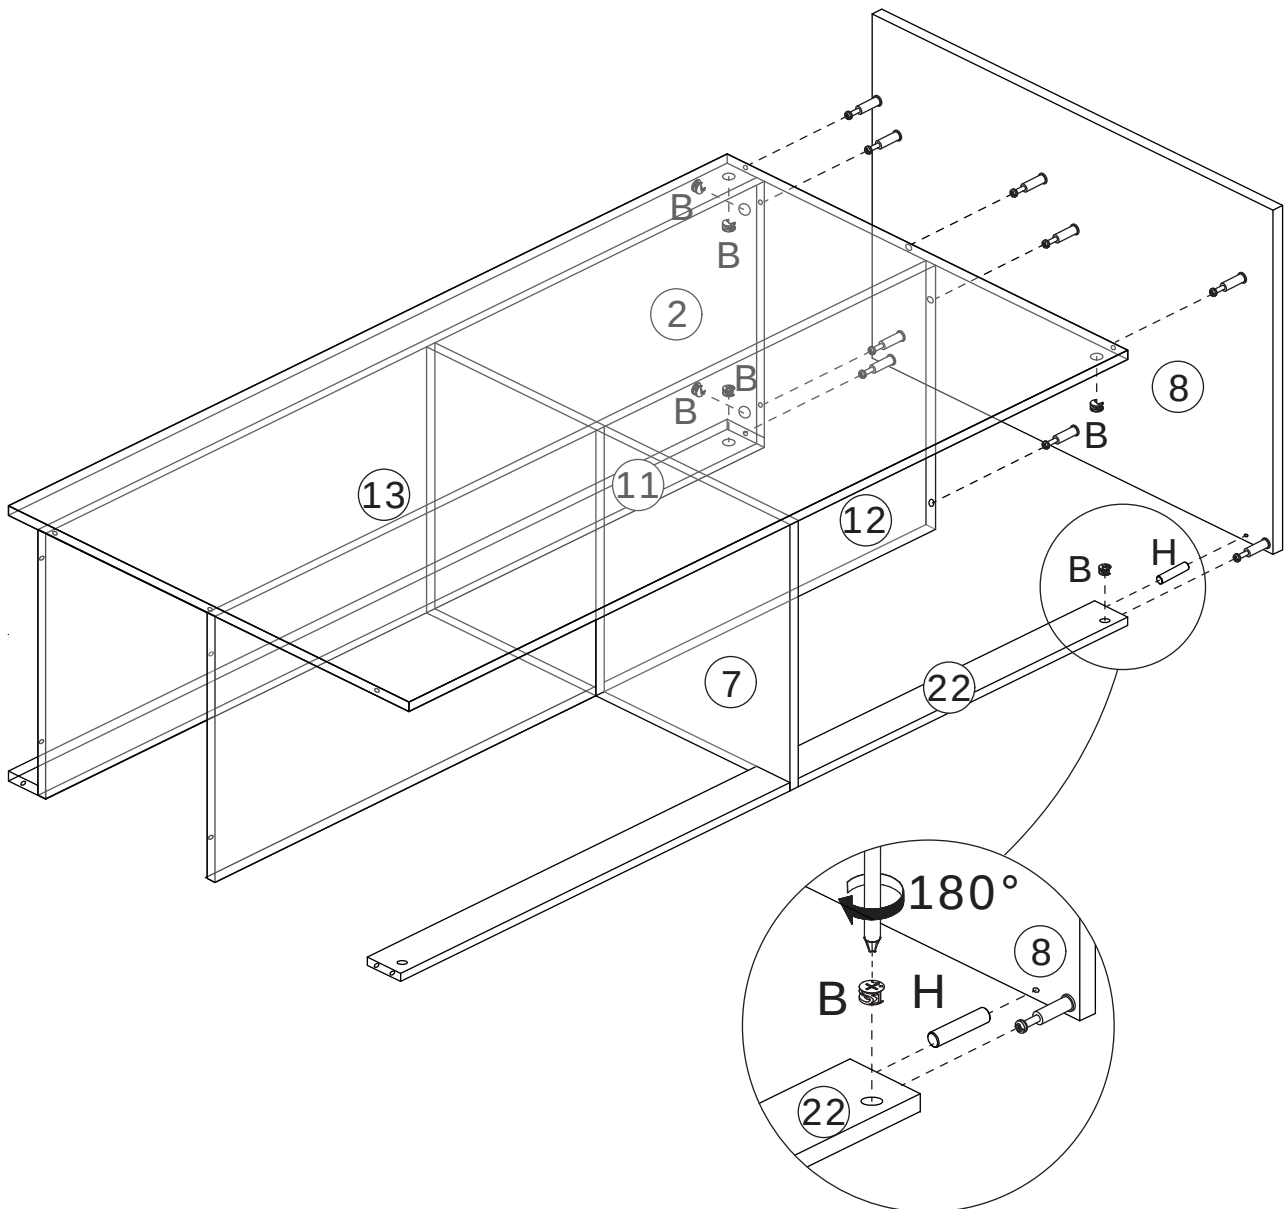
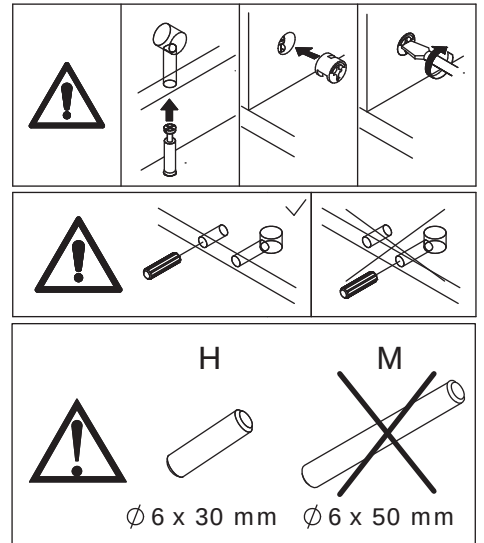


20





Insert wooden dowel (H) into panel 22 first.


 
 
Connect panel 6 to the assembled component, and tighten by turning eccentric wheel (B) clockwise.

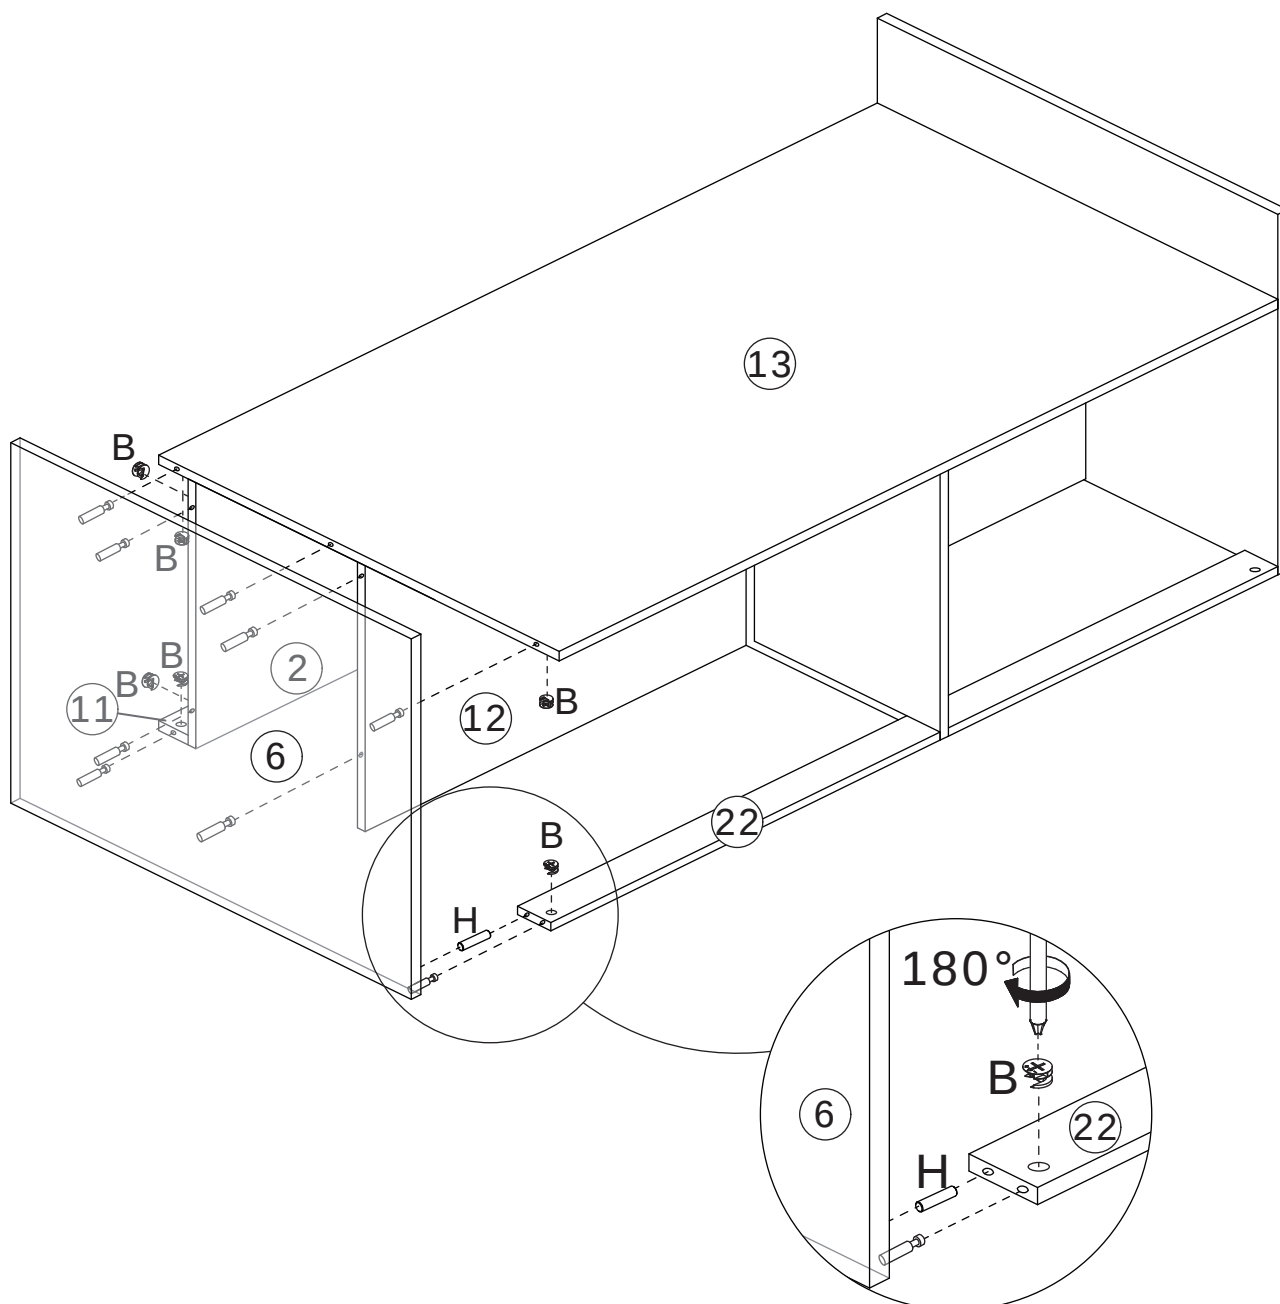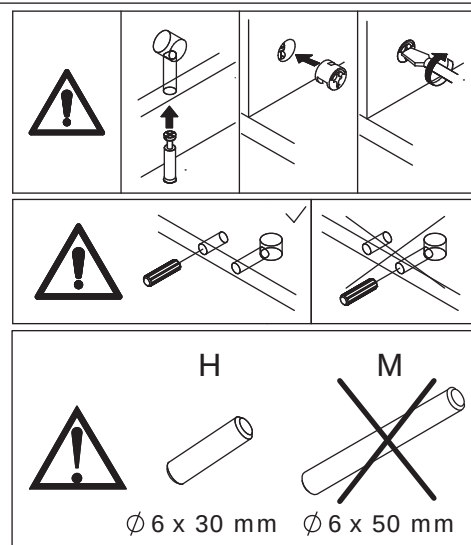

21

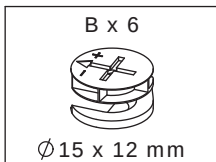  

  
 
Put eccentric wheel (B) into holes on panel 12, and tighten them.

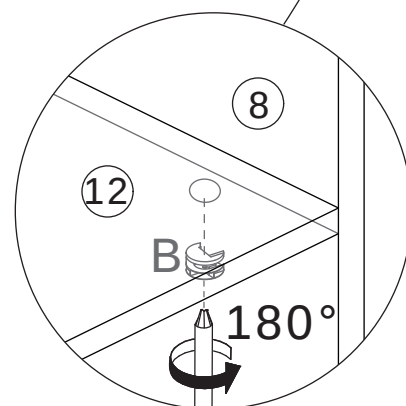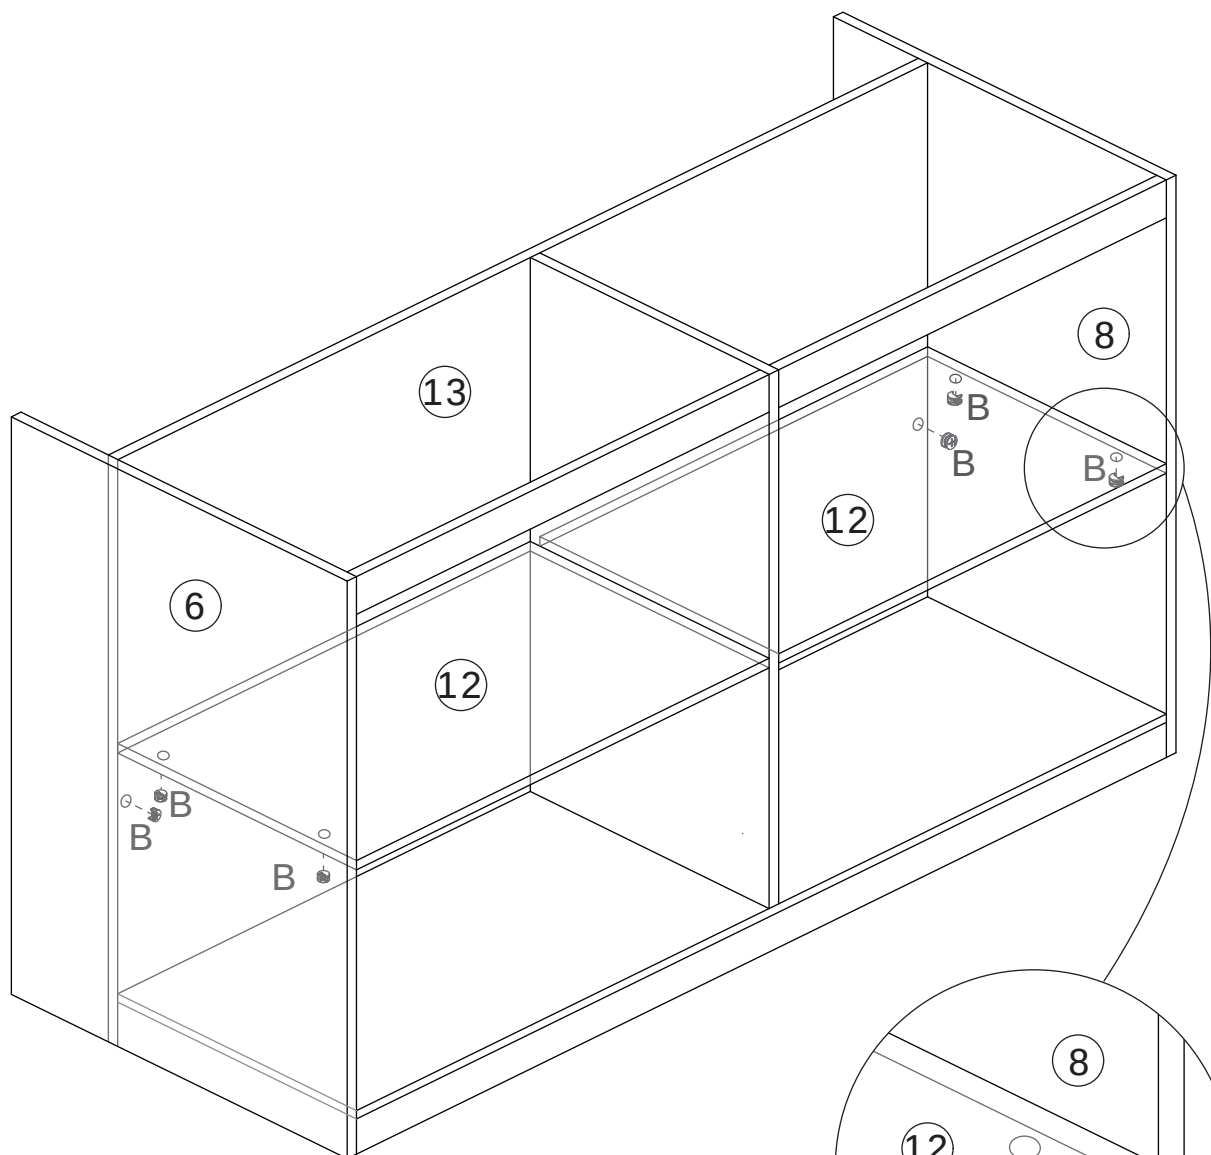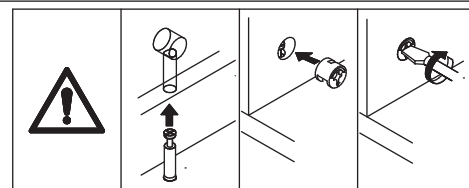


Pay attention to the difference between the middle parts of the two types of door hinges .






 
 
- The full coverage door hinges(L) are used on the outermost door plates.
- And the large curved door hinges(T) are used on the middle door plates.

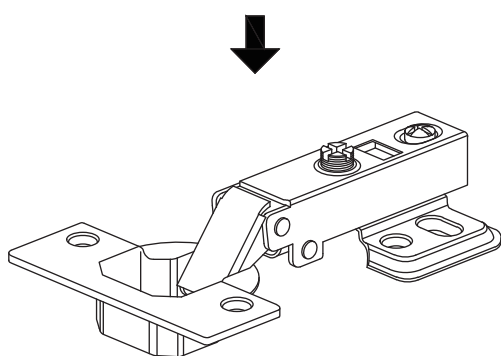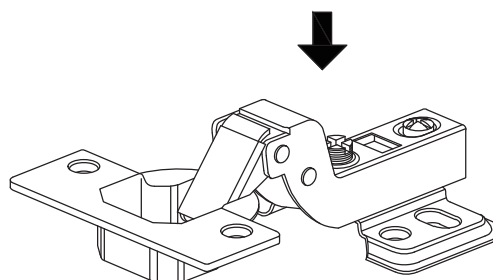**L****T**


 
23

C x 8  Ø 3 x 12 mm	E x 4  Ø 4 x 16 mm	F x 2 	L x 4 	
---	---	--	---	---

    
 
Secure hinge (L) to panel 19 using screw (C).
Secure handle (F) using screw (E) as shown.

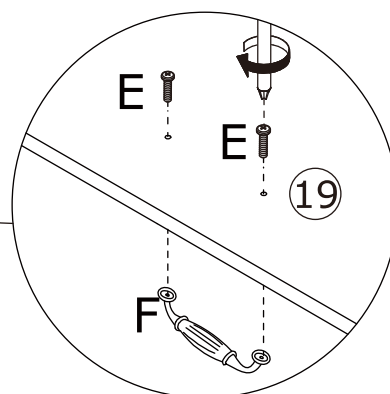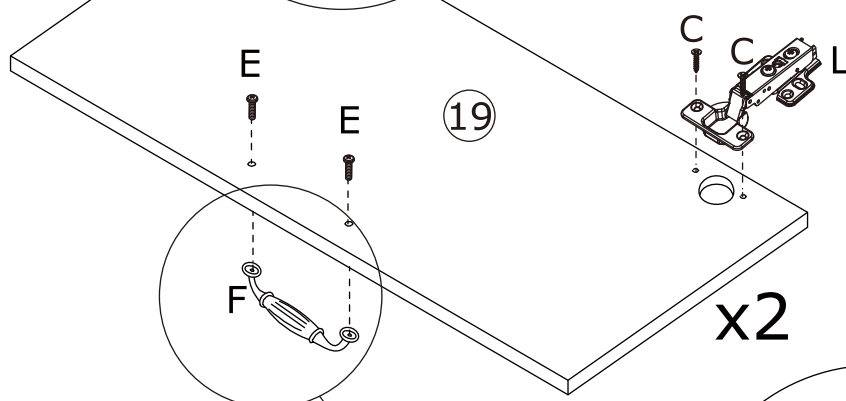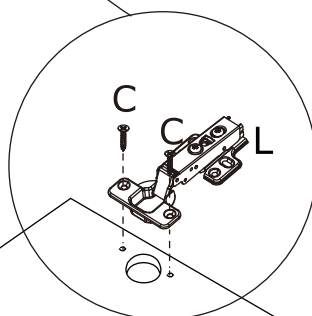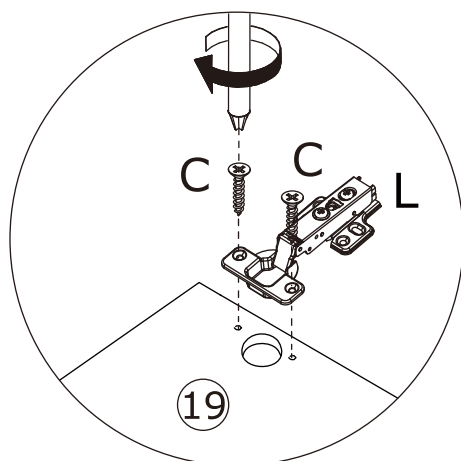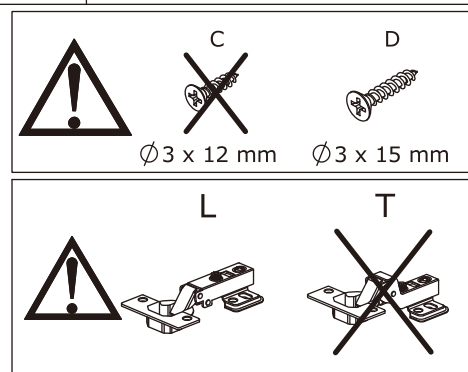

24

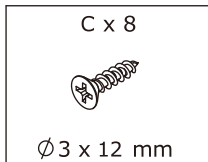  

  Secure panel 19 to panel 8 via hinges using screw (C) as shown.

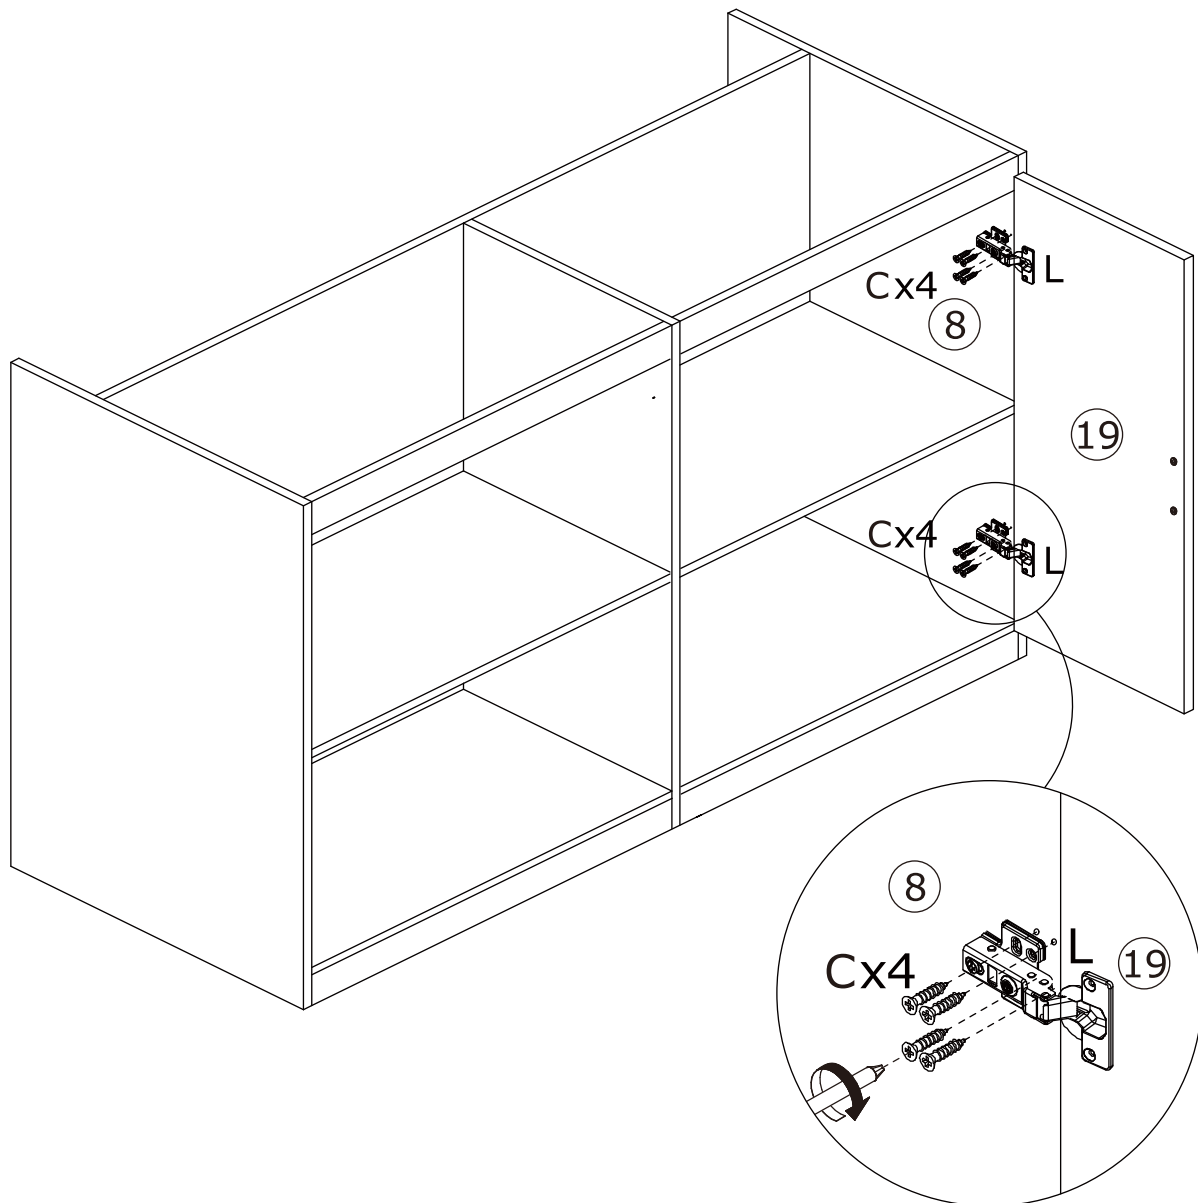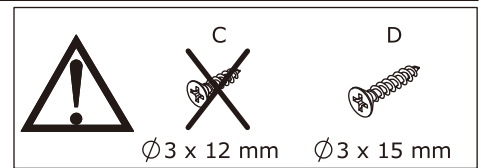


25

C x 8



 Ø 3 x 12 mm




Secure panel 19 to panel 6 via hinges using screw (C) as shown.




Ø 3 x 12 mm







 
Ø 3 x 15 mm

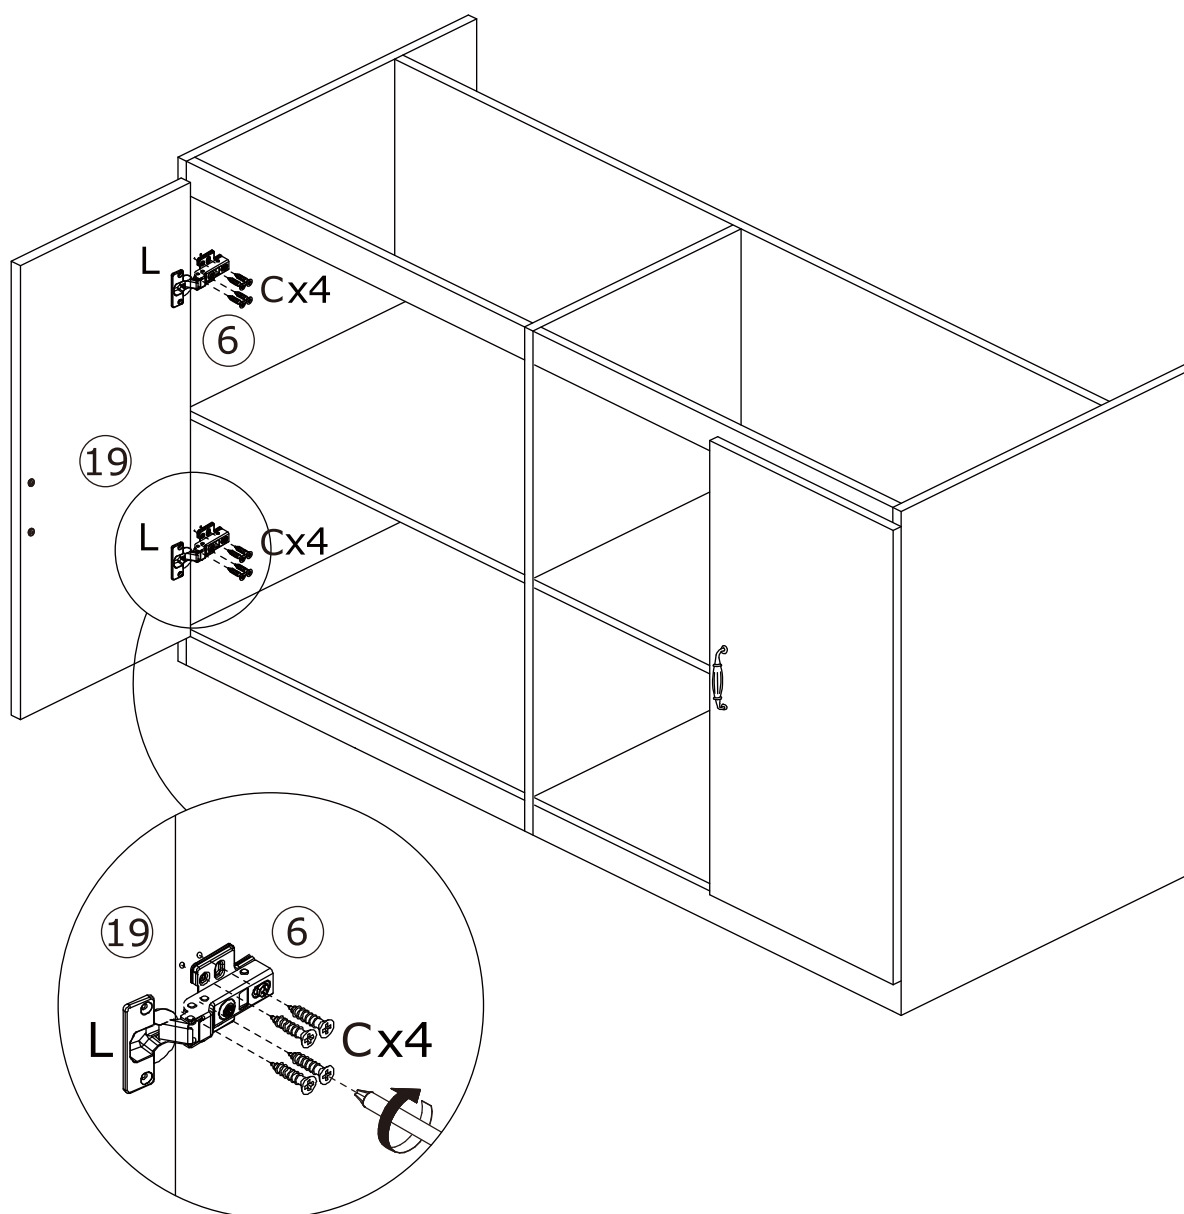



26

 C x 8  Ø 3 x 12 mm	E x 4  Ø 4 x 16 mm	F x 2 	T x 4 	
---	---	--	---	---

   
 
 
Secure hinge (T) to panel 20 using screw (C).
Secure handle (F) using screw (E) as shown.

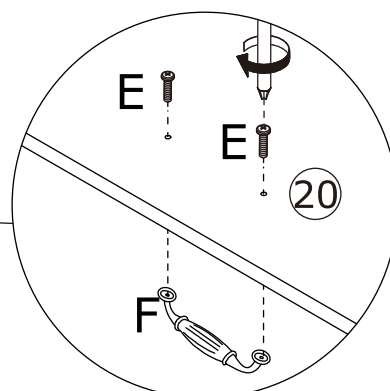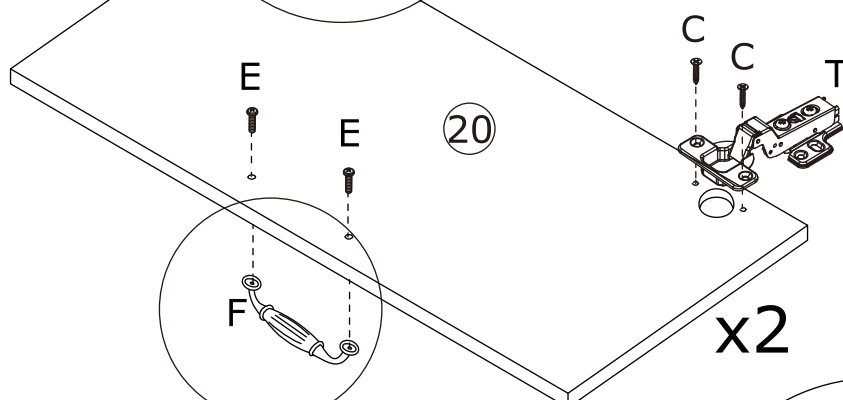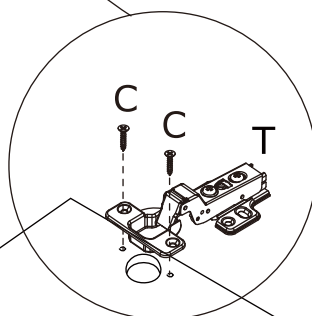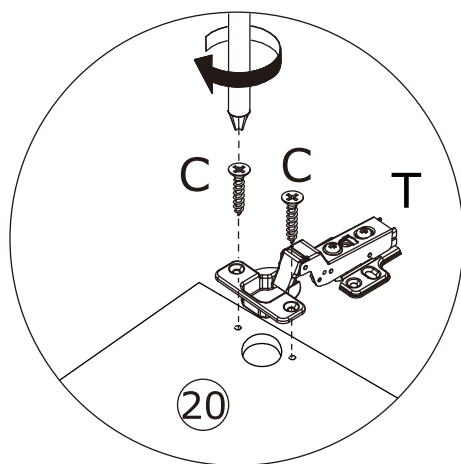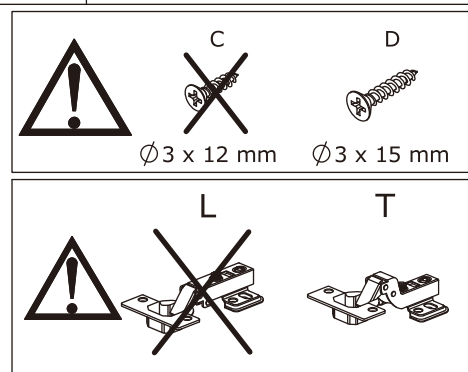



27

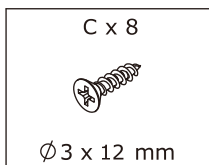  

  
 
Secure panel 20 to panel 7 via hinges using screw (C) as shown.

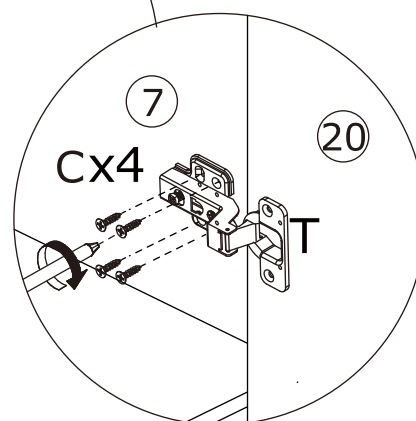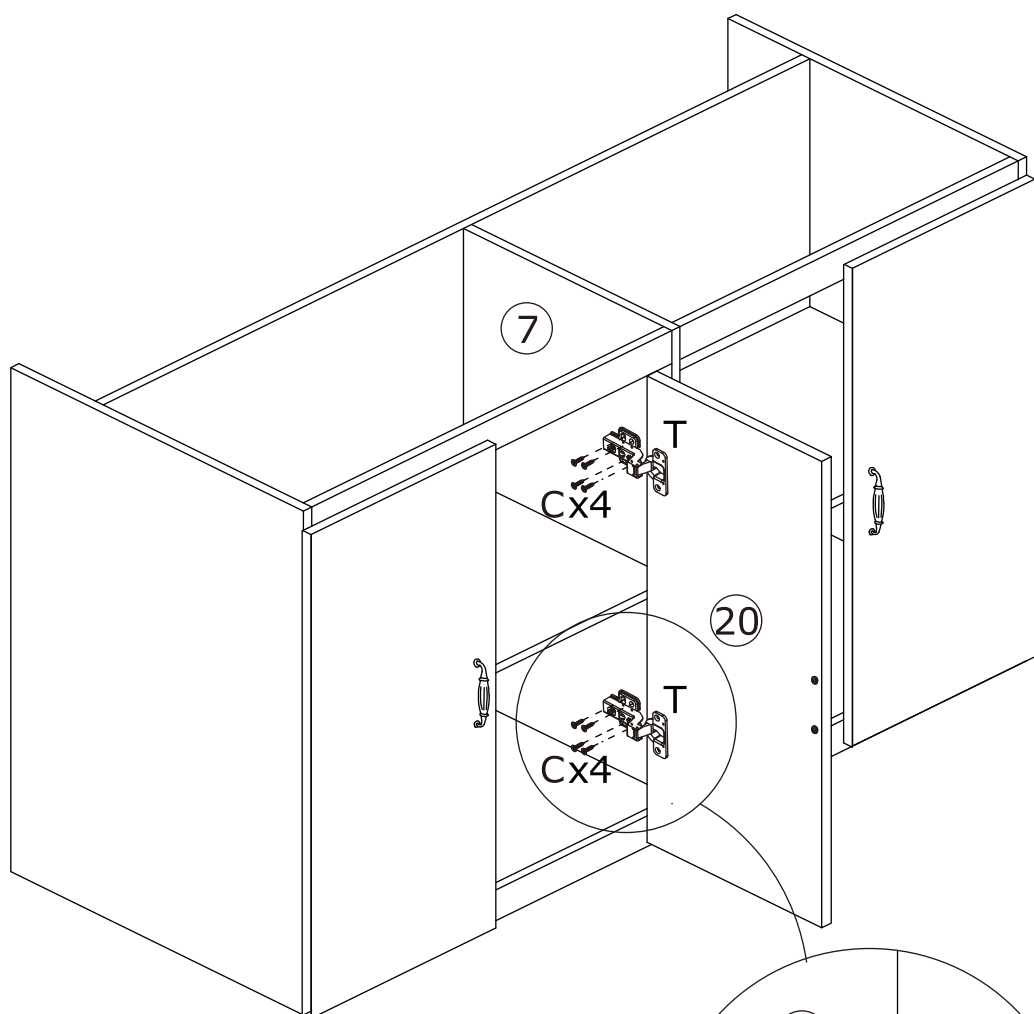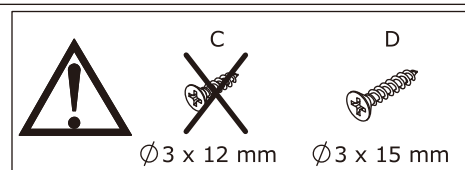



28

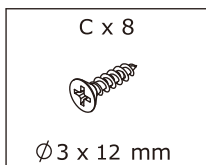  

 
 
Secure panel 20 to panel 7 via hinges using screw (C) as shown.

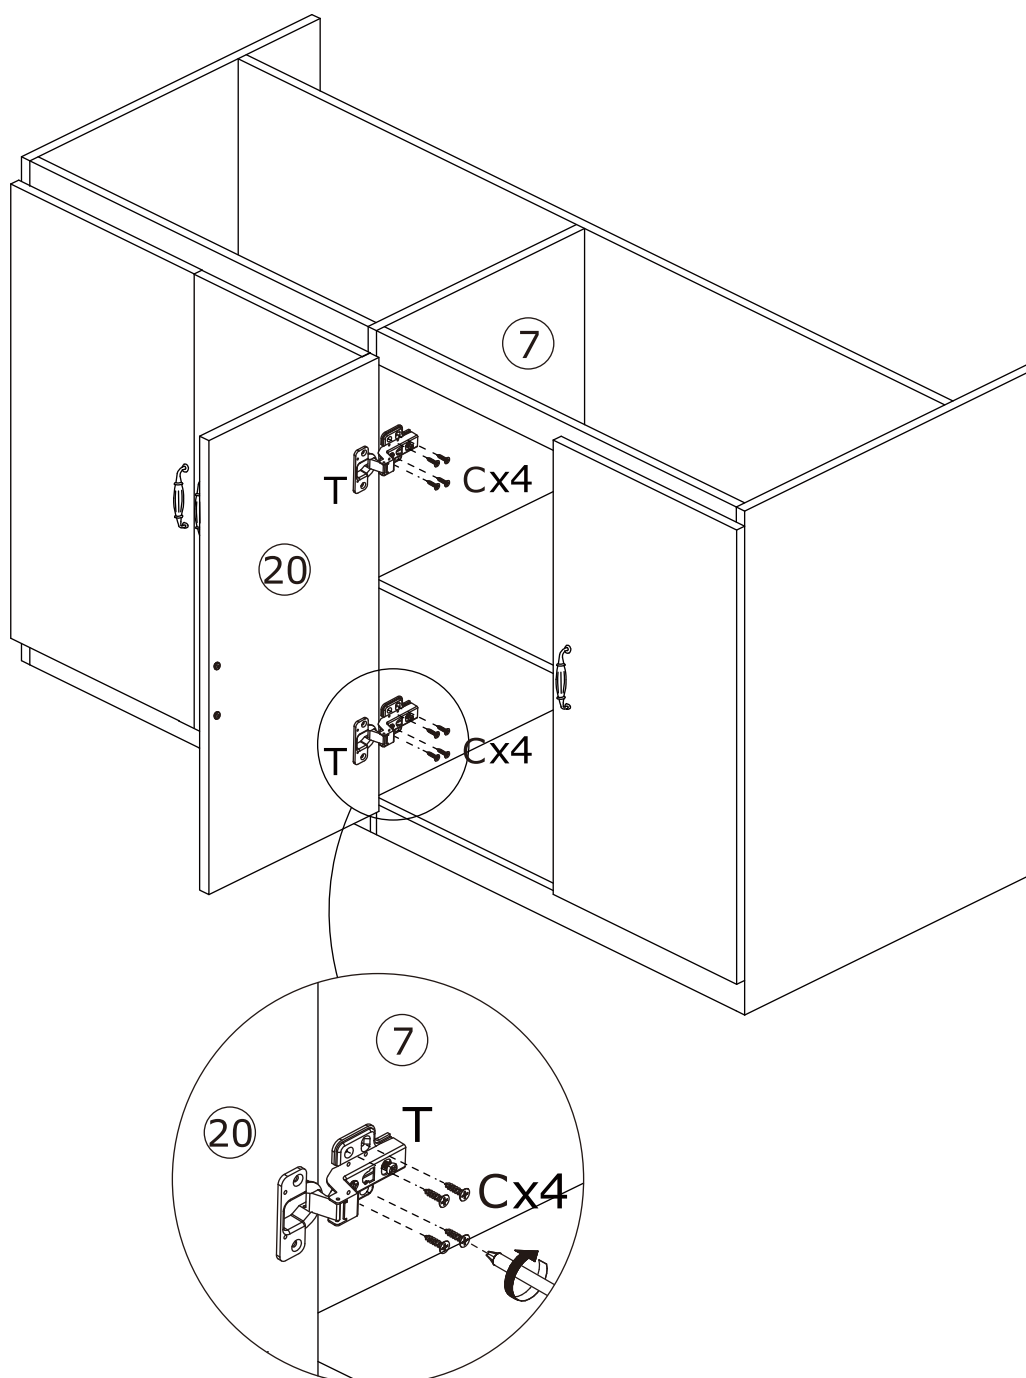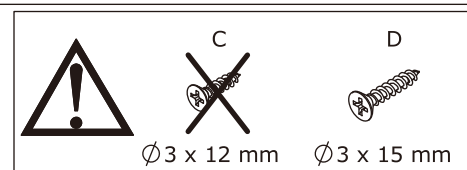



29

  A x 24  Ø 6 x 35 mm	E x 12  Ø 4 x 16 mm	F x 6 	
--	--	--	---

  
Screw self-tapping rod (A) onto panel 18.
Secure handle (F) using screw (E) as shown.

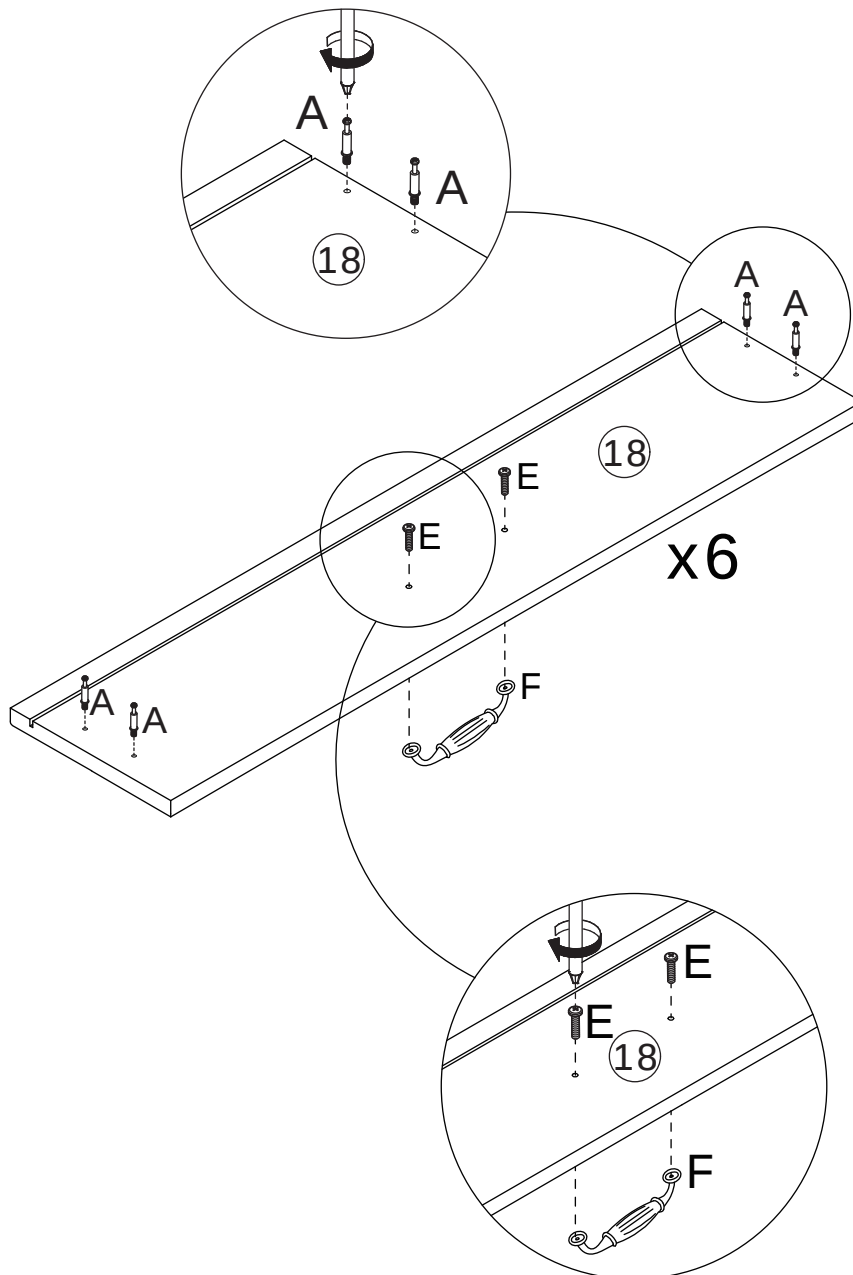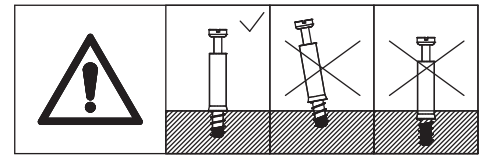

30

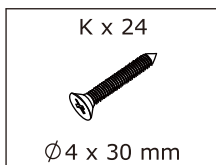  


 Secure panels 15, 16 and 17 using screw (K) as shown.

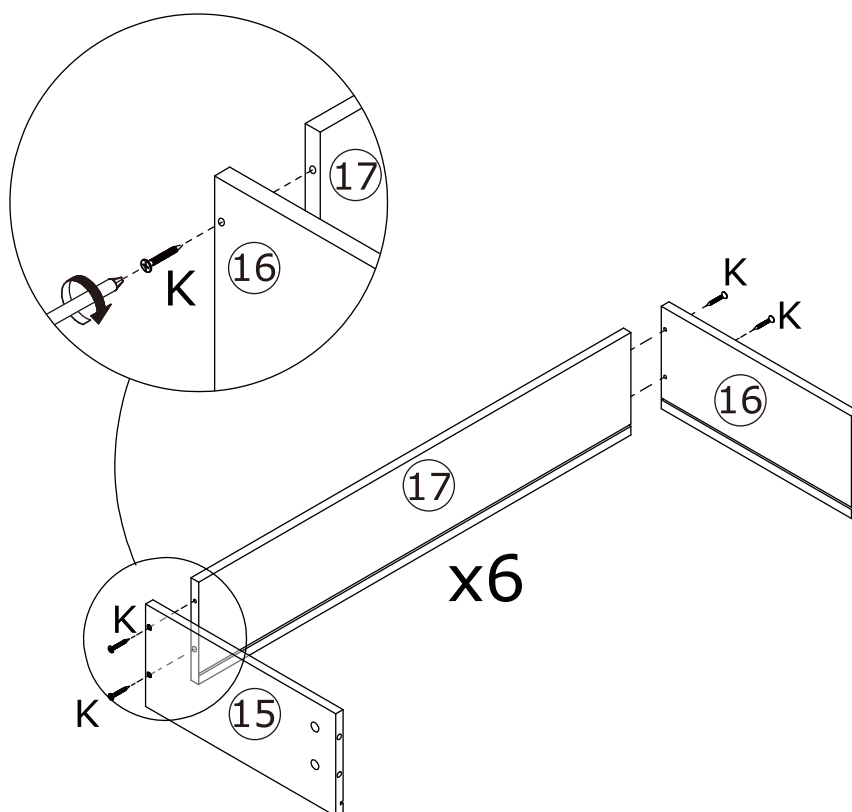

31

 Insert panel 14 along the grooves as shown.

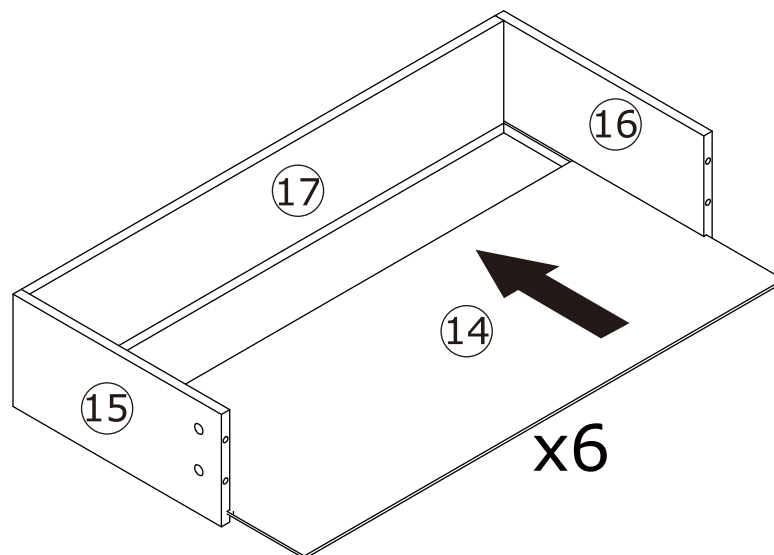


32



B x 24



 Ø 15 x 12 mm





 
 
Connect panels 15 and 16 to panel 18, and tighten by turning eccentric wheel (B) clockwise.

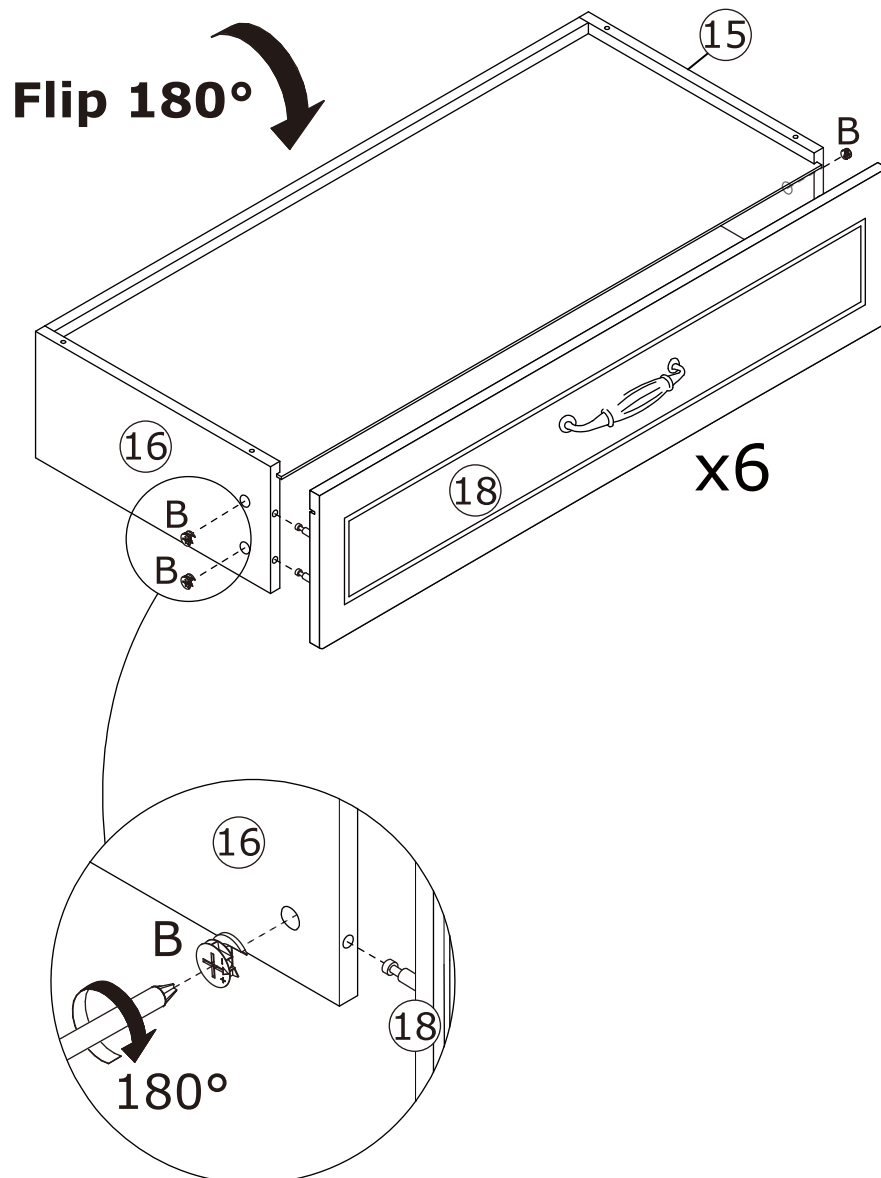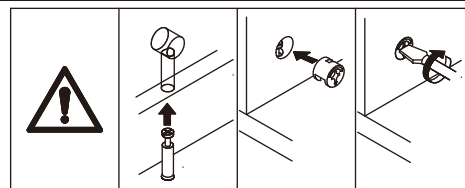



33



    
Secure slide rail (R) to panels 15 and 16 using screw (C) as shown.

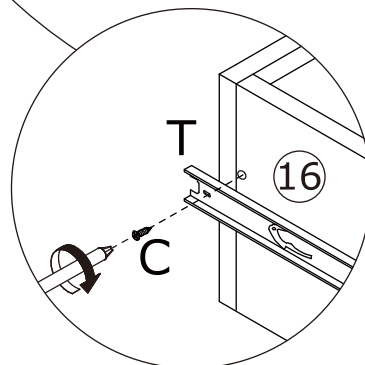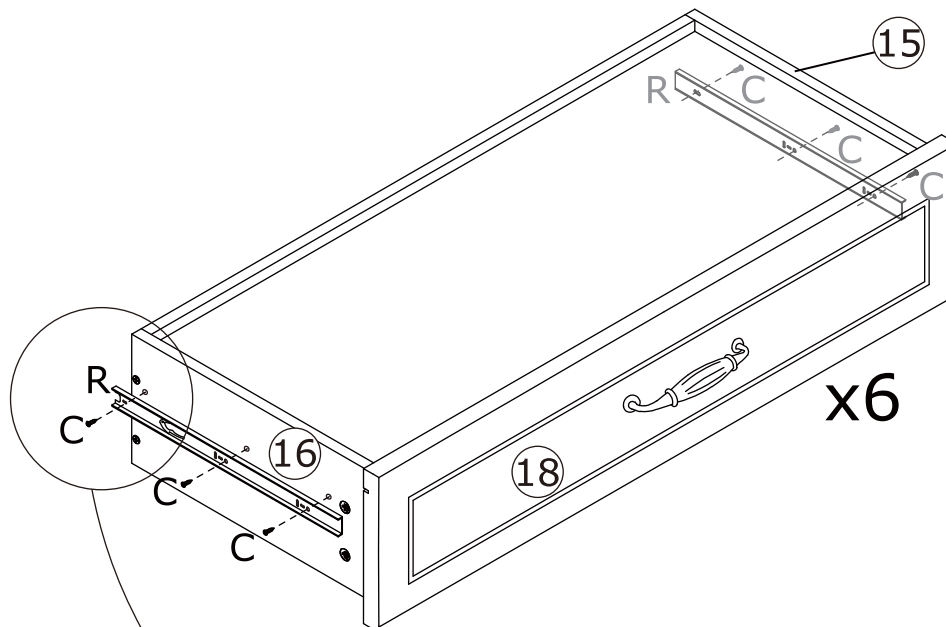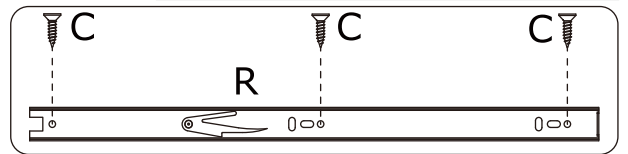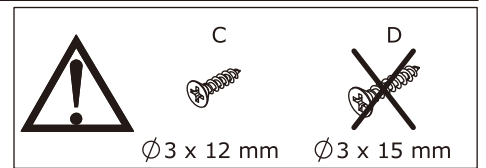

34

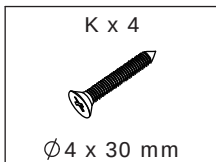  


 
Connect the two assembled components together using screw (K).

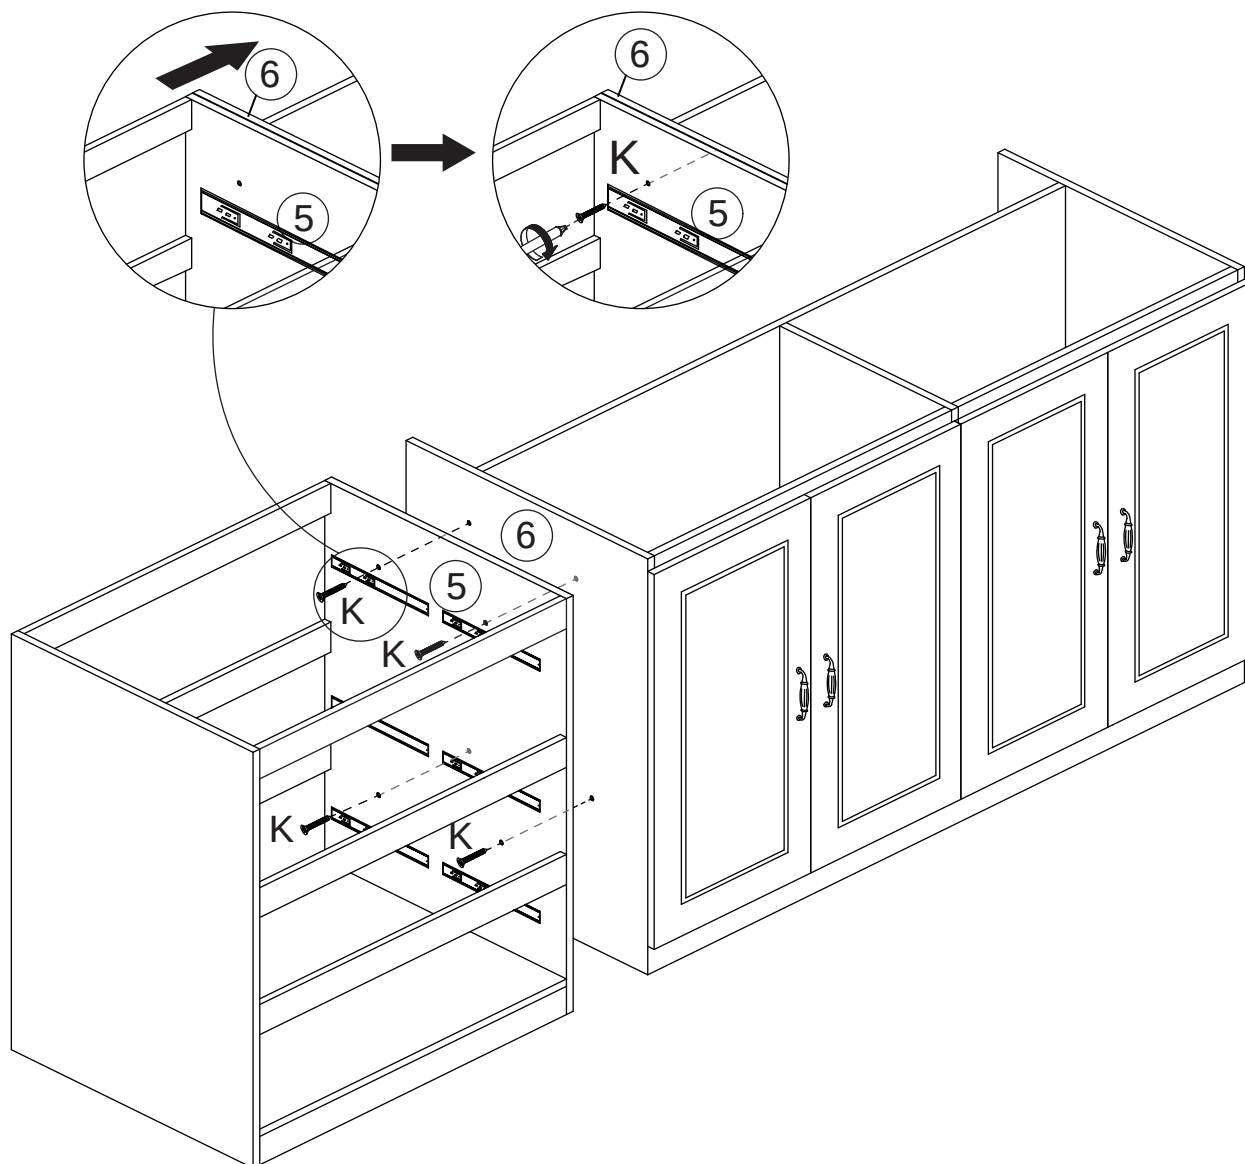


35

   Align the assembled drawers with the rails and slide them into the unit as shown.

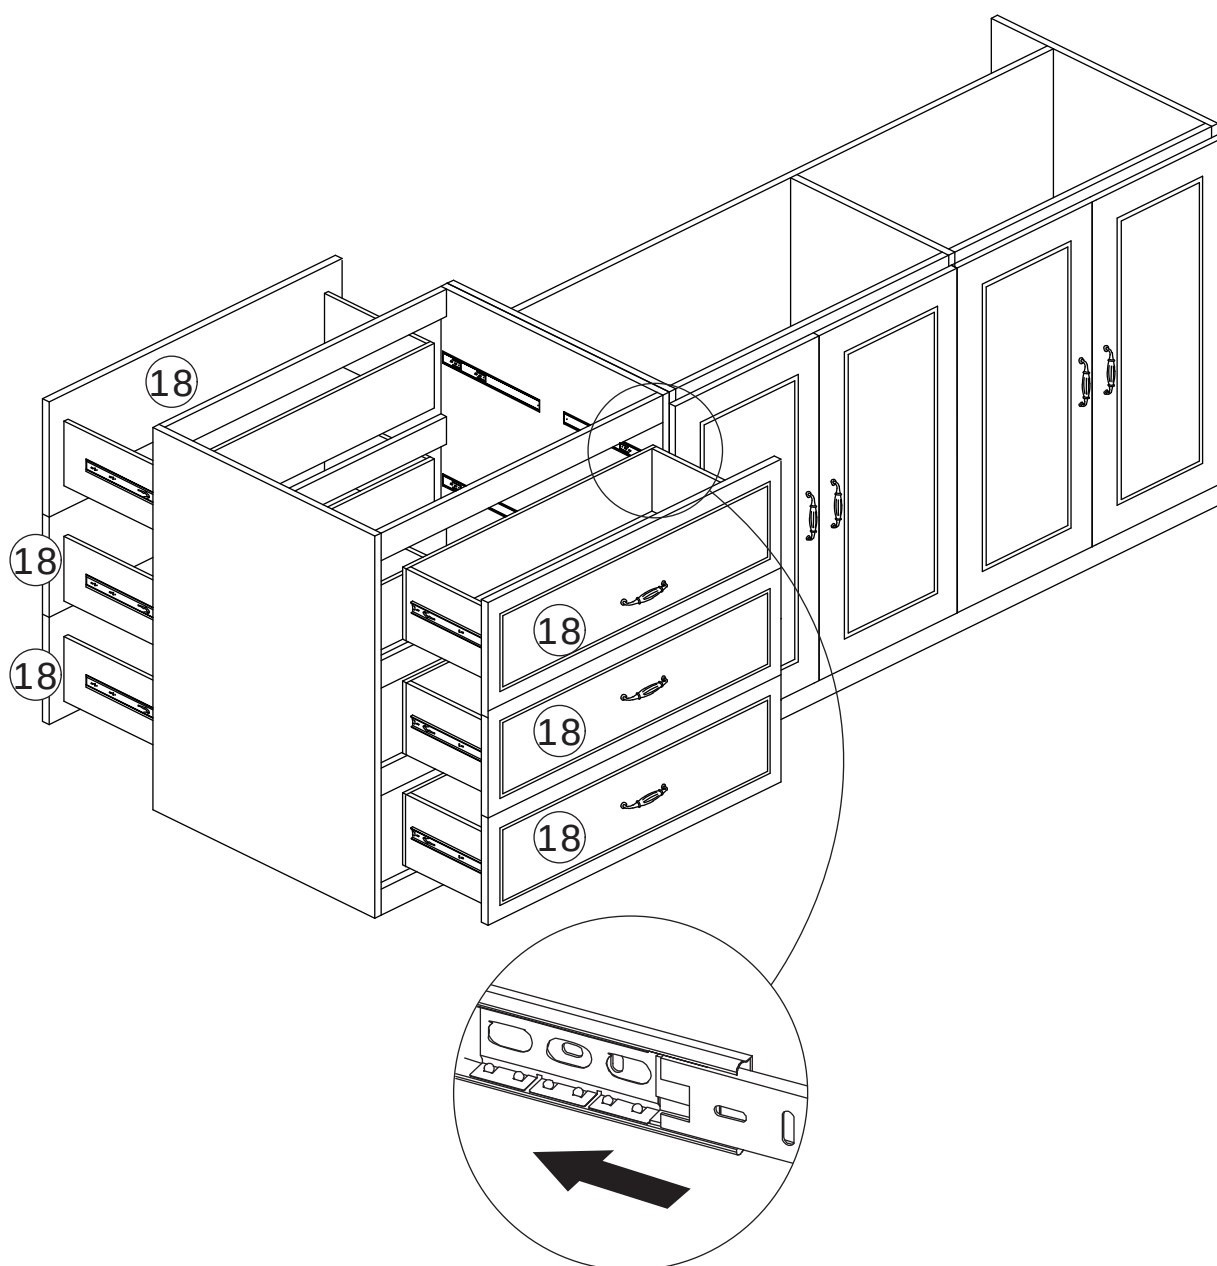


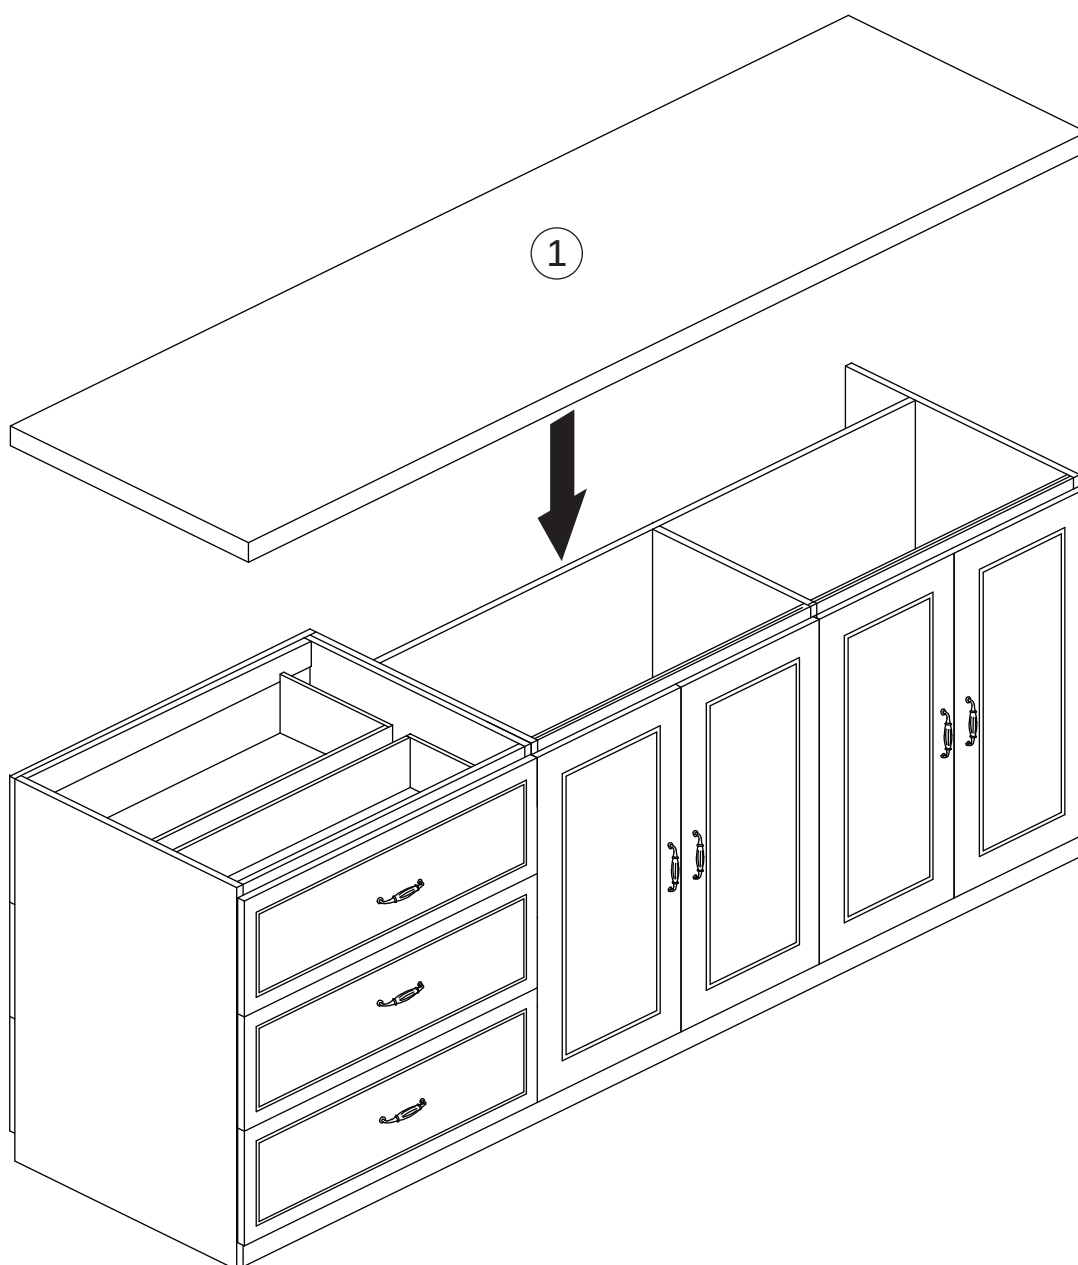




If the door panels are not aligned, please adjust the screws on the hinges according to the illustration.

Or you can search this link to view the teaching video.
  
<https://youtu.be/n0Lb36SoODM>

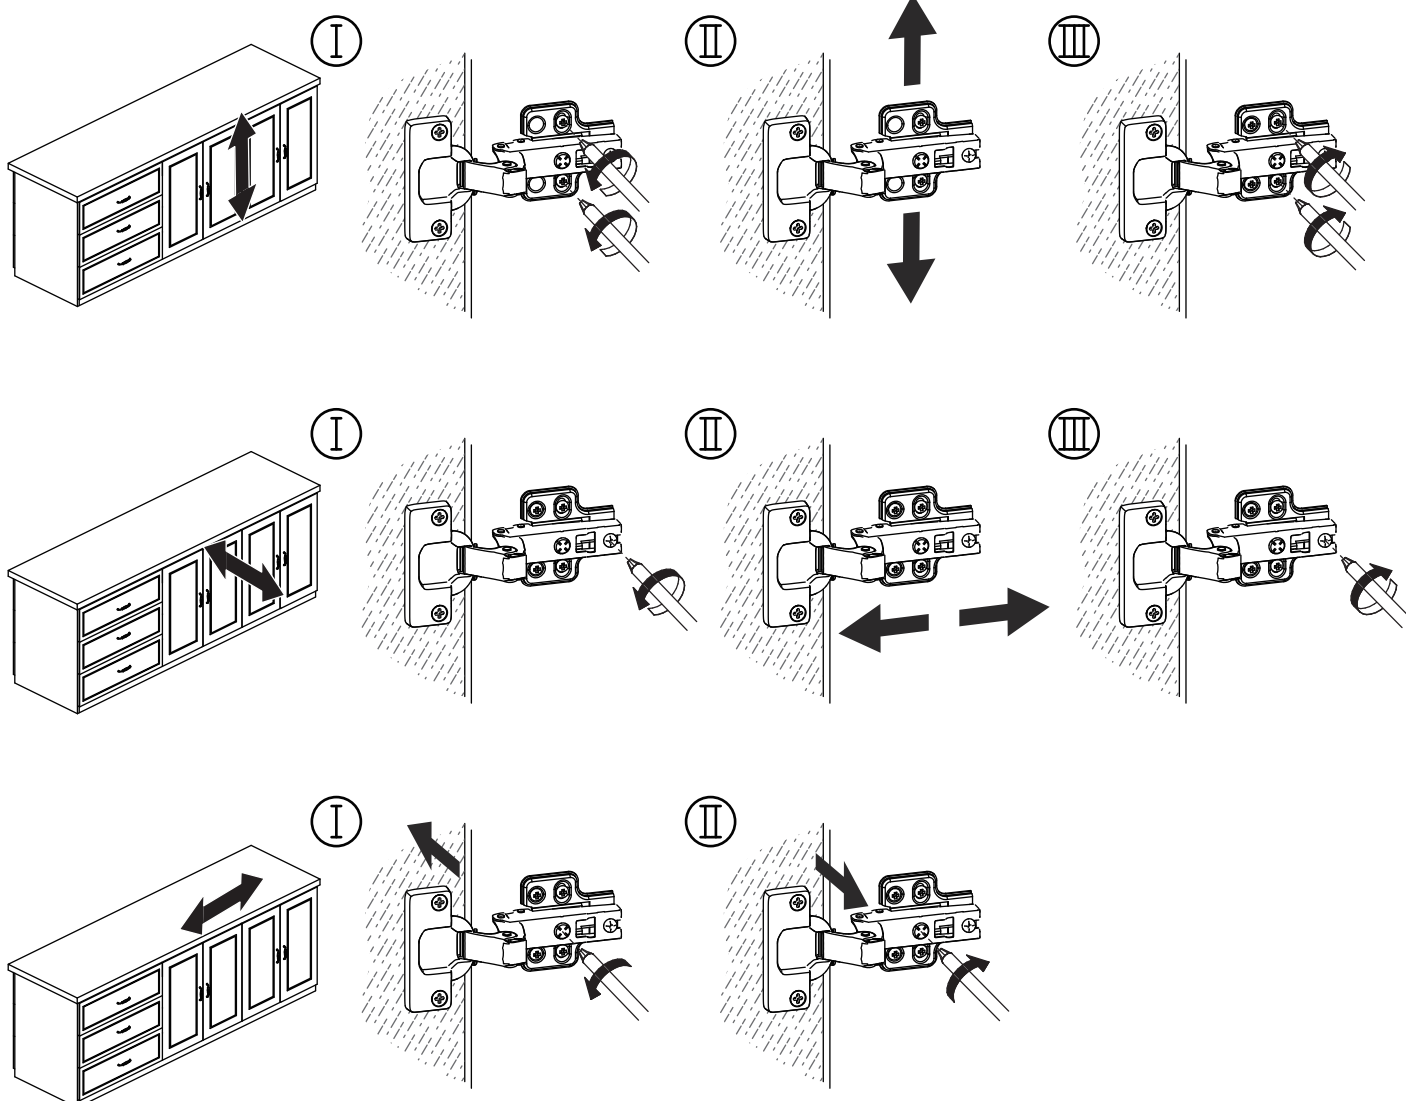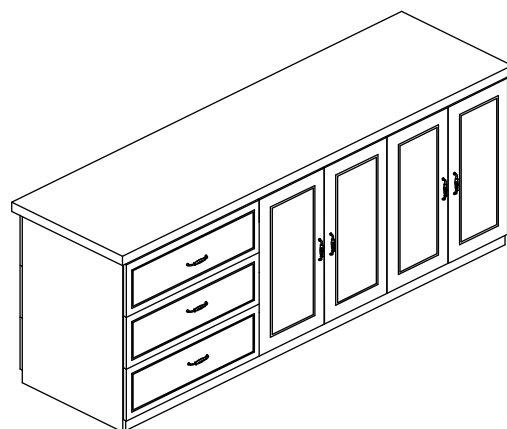

WARRANTY

WARRANTY CLAIMS

- There is a 30-day warranty for broken furniture or any other problems that do not work properly. The warranty will start from the date of purchase which must be verified by proof of purchase.
- Before making a claim, we may be able to answer your query, simply call us. Please leave your purchase order number, along with some details of the problem, if you want a replacement part. We will arrange within 48 hours. If there is out of stock, we will reply with a shipping date.
- The product must be used in accordance with the instructions provided. For health reasons.
- For other reasons, if the furniture needs to be returned, it must be cleaned and dried and operated within 30 days of receipt.

Type of Warranty Claim

- Failure to follow the furniture instructions will invalidate the warranty. Attention please.
- Does not include damage during installation, but includes damage during transportation.

Scope of responsibility

- Shall not bear any responsibility for misuse or user damage and / or loss of parts during the installation of furniture.
- After using, the damage and scratches of the furniture are not covered by the warranty.

The Warranty Relates to All Bought in The Us and Covers The Following Areas

- Sheet parts: 1 month from the date of purchase.
- Electrical parts: 1 month from the date of purchase.

RETURNS

CHANGED YOUR MIND AND NEED TO RETURN YOUR ITEM?

PLEASE FOLLOW THE BELOW INSTRUCTIONS:

- If you have purchased and have simply changed your mind, follow the retailer's instructions for returns.

DEFECTIVE ITEMS

- If your item is defective in any way, i.e. it doesn't work but you can't identify why, in the first instance, please call us.

DAMAGED ITEMS

- If you receive an order with obvious shipping damage from the retailer, then we suggest the delivery is refused. If the delivery has been accepted and then shipping damage is found, please follow the specific instructions advised by the retailer.
In all circumstances please save all packaging material and paperwork for the order. Please be aware that if you dispose of packaging material or attempt to return the merchandise without contacting the fulfiller, you jeopardise your chances of making a claim, and you may not receive a credit for the return.

AFTER-SALES CONTACT



00000000000000000000



000000000000