
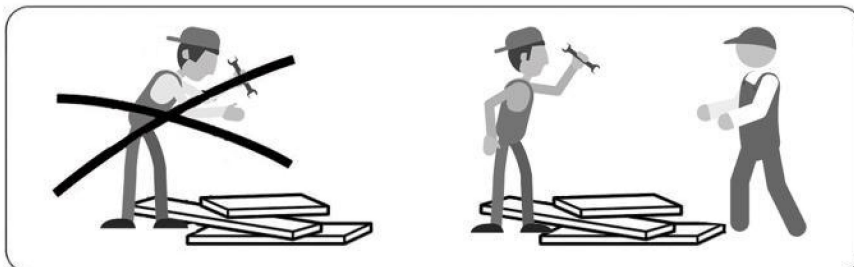
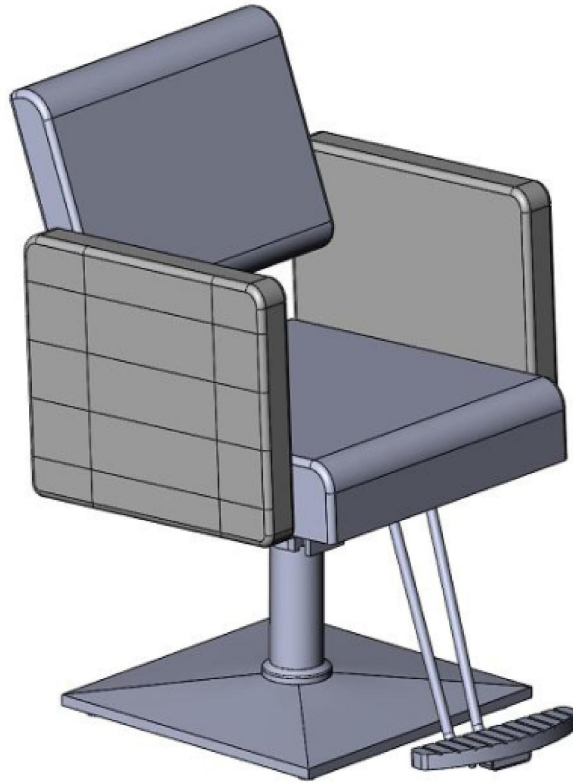


PRODUCT MANUAL

Model BU0036-BK01
BU0036-WH01


 **ATTENTION!** PLEASE READ THESE INSTRUCTIONS BEFORE USING THIS DEVICE

PRODUCT MANUAL







Assemble with the assistance of another person.

Carefully protect the product during installation.

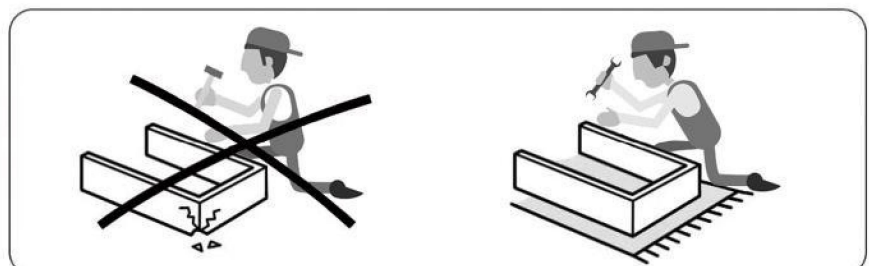

PARTS & FEATURES

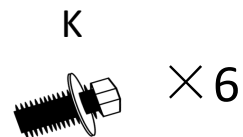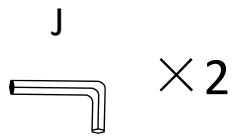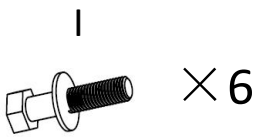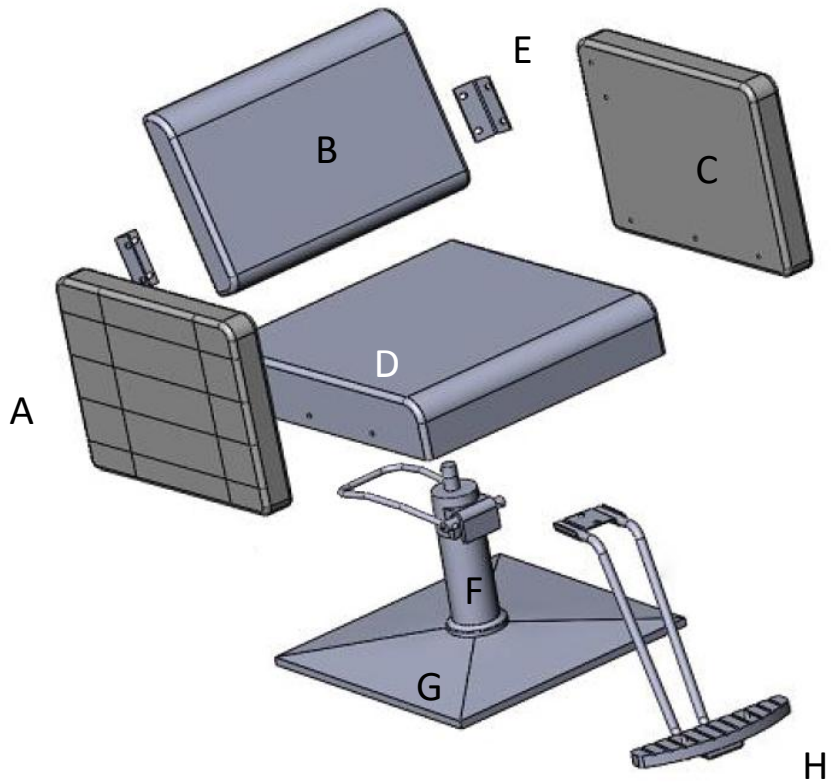


Part code	Part Name	QTY	Part code	Part Name	QTY
A	Right Handrest	1	B	Backrest	1
C	Left Handrest	1	D	Seat	1
E	Backrest Connector	2	F	Pump	1
G	Base	1	H	Footrest	2
I	Screws I	6	J	Wrench	2
K	Bolts	6			

INSTALLATION INSTRUCTION

First: Install hydraulic pump to the base

Parts needed: Base + Pump
+ 6 Bolts

Step 1: Install pump to Base with 6 fixing bolts.

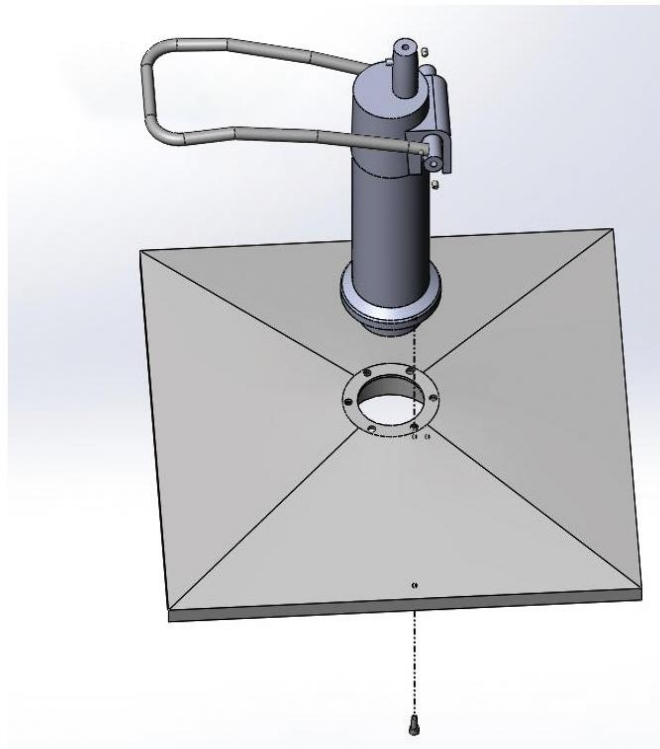


Second: Install handrests to the seat

Parts needed: Right handrest + Left handrest + Seat


Step 1: Remove the 6 Screws which Pre-fixed on the handrests.

Step 2: Install handrests to the seat with the 6 screws.

Please follow up the diagram beside.

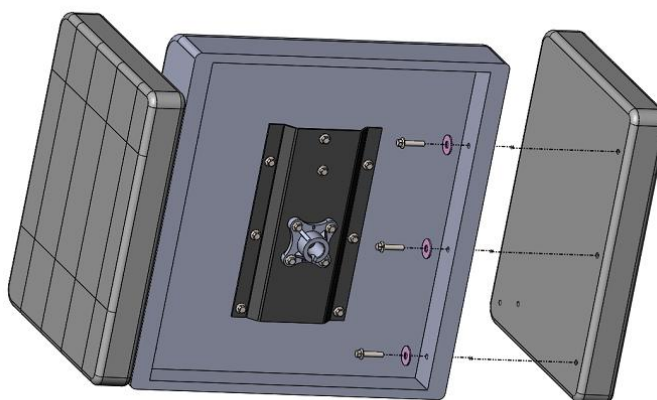

Screws × 6

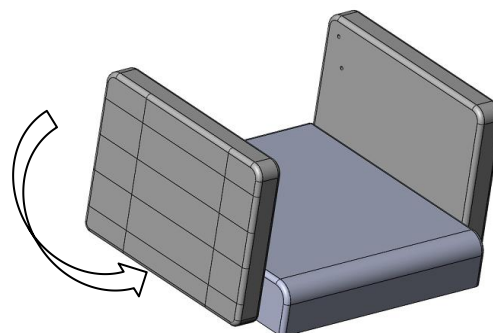



Third: Install backrest connectors to the handrests

Parts needed: 2 Backrest connectors + Installed seat & Handrests

Step 1: Remove 4 bolts which pre-fixed on the handrests.

Step 2: Install 2 backrest connectors to the handrests with the 4 removed bolts.

Please follow up the diagram beside.

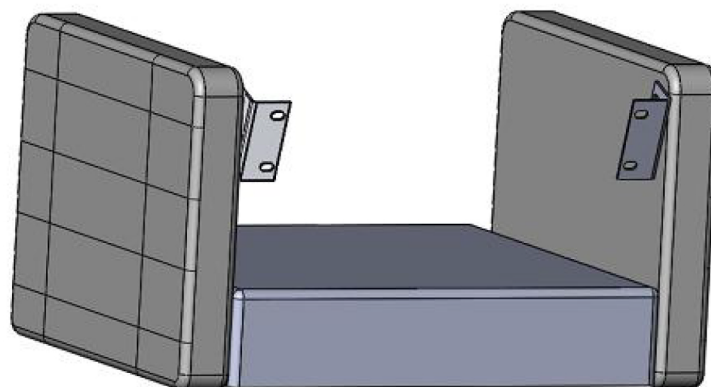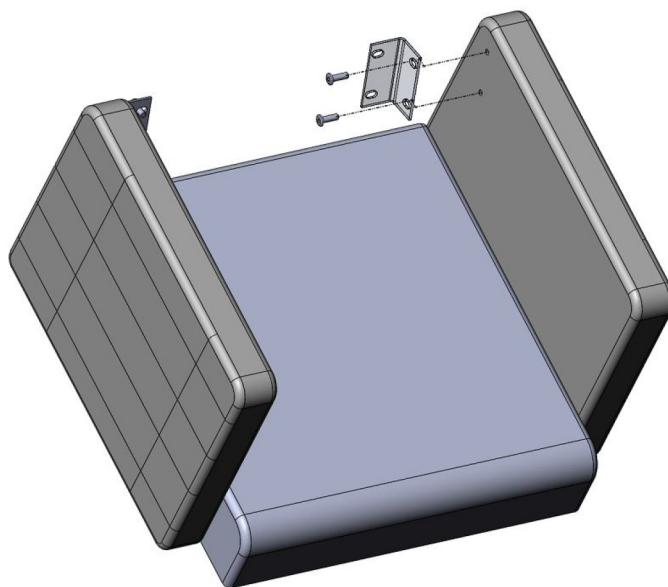



Fourth: Install backrest to the seat

Parts needed: Installed seat & backrest connectors + Backrest

Step 1: Remove the 4 bolts which Pre-fixed on the backrest.

Step 2: Turn the seat to another side, press down the armrest, adjust the backrest to align the screw holes of the backrest and the seat. insert the screws and tighten them.

Please follow up the diagram beside.

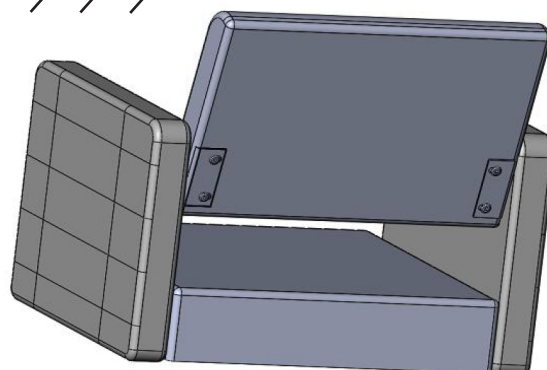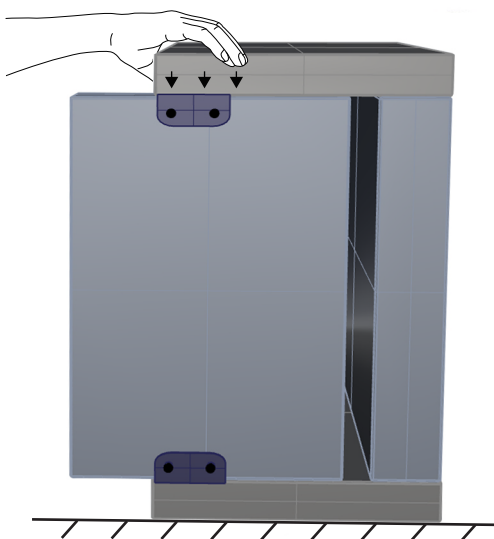


Fifth: Install the installed seat to the installed base & pump

Parts needed: Installed seat + Installed base & pump

Step 1: Place the installed seat onto the hydraulic pump (please note the pin on the pump toward the gap of the pump joint).

Please follow up the diagram beside.

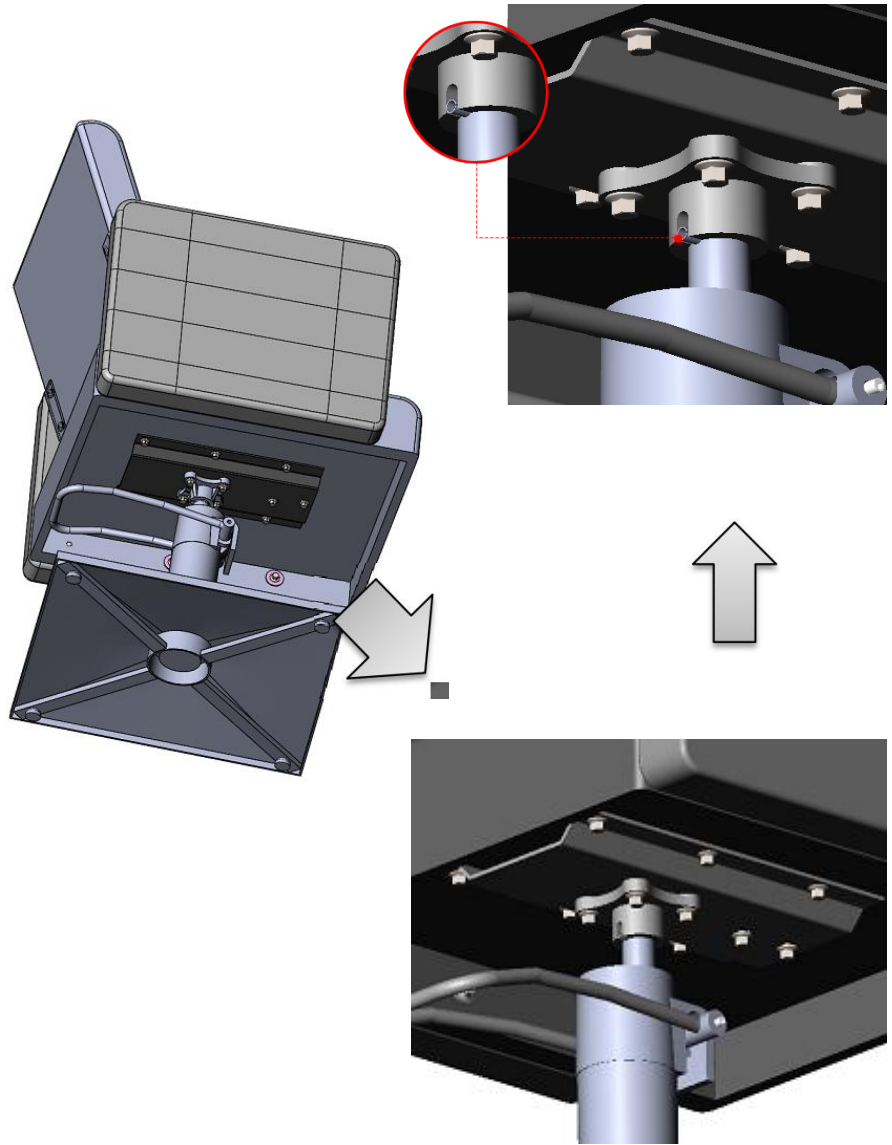


Sixth• Install the footrest to the seat

Step 1: Remove 2 bolts which pre-fixed in the seat.

Step 2: Install the installed footrest to the seat by 2 given bolts and tighten them.

Please follow up the diagram beside.

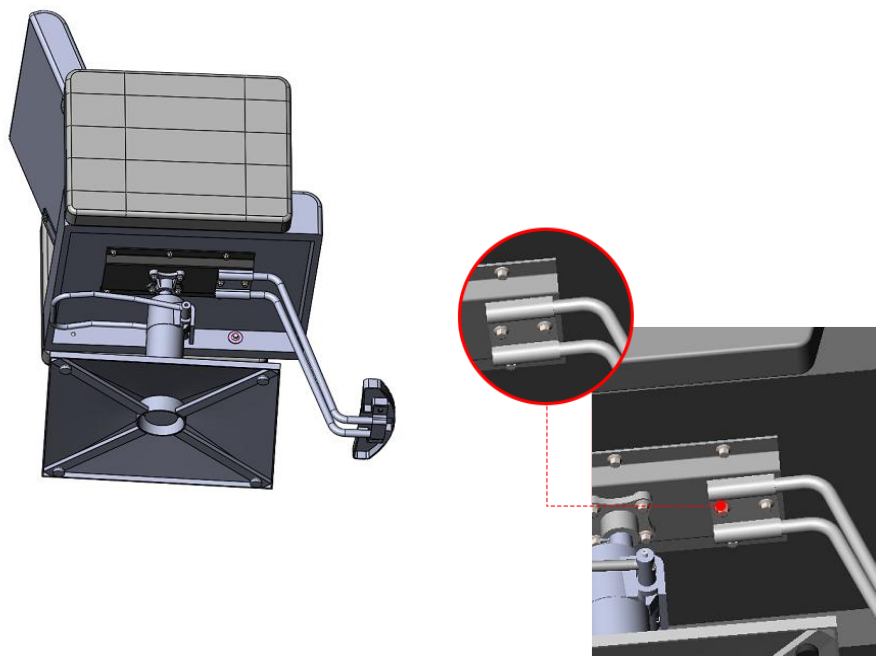

OPERATING THE CHAIR

- Step down on the Foot Bar repeatedly to raise the chair to the desired height.

- Step down and hold the Foot Bar to allow chair to lower.

- Hold the Foot Bar up to keep the chair still.

- Do not over-extend the chair, creating the risk of falls or tipping the chair and its occupant over, resulting in injury.

