
 

 
 


 





 









Ax1	Bx1	Cx4	Dx1	Ex1	Fx1	Gx1	Hx1	Ix1	Jx1	Kx1	Ox2	Qx1	Sx3	Tx1	Vx1
											 M8×25			 6mm	 5mm
		M8	12mm				Cotte Pin	M8×12			 Px9 M8×20	 Rx1		 Ux1 lubricant oil	 Wx1 M6×16


1



1PC

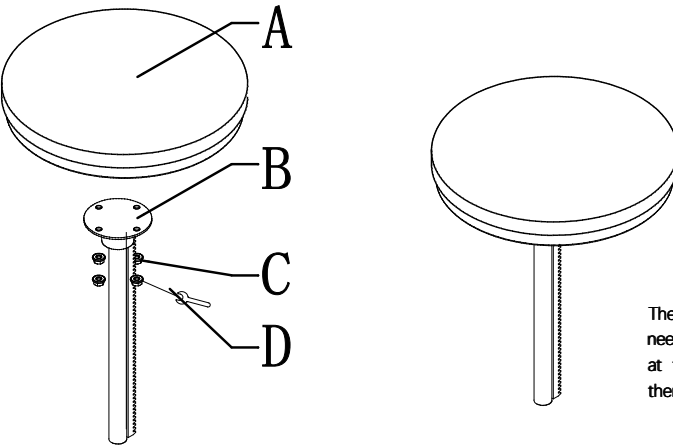
The 4 screws under the seat need to be screwed at the same time, then locked with a wrench.

2

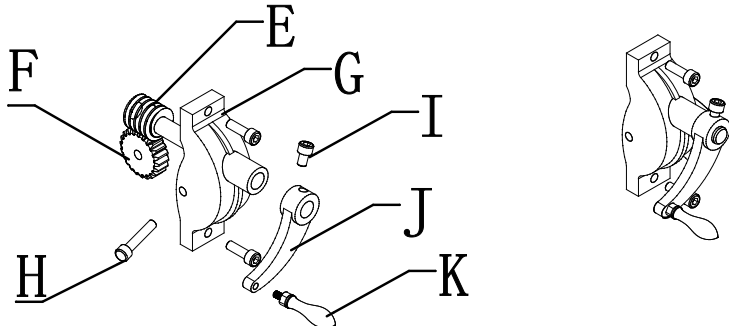

1PC


3

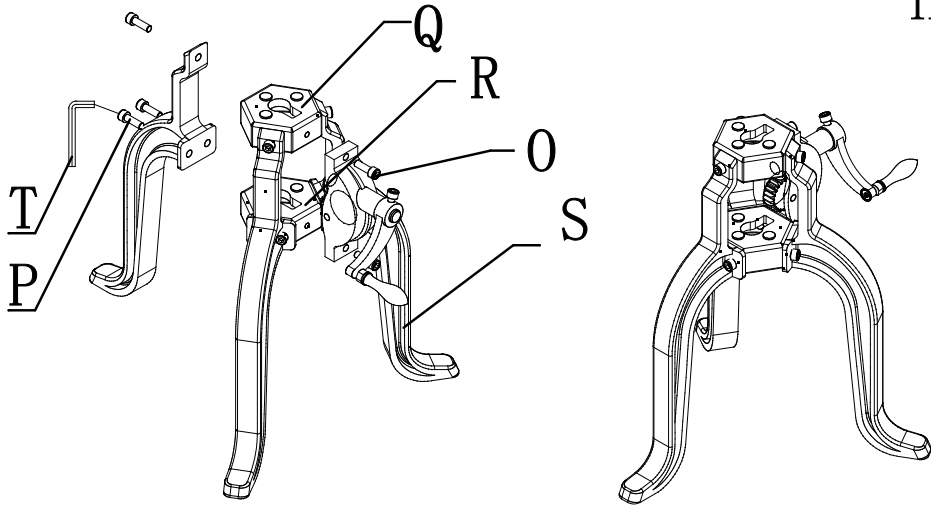

1PC

4

Grease the gear evenly ,Repeated rotation the handle ,up and down .Until the gear is fully lubricated

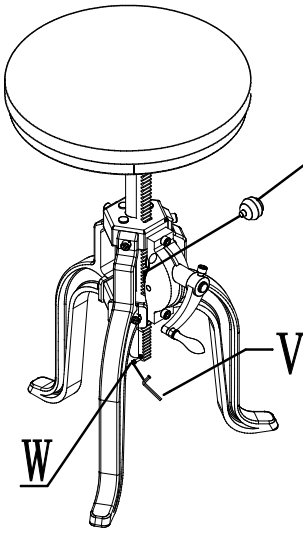

U

lubricant oil(Grease the gear)

V

W