

TUTORIAL FOR USING IN AND OUT WATER OF THE ATOMIZING FIREPLACE





1.locate the water inlet and outlet



2.Connect the hose to the water inlet



3.Click the power-on button



4.Click the "Add Water" button



5.The fireplace automatically refills the water until the process is complete



6.The small water droplets on the screen can show the water level status



7.After adding water, it will automatically start working and provide voice prompts

DRAINAGE TUTORIAL



**1. we need to
locate the water outlet**



**2. Insert the hose
into the water outlet**




3.Click the power-on button



4.Then click the power-off button



5.Long press the drainage button for 3 seconds

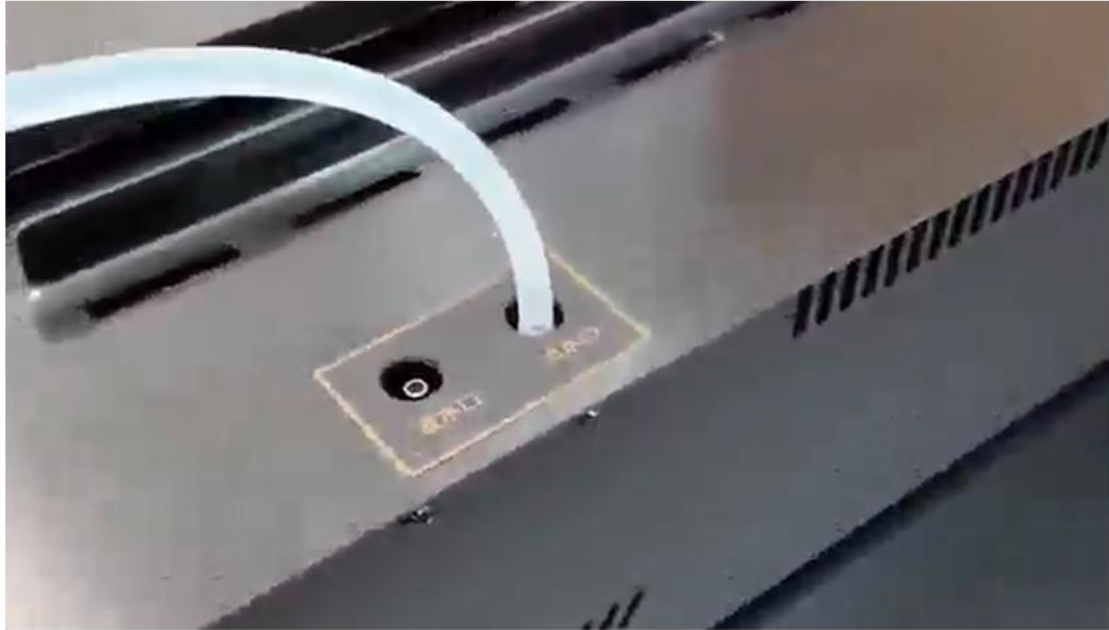

6.The fireplace will automatically drain water until the drainage is complete