 

 




 


 
 




Lighted Outdoor Nativity Scene


ASSEMBLY INSTRUCTION


Parts List

A1	A2	B1	B2	C	D	E1
						
E2	F	G1	G2	H×9	J×10	K
						

Assembly steps

1. Insert Part A2 to the holes on the part A1. Insert Part B2 to the holes on the part B1. Insert part D to the holes on the part C. Insert Part E2 to the holes on the part E1. Insert Part G2 to the holes on the part G1.
2. Connect the parts A1, B1, C. Secure the joints with the part J. Rotate the support bar of part F to stabilize it on the ground.

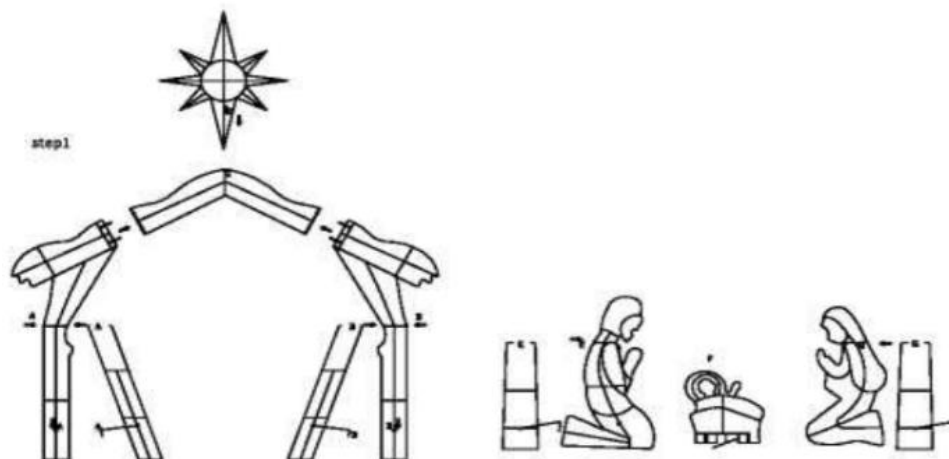

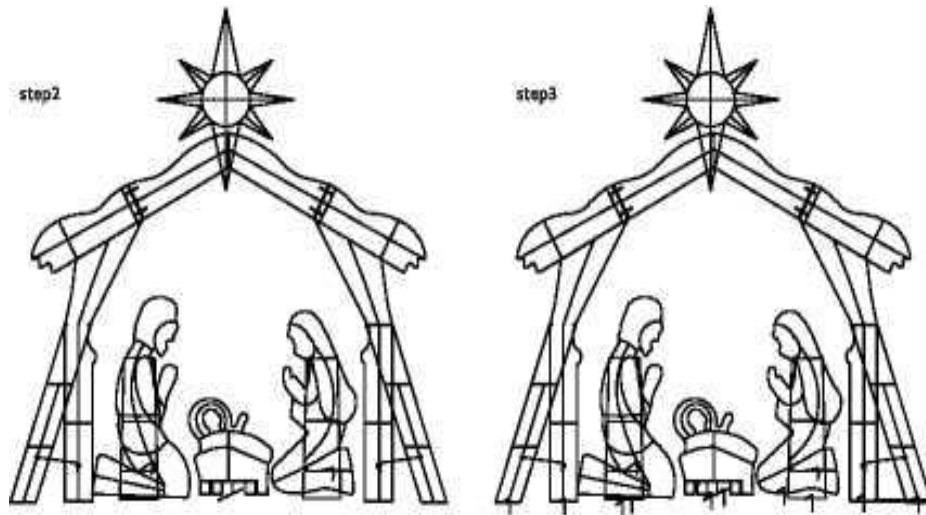

3. Locate part H to secure the part A1, A2, B1, B2, E1, E2, F, G1, G2 into ground as picture. Plug in.

1.Symbol clarification

See image below

This designation means that this product must not be disposed of with other household waste in the European Union. When you recycle WEEE or batteries /accumulators you are helping to prevent that the products are not incinerated or sent to landfills. Therefore, you are helping to **minimize** the potential negative impact on human health and the environment. Responsible recycling can increase the reuse of material resources and avoid potential damage to the environment or health from uncontrolled waste disposal.

2. Warning and personal safety

Warnings

- >Do not connect this chain electrically to another chain.
- >The lamps are not replaceable.
- >Do not connect the chain to supply while it is in the packing unless the packing has been adapted for display purpose.
- >Indoor and outdoor use.
- >If product is used outdoors, the USB should be plugged in indoors,in dry environment.
- >This item is not a toy and should be used for decorative purposes only.
- >Keep away from children. Not for children under 3 years of age.