 
 


# INSTALLATION

 
 
## *Product Manual*

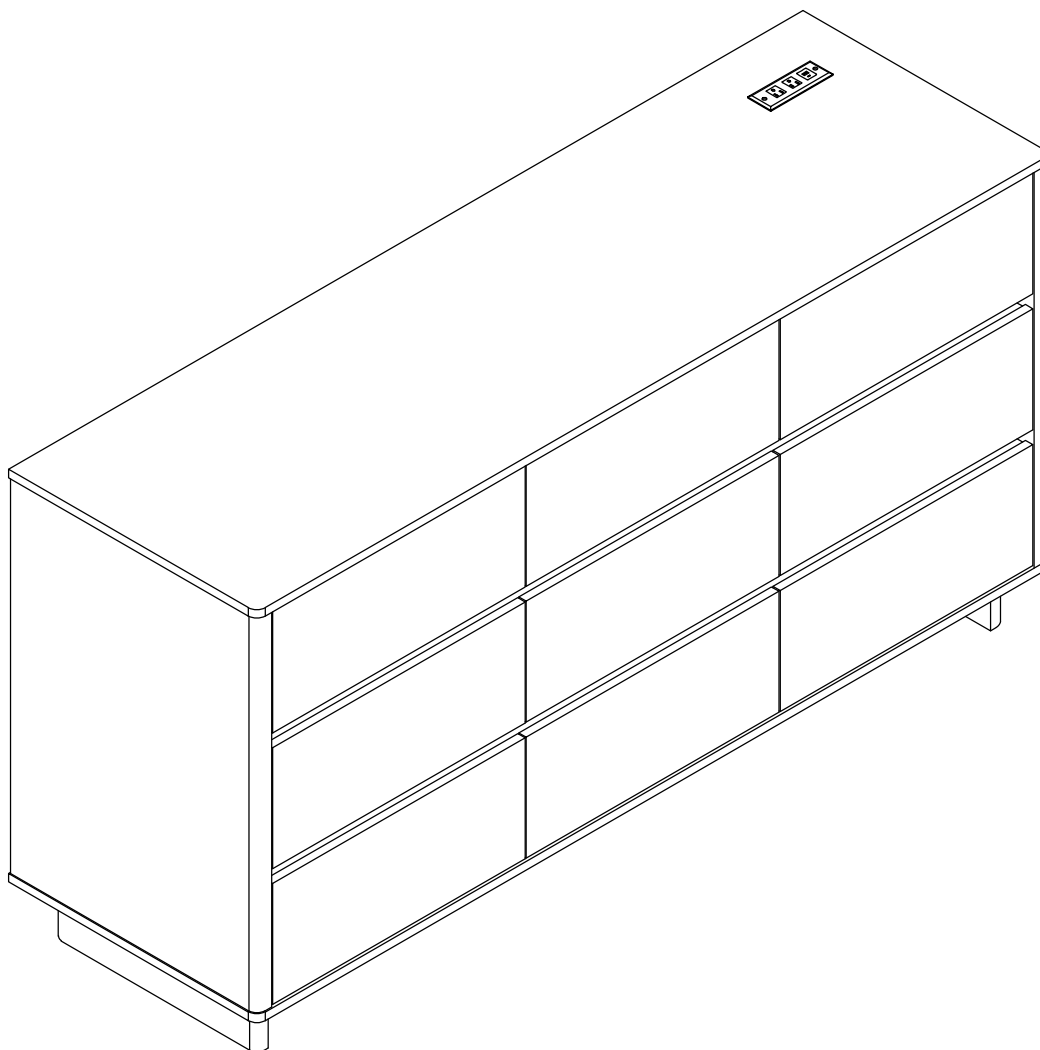

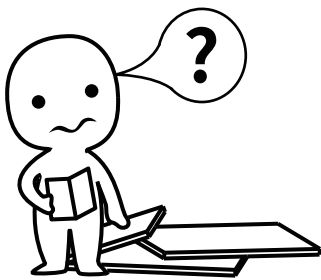


### IMPORTANT INFORMATION!

please read the entire manual before starting to assemble and/or using this product. follow the manual thoroughly and keep it for further reference.

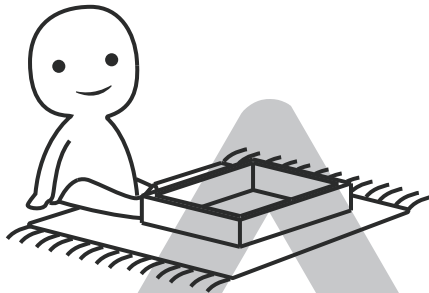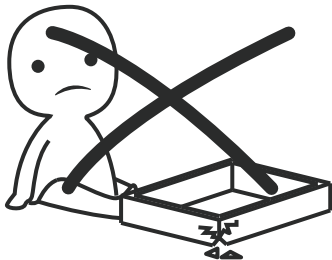



### AVOID SCRATCHES!

 In order to avoid scratching this furniture should be assembled on a soft layer—could be a rug.

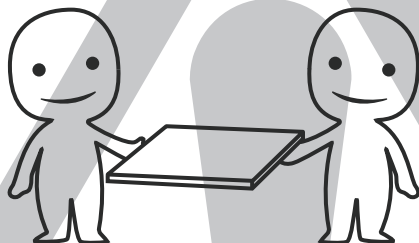

### IMPROVE EFFICIENCY !

  Try to find a partner to install with you, which can speed up the installation efficiency and shorten the time.

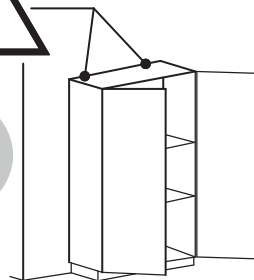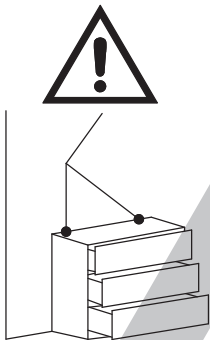

### ANTI-TOPPLE WARNING !

 
Overturned furniture can cause serious or fatal crush injuries. To prevent tipping over, be sure to use the wall attachment, if not included with this product. Please purchase the wall attachment that fit your wall. If unsure, seek professional advice. Please read and follow each step of the instructions carefully.

### IMPORTANT !





It is important that any product which is assembled using any kind of screw is re-tightened 2 weeks after assembly, and once every 3 months - in order to assure stability through-out the lifespan of the product.

For regular maintenance and cleaning of the product, for the frame, please use a rag dipped in neutral detergent to fully wipe it, and then dry it with a clean rag. For glass materials, wipe with a rag dampened with water glass cleaner, and then dry with a dry rag.

Do not use an electric screwdriver, and do not use too much force when installing, because the board is easy to break.

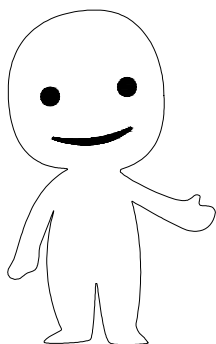


Please prepare the following tools

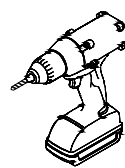    

When installing, please carefully confirm whether each screw corresponds to the manual, accessories with similar shapes can be distinguished by size

 A x 102



Ø6 x 40 mm

B x 102



 
Ø15 x 9 mm

C x 12



Ø8 x 40 mm

D x 9

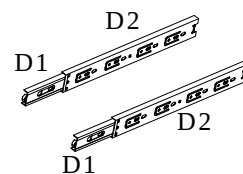

L = 300 mm

E x 84



Ø3.5 x 12 mm


Fx 12




G x 102



 
H x 2

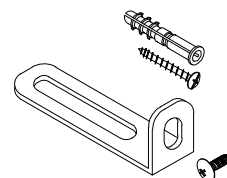

J x 1

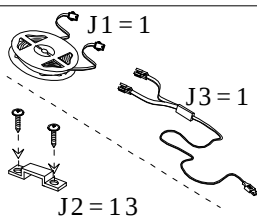 


K x 1

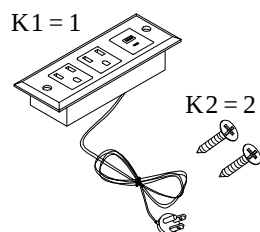 


L x 4



 
M x 36

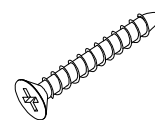

Ø3.5 x 35 mm

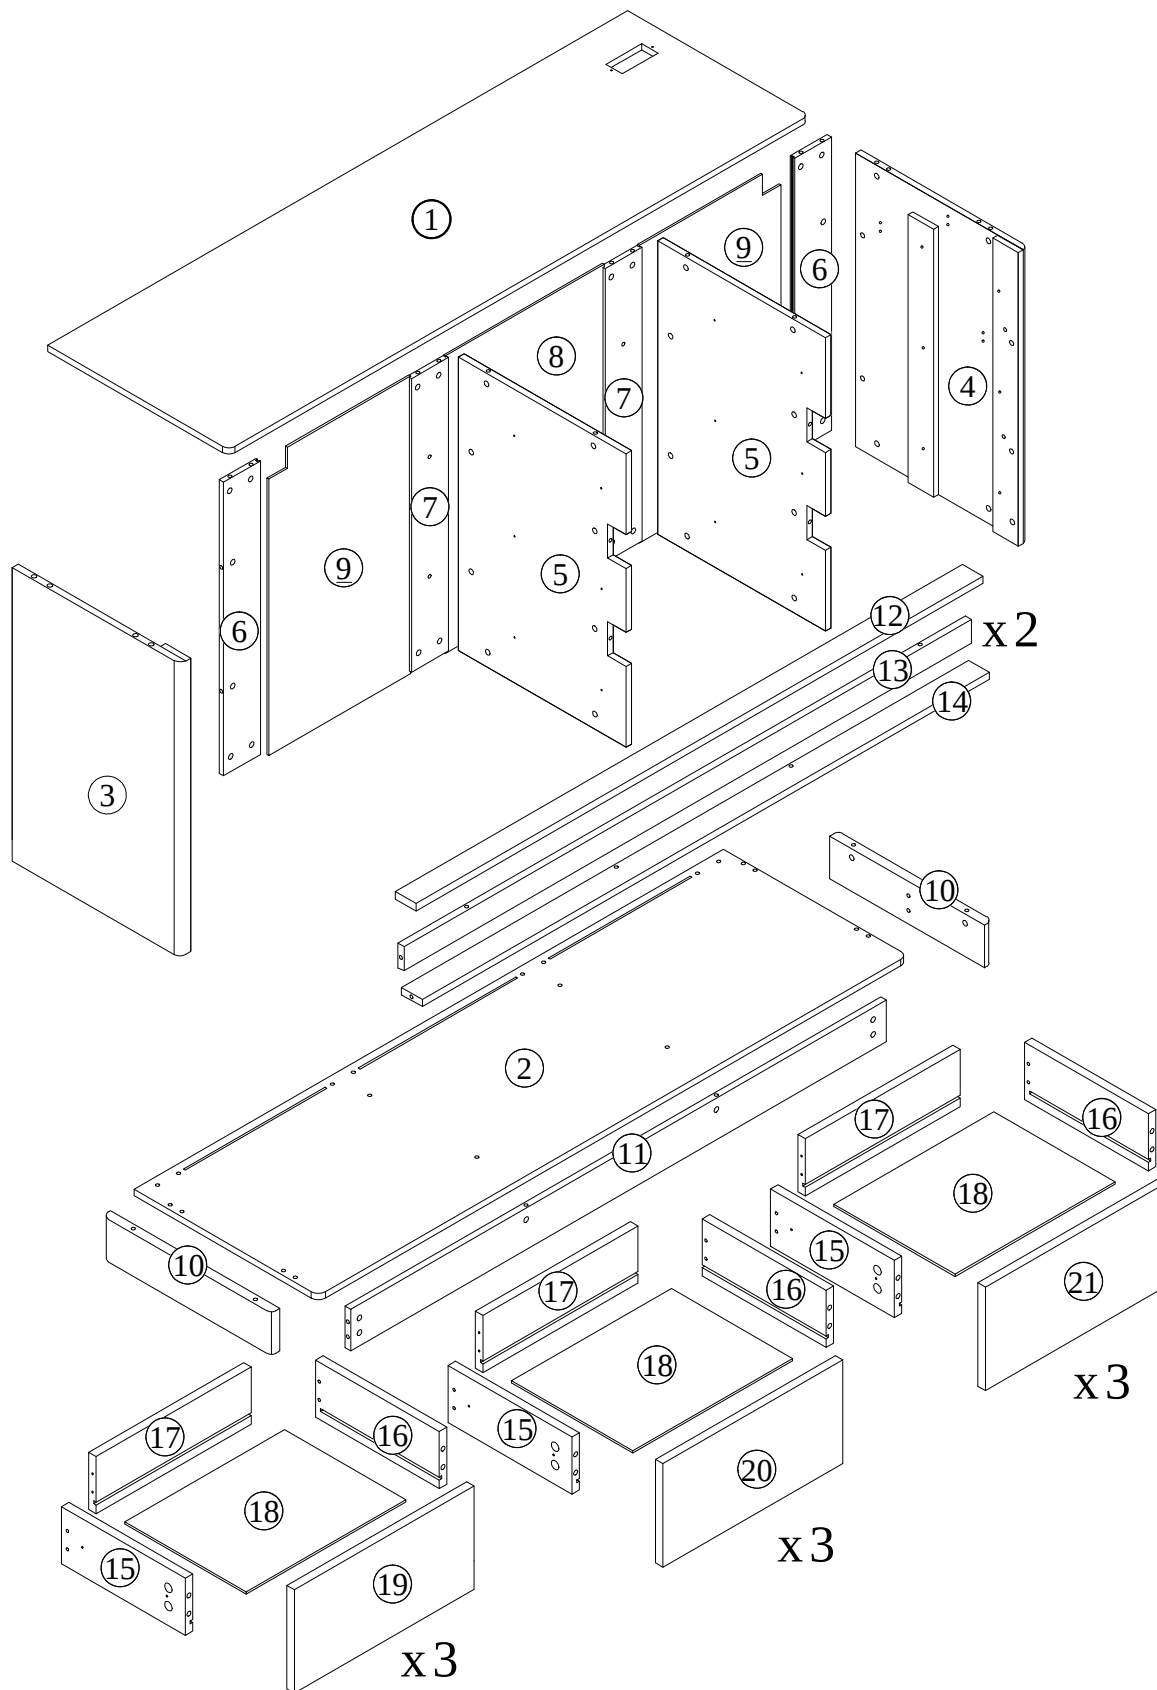 


| Part     | Qty |
|----------|-----|
| ①        | 1   |
| ②        | 1   |
| ③        | 1   |
| ④        | 1   |
| ⑤        | 2   |
| ⑥        | 2   |
| ⑦        | 2   |
| ⑧        | 1   |
| ⑨        | 2   |
| ⑩        | 2   |
| ⑪        | 1   |
| ⑫        | 2   |
| ⑬        | 2   |
| ⑭        | 2   |
| ⑮        | 9   |
| ⑯        | 9   |
| ⑰        | 9   |
| ⑱        | 9   |
| ⑲        | 3   |
| ⑳        | 3   |
| ㉑        | 3   |
| In total | 67  |

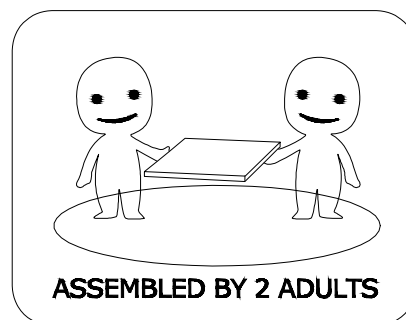 


**Slides Must Be Separated Before Assembly.  
After Separated, Set Aside Until Needed for Assembly.**

Las diapositivas deben separarse antes del montaje.  
Después de la separación, déjelo a un lado hasta que sea necesario.

 
Les glissières doivent être séparées avant l'assemblage.  
Après la séparation, mettez de côté jusqu'au moment de l'assemblage.

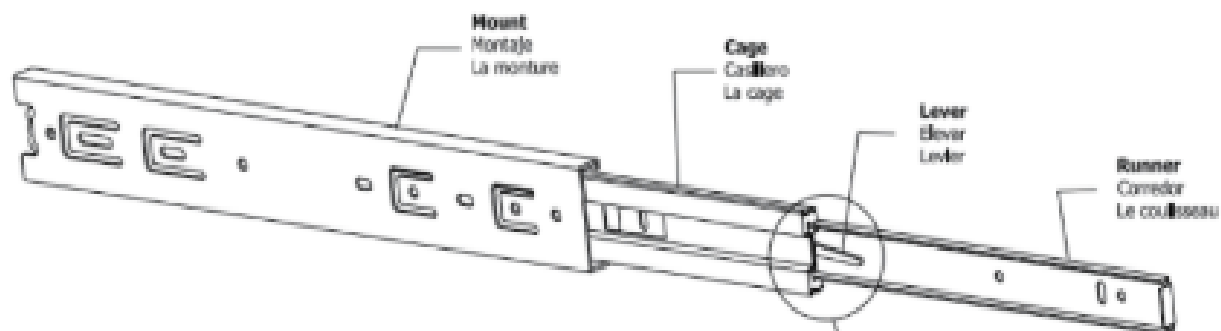

 
**STEP 1: Extend Slide**  
Extender la diapositiva  
Extendre la diapositive

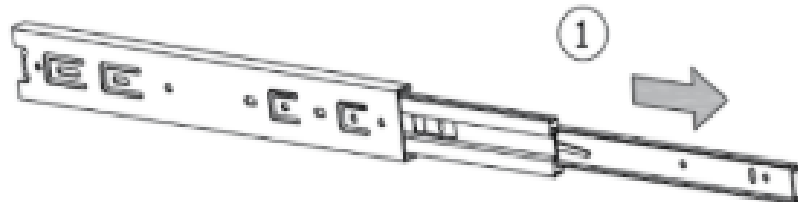


 **STEP 2: Push Lever UP**  
Empujar hacia arriba  
Lever le levier










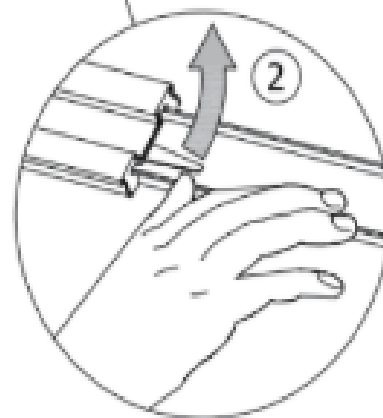


  **STEP 3: Remove Runner**  
Quitar el corredor  
Enlever le coureur

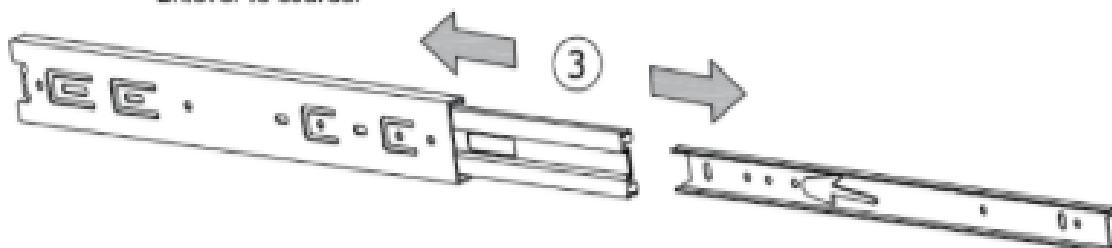

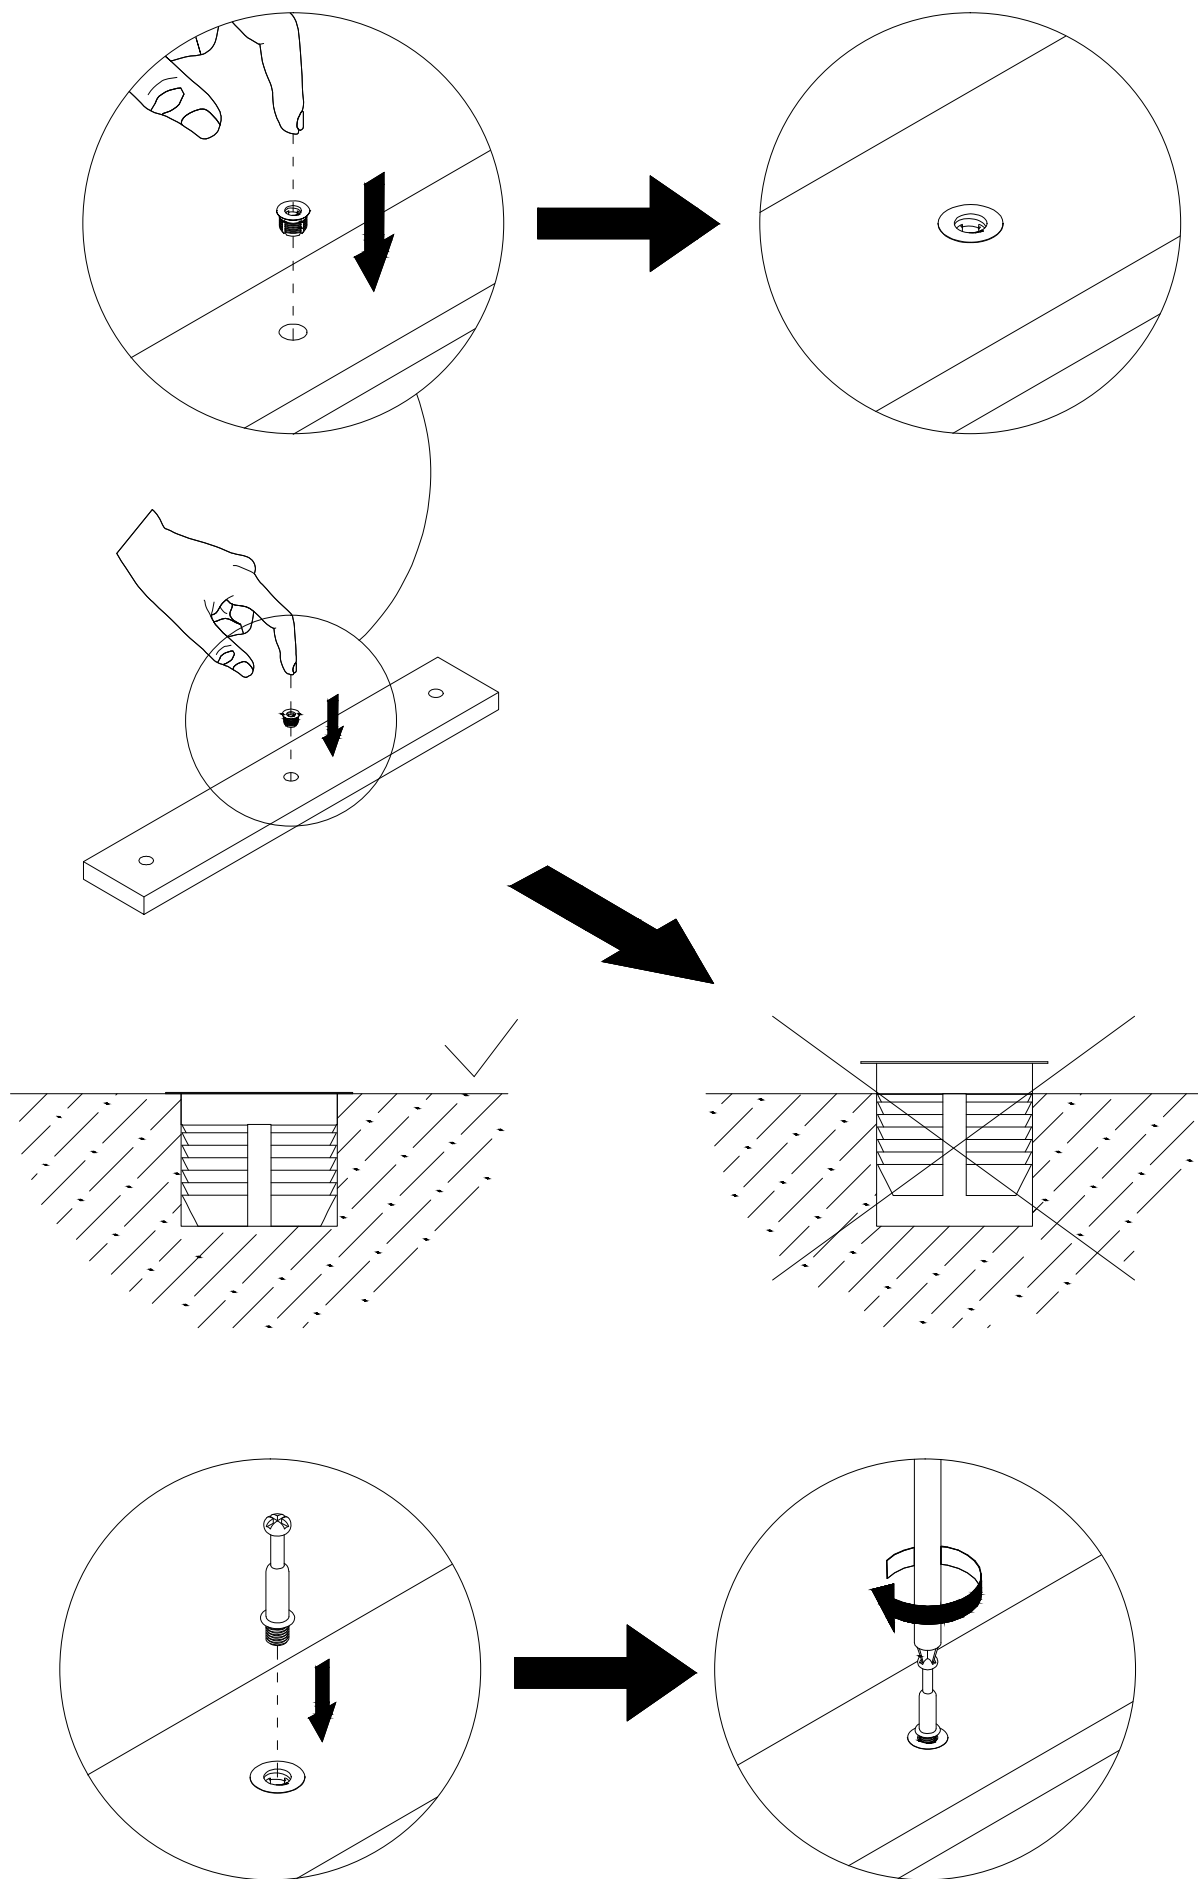

1

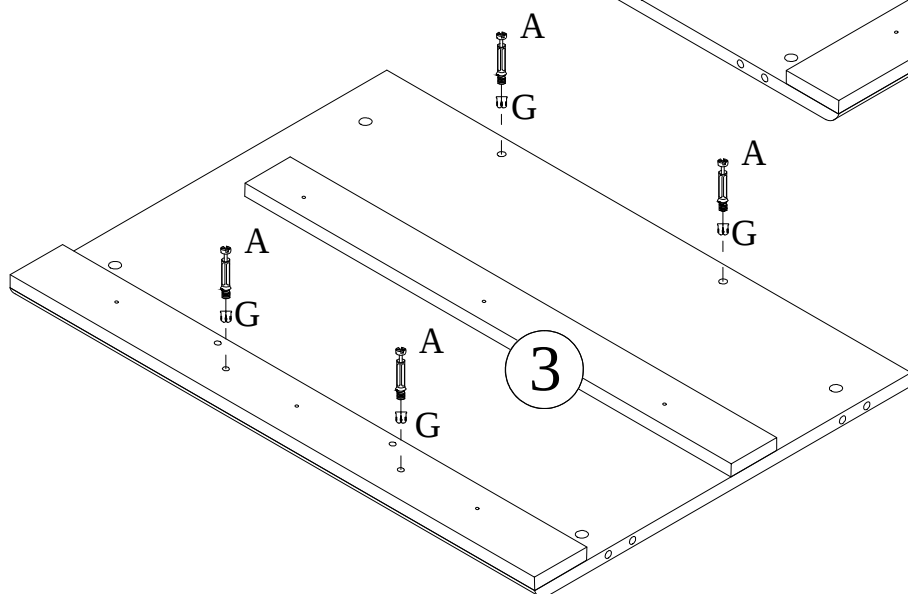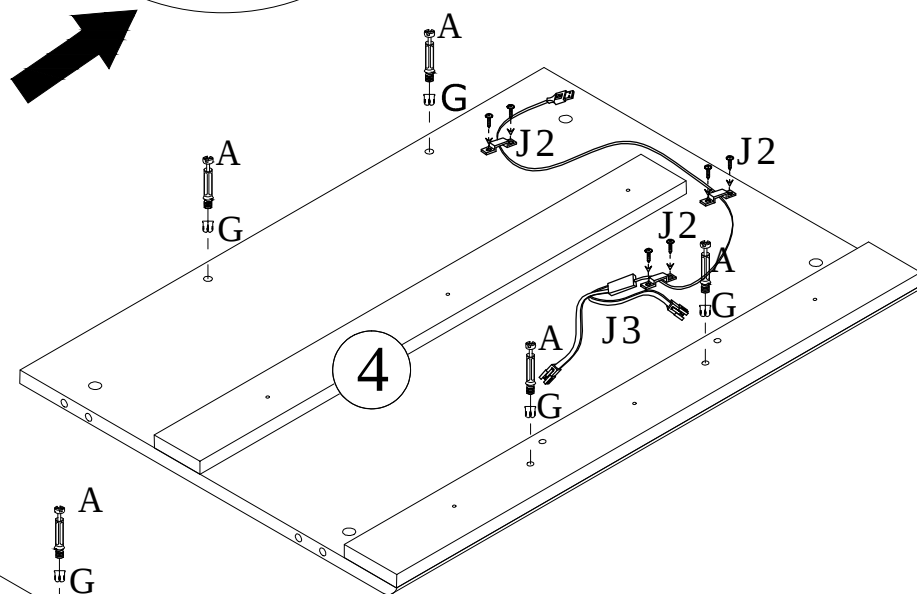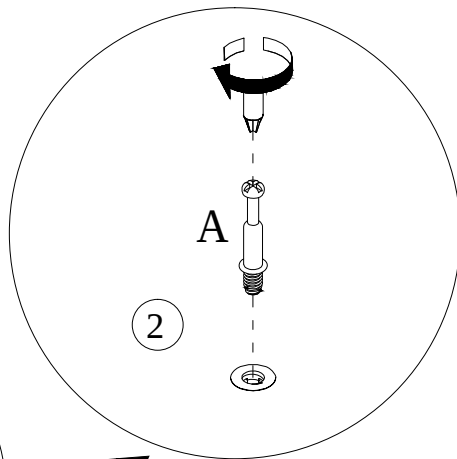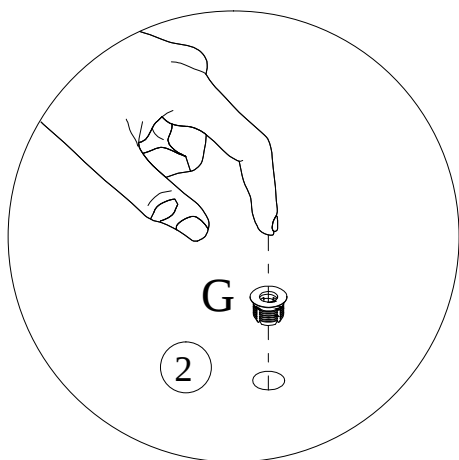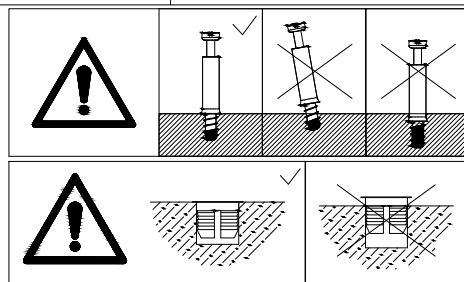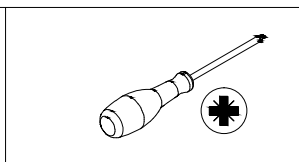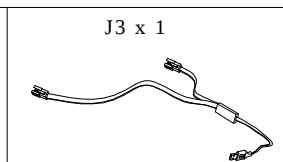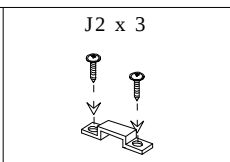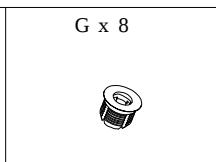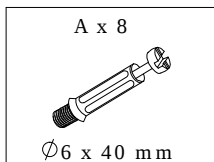          

Use buckle (J2) to secure accessory (J3) to Board 4.

First install plugs (G) onto panels 3 and 4, then screw the self-tapping rods (A) into.

2

D2 x 6



L=300 mm

E x 12

 
 
 
 
 


Ø3.5 x 12 mm

B x 4



Ø15 x 9 mm

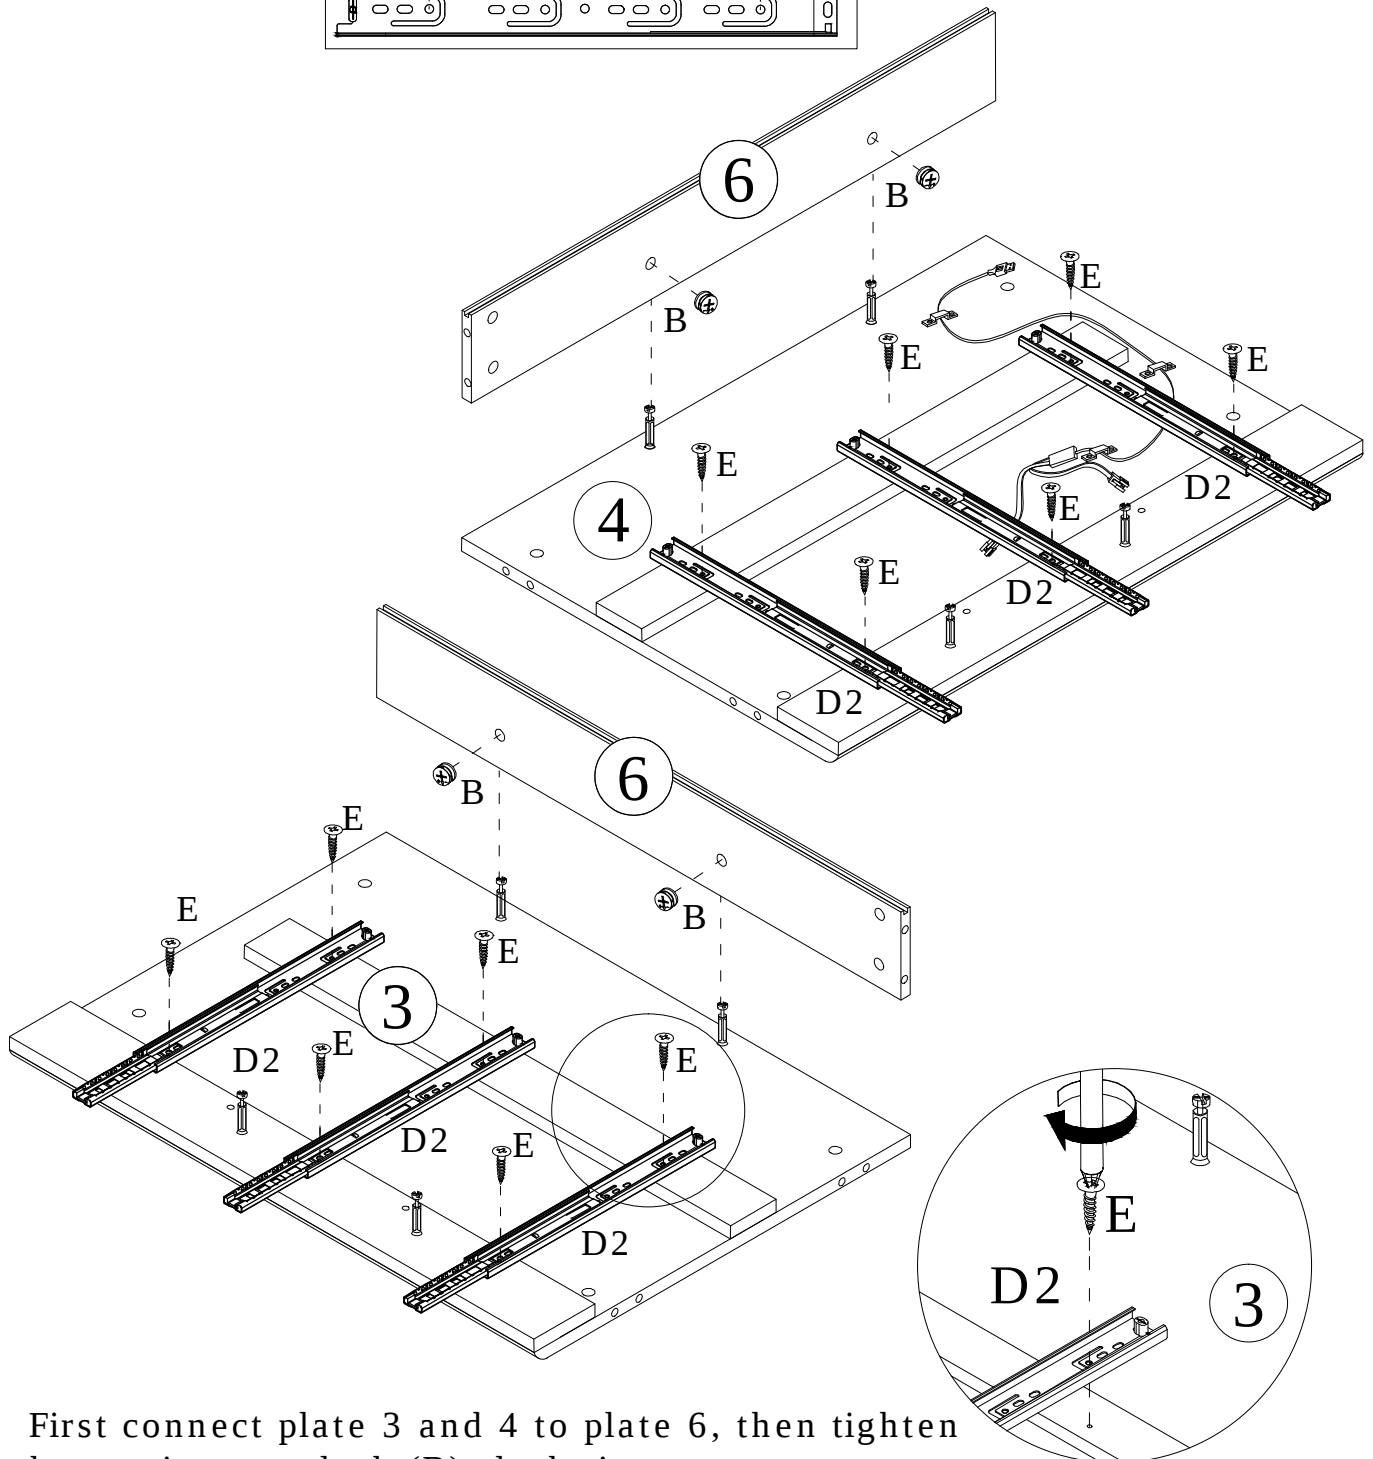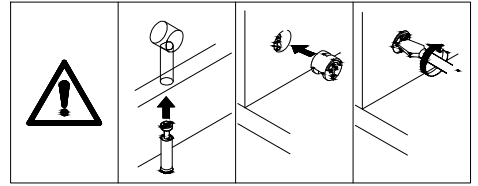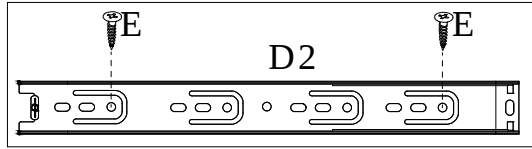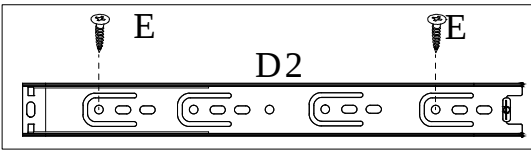

First connect plate 3 and 4 to plate 6, then tighten by turning cam lock (B) clockwise.

Secure slide rail (D2) to plates 3 and 4 using screw (E).

3

D2 x 12

 


L=300 mm



E x 24




Ø3.5 x 15 mm



  Secure slide rail (D2) to two sides of plate 5 using screw (E).

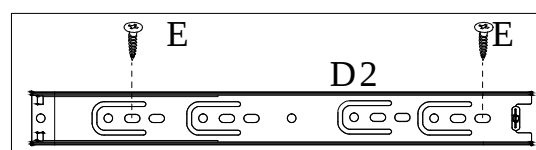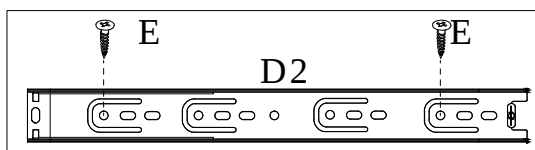

Flip to back

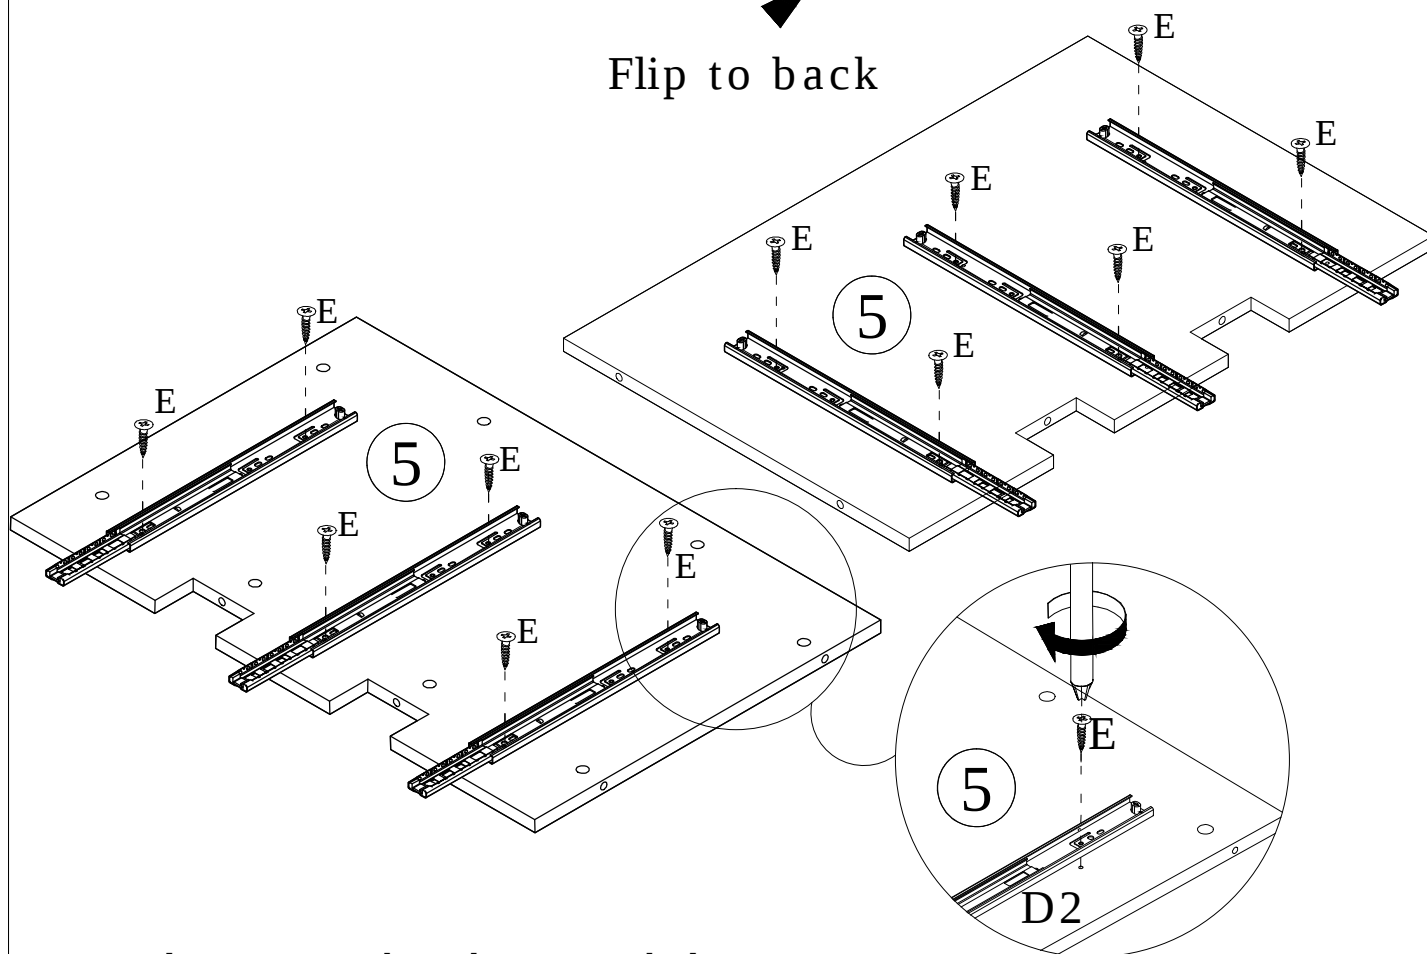 


Please note that the screw hole positions for the slide rails on both sides of the board differ from each other.

x2

4

 A x 4



Ø6 x 40 mm

 
 
 
 
 
 
G x 4



B x 4



Ø15 x 9 mm

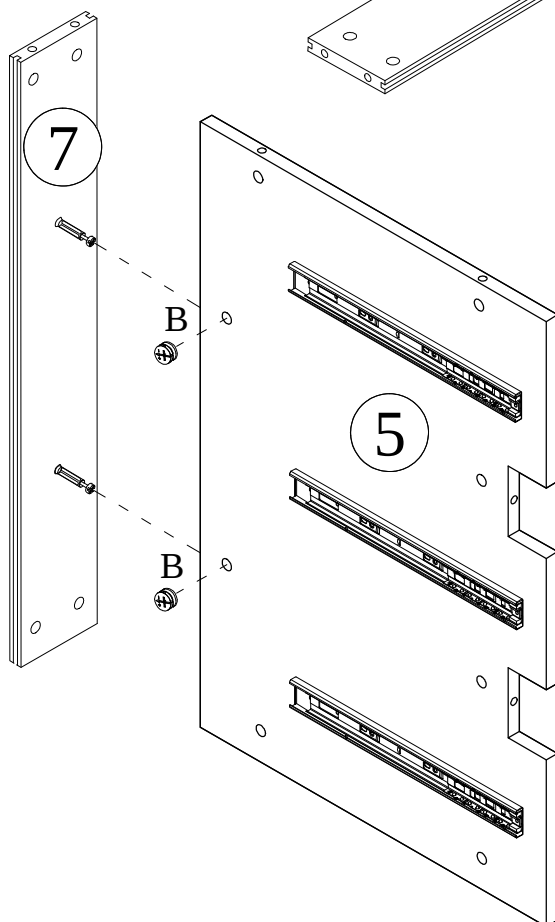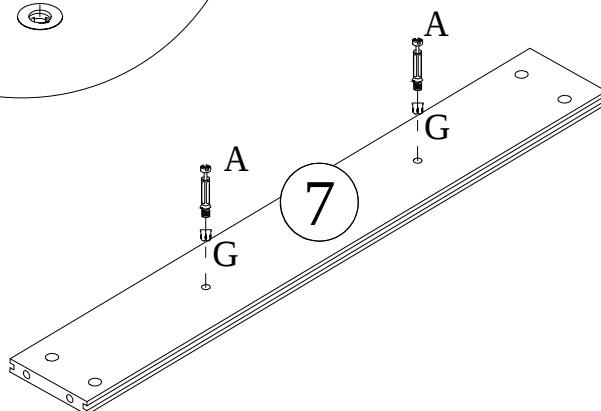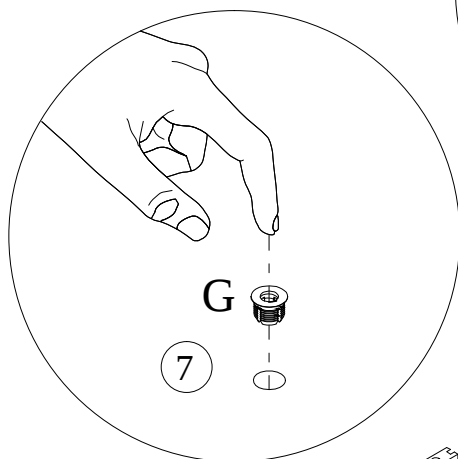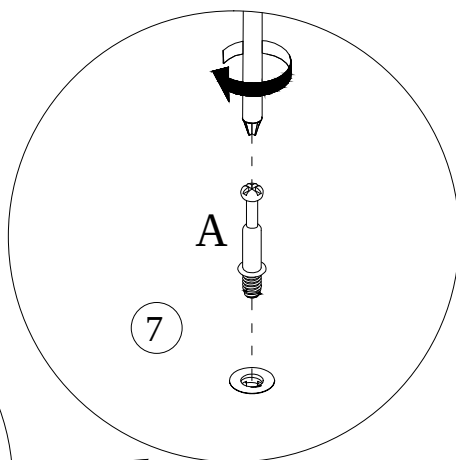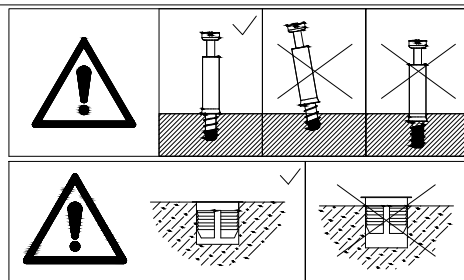


First install plugs (G) onto panels 7, then screw the self-tapping rods (A) into. Connect plate 6 to plate 7, then tighten by turning cam lock (B) clockwise.

x2









5

 A x 32



Ø6 x 40 mm

        
G x 32

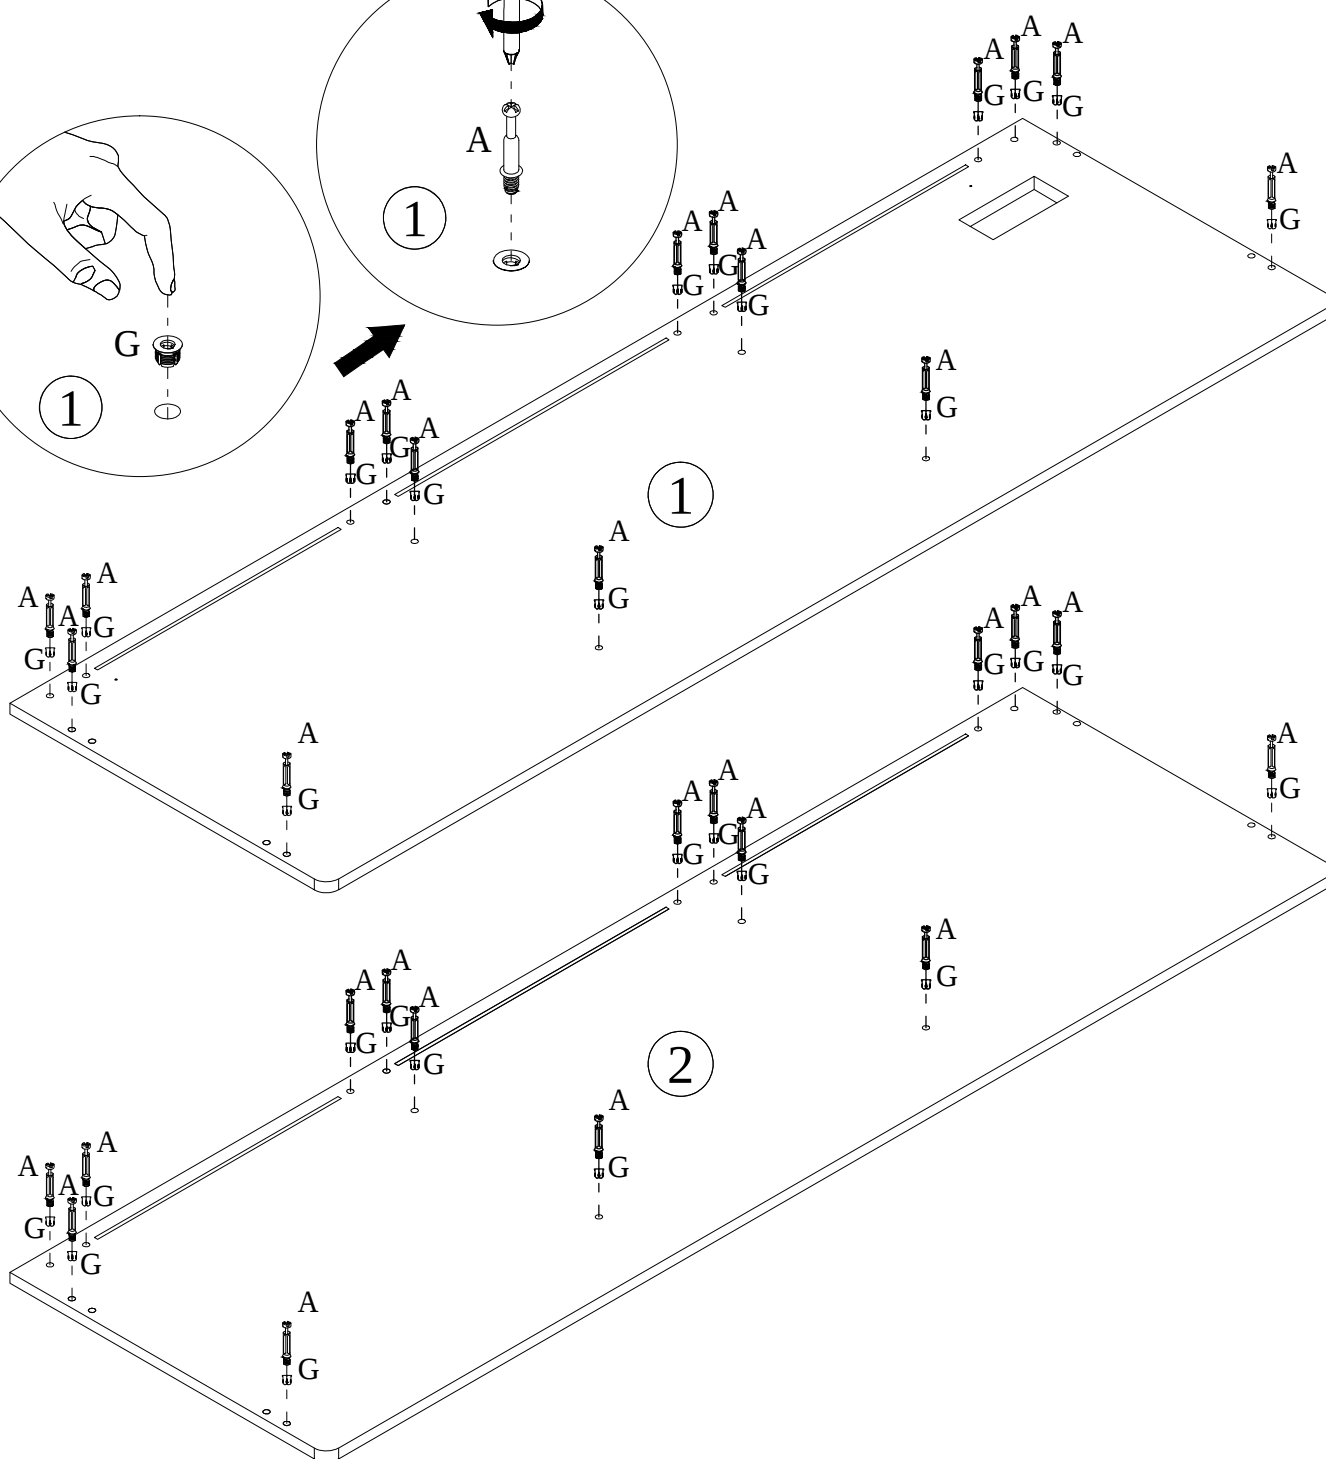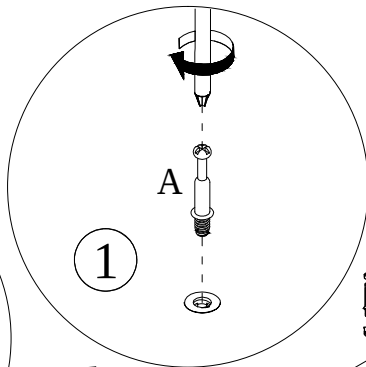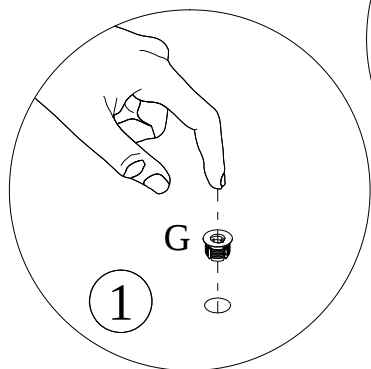

First install plugs (G) onto panels 1 and 2, then screw the self-tapping rods (A) into.






6

 A x 10








Ø6 x 40 mm

     G x 10

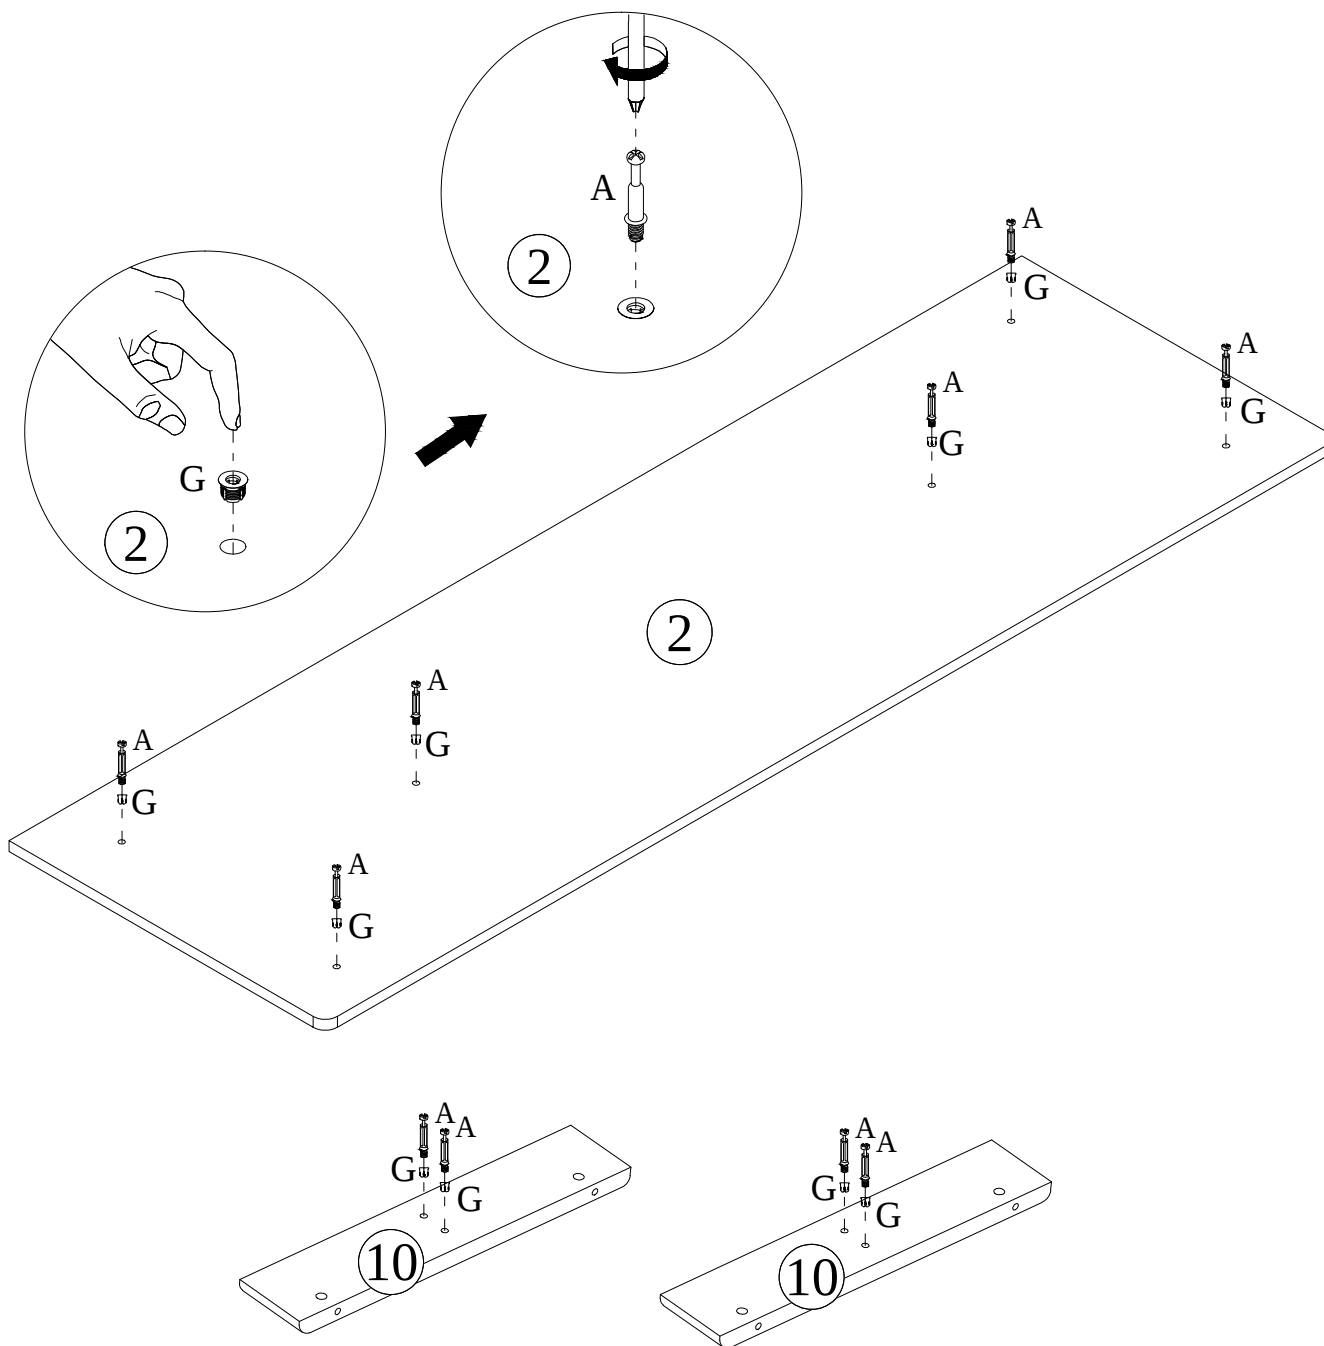

First install plugs (G) onto panels 2 and 10 . then screw the self-tapping rods (A) into.

     7

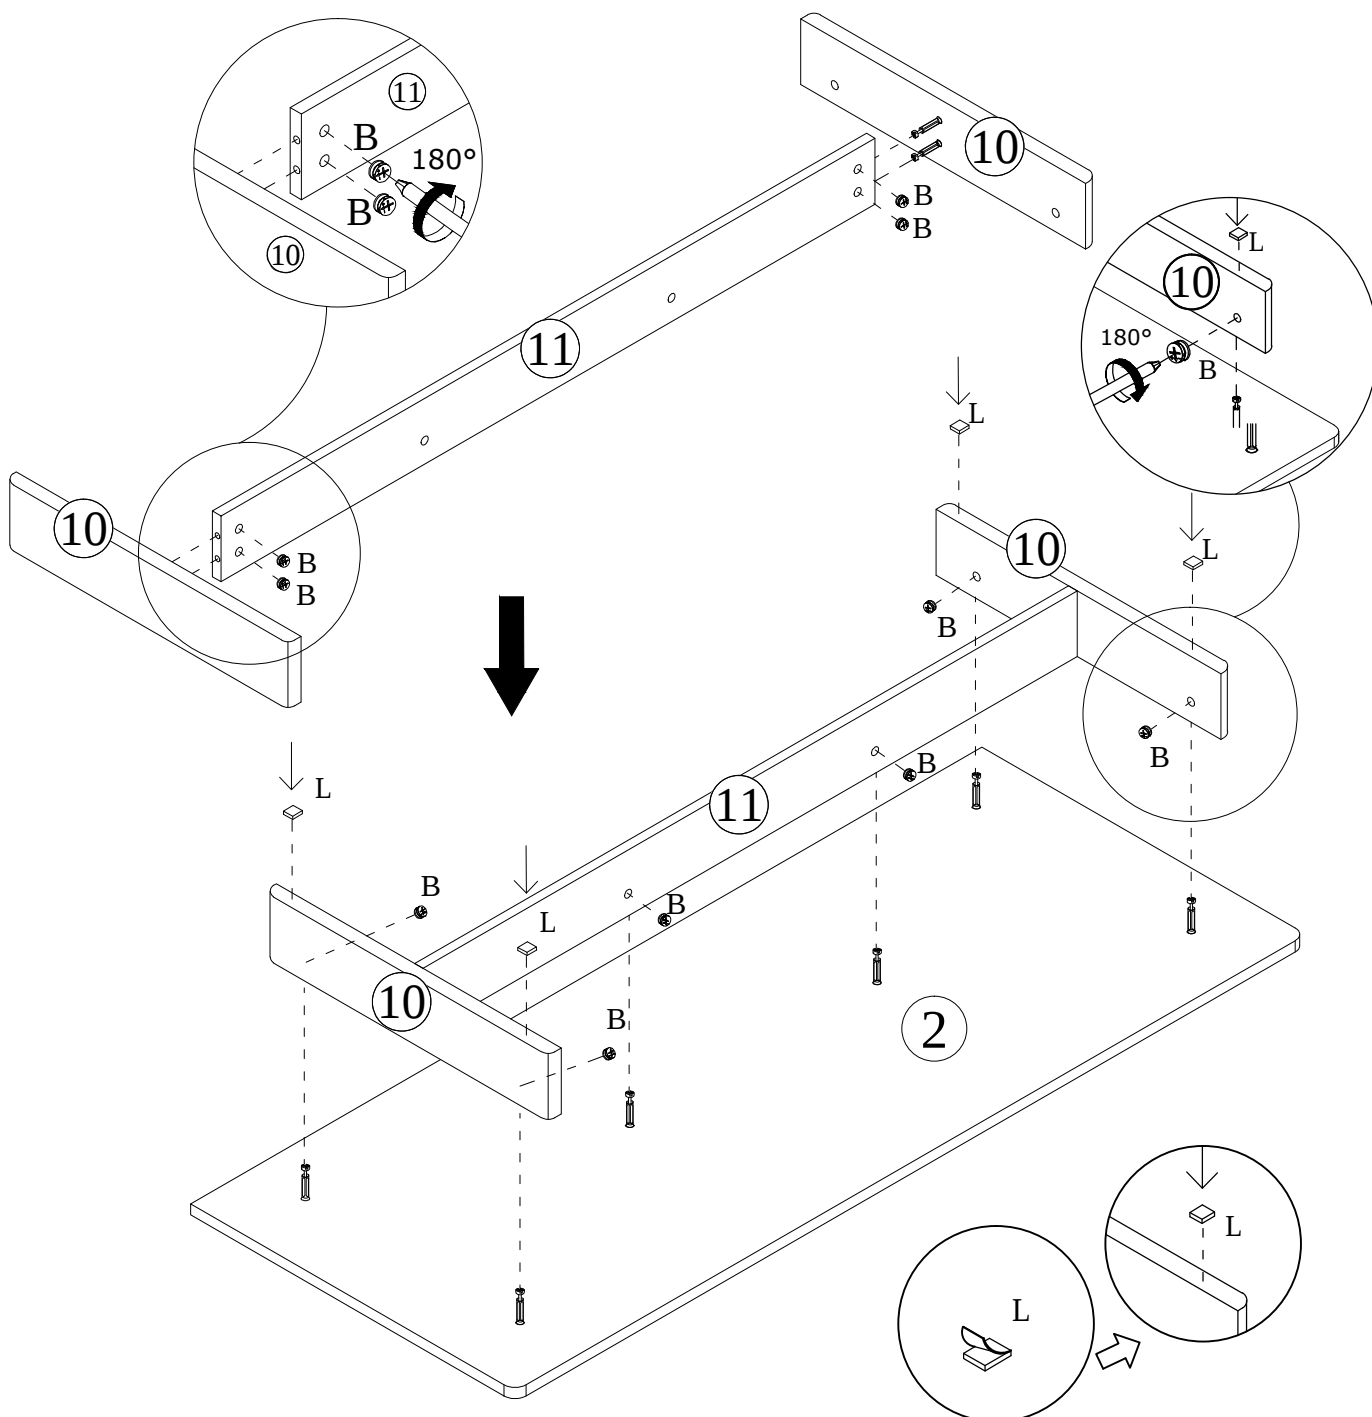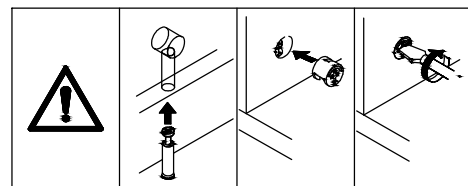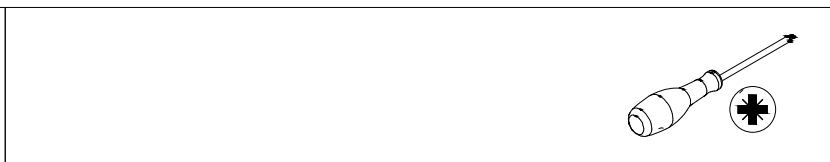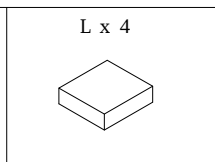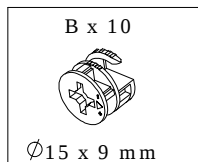


First connect plate 10 to plate 11, then tighten by turning cam lock (B) clockwise.


Connect plate 10 and 11 to plate 2, then tighten by turning cam lock (B) clockwise. Peel off the protective film (L). Secure (L) accessory to Plate 10

8

 A x 12



B x 8

 





J1 x 2




J2 x 10



    G x 12

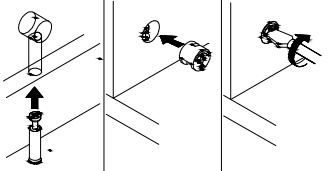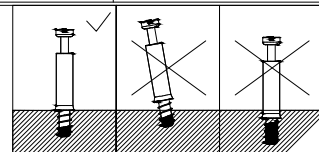

 First install plugs (G) onto panels 8, then screw the self-tapping rods (A) into.

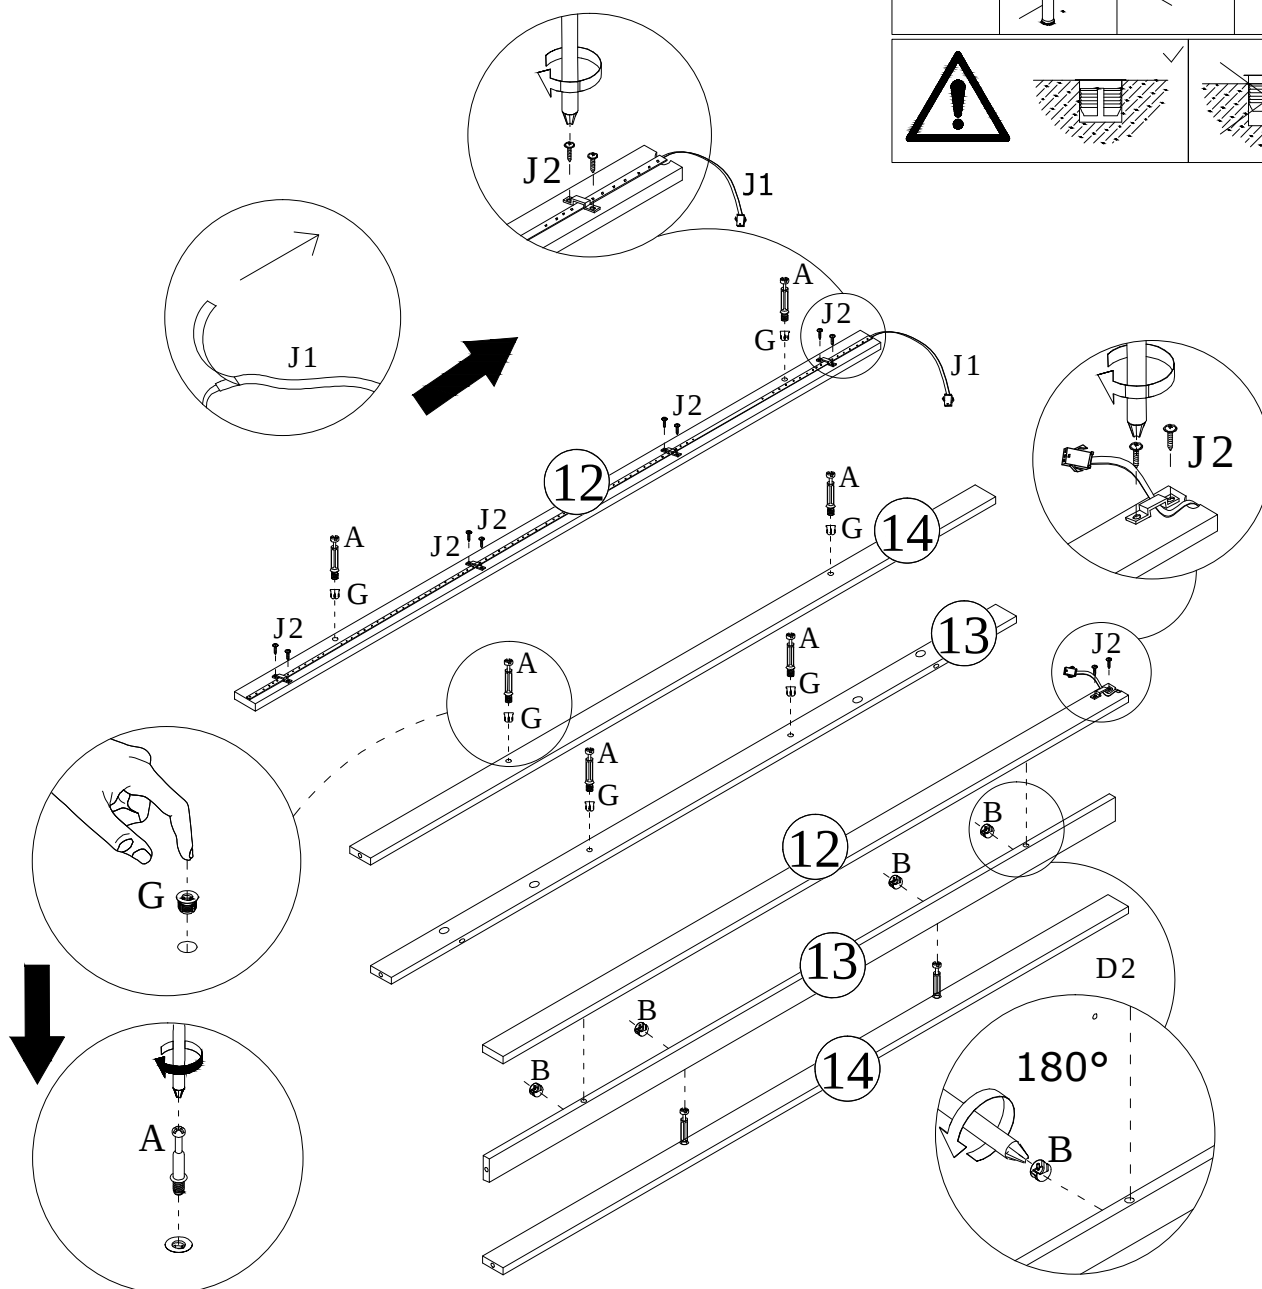

Peel off the protective film from light strip (J1) and secure it to plate 12 with buckle (J2).

Connect plate 12 and 14 to plate 13, then tighten by turning cam lock (B) clockwise.

 
 
 
x2

9

B x 4



Ø15 x 9 mm

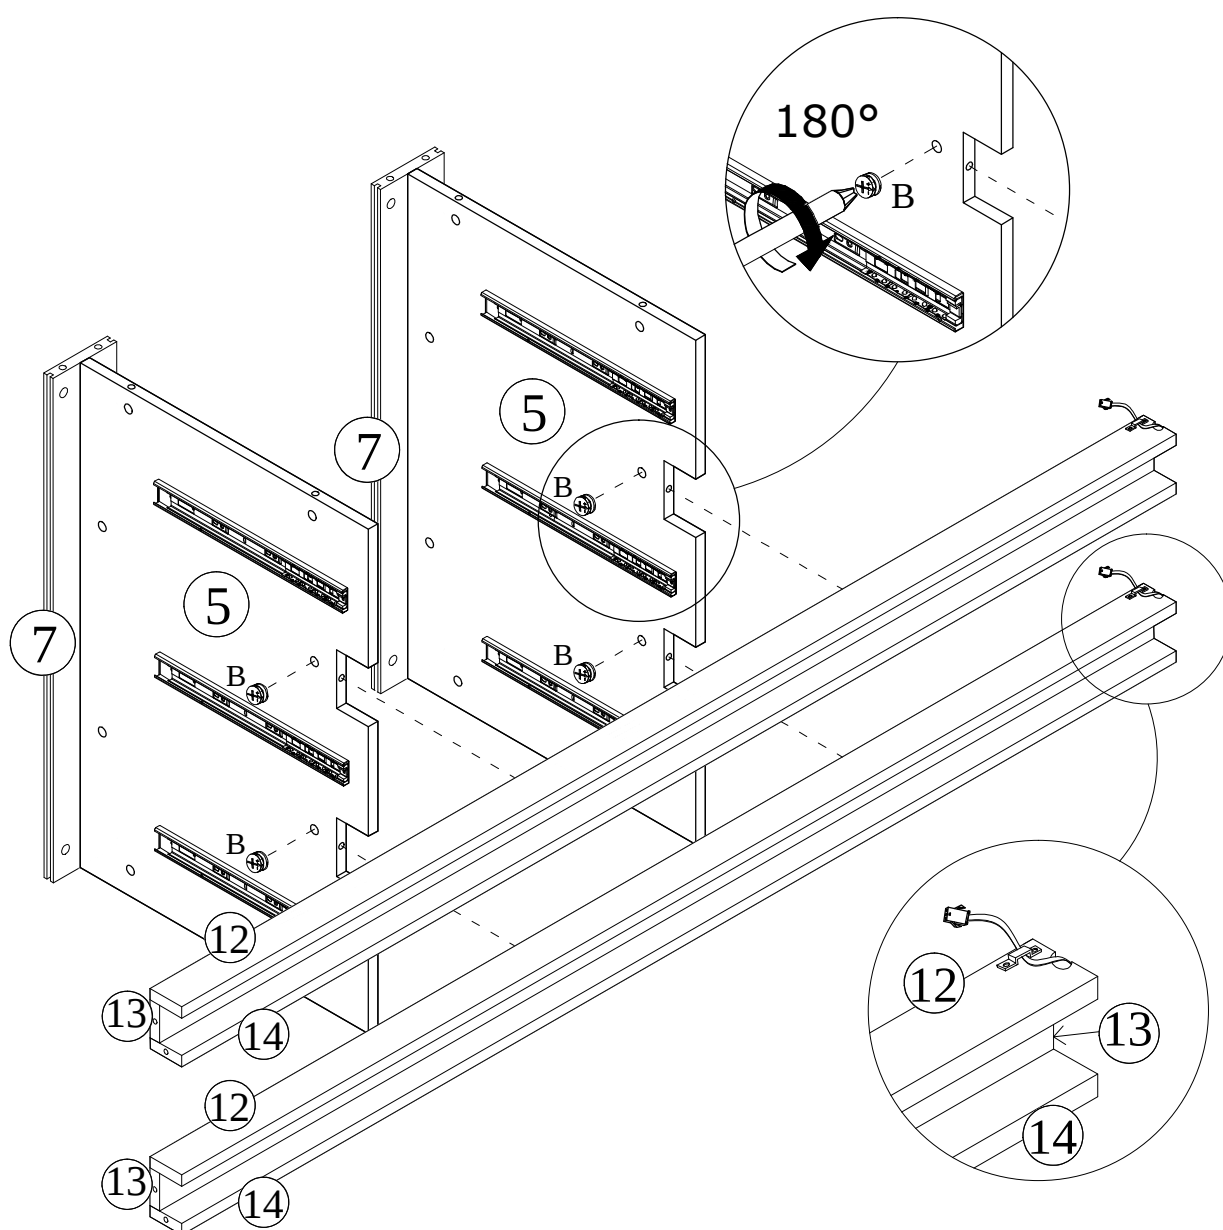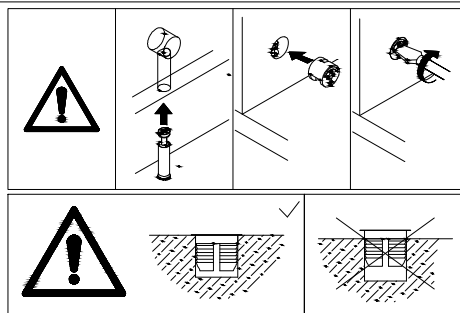

Pay attention to the direction when installing Board No. 5 and 12 .13 .14  
Connect plate 13 to plate 5 , then tighten by turning cam lock (B)  
clockwise.


# 10

 B x 4








Ø15 x 9 mm

C x 2



Ø 8 x 40 mm

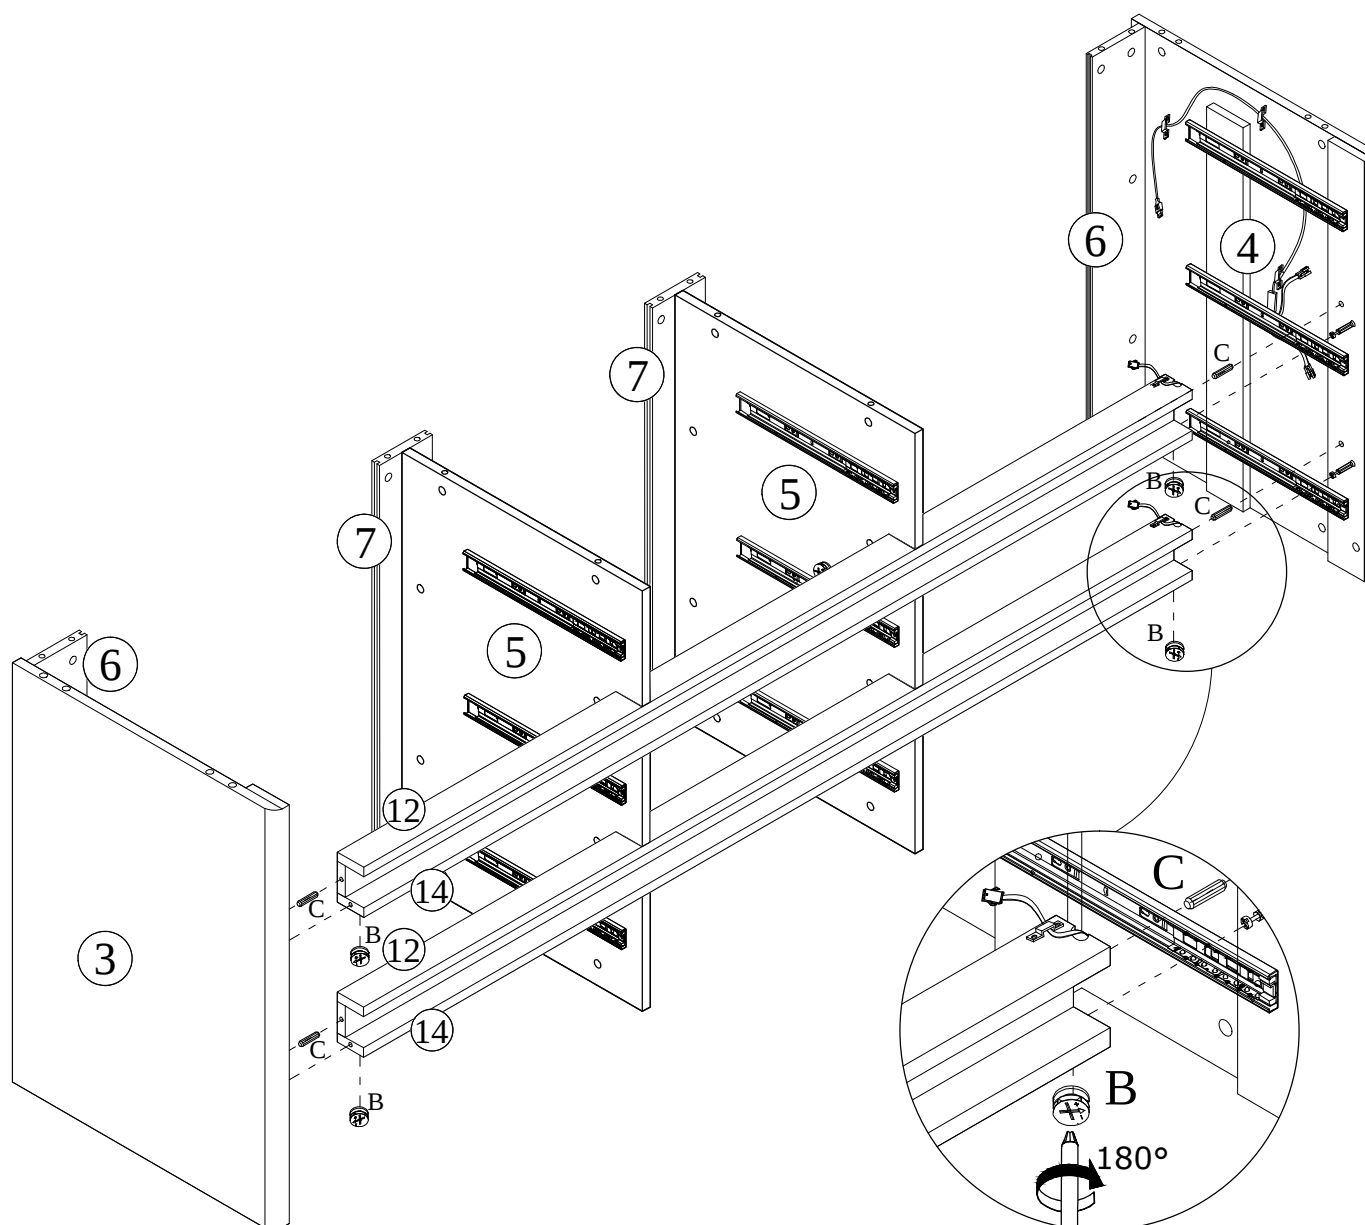  
 
 
 


First install the Board 13 (C) accessories

Pay attention to the direction when installing Board No. 12



First connect plate 3 and 4 to plate 12. 13 and 14 then tighten by turning cam lock (B) clockwise.

# 11

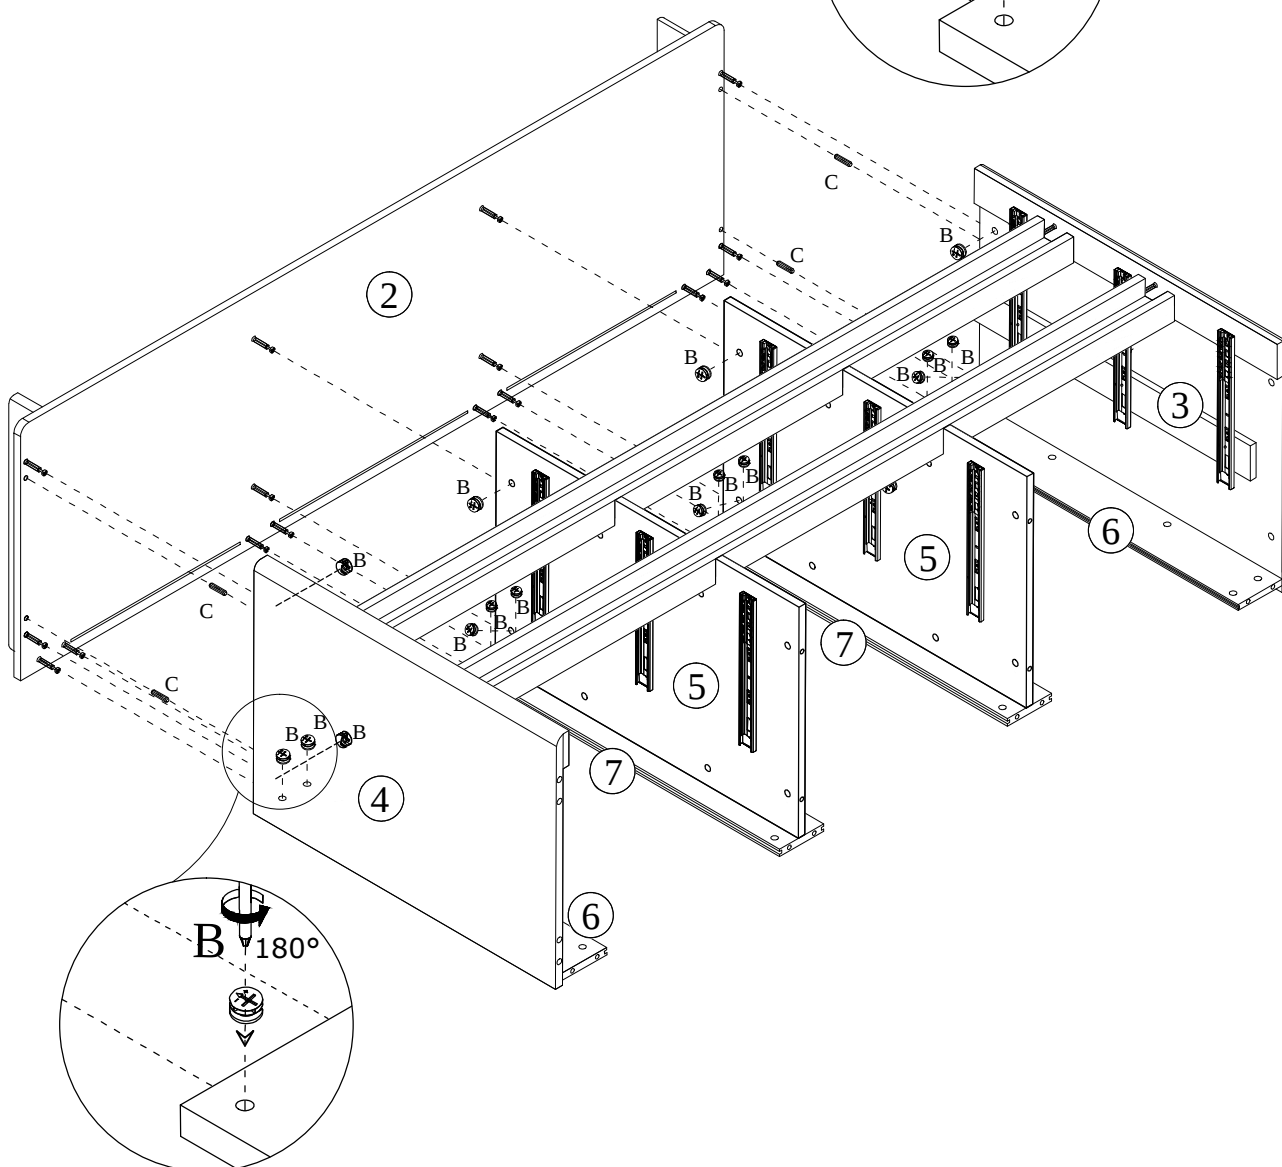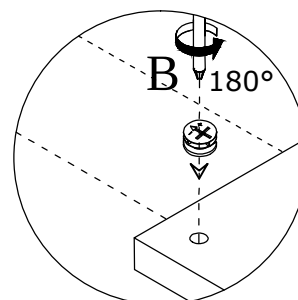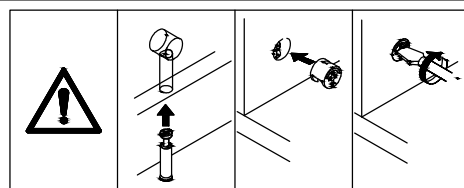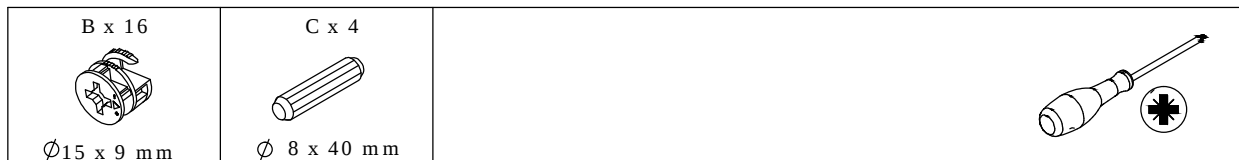    

First install the Board 3 and 4 (C) accessories  
 First connect plate 2 to plate 3.4.5.6.7 then tighten  
 by turning cam lock (B) clockwise.

# 12

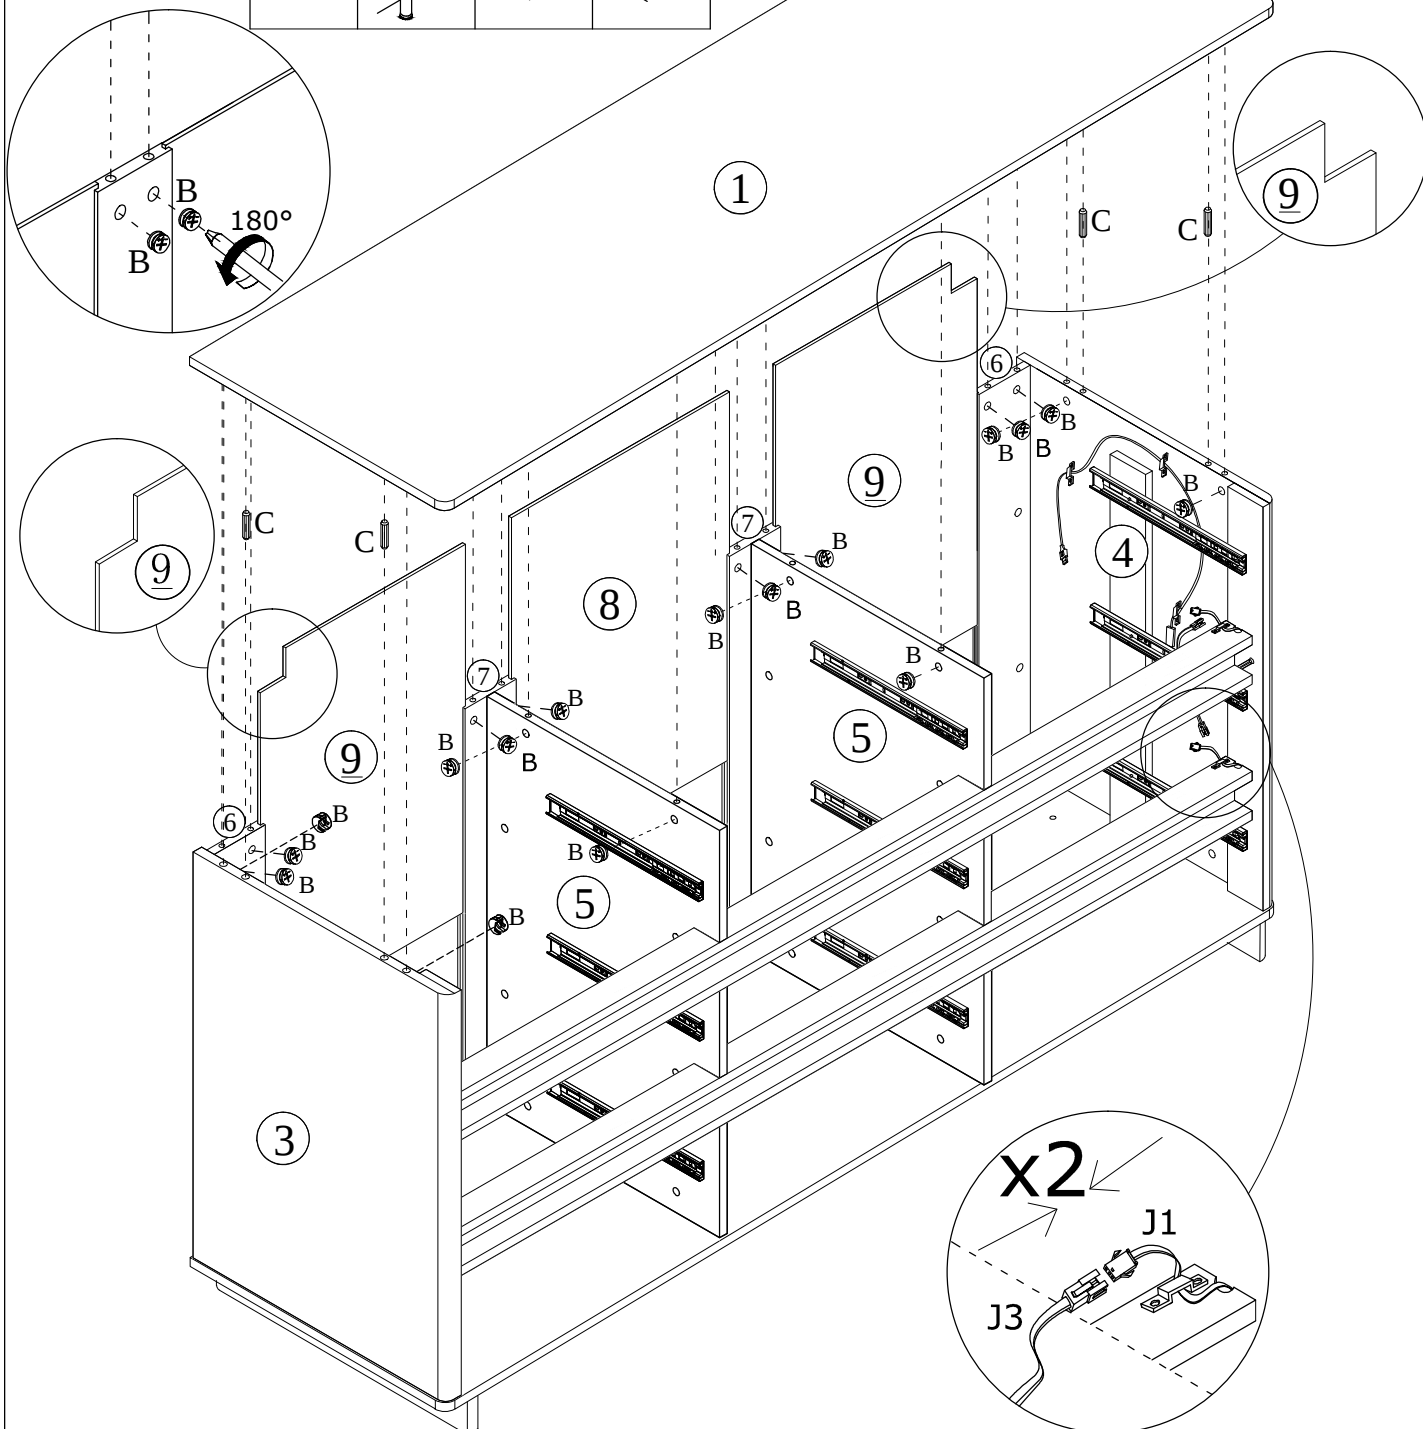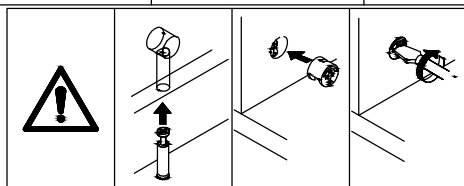  

And insert plate 8 and 9. along the groove  
 First install the Board 3 and 4 (C) accessories  
 Pay attention to the direction when installing Board No. 9  
 Insert backplates 8 and 9 into the available slots on board 1, then  
 connect to boards 3, , 5, 6, and 7, and tighten.  
 by turning cam lock (B) clockwise. Available slots Connect the light strip plug J1

# 13

F x 12

 
 
 
 
 
 


E x 12



Ø3.5 x 12 mm

K x 1

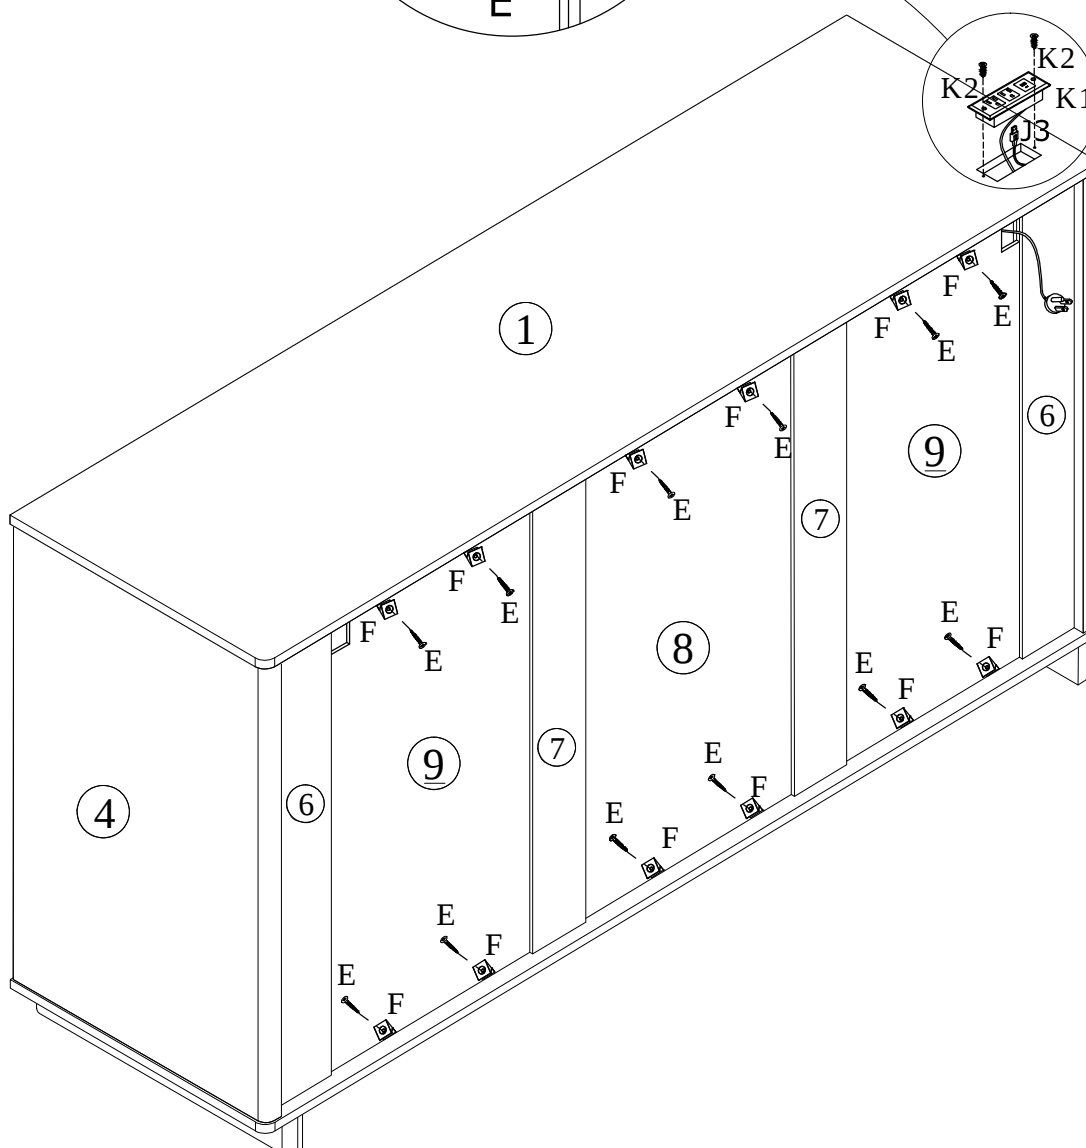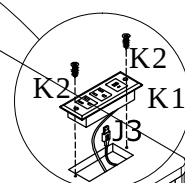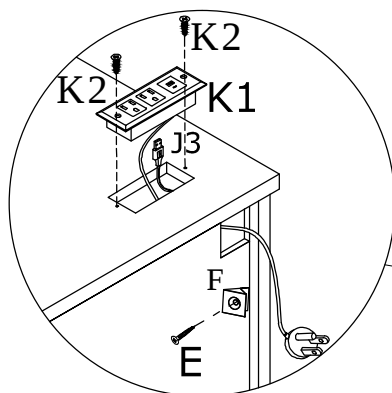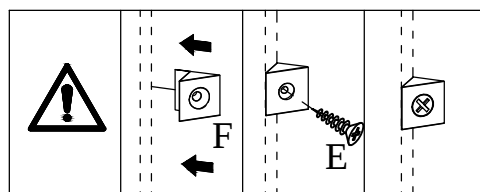


Secure the accessory (K1) to plate 1 using screw (K2).



Available slots Connect the light strip plug J3

Use screw (E) to secure accessory (F) to Plate 1 and 2

 
14

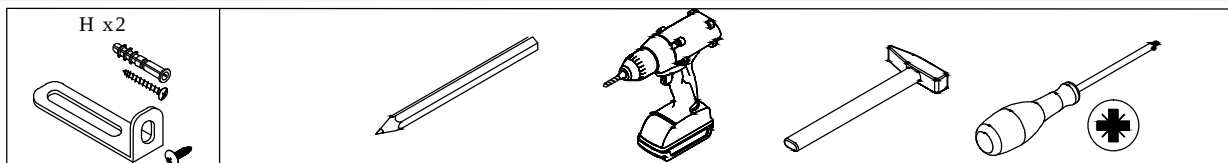


Install the anti-tip device.

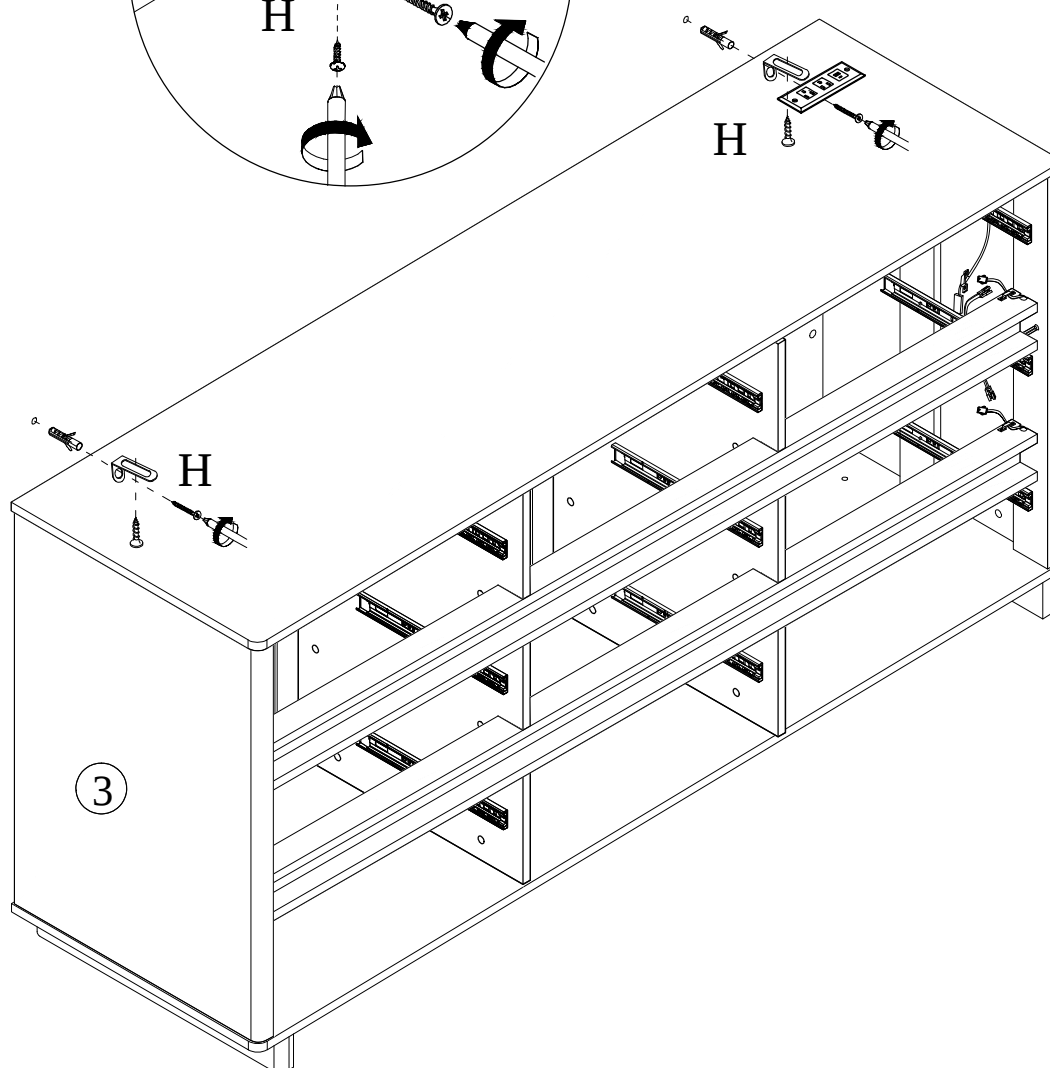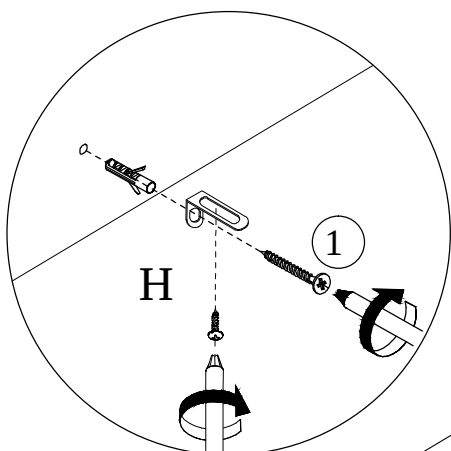  

 
1.

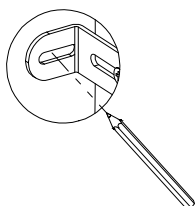

 
2.

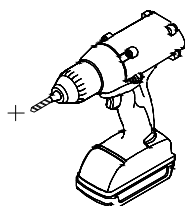

 3.

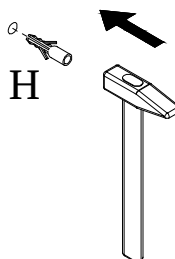

 4.

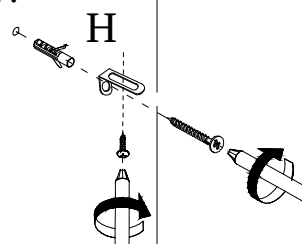

# 15

A x 36



 
G x 36



H x 36



M x 36



N

 
 
 
G

A  
G

19 x 3

20 x 3

21 x 3

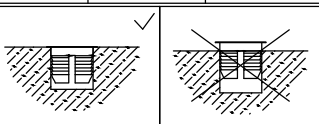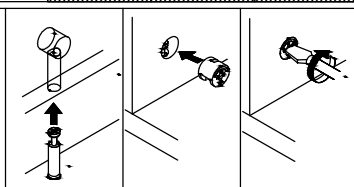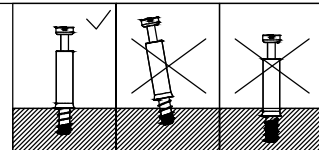

A

A

M

16

17

15

M

E

E

17

B

B

180°

15

17

16

18

B

B

First install plugs (G) onto panels 19 .20 .21, then screw the self-tapping rods (A) into.

Secure plate 15 and 16 to plate 17 using screw (M) and insert plate 19 .20.21 along the slots.


connecting plate 15 and 16 to plate 19. 20 .21, then tighten by turning cam lock (B) clockwise.




19 x 3

20 x 3

21 x 3

# 16


 
|                                                                                                                  |                                                                                                                     |                                                                                     |
|------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|
| <p>D1 x 18</p>  <p>L=300 mm</p> | <p>E x 36</p>  <p>Ø3.5 x 12 mm</p> |  |
|------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|

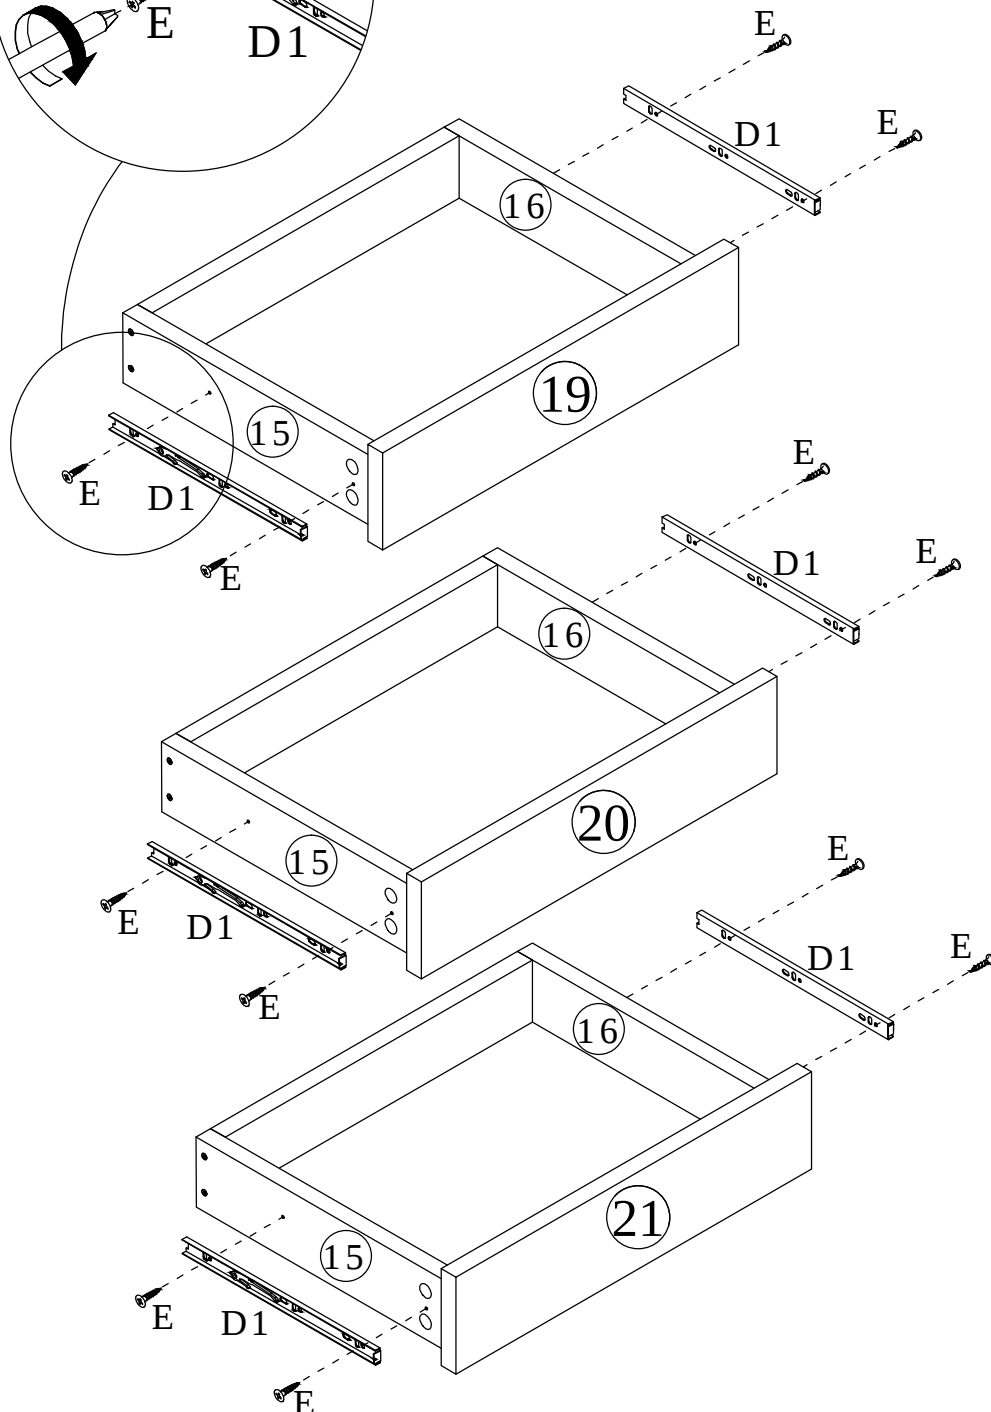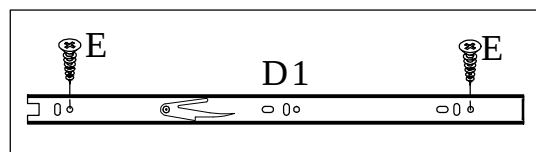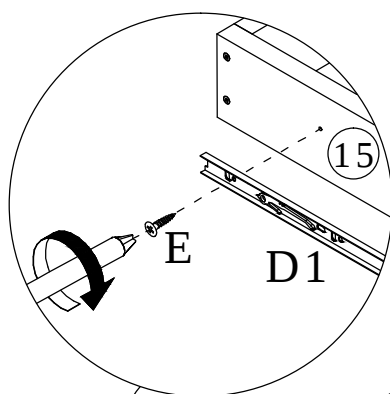   

Secure slide rail (D1) to plate 15 and 16 using screw (E).



x3

  17

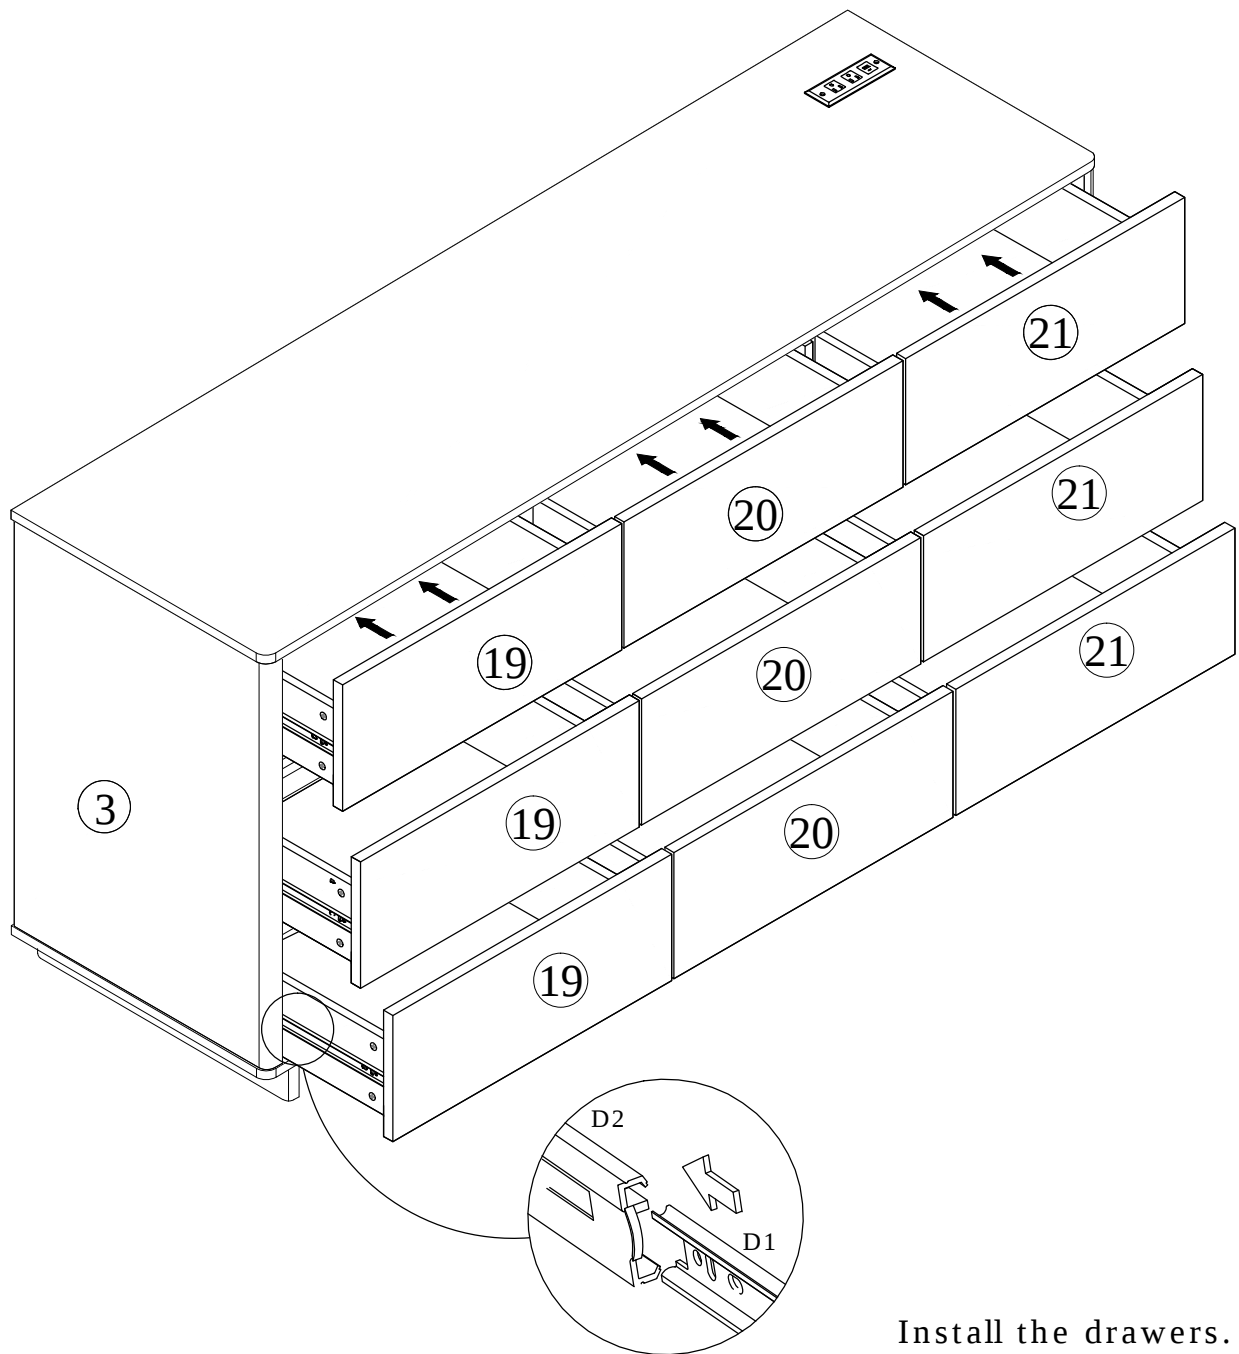

Install the drawers.

  18

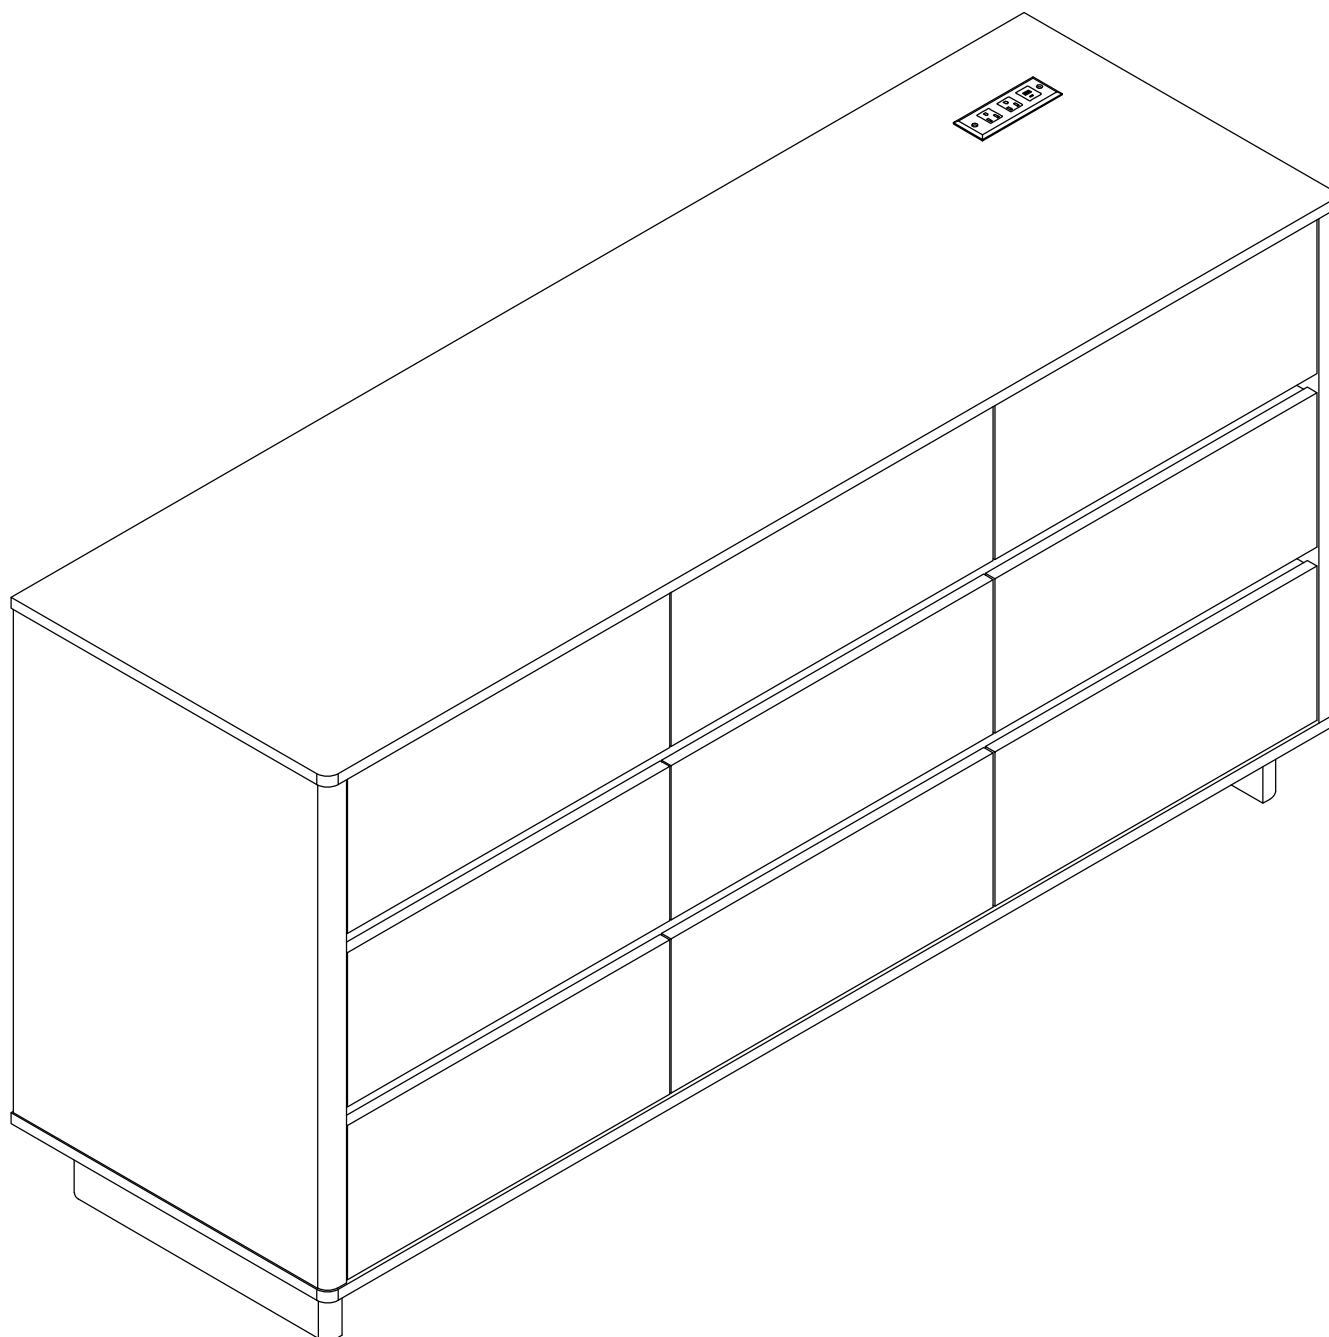

# WARRANTY

## WARRANTY CLAIMS

- There is a 30-day warranty for broken furniture or any other problems that do not work properly. The warranty will start from the date of purchase which must be verified by proof of purchase.
- Before making a claim, we may be able to answer your query, simply call us. Please leave your purchase order number, along with some details of the problem, if you want a replacement part. We will arrange within 48 hours. If there is out of stock, we will reply with a shipping date.
- The product must be used in accordance with the instructions provided. For health reasons.
- For other reasons, if the furniture needs to be returned, it must be cleaned and dried and operated within 30 days of receipt.

## Type of Warranty Claim

- Failure to follow the furniture instructions will invalidate the warranty. Attention please.
- Does not include damage during installation, but includes damage during transportation.

## Scope of responsibility

- Shall not bear any responsibility for misuse or user damage and / or loss of parts during the installation of furniture.
- After using, the damage and scratches of the furniture are not covered by the warranty.

## The Warranty Relates to All Bought in The Us and Covers The Following Areas

- Sheet parts: 1 month from the date of purchase.
- Electrical parts: 1 month from the date of purchase.

# RETURNS

## CHANGED YOUR MIND AND NEED TO RETURN YOUR ITEM?

### PLEASE FOLLOW THE BELOW INSTRUCTIONS:

- If you have purchased and have simply changed your mind, follow the retailer's instructions for returns.

### DEFECTIVE ITEMS

- If your item is defective in any way, i.e. it doesn't work but you can't identify why, in the first instance, please call us.

### DAMAGED ITEMS

- If you receive an order with obvious shipping damage from the retailer, then we suggest the delivery is refused. If the delivery has been accepted and then shipping damage is found, please follow the specific instructions advised by the retailer.  
In all circumstances please save all packaging material and paperwork for the order. Please be aware that if you dispose of packaging material or attempt to return the merchandise without contacting the fulfiller, you jeopardise your chances of making a claim, and you may not receive a credit for the return.