

## CARE AND MAINTENANCE

Store outdoor furniture indoors or cover well when not in use.







Remove wooden furniture from standing water. Dust regularly with small brush or vacuum

Spills should be taken care of immediately before they harden or stain with a slightly dampened sponge.


## NOTICE

- \* Please make sure that you have all parts indicated before you begin assembly of this item
- \* This item should be assembled on a soft surface to prevent scratching the finish during assembly
- \* This item may require periodic tightening

## Part List and Hardware List

PIECE	DESCRIPTION	PICTURE	QUANTITY
A	Leg frame		2X
B	Top Frame		1X
C	Cross bar		2X
D	Cross bar		1X
E	Screw		14X
H	Allen key		1X

Product Dimensions: 40.15" W x 19.68" D x 16.93" H

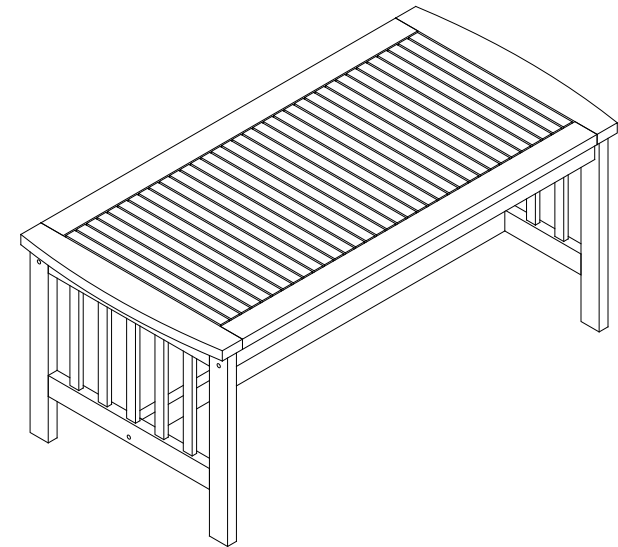


## PREPARATION

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list. If any part is missing or damaged, do not attempt to assemble the product.

Estimated Assembly Time: 10 minutes.


Tools Required for Assembly (included): Allen Key

1

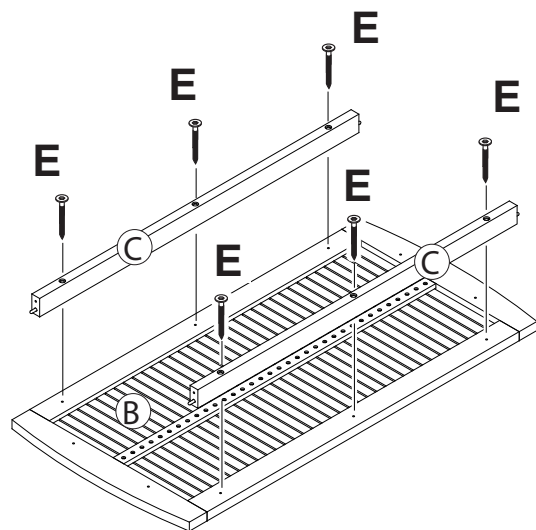


### Step 1

Attach top frame (B) to crossbars (C), use allen key (H) to tighten screws -1 (E).

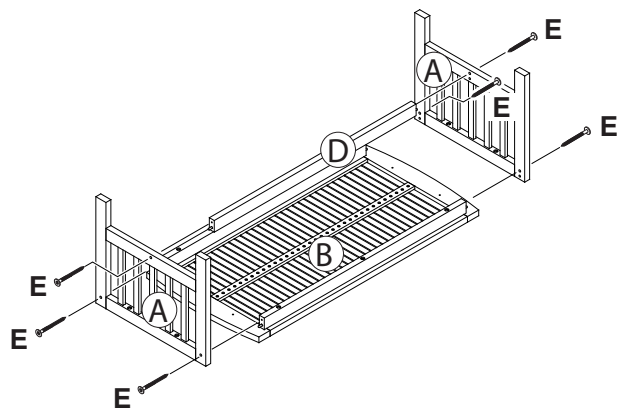

### Step 2

Attach crossbar (D) to leg frames (A) use screws -1 (E) and tighten with allen key (H). Connect (A) with (B) by using screws -1 (E) and allen key (H).

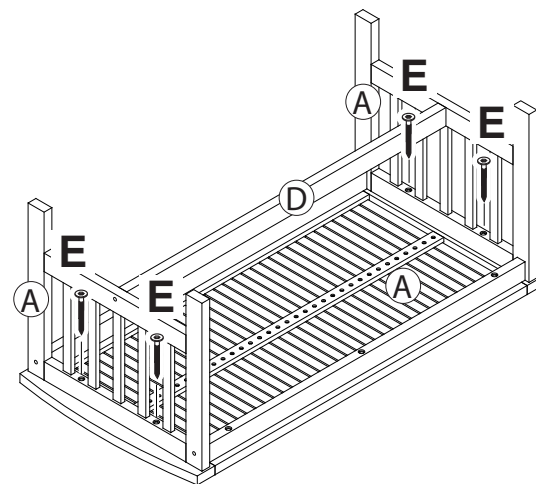

### Step 3

Use screws -1 (E) and allen key (H) to tighten (A) & (B).