

FRASER HILL FARM[®]

Thank you for your purchase!

With proper use and care, this product will provide you with years of enjoyment. If you have any questions, please contact us directly.

✉ **Holiday@FraserHillFarm.com** (Anytime)
☎ **855-591-7451**

(9AM to 9PM Eastern Time, Monday - Friday)
(9AM to 5PM Saturday - Sunday)

In the unlikely event that you experience a problem, please provide pictures and a description of the problem, a receipt (if available), name and address of the purchaser and the name of retailer where you purchased the product.

Please do not return this item to the retailer.


Please call our toll-free number 1 (855) 591-7451 or email us at Holiday@FraserHillFarm.com and a customer service representative will assist you.

ENJOY YOUR HOLIDAY!


8 Function Warm White LED Pre-Lit Tree

ASSEMBLY:

Thank you for purchasing this Instant Connect Tree. Carefully follow the instructions below on how to quickly and easily set up your new tree. Before assembling, choose an appropriate location near a wall outlet.

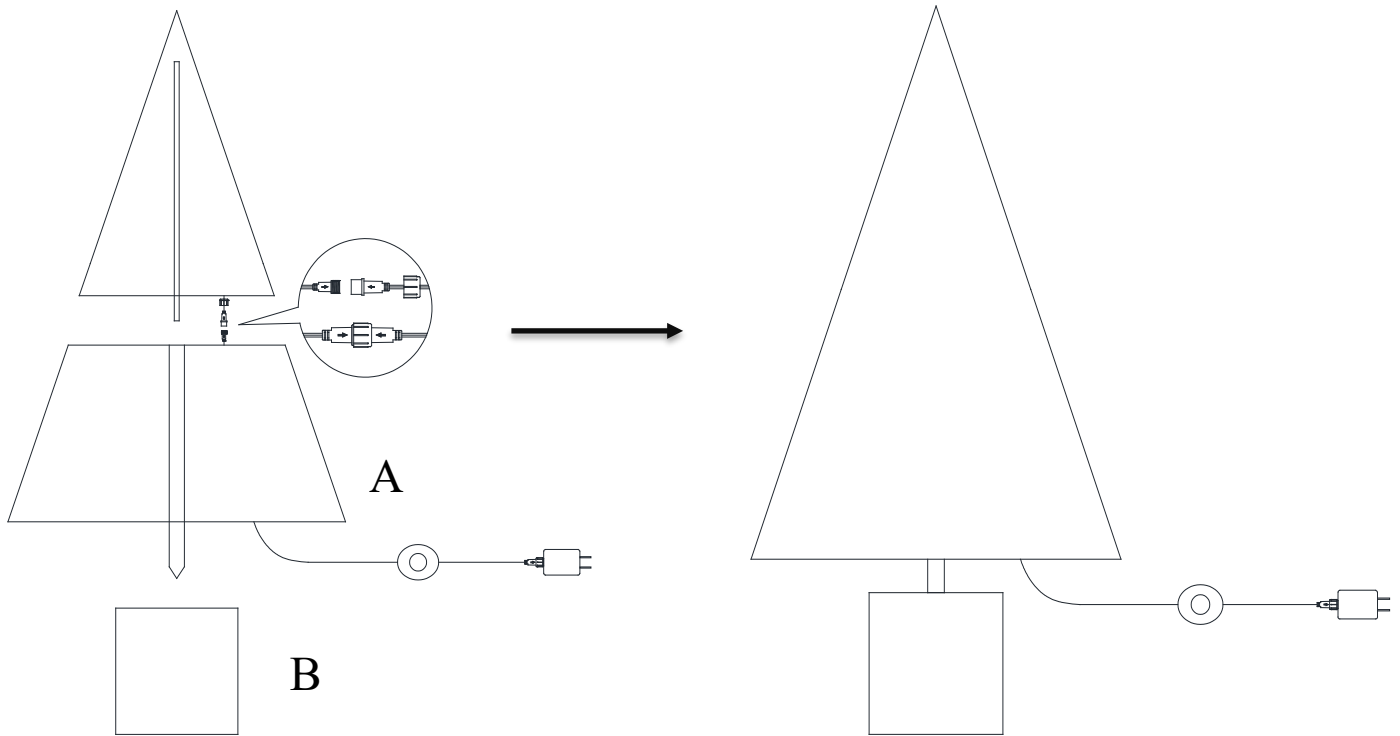

1. Align the tree body (A) with the socket on the pot base (B), insert vertically and lock firmly to ensure secure installation.
2. Connect the control box outlet with the transformer
3. Each tree section is numbered with a tag (e.g. SECTION A, B,). Please identify all sections before assembling.
4. Insert the middle section(s) to the lower section(s) until the top is placed.
5. Allow the branches to fall into place or gently pull branches up and out. When adjusting branches be sure that all wires are free of branch hinges as illustrated in Figure a.
6. Shape the branches. Starting with tips closest to the pole, shape one tip to the right, one to the left and one at the center of the main stem as illustrated in Figure a. Repeat pattern for each branch.

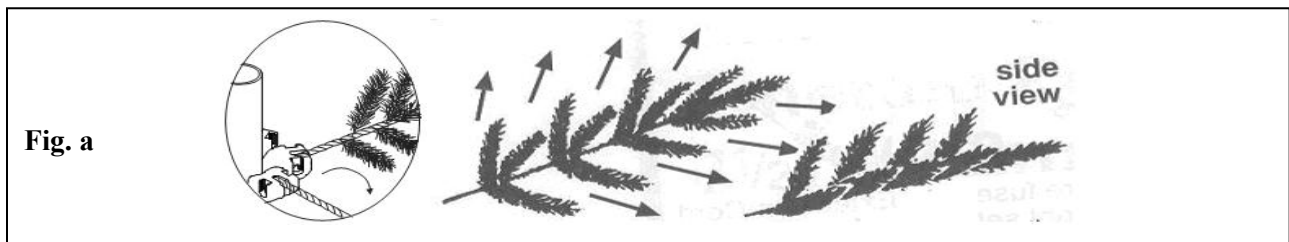


7. String Light Plug - Anti-Reverse Design
 - a. Check the plug: Each plug has a flat side and a curved side.
 - b. Align the plugs: Match flat side to flat side and curved side to curved side when connecting male and female plugs.

c. Fully insert: Push the plugs firmly together until fully seated to ensure normal lighting with no color distortion.

★ MODE – 8 Functions

- ✧ Combination
- ✧ In Wave
- ✧ Sequential
- ✧ Slow Glow
- ✧ Chasing/Flash
- ✧ Slow Fade
- ✧ Twinkle/Flash
- ✧ Steady On

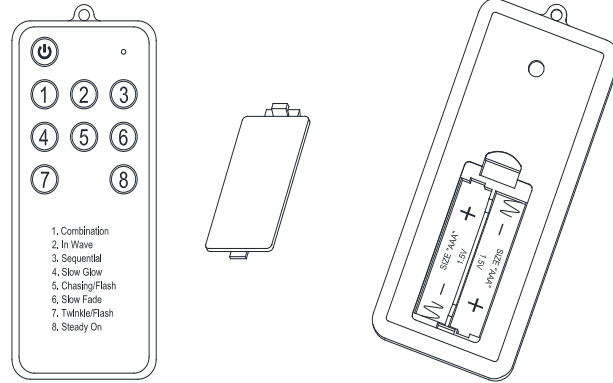

REMOTE CONTROL USE AND BATTERY INFORMATION

You may also change the lighting functions using the included remote control and two AAA batteries. Begin by placing the included battery in the remote control. Remove cover of the battery compartment and insert the battery according to the +/- directions. After ensuring the tree is plugged in and turned on using the foot pedal switch, press the button on the remote to cycle through the 8 lighting functions, listed on the next page.

NOTE:

1. The controller has memory function when switching off the power. It would be the same mode as last time when you switch on again.
2. The controller is integrated in the foot switch and can be switched by pressing the foot switch.

CAUTION! – This situation is unlikely to happen, but if any broken or burned bulb is found. Please DO NOT change or replace the bulb. This light bulb is irreplaceable.

BASIC PRECAUTIONS REQUIRED TO FOLLOWED WHEN USING THIS PRODUCT:

(Inspect product carefully before using or re-using):

1. This is an electrical product – not a toy! To avoid risk of fire, burns, personal injury and electrical shock it should not be played with.
2. Do not mount or place near gas or electric heaters, fireplaces, candles or other similar sources of heat.
3. Do not cover product with clothes, paper or any material when product is being used.
4. Do not hang ornaments or other objects from cord, wire, or light string. Hang ornaments only on the tree itself.
5. For your safety, unplug the product when leaving the house, retiring for the night, or left it unattended.

STORAGE: Disassembled tree can be stored in its original box. Store tree in a cool dry place where the temperature does not exceed 100 degrees Fahrenheit.

★.TROUBLE SHOOTING:

If any light doe snot work on your pre-lit tree, please check whether all plugs are properly connected and power cord is plugged into the wall outlet.

- a. Check all plugs are properly connected and power cord is plugged into wall outlet.

This product is for indoor use only.

FRASER HILL FARM®

Register your product today!

Congratulations on your new Fraser Hill Farm product! Register your item using the link below to activate your warranty and stay updated with product news, helpful tips, troubleshooting support, maintenance advice, and any important recall or safety notices.

<https://fraserhillfarm.com/register-your-product>



Warranty Information

Fraser Hill Farm provides a one-year Limited Warranty from the purchase date, covering repair or replacement of defective components. This warranty applies only to the original purchaser and requires the original sales receipt with the purchase date and location. Warranty coverage for replacements defaults to the original purchase date.

Contact Warranty Services at: 1-855-591-7451

Email us at: *Holiday@FraserHillFarm.com*

www.FraserHillFarm.com

1-YEAR LIMITED WARRANTY

"Limited" Warranty Program

For a period of one (1) year after purchase, Fraser Hill Farm ("Manufacturer") will either repair or replace defective components in accordance with this Limited Warranty.

Sales and use taxes, plus shipping and handling charges are the responsibility of the consumer.

This warranty is between Manufacturer and the original purchaser and is valid only when accompanied by the original purchaser's sales receipt showing original date of purchase and location of purchase. Replacements under this warranty revert back to the date of original purchase for future warranty.

Manufacturer or its authorized dealer can accept or reject warranty claims based on its findings. This warranty applies in normal residential use only, where an issue with the product is due to a defect in material or workmanship. Manufacturer can make substitutions as required of materials, components, and sub-components of comparable value and utility. This warranty is limited to product repair or replacement (to be determined solely by Manufacturer). Warranty return is limited to only the single affected component.

This warranty covers only manufacturing defects and does not cover normal wear and tear, abuse or misuse, including: water damage, chemical damage, exposure to extreme heat or cold, abrasion or excessive weight. This product is intended to be used with standard ornaments only. This warranty is invalid if the product is not used for intended purpose. Manufacturer disclaims liability for any aspect of installation and any inconvenience caused by a defective part or component.

Certain items are not covered by this warranty. These include, but are not limited to the following:

1. Components subjected to abuse, including abuse intended to simulate failure.
2. Damages caused by retailer, shipper or installation crew (such as scratches, dents, tears, etc.).
3. Any part which merely exhibits normal wear yet functions essentially as new, including stretching of materials and stitching.
4. Tears, punctures, scratches or any damage caused by improper installation or use.
5. Items sold "as is" or floor models.

To make a claim, send a copy of the original sales receipt along with a brief description of the problem to the email address below. Please include your email address and daytime telephone or cell phone #. All items maybe charged actual freight and handling costs. Repairs or replacement will be made at the Manufacturer's option.

THIS IS THE ENTIRE EXCLUSIVE EXPRESS LIMITED LIABILITY. THE MANUFACTURER NEITHER MAKES NOR IS RESPONSIBLE FOR ANY OTHER WARRANTIES, EITHER EXPRESS OR IMPLIED, INCLUDING THOSE OF RETAILING DEALERS. THIS EXCLUSIVE REMEDY IS LIMITED TO RECEIPT OF A CREDIT IN CONNECTION WITH THE REPAIR OR REPLACEMENT OF ANY PRODUCT OR COMPONENT DEEMED TO BE DEFECTIVE UNDER THE TERMS AND CONDITIONS AS STATED IN THIS WARRANTY. NEITHER FRASER HILL FARM, THE PRODUCT MANUFACTURER NOR ITS AGENTS SHALL BE LIABLE IN ANY CASE FOR INCIDENTAL, INDIRECT, SPECIAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY OR NEGLIGENCE EVEN IF IT HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

EXCEPT AS OTHERWISE MAY BE REQUIRED BY LAW, THERE ARE NO OTHER EXPRESS OR IMPLIED WARRANTIES OTHER THAN THE WARRANTY DESCRIBED HEREIN, AND ALL OTHER WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ARE EXPRESSLY DISCLAIMED.

Holiday@FraserHillFarm.com