


Adjust the extension of the handle to a comfortable use height. The handle can be retracted for compact storage of the cart.

RECOMMENDED STEPS TO FOLD THE CART:

Folding the cart may require firm pressure on the front and back frames of the cart to fold in the side bars. This is normal for the first few folding attempts.

Ensure the front wheels are swiveled away from the back wheels for a complete fold.

Adjust the angle of the latch with pliers if the latch does not fully engage the front frame.

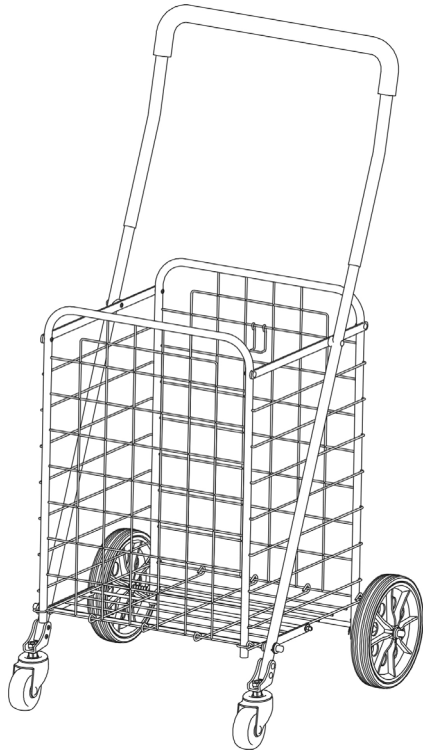

MOUNT-IT!

User Manual
SKU: MI-907S



Thank you for choosing Mount-It!

Visit us at www.mount-it.com for product registration and warranty information.

Our US based customer service team is standing by to answer any questions you have about your Mount-It! product.

Available by phone **Monday - Friday from 8:00am to 4:00pm PST.**

Chat live with an agent on our website!



support@mount-it.com



(855) 915-2666



www.mount-it.com

Rolling Utility Shopping Cart



HAVE QUESTIONS?

Monday - Friday from 8:00am - 4:00pm PST



support@mount-it.com











(855) 915-2666



www.mount-it.com


PACKAGE CONTENTS

Assembly Time:
Less than 10 minutes

A	B	C	D	E	F	G	H
Shopping Cart	Handle	Axle	Back Wheel	Washer	Spring	Cotter Pin	Hub Cap
							
1	1	1	2	6	2	4	2

Tools Needed: Pliers

This cart is intended for light duty use for groceries, laundry and transporting sports, camping, gardening equipment. The cart is rated for 66 lbs weight capacity of evenly distributed load.

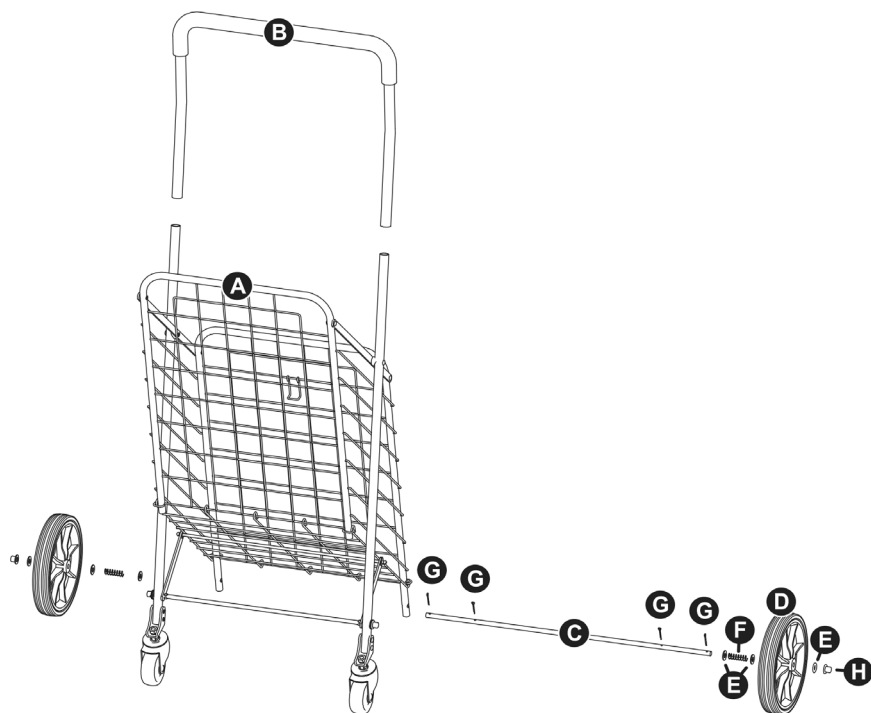

HANDLE & AXLE ASSEMBLY

1. Remove protective packaging material. Remove the wheels and other components that might be attached to the cart for transportation purposes.
2. Unfold Shopping Cart (A) by releasing the latch located on the back side of the cart.
3. Insert the Handle (B). Adjust the height of the desired handle by positioning it on one of the three slots.
4. Slide Axle (C) through the holes located on each leg at the back side of Shopping Cart (A). Center the axle and place two Cotter Pins (G) in the holes on the inside of the back legs.
5. Use pliers (not included) to bend open the Cotter Pins (G) ends to secure the axle in place.

WHEEL ASSEMBLY INSTALLATION

Follow the assembly steps below on one side of the axle.

1. Attach Washer (E), Spring (F) and Washer (E) on the axle, in the order shown in the image below.
 2. Attach Back Wheel (D) to the axle, followed by Washer (E).
 3. Apply pressure on Spring (F) by pushing the Back Wheel (D) to the inside of the axle until the outer hole on the axle is visible.
 4. Attach Cotter Pin (G) on the outer hole to lock the wheel assembly in place.
 5. Use pliers (not included) to bend open the Cotter Pins (G) ends to secure the axle in place.
 6. Press the hub cap (H) onto the end of the axle to finish with wheel assembly installation.
- Follow steps 1 through 6 on the other side of the axle for the other wheel assembly installation.