

# GEORGE FOREMAN®

## 4+1 BURNER GAS BBQ GFGBBQ4B1SS3-C



Please scan the QR code for step by step video assembly instructions. Alternatively, you can visit: [bbqs.georgeforeman.co.uk](http://bbqs.georgeforeman.co.uk). From here, please select the product that you are looking to build and view the 'How To' video located at the bottom of the page.

**WARNING: PLEASE ENSURE YOU HAVE READ THROUGH THE SAFETY AND OPERATING INSTRUCTIONS BEFORE USE.**

**PLEASE RETAIN INSTRUCTIONS FOR FUTURE REFERENCE**

# CONTENTS

	<b>Page(s)</b>
Safety instructions	<b>3-5</b>
BBQ Feature Diagram & Parts List	<b>6-8</b>
BBQ Assembly	<b>9-29</b>
Attaching Gas Cylinder	<b>30</b>
Disconnecting Gas cylinder	<b>31</b>
Lighting your BBQ	<b>32</b>
Food Safety	<b>33</b>
Tips for use	<b>34</b>
Storage	<b>35</b>
Cleaning and care	<b>36</b>
Troubleshooting	<b>37-38</b>
Guarantee and customer services	<b>39</b>

# SAFETY INSTRUCTIONS

## **WARNING: IMPORTANT SAFETY INSTRUCTIONS**

### **READ CAREFULLY AND KEEP FOR FUTURE REFERENCE**

#### **WARNING:**

- The Barbeque must be installed on a secure level base prior to use.
- Read the instructions before using the appliance.
- Always light the barbecue with the lid open.
- Check and clean the grease trays regularly.
- The gas hose should be checked regularly for leaks (especially after long breaks).
- Never use water to extinguish flames.
- Turn off the gas supply at the gas cylinder after use.
- Any modification to the appliance may be dangerous and will void the guarantee.
- Do not store or use gasoline or mentholated fuels or any other flammable vapors and liquids in the vicinity of this appliance. Never light a gas grill with gasoline or similar flammable fluids!
- When the wind speed is above 2m/s don't use the appliance facing in to the wind as this may cause the flame to extinguish.
- Never mount the gas cylinder under the appliance or near any parts of the appliance which becomes hot as this could result in serious injury.
- Use protective heat resistant gloves when handling particularly hot components.

- The appliance must be installed with 1m clearance in all directions around the appliance and should not be used underneath any overhead obstruction.
- In the event of a gas leak, turn off the gas supply at the gas cylinder, extinguish any open flames and keep the lid open. If the leak continues contact your local gas dealer immediately.  
**DO NOT USE AN OPEN FLAME TO CHECK FOR GAS LEAKS**
- Always test the gas line for leaks with soapy water. If there are leaks you should see bubbles forming.
- The lid must always be open when lighting the appliance.
- Be prepared if an accident or fire should occur. Know where the first aid kit and fire extinguishers are and how to use them.
- Do not heat any unopened glass or metal container on the grill. Pressure may build up and cause the container to burst, possibly resulting in serious personal injury or damage to the appliance.
- **WARNING! This barbecue will become very hot, do not move it during operation.**
- **Do not use indoors or in enclosed spaces!**
- **WARNING! Do not use spirit or petrol for lighting or re-lighting! Use only firelighters complying to EN 1860-3!**
- **WARNING! Keep children and pets away.**

**WARNING! Do not use the barbecue in a confined and/or habitable space e.g. houses, tents, caravans, motor homes, boats. Danger of carbon monoxide poisoning fatality.**

# SAFETY CHECKS BEFORE USE

- If you smell gas shut off gas to the appliance, extinguish any open flames, open lid and if the odour continues, keep away from the appliance and immediately call your gas supplier or your fire department. Leaking gas may cause a fire or explosion which can cause serious bodily injury, death, or damage to property.
- Never operate this appliance unattended, always ensure there are at least two people present.
- Check hose before each use of grill for nicks, cracking, abrasions or cuts. If the hose is found to be damaged in any way, do not use the grill.

## Technical data

UK CA		George Foreman 4 BURNER GAS BBQ with Side Burner GFGBBQ4B1SS3-C (SRGG41128)			
0558-25		UKCA Pin Code: 0063CT7097			
Country of Destination	Appliance Category	Gas and Supply Pressure	Main Burner Injector Size $\phi$	Side Burner Injector Size $\phi$	Total Nominal Heat Inputs (Hs)
GB	I3+ (28-30/37) <input checked="" type="checkbox"/>	Butane (G30) 28-30mbar	0.83 mm	0.90 mm	15.2kW 1106 g/h
		Propane (G31) 37mbar	0.83 mm	0.90 mm	15.2kW 1086 g/h
CE		CE Pin Code: 0063CT7097			
0063-25					
Country of Destination	Appliance Category	Gas and Supply Pressure	Main Burner Injector Size $\phi$	Side Burner Injector Size $\phi$	Total Nominal Heat Inputs (Hs)
BE, CH, CY, CZ, ES, FR, GB, GR, IE, IT, LU, LV, PT, SK, SI	I3+ (28-30/37) <input checked="" type="checkbox"/>	G30 Butane at 28-30mbar	0.83 mm	0.90 mm	15.2kW 1106 g/h
		Propane G31 at 37mbar	0.83 mm	0.90 mm	15.2kW 1086 g/h
GB, CY, DK, EE, FR, FI, HU, IT, LT, NO, SE, SI, SK, RO, HR, TR, BG, IS, LU, MT	I3B/P (30) <input type="checkbox"/>	Butane G30 and Propane G31 at 30mbar	0.83 mm	0.90 mm	15.2kW 1106 g/h
AT, CH, DE, SK	I3B/P (50) <input type="checkbox"/>	Butane G30 and Propane G31 at 50mbar	0.74 mm	0.79 mm	15.2kW 1106 g/h
<p><b>⚠ Caution:</b>  <b>USE OUTDOORS ONLY.</b> If stored indoors, detach and leave cylinder outdoors.            Read instructions before using the appliance.            The gas cylinder should not be placed inside the BBQ.  <b>WARNING :</b> Accessible parts may be very hot. Keep young children away.            Minimum clearance from side and back of unit to combustible construction: 100cm            Made in P.R. China            Made by Product Care Trading Limited under license from Spectrum Brands (UK) Limited.            Product Care Trading Limited, Wigan, WN2 4AY, UK / Product Care (Ireland) Ltd, Cork, T23 AT2P, Ireland.            George Foreman is the registered trademark of Spectrum Brands (UK) Ltd.            Website: bbqs.georgeforeman.co.uk</p>					



Carbon Monoxide  
Poisoning Hazard


Do not use in  
Motor Homes

Do Not Use  
Indoors





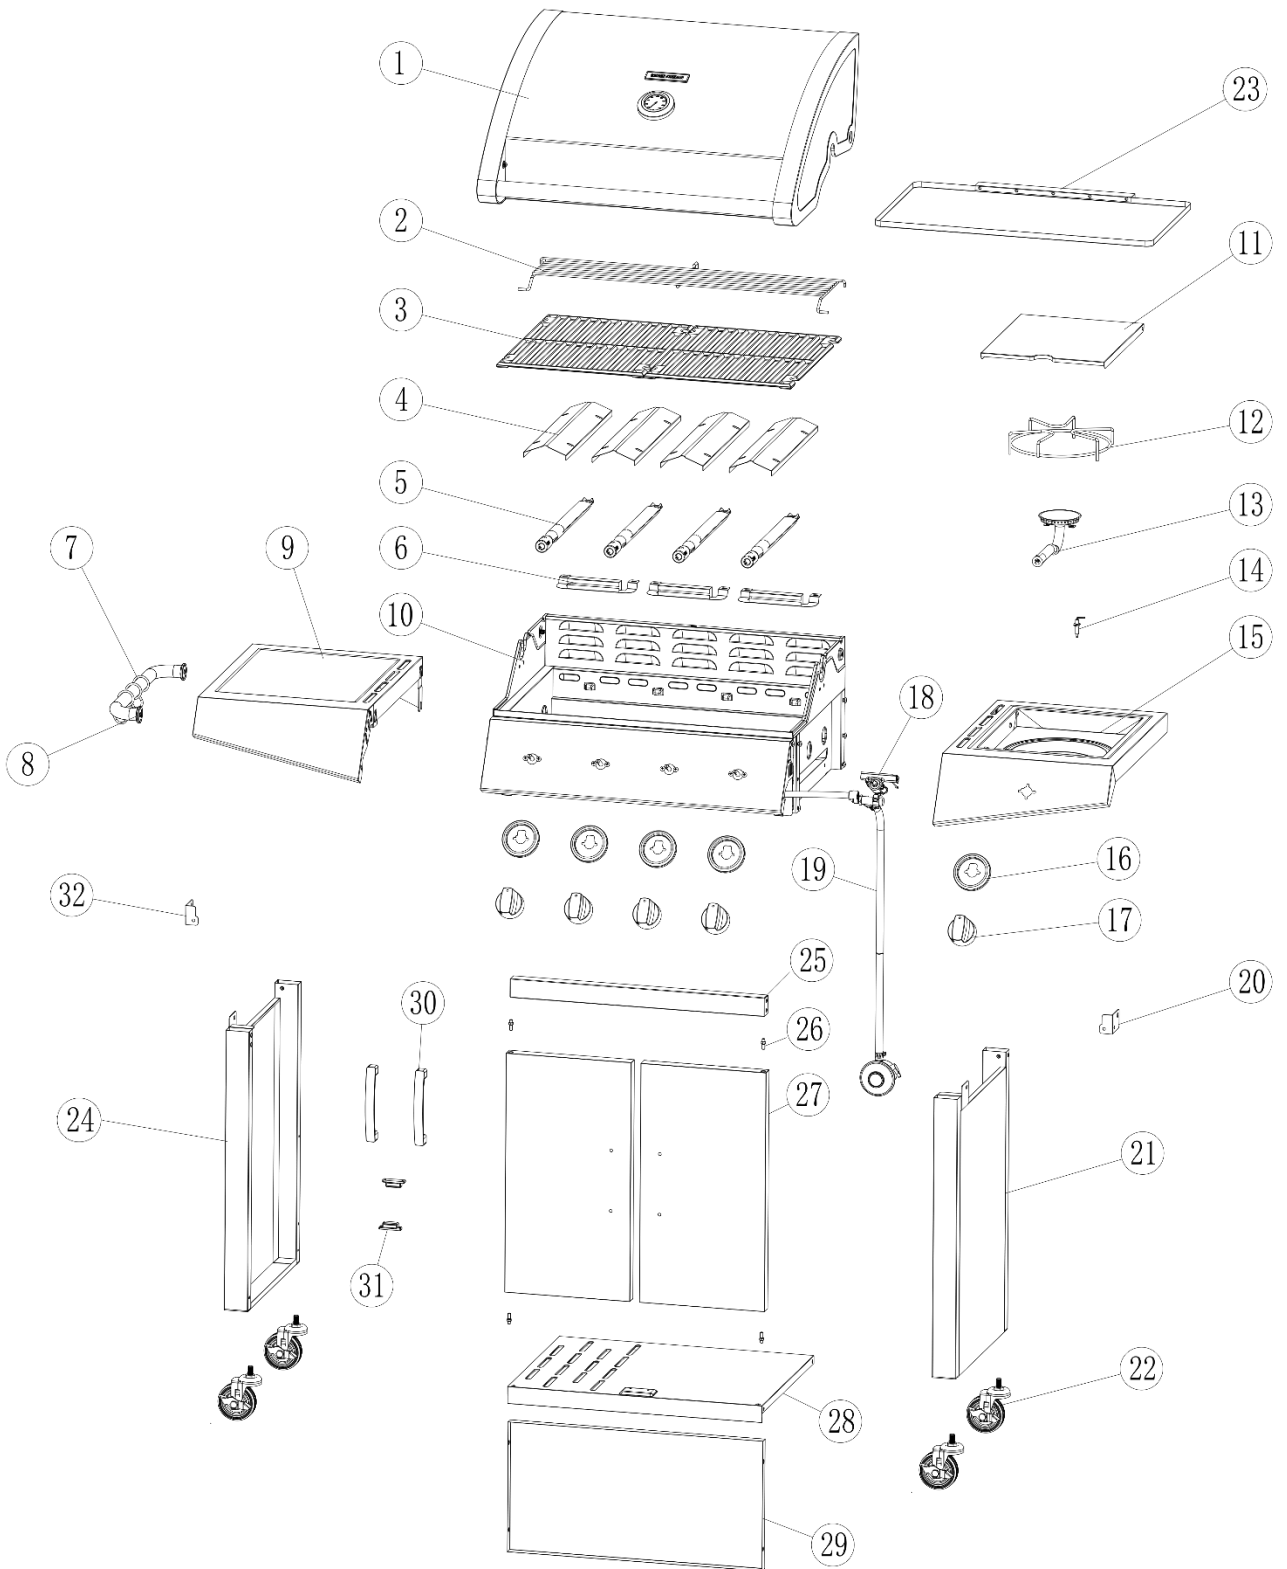


Do Not Use in  
Tents








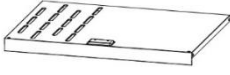
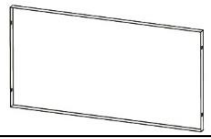



Use in open  
Spaces

# FEATURE DIAGRAM



# PARTS LIST

Part	Description	Visual	Qty
1	Lid		1
2	Warming Rack		1
3	Cooking Grid		2
4	Flame Tamer		4
5	Main Burner		4
6	Crosslighting Tube		3
7	Towel Hook		3
8	Side Shelf Handle		1
9	Left Side Shelf		1
10	Grill Body		1
11	Side Burner Lid		1
12	Side Burner Pan Support		1
13	Side Burner		1
14	Ignitor		1
15	Right Side Shelf Assembly		1
16	Dial Bezel		5
17	Dial		5
18	Side Burner Valve		1
19	Regulator & Hose		1
20	Right Mounting Bracket		1

Ref	Description	Visual	Qty
21	Right Side Panel		1
22	Locking Castor		4
23	Grease Tray		1
24	Left Cart Panel		1
25	Cart Horizontal Bar		1
26	Door Pivot		4
27	Cart Door		2
28	Cart Bottom Panel		1
29	Cart Rear Panel		1
30	Door Handle		2
31	Door Magnet		2
32	Left Mounting Bracket		1

You will need:










not supplied



not supplied

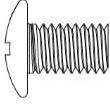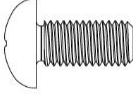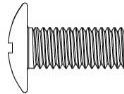
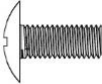
# PARTS LIST

 Ref	Dimensions	Visual	Qty
AA	M6 x 10		8
BB	ST5.5 x 12		8
CC	M5 x 12		14
DD	M4 x 10		2
EE	M3 x 10		4
FF	M3		4
-	BBQ Cover		1

# BBQ ASSEMBLY
 
## STEP 1 – Assembling the Cart Walls


- Attach the **left mounting bracket (32)** onto the **left cart panel (24)**, using 2 each of the **“CC”** Screws.
- Then, attach the **right mounting bracket (20)** onto the **right cart panel (21)**, using 2 each of the **“CC”** Screws.

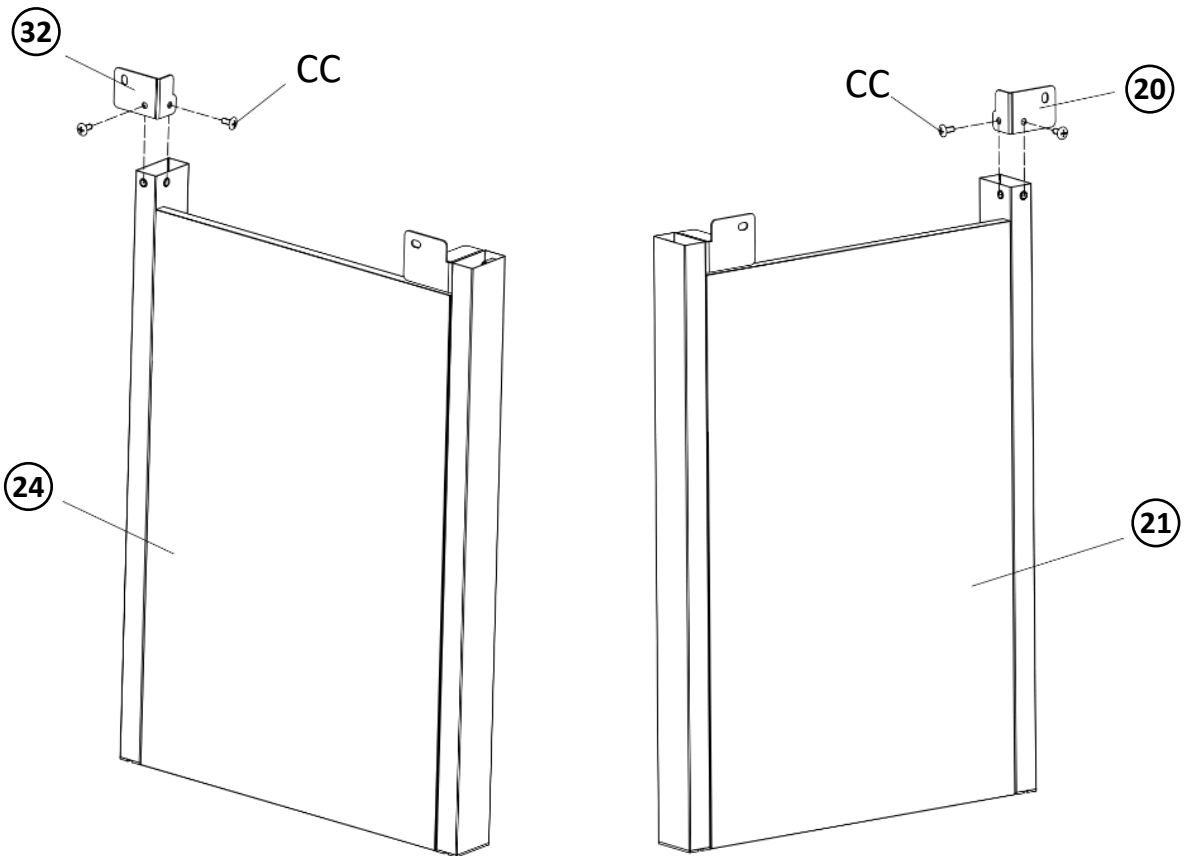

# BBQ ASSEMBLY

## STEP 2 – Attaching the Castors

- Attach 2 of the **locking castors** (22) onto the ends of the **left cart panel** (24) by screwing them into the base of the legs, as shown in the diagram below.
- Then, attach the other 2 **locking castors** (22) onto the ends of the **right cart panel** (21) by screwing them into the base of the legs, also shown in the diagram below.

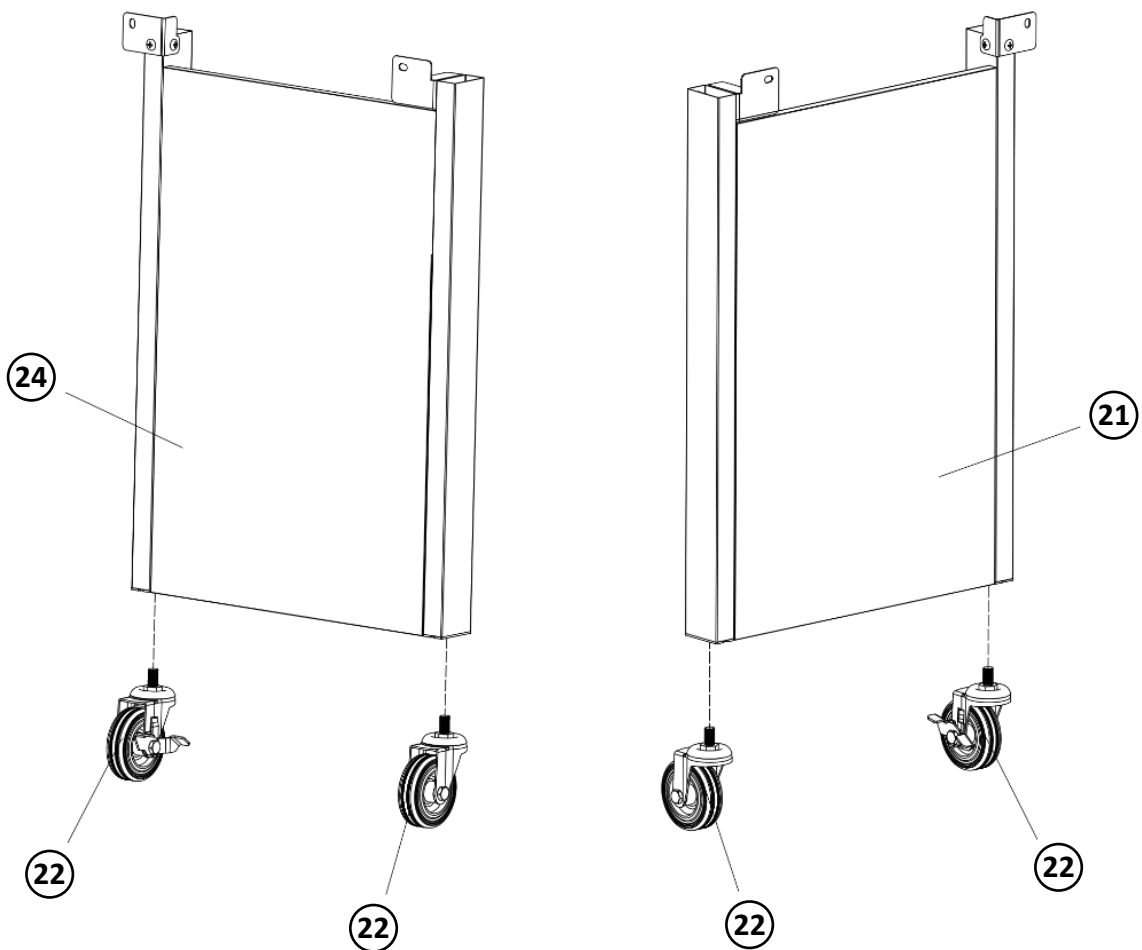


# BBQ ASSEMBLY

## STEP 3 – Attaching the Door Magnets

- Attach the **door magnet** (31) onto the **cart bottom panel** (28), using 2 each of the “EE” Screws, and “FF” Nuts, as shown in the diagram below.
- Then, attach the other **door magnet** (31) onto the **cart horizontal bar** (25), using 2 each of the “EE” Screws, and “FF” Nuts, also shown in the diagram below.



*Ensure the screws are placed on the top side of the bottom panel and the nuts are placed on the bottom side of the bottom panel.*

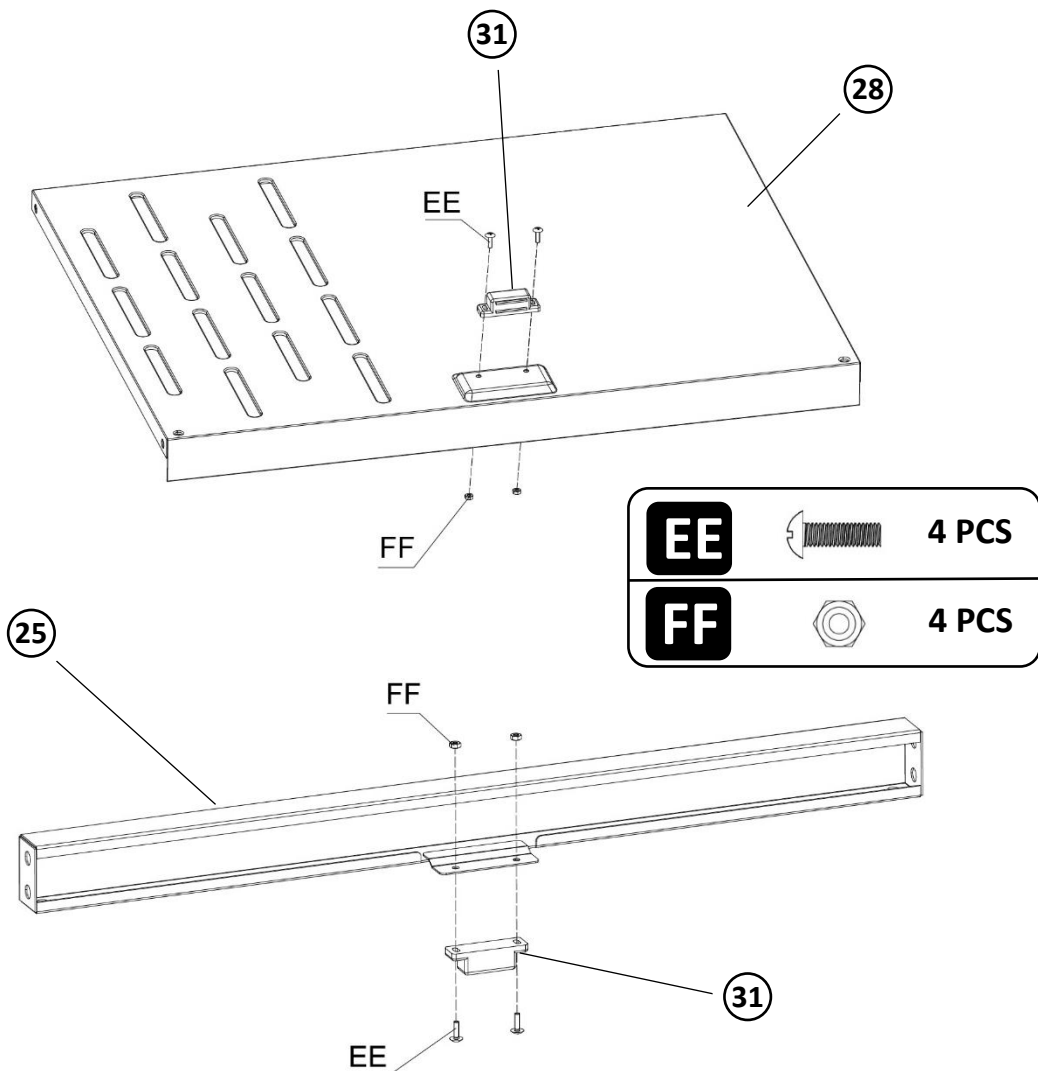

# BBQ ASSEMBLY

## STEP 4 – Attaching the Cart Base

 

- Secure the **cart bottom panel (28)**, to the **left cart panel (24)** and **right cart panel (21)**, using 4 each of the “**BB**” Screws, as displayed in the diagram below.

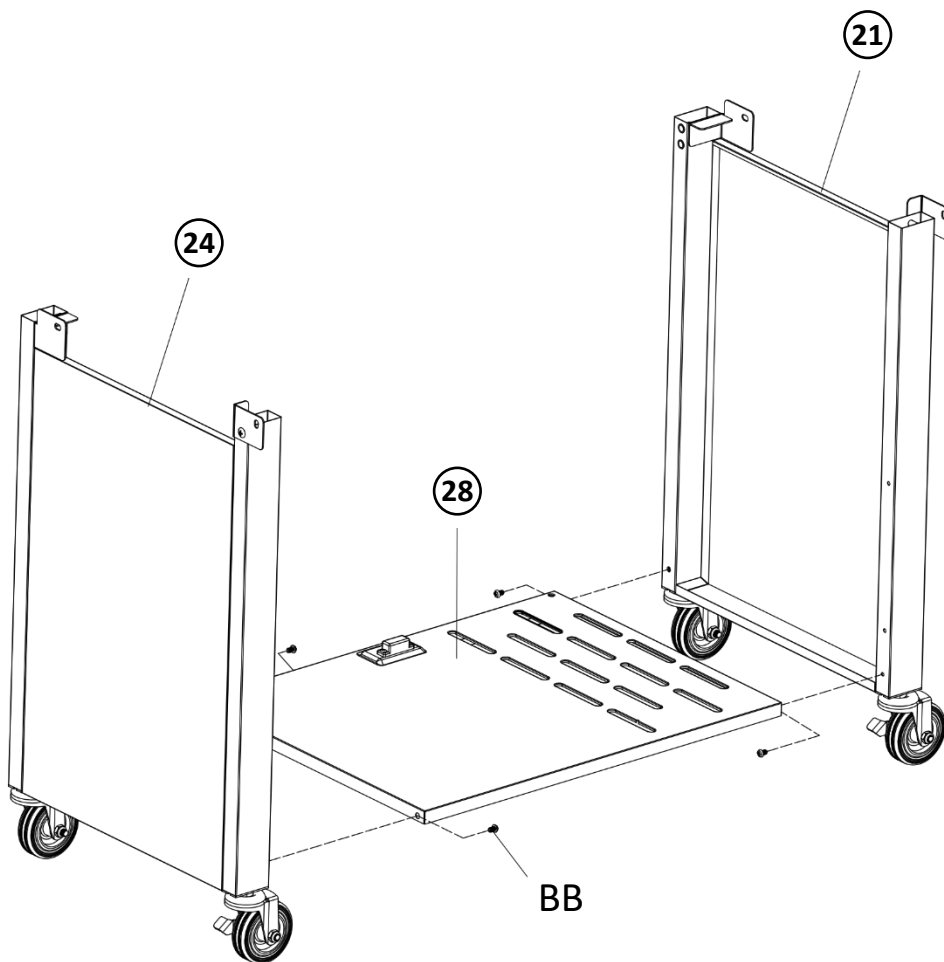

# BBQ ASSEMBLY

## STEP 5 – Attaching the Cart Back Panel

 

- Attach the **cart back panel (29)**, to the **left cart panel (24)** and **right cart panel (21)**, using 4 each of the “**BB**” Screws, as displayed in the diagram below.

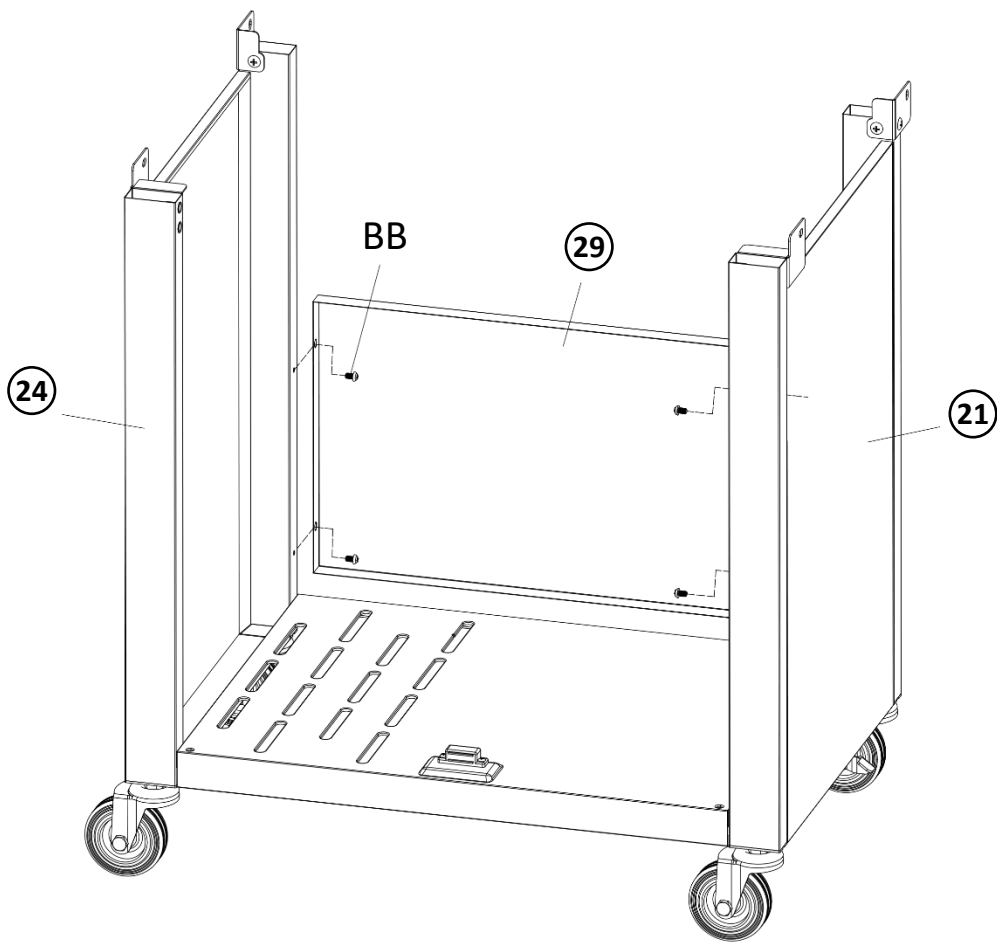

# BBQ ASSEMBLY

## STEP 6 – Assembling the Cart Doors

 

- Attach the **door handles** (30), to the **cart doors** (27), using 4 each of the **“AA”** Screws, as displayed in the diagram below.
- Then, attach the **door pivots** (26) to the **cart doors** (27), as shown in the diagram below.

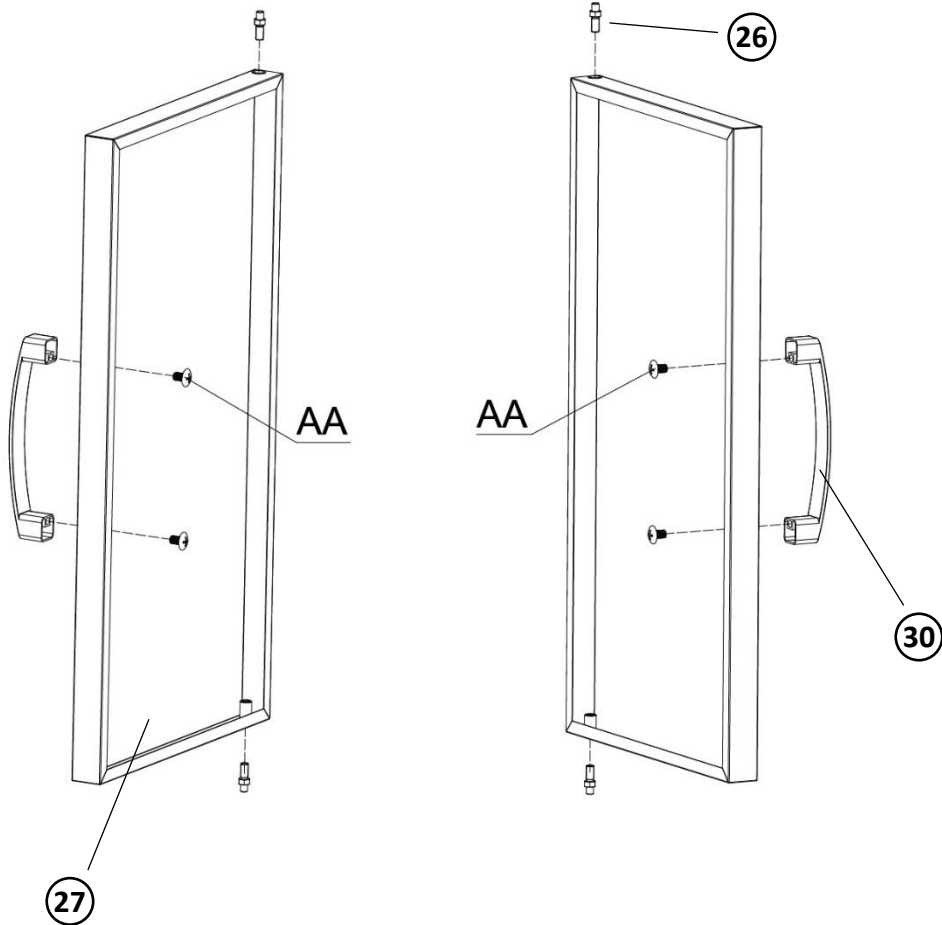

# BBQ ASSEMBLY

## STEP 7 – Assembling the Cart

 

- Slot the assembled **cart doors** (27), into the holes in the **cart bottom panel** (28).
- Then slot the **cart horizontal bar** (25), onto the assembled **cart doors** (27).
- Secure the **cart horizontal bar** (25) onto the **left cart panel** (24) and **right cart panel** (21), using 4 each of the “AA” Screws, as displayed in the diagram below.

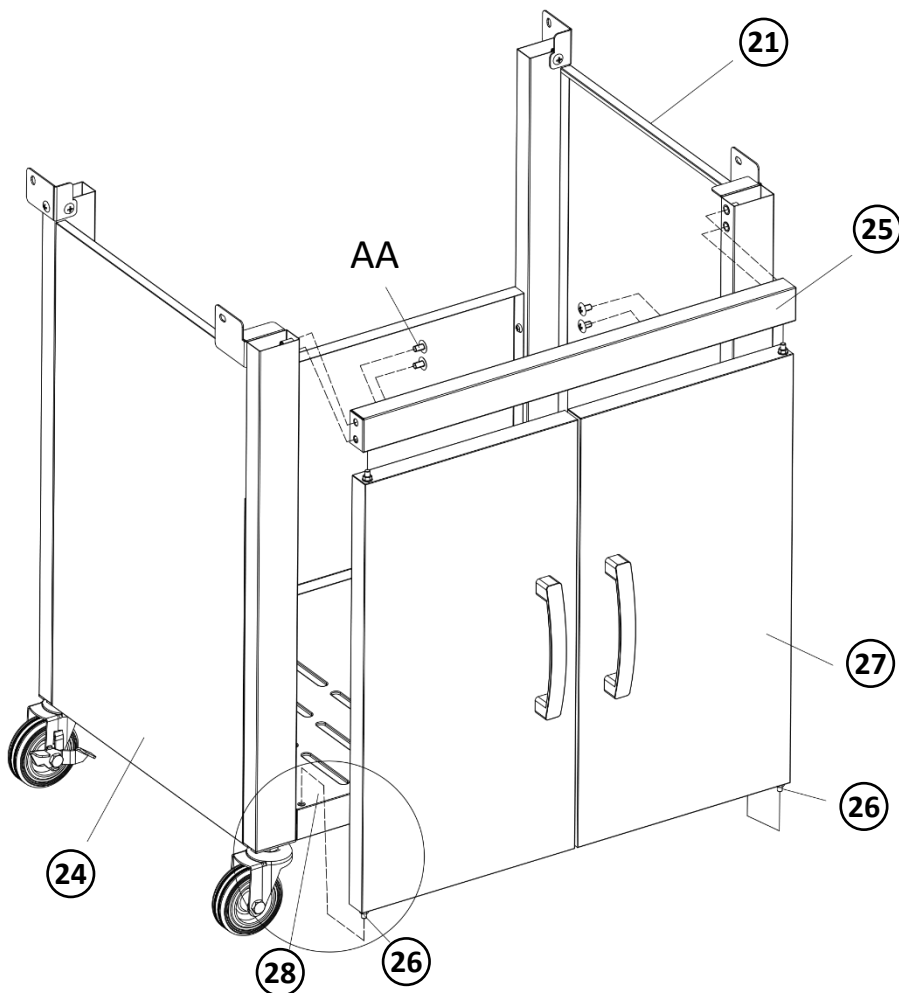

# BBQ ASSEMBLY

## STEP 8 – Attaching the Grill Body

 
- The **grill body** (10) and the **lid** (1) are pre-assembled.
- Slot the assembly into the assembled cart, and secure using 4 each of the “**CC**” screws, as displayed in the diagram below.

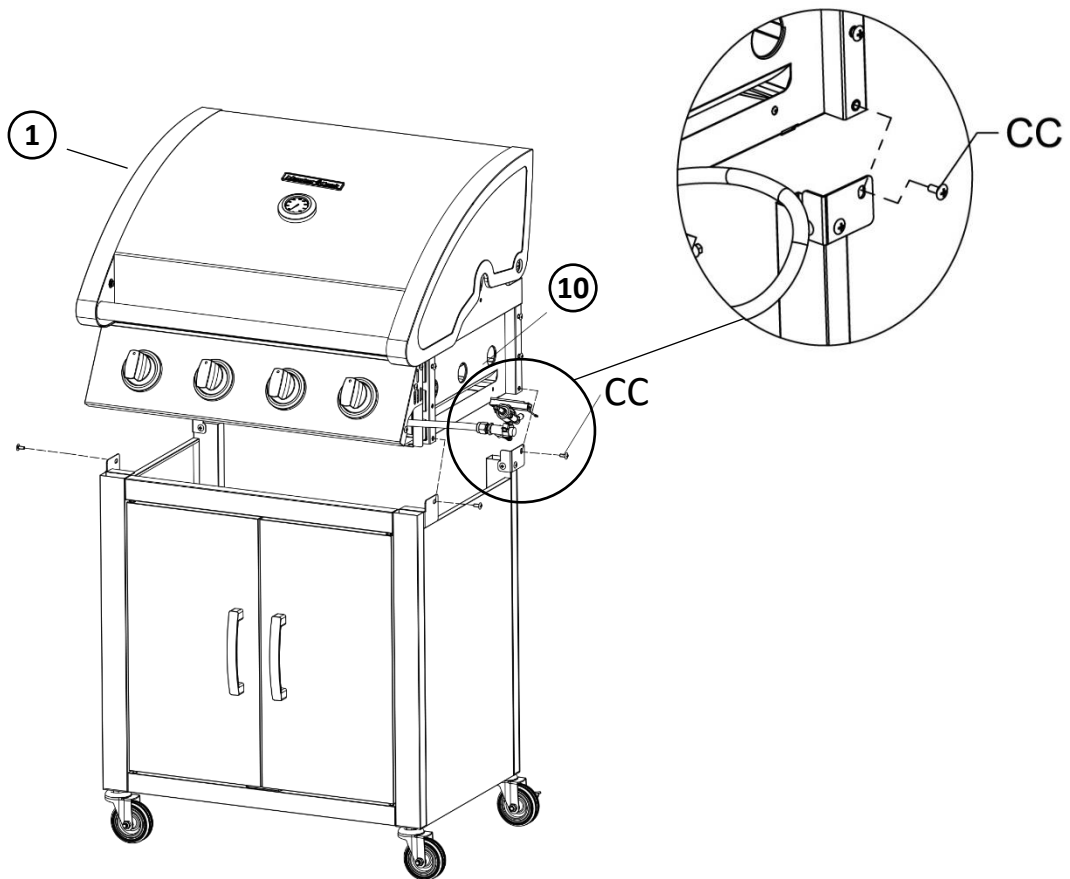

# BBQ ASSEMBLY

## STEP 9 – Assembling the Left Side Shelf


- Remove the pre installed washers and nuts from the **side shelf handle** (8). The towel hooks (7) come preinstalled.
- Place the **side shelf handle** (8) into the **left side shelf** (9), and secure with washer and then nut that you previously removed.

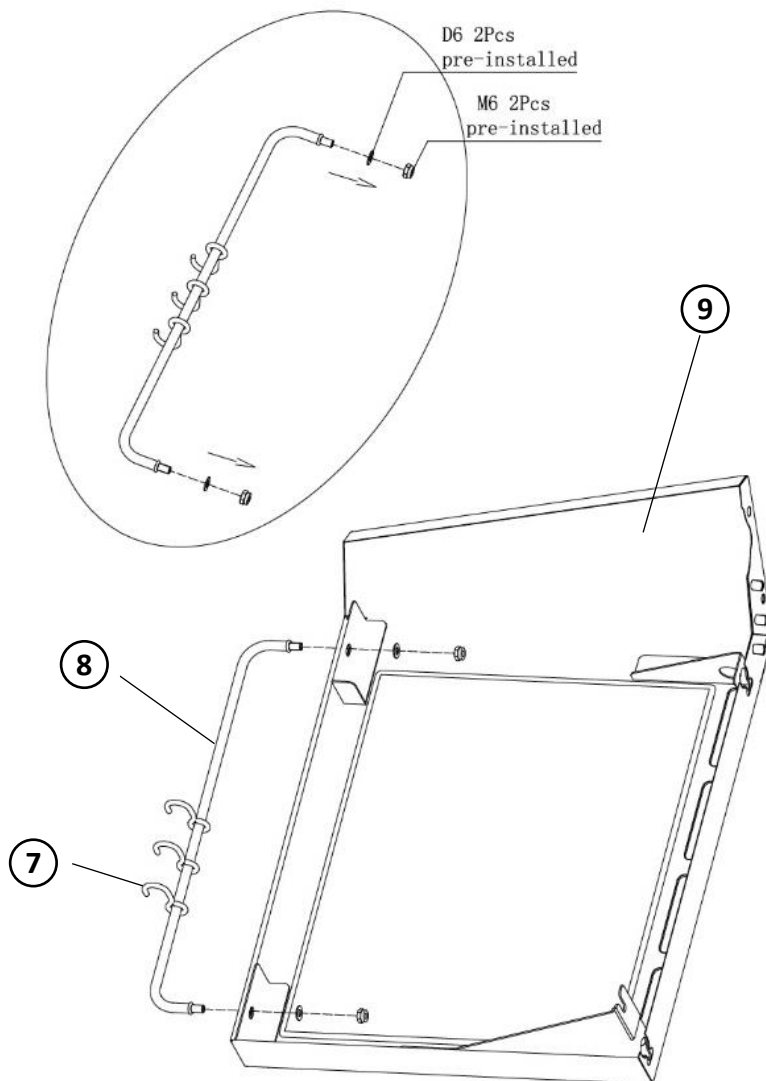

# BBQ ASSEMBLY

## STEP 10 – Adjusting the screws


- There are 3 preinstalled **M5 x 16 Screws** on the each side of the **grill body (10)**; ensure there is a gap of 5mm from the screw head and the **grill body (10)**.

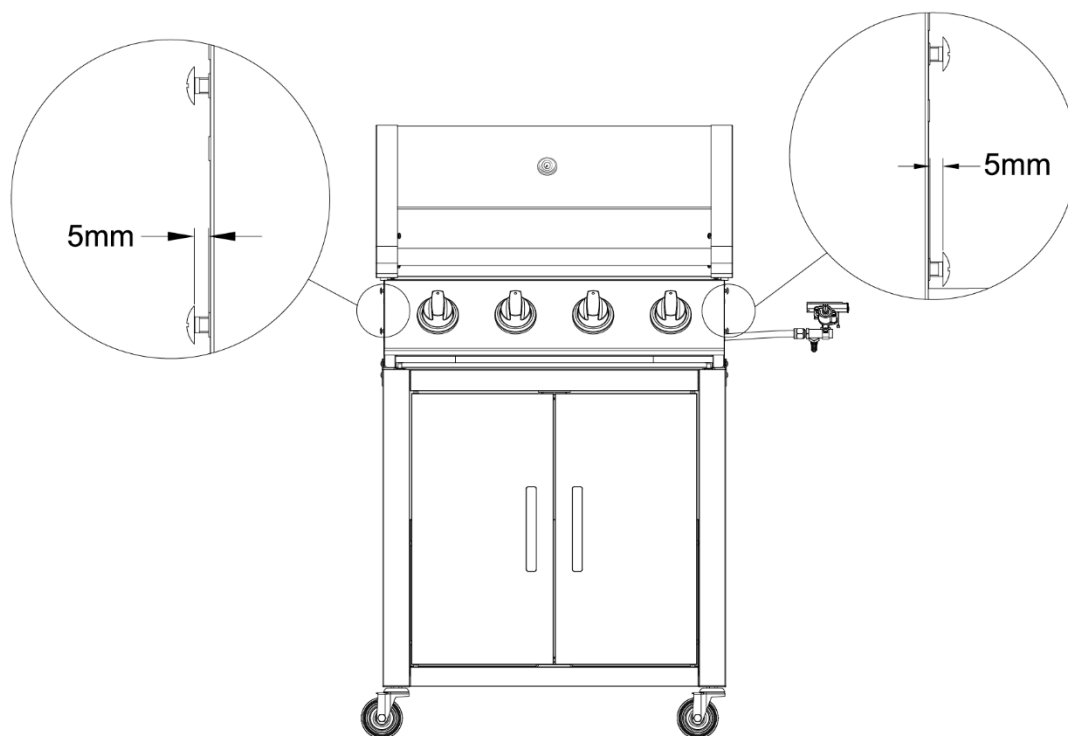

# BBQ ASSEMBLY

## STEP 11 – Installing the Left Side Shelf



- Hook the **left side shelf (9)** on to the 3 preinstalled screws that were detailed in the previous step. Ensure the **left side shelf (9)** is correctly fitted before tightening the 3 Screws.
- Then attach it to the control panel on the **grill body (10)**, using 2 each of the “**CC**” screws, as displayed in the diagram below.

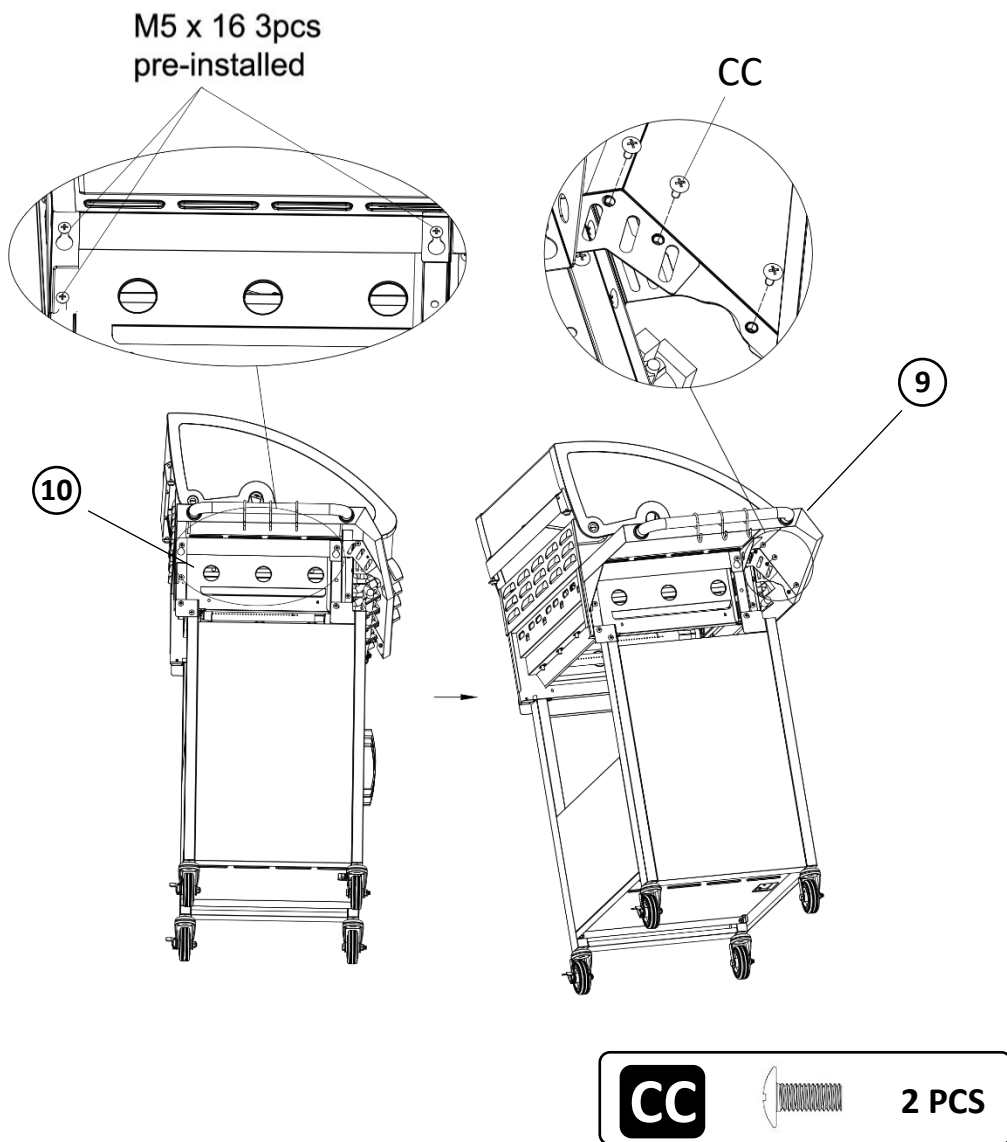

# BBQ ASSEMBLY

## STEP 12 – Installing the Right Side Shelf

 
- Hook the **right side shelf** (15) on to the 3 preinstalled screws that were detailed in step 10. Ensure the **right side shelf** (15) is correctly fitted before tightening the 3 screws.
- Then attach it to the control panel on the **grill body** (10), using 2 each of the “CC” screws, as displayed in the diagram below.

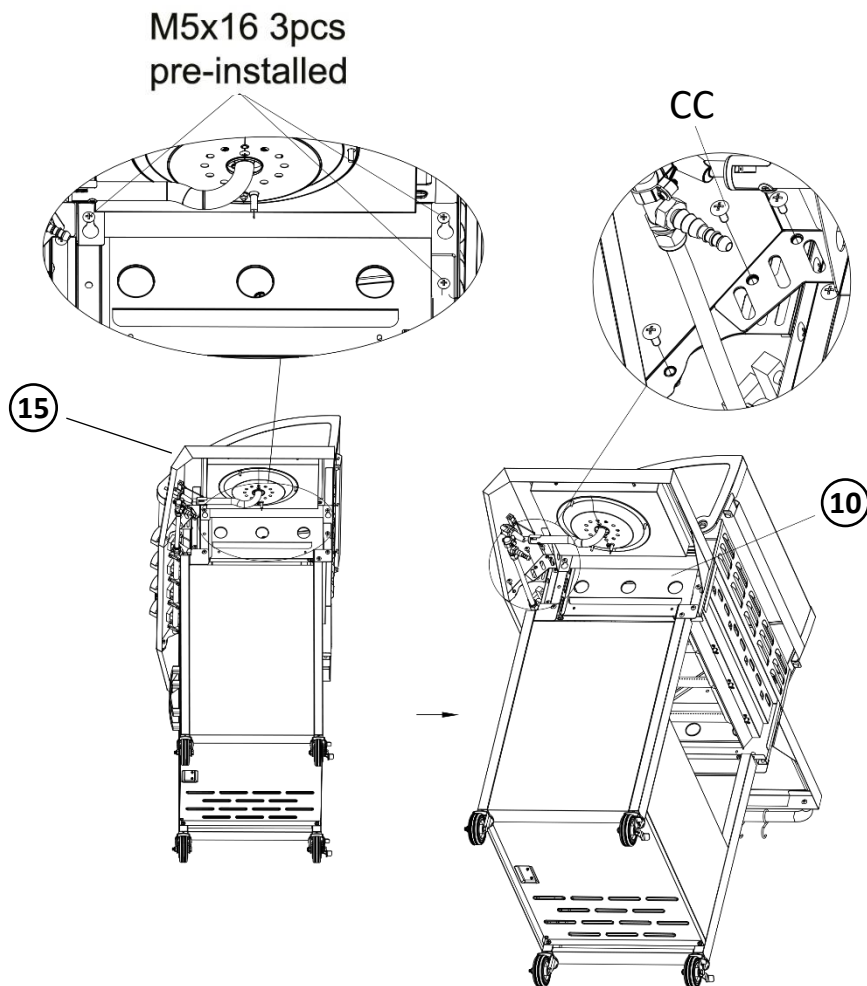

# BBQ ASSEMBLY

## STEP 13 – Setting Up the Side Burner


- Remove the 2 pre-installed screws from underneath the burner on the **right side shelf (15)**, as shown in the diagram below.

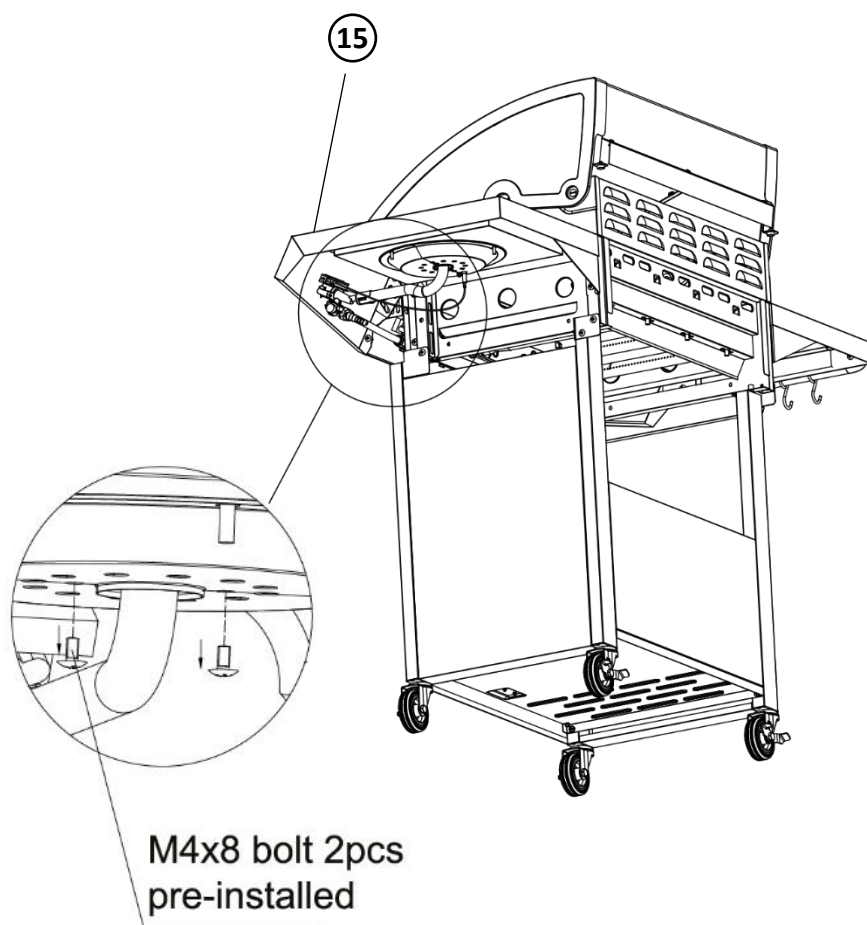

# BBQ ASSEMBLY

## STEP 14 – Attaching the Side Burner Dial


- Fit the **dial bezel** (16) over the **side burner valve** (18), and secure using 2 each of the “**DD**” screws.
- Then fit the **dial** (17) by aligning the marking on the dial and the off position on the control panel before pushing the **dial** (17) on to the gas tap.

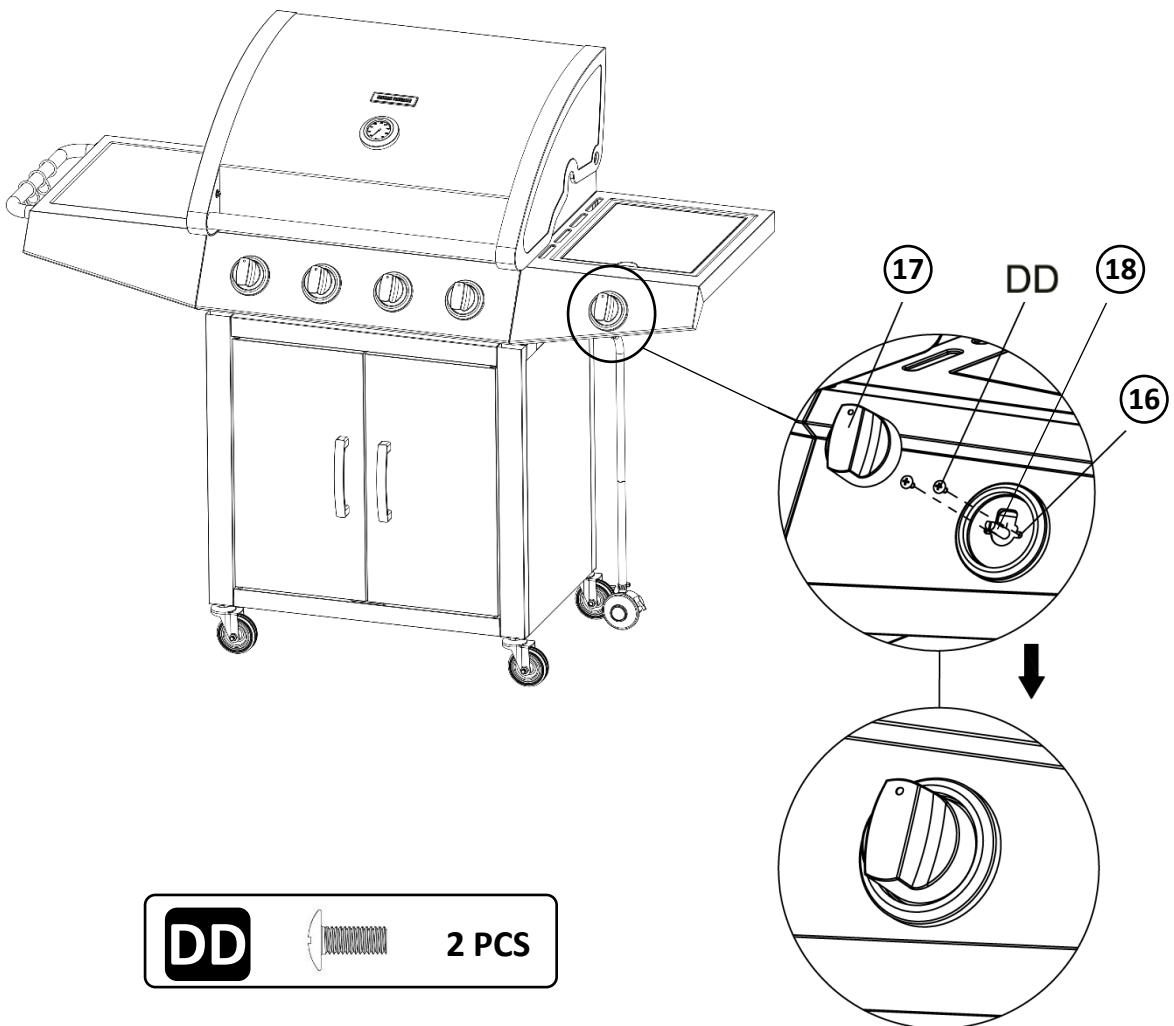

# BBQ ASSEMBLY

## STEP 15 – Connecting the Side Burner


- Fit the bottom part of the **side burner valve** (18) to the gas valve coming from the **side burner** (13). You must ensure it is connected correctly and fully inserted.
- Connect the ignitor by pushing it into the underside of the **side burner** (13), as shown in the diagram below. You must ensure it is connected correctly and fully inserted.
- Then, refit the screws removed in step 13.

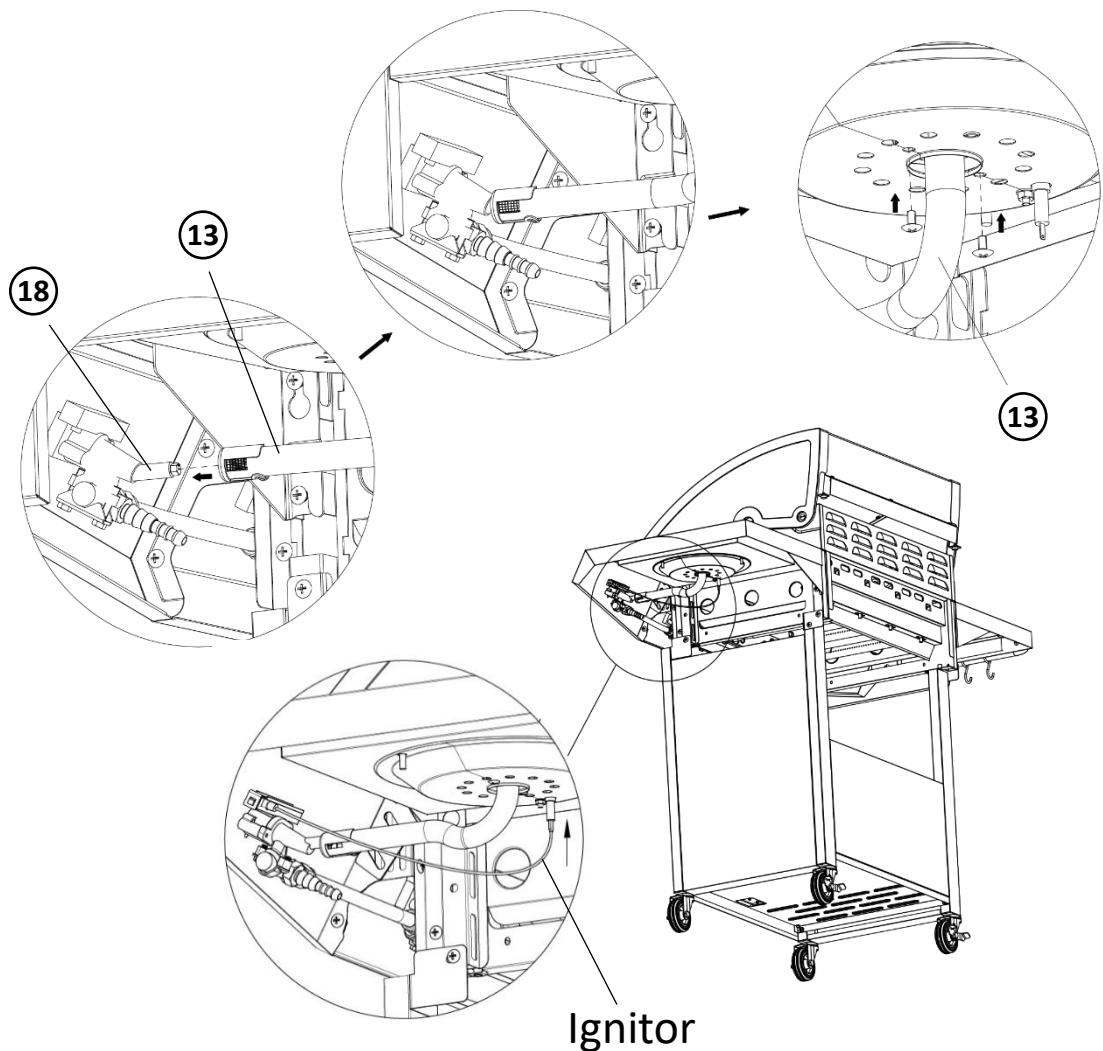

# BBQ ASSEMBLY

## STEP 16 – Checking the Side Burner


- Check the burner cover and spreader on the **side burner** (13) is between 3mm and 5mm from the ignitor.
- The **side burner pan support** (12) comes pre-installed on top of the **side burner** (13). Ensure all plastic securing tags are removed before use.

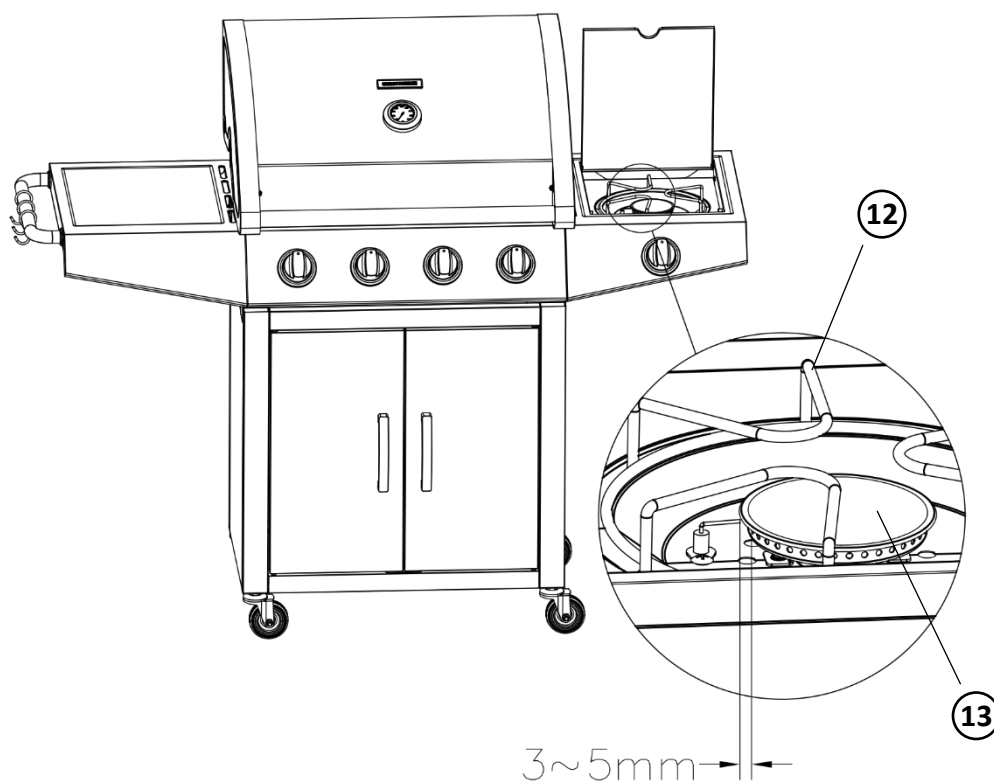

# BBQ ASSEMBLY

## STEP 17 – Inserting the Grease Tray


- Slot the **grease tray** (23) into the space in the back of the **grill body** (10), as shown in the diagram below.

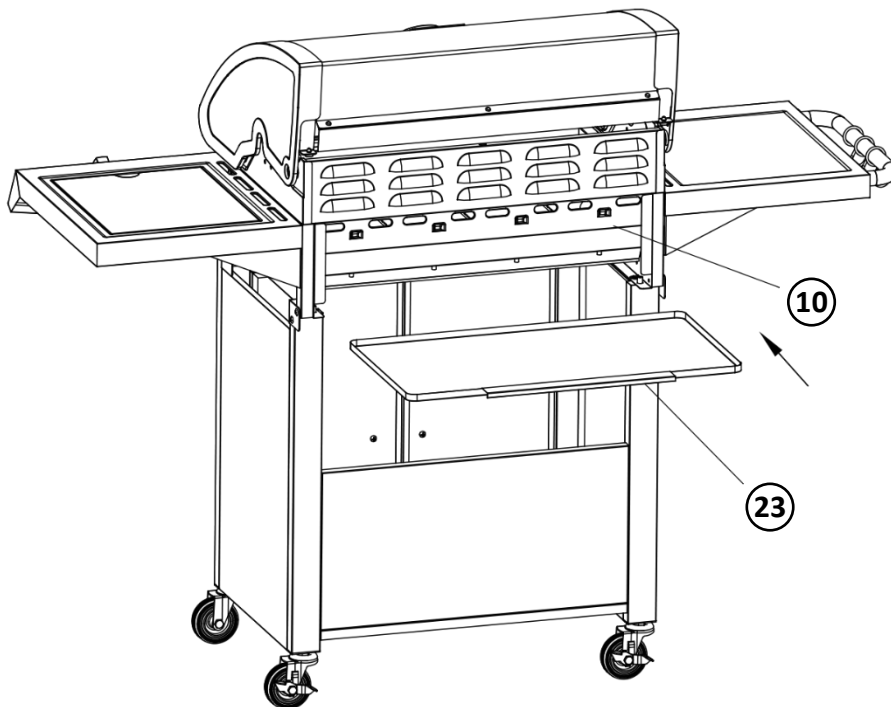

# BBQ ASSEMBLY

## STEP 18 – Inserting the Flame Tamers


- Place the **flame tamers** (4) above the **main burners** (5), ensuring they are resting on the side brackets within the **grill body** (10).

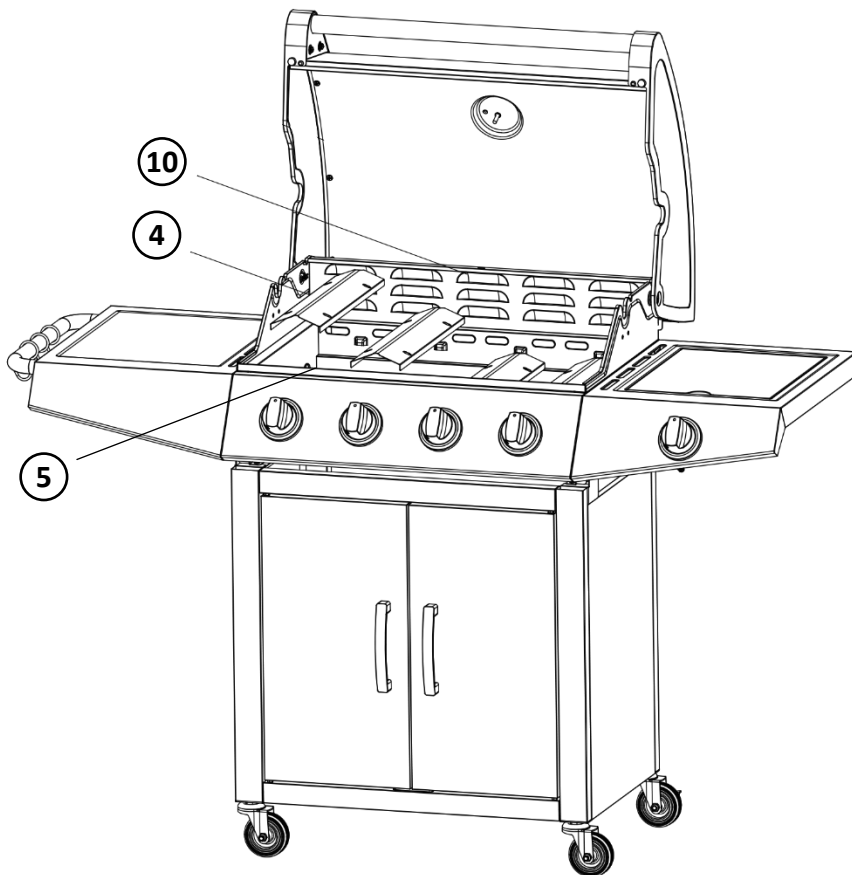

# BBQ ASSEMBLY

## STEP 18 – Inserting the Cooking Grids


- Place the **cooking grids** (3) into the **grill body** (10), as shown in the diagram below.
- Then slot the **warming rack** (2) on to the frame of the **grill body** (10), so that the rear of the warming rack is over the back plate of the frame.

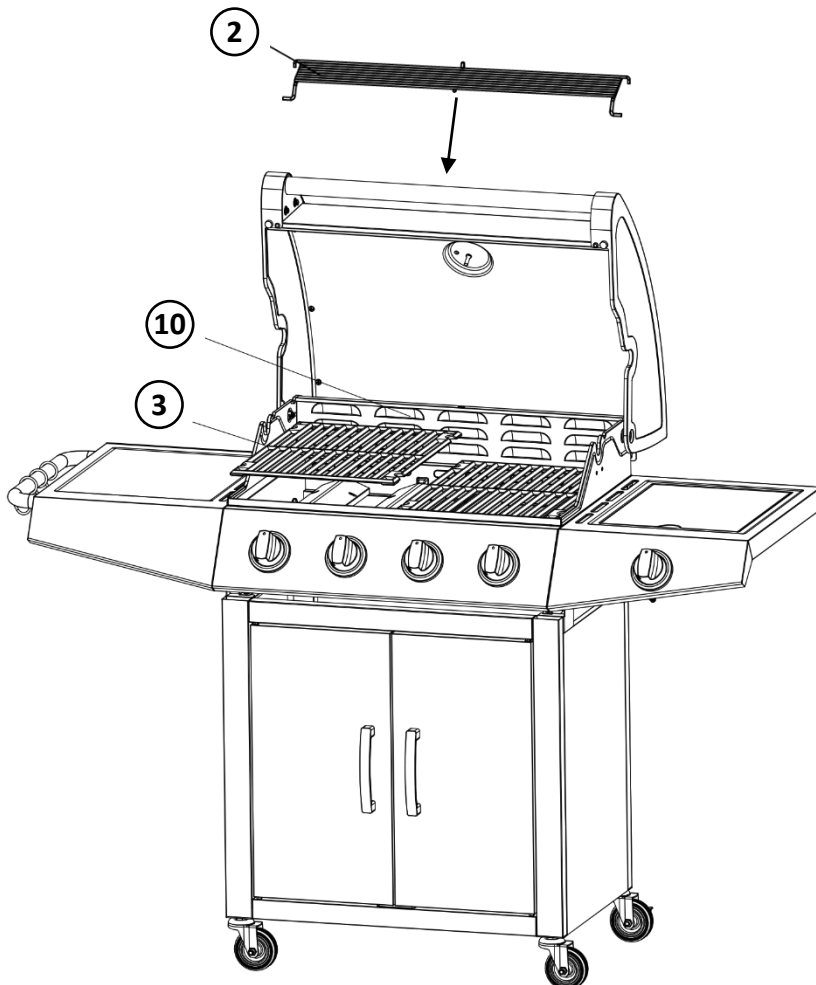

# BBQ ASSEMBLY

## STEP 19 – Connecting the Gas Hose


- Connect the **Hose and Regulator** (19) to the gas valve on the underside of the **right side shelf** (15), as shown in the diagram below.

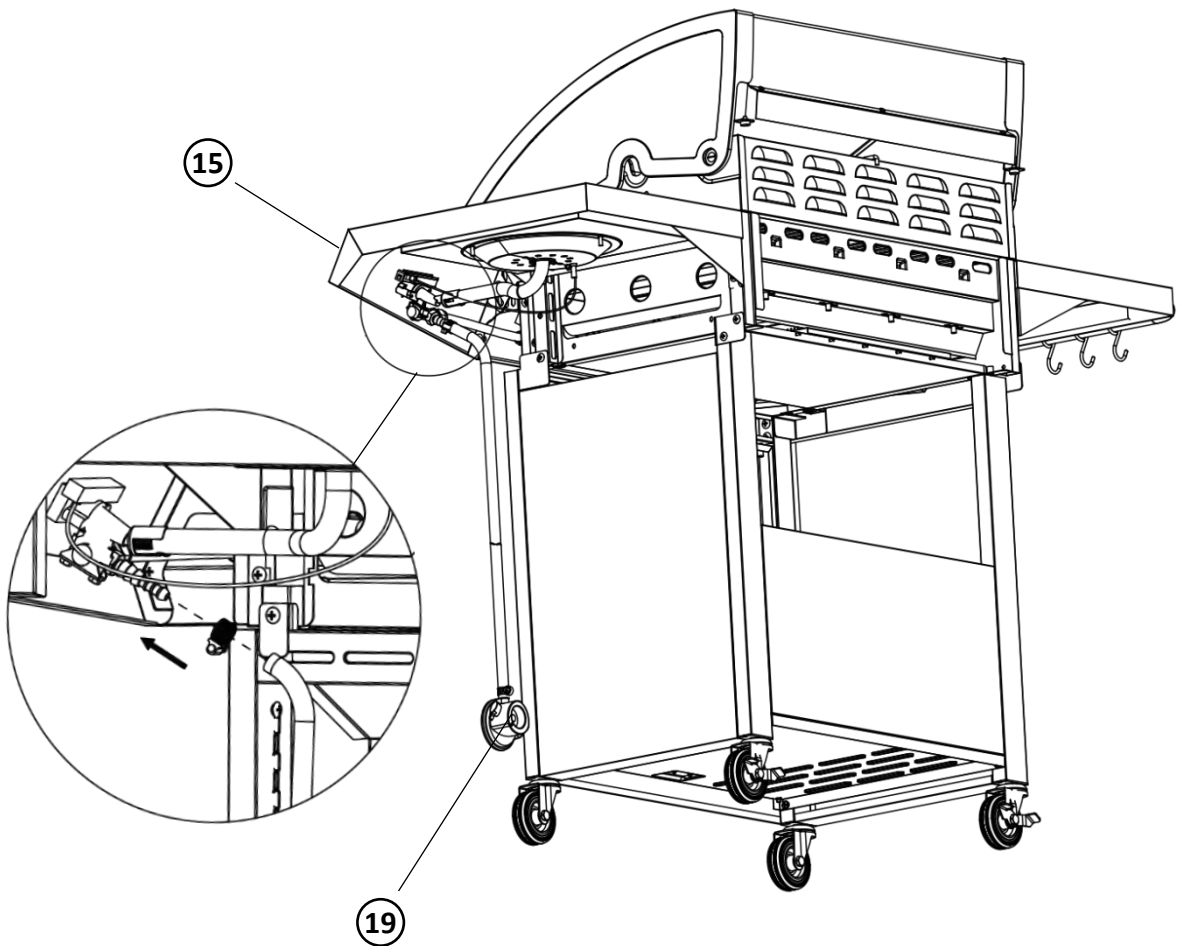

# BBQ ASSEMBLY

## STEP 20 – Complete BBQ

- Your BBQ is now fully assembled.

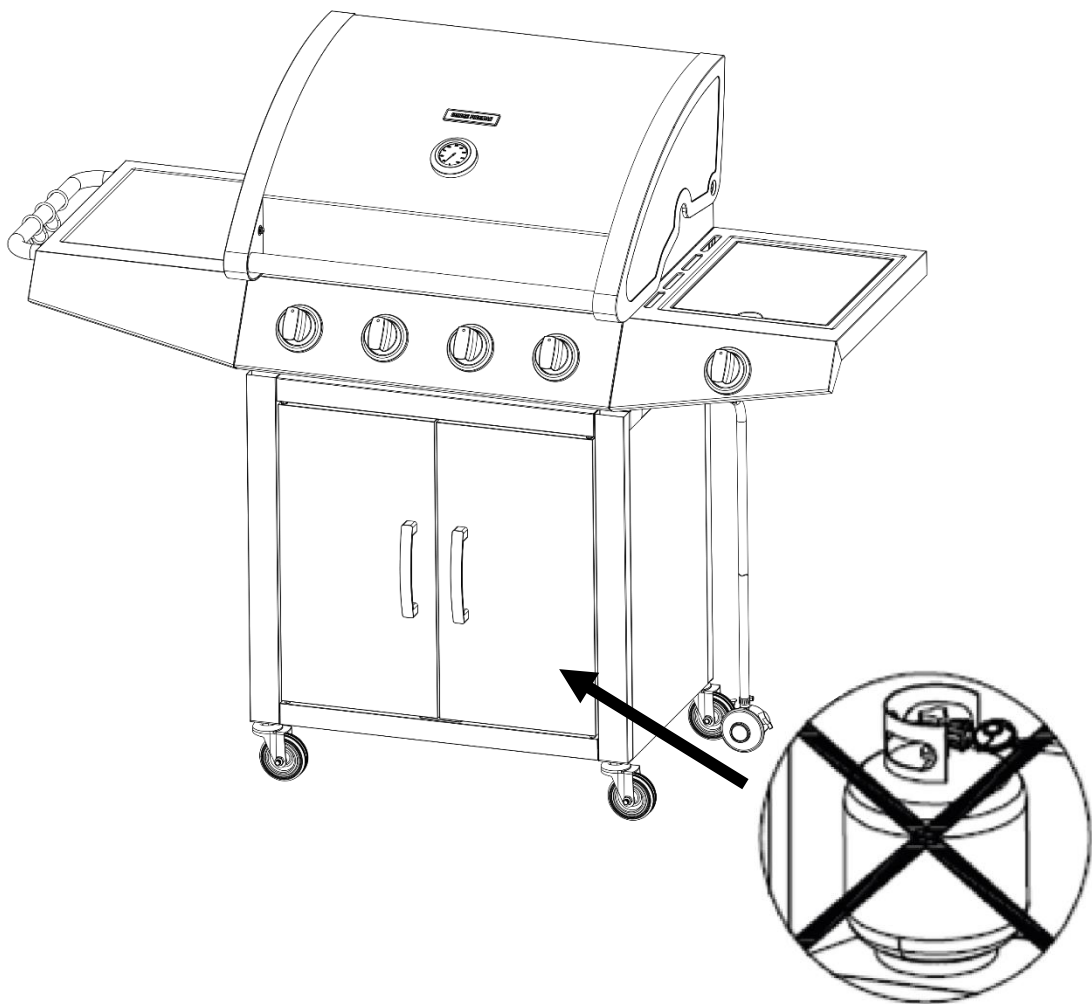

**WARNING:**

**DO NOT PLACE THE GAS CANISTER UNDER THE GAS BBQ!**

# ATTACHING YOUR GAS CYLINDER

After purchasing your gas cylinder you will then be ready to set it up with your gas grill. **When changing the gas cylinder it must not be near any source of ignition.**

Position the gas cylinder at the left side (right side as you look at it) of your gas grill, keeping in mind that the bottle must be kept away from heat and in a safe position.

- When ready to use your gas grill place the regulator onto the gas bottle valve and push down firmly until you hear it click in to place.
- Attach the hose to the regulator gas outlet, you will need to push firmly as it is a tight fit.
- Once the hose is connected to regulator it must be secured in place using one of the two jubilee clips supplied.
- Attach the other end of the gas hose to the gas inlet on the appliance, again you will need to push firmly as it is a tight fit.
- Once the hose is connected use the second jubilee clip to secure in place.
- Ensure that the hose is not subjected to twisting which will affect the gas flow when installing your gas grill. Also the hose must not have undue tension and must not touch any part of the gas grill which may be hot.
- Once the gas cylinder is connected to the appliance you can then start the flow of gas by turning the small lever on the regulator from its closed position (horizontal) to its open position (vertical).

**Warning: Always test gas line for leaks at connector with soap water around all connections.**

# DISCONNECTING YOUR GAS CYLINDER

When you have finished using the appliance you must remove the gas cylinder.

In order to do this you turn the small lever on the regulator from its open position (vertical) to its closed position (horizontal).

Once the gas supply has been turned off you then need to remove the regulator from the gas cylinder. To do this you need to push in the button release which is located below the small lever on the regular and lift away from the gas cylinder.

# LIGHTING YOUR BBQ




## USING THE AUTOMATIC IGNITION

**Caution:** The lid must be open when lighting the BBQ  
Do not stand with your face directly over the gas grill when lighting it.

1. Ensure the dial is in the “OFF” position and the BBQ lid is open.
2. Turn the gas cylinder valve to the “ON” position at the regulator.
3. To create a spark, press the control dial (A) into the BBQ and hold in position for 3-5 second to allow the gas to flow.  
Then turn the control dial anticlockwise to “MAX” (B).  
This will create a spark to the burner lighting tube (C) and this should make a “snap” sound and produce a blue flame (a slight yellow tinge at the end of the flame may also be seen) from the burner lighting tube at the left side of the burner (D)
4. Continue to hold the control dial in position for a further 2 seconds to allow the gas to flow (E) and ensure ignition.

On the “MAX” setting, the flame should be approximately 12-20mm high with a blue flame (a slight yellow tinge at the end of the flame may also be seen).

Turn the gas control fully anticlockwise for the “MIN” heat setting

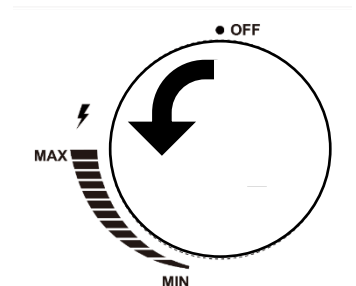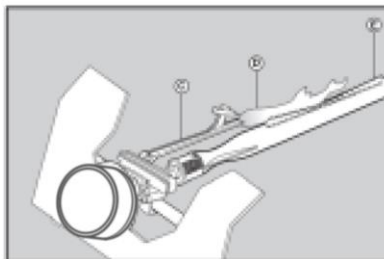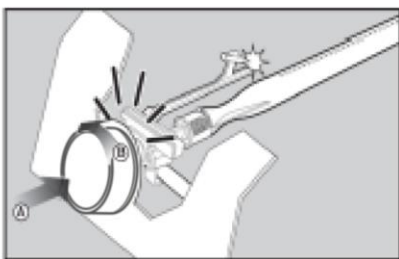

**Warning :** If the burner still does not light, push down and turn the burner control dial to “OFF” and wait 5 minutes to let the gas clear before lighting again.

**Warning:** If the burner goes out while the grill is in operation, push down and turn the control dial to the “OFF” position. Open the lid and wait 5 minutes before attempting to relight the BBQ.

# FOOD SAFETY

Thoroughly defrost frozen meat and poultry in the refrigerator before cooking. Keep raw meat and poultry separate from cooked foods.

Always wash hands after handling raw meat and poultry, before handling any ready to eat foods.

Wipe and disinfect surfaces that have been in contact with raw meat and poultry.

When barbecuing meat and poultry, make sure the barbecue is really hot. Place the larger, thicker portions furthest away from the most intense heat to ensure thorough cooking without burning and turn regularly.

Use separate utensils for handling raw meat/poultry and cooked food on the barbecue, or wash them thoroughly between uses.

To check whether meat, particularly poultry, is cooked, pierce the flesh with a skewer or fork; the juices should run clear. Ensure the product is piping hot throughout.

# TIPS FOR USE

Preheating the grill before barbecuing is important.

Follow the Lighting your BBQ instructions, then turn control dial to the “MAX” position and close the lid to preheat the grill.

This will take 10 to 15 minutes depending on conditions such as air temperature and wind. After preheating, you can adjust the control dial as desired.

Food can be barbecued with the lid up or down. Cooking with the lid down will ensure more even cooking.

For every 5 minutes that the lid is down, open the lid for 1 minute to release heat.

To save energy, we recommend:

- Minimising the time the lid is open
- Turn off the BBQ and gas supply as soon as cooking is completed
- Do not preheat the grill for longer than 10 to 15 minutes
- Do not use a higher heat setting than is required.

# STORAGE

Your Gas Bottle must be stored outdoors in a well ventilated area and must be disconnected from your gas grill when not being used.

Ensure that you are outdoors and away from any sources of ignition before attempting to disconnect your gas bottle from your BBQ.

We recommend that your BBQ is stored indoors, or in a garage or shed.

When using your BBQ after a period of storage, always check for gas leaks and any obstructions in the burner before using.

# CLEANING INSTRUCTIONS

Ensure the appliance is cold before cleaning.

Empty the grease tray after each use and wash in warm soapy water.

Grill trays should be cleaned by soaking and washing in warm soapy water.

The interior surfaces of the grill housing cover should also be washed with warm, soapy water. Use a wire brush, steel wool or a scouring pad to remove stubborn spots.

Periodically check the burner to see that it is free from insects and spiders which may clog the gas system and deflect the gas flow.

Ensure the venturi pipes on the burner are clean, and ensure there are no obstructions. We recommend that you use a pipe cleaner to clean the venturi pipe area.

Any modifications of this appliance may be dangerous and are not permitted.

# TROUBLE SHOOTING

PROBLEM	POSSIBLE CAUSE	PREVENTION/ SOLUTION
Gas leaking from cracked/cut/burned hose	Damaged hose	Turn off gas at LP tank, if hose is cut or cracked, replace hose.
Gas leaking from LP tank	Mechanical failure due to resting or mishandling	Turn off LP tank valve and replace.
Gas leaking from LP tank valve	Failure of tank valve from mishandling or mechanical failure	Turn off LP tank valve and replace.
Gas leaking between LP tank and regulator connection	Improper installation, connection not tight, failure of rubber seal	Turn off LP tank valve, remove regulator from cylinder and visually inspect rubber seal for damage.
Fire coming through control panel	Fire in burner tube section of burner due to partial blockage	Turn off control knobs and LP tank valve. After fire is out and grill is cold, remove burner and inspect for spider nests or rust.
Grease fire or continuous excessive flames above cooking surface	Too much grease buildup in burner area	Turn off LP Tank. Leave lid open to allow flames to die down. After cooling, clean food particles and excess grease from inside firebox area, grease cup/pan/tray, and other surfaces
Burner will not light using ignitor	Gas issues 1. Burner not engaged with control valve 2. Obstruction in burner 3. No gas flow 4. Coupling nut ad LP tank valve not fully connected.	1. Make sure valve are positioned inside of burner tubes. 2. Ensure burner tube is not obstructed with spider webs or other material, see cleaning section of use and care 3. Make sure LP tank is not empty. If LP tank is not empty, refer to “sudden drop in gas flow.” 4. Turn the coupling nut approximately one-half to three-quarters

# TROUBLE SHOOTING

PROBLEM	POSSIBLE CAUSE	PREVENTION/ SOLUTION
Burner will not light using ignitor	Electrical issues: 1. Electrode cracked or broken;” sparks at crack.” 2. Electrode tip not in proper position 3. Wire and/or electrode covered with cooking residue. 4. Wires are loose or disconnected 5. Wires are shorting (sparking) between ignitor and electrode. 6. push button sticks at bottom sparking between ignitor and electrode	1.Replace electrode. 2.Tip of electrode should be pointing toward port hole in burner. The distance should be 1/8” to 3/16”. Adjust if necessary. 3.Clean wire and or electrode with rubbing alcohol and clean swab. 4.Reconnect wires or replace electrode/wire assembly. 5.Replace ignitor wire 6.Replace ignitor 7.Inspect wire insulation and proper connection. Replace wires if insulation is broken.
Sudden drop in gas flow or low flame	1. Grease buildup. 2. Excessive fat in meat. 3. Excessive cooking temperature	1. Clean burners and inside of grill/ firebox 2. Trim fat from meat before grilling.
Flames blow out	1. High or gusting winds. 2. Low on LP gas. 3. Excess flow valve tripped.	1. Turn front of grill to face away from wind or increase flame height. 2. Refill LP tank. 3. Turn control knobs to OFF, wait 30 seconds and light barbecue. If flames are still too low, reset the excessive flow safety device by turning control knobs and LP gas cylinder valve to “CLOSED” position. Disconnect regulator. Turn control knobs to “HIGH”, wait 1 minute. Then turn control knobs to OFF, and reconnect regulator and leak check connections. Slowly turn LP gas cylinder valve to “OPEN”, wait 30 seconds and then light barbecue per lighting instructions.
Persistent grease fire	Grease trapped by food buildup around burner system.	Turn knobs to OFF. Turn gas off at LP tank. Leave lid in open position and let fire burn out. After grill cools, remove and clean all parts.
Flashback... (fire in burner tube(s))	Burner and burner tubes are blocked	Turn knobs to OFF. clean burner and/or burner tubes. See burner cleaning section of use and care manual
Flare-up	1. Grease buildup. 2. Excessive fat in meat. 3. Excessive cooking temperature	1. Clean burners and inside of grill/ firebox 2. Trim fat from meat before grilling. 3. Adjust (lower) temperature

# GUARANTEE & CUSTOMER SERVICES

This product is guaranteed for **12 months** from the date of the original purchase. If any defect arises due to faulty materials or workmanship, the faulty product must be returned to the place of purchase.

Refund or replacement is at the discretion of the retailer.

## **The following conditions apply:**

- The product must be returned to the retailer with the original proof of purchase.
- The product must be installed and used in accordance with the instructions contained in this instruction guide and any other instructions for use which are supplied.
- It must be used for domestic purposes only and for its intended use.
- This warranty does not cover wear and tear, damage, misuse or consumable parts.

**This does not affect your statutory rights.**

Customer Services & Spare Parts:


<b>Region</b>	<b>Contact</b>
UK & Northern Ireland	0345 209 7461
Ireland	1 800 938982
Rest of Europe	europa@productcaregroup.com

# GEORGE FOREMAN®

## 4+1 BURNER GAS BBQ

Made by . Product Care Trading Ltd, Unit 1, Green Bank Business Park, Swan Lane, Hindley Green, Wigan, WN2 4AY, United Kingdom / Product Care (Ireland) Ltd, Unit 3D North Point House, North Point Business Park, New Mallow Road, Cork, T23 AT2P, Ireland.

George Foreman is the registered trademark of Spectrum Brands (U.K.) Ltd.

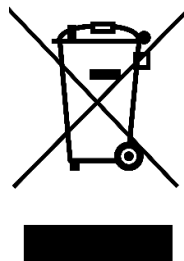

The 'wheellie bin' symbol is known as the 'Crossed-out wheellie bin Symbol'. When this symbol is marked on a product/batteries, it means that the product/batteries should not be disposed of with your general household waste. Only discard electrical/electronic/battery items in separate collection schemes, which cater for the recovery and recycling of materials contained within. Your co-operation is vital to ensure the success of these schemes and for the protection of the environment. For your nearest disposal facility, visit [www.recycle-more.co.uk](http://www.recycle-more.co.uk) or ask in store for details.

SEDEX – Connecting businesses and their global suppliers to share ethical data and enabling improvement in ethical performance. Visit [www.sedex.org.uk](http://www.sedex.org.uk) for further information.

We reserve the right, due to possible changes to design, to alter the instruction manual without prior notice.

Revision 1.4