 

 
 

 








<b>A</b>  x1	<b>B</b>  x1	<b>C</b>  x1	<b>D</b>  x5	<b>E</b>  x1	<b>F</b>  10*10 cm x1
<b>G</b>  #100 mm x1	<b>H</b>  x5	<b>I</b>  M6*12 mm x10	<b>J</b>  M6*16 mm x4	<b>K</b>  M6*20 mm x8	<b>L</b>  M6 x1


**💡 Assembly Tips:**

- **STEP 1** - Remove the base cap before inserting the legs into the base connector (#E).
- **STEP 3** - Reattach the base cap to the base before inserting the gas lift.
- **STEP 3** - Hold the base firmly and push the casters in with strong pressure.
- **STEP 4** - Ensure the ARROW on the base plate is pointing toward the front of the seat.
- **IMPORTANT** - DO NOT fully tighten the screws until all screws are properly placed into their holes.

**NEXT PAGE: ASSEMBLY PROCESS**


①

Screw Tightness: 50%

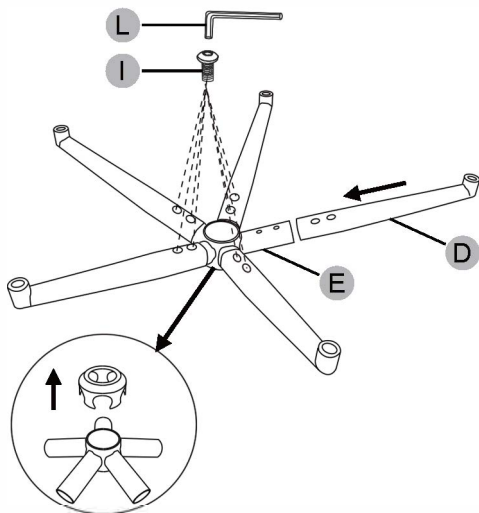


②

Screw Tightness: 100%

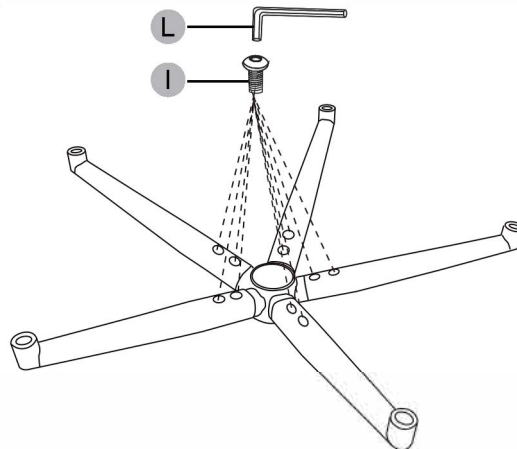


③

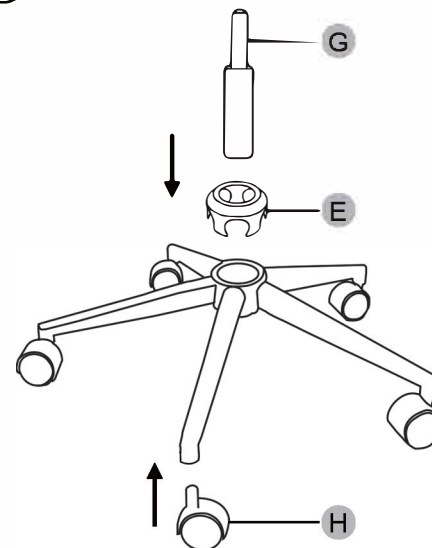


④


Seat Front

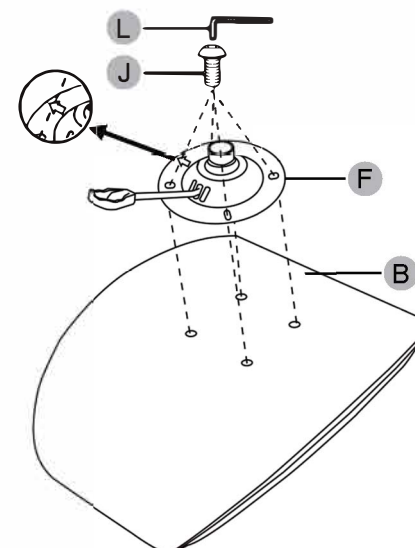

⑤

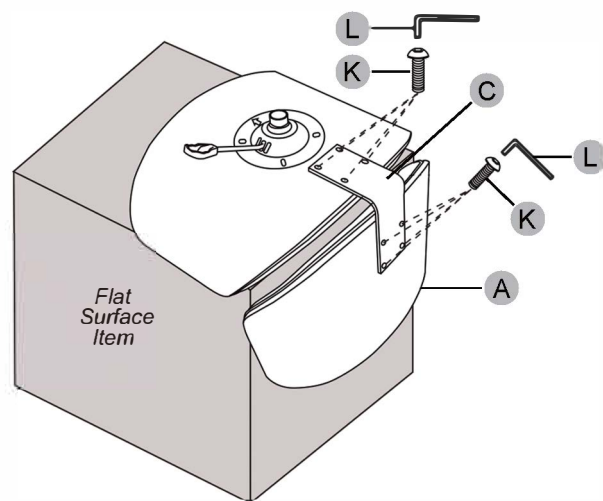

⑥

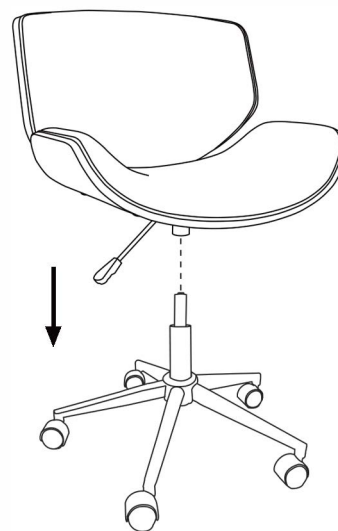

⑦

