

Rear Stacking Kit


(For Stacking Dryers on Washers) Part# RSK 3080

(Enclosed: 2 Brackets)

Installation Instructions


1

Using a Philips Screwdriver remove the two screws that hold the top panel of the **Washer** in place. The screws are located at the rear of the machine.

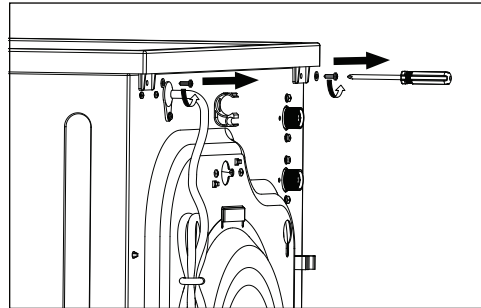


2

Stack the **Dryer** on the washer. Pull the **Dryer** out towards the back so the two rear feet are hanging out.

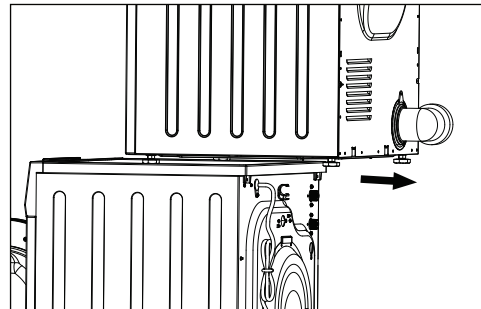


3

Unscrew the rear feet from the **Dryer**.

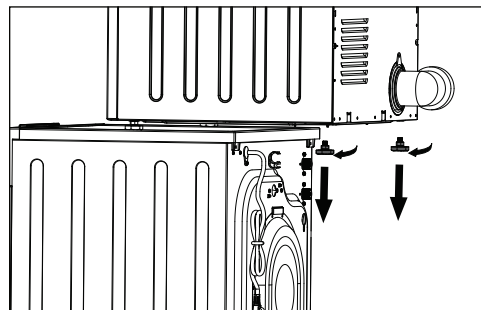


4

Align hole on the top of the bracket(s) with the holes for the feet of the **Dryer**. (Separate left and right brackets)

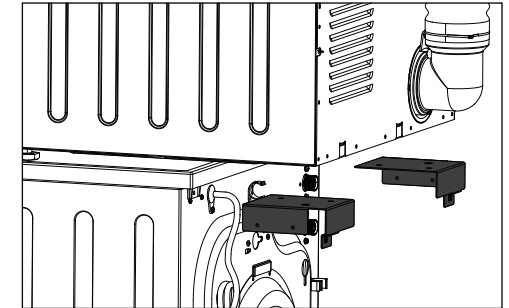



5

Screw the rear feet back into the **Dryer** with the brackets between the feet and the **Dryer**.

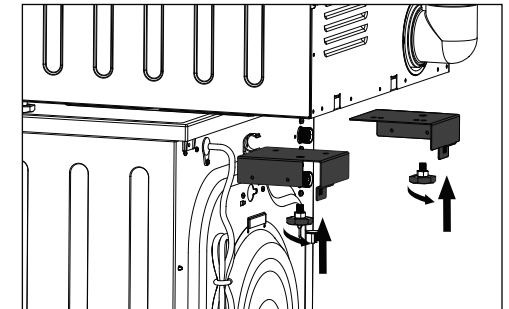

6

 - Push the **Dryer** forward and align the holes at the rear of the bracket with **Washer** top panel.
- Insert the 2 screws from **Washer** top panel that were removed in Point no. 1.
- If the holes do not align properly you may need to adjust the **Dryer** feet.

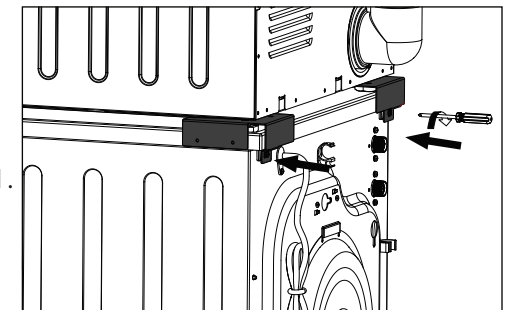

7 4 7 0 3 7 1 0 3 0 8 2

TOOLS NEEDED



Philips screwdriver



WARNING




Before working on any appliance, be sure that the power ON/OFF button is in the OFF position and that the electrical cord is unplugged.


Appliance Desk Inc.

5006 Steffani Lane, Houston, Texas, 77041, USA.

Tel: 1800-490-8018 Web: www.ApplianceDesk.com

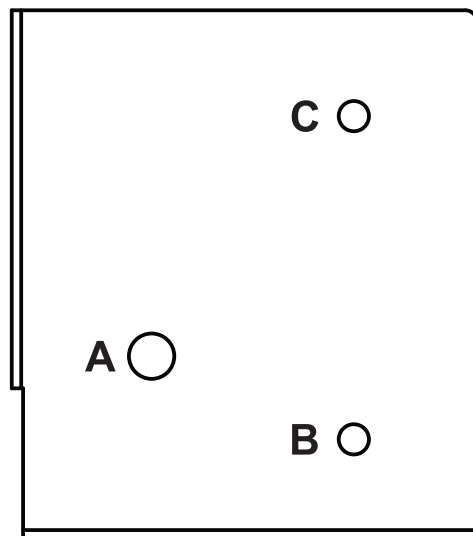

LEFT

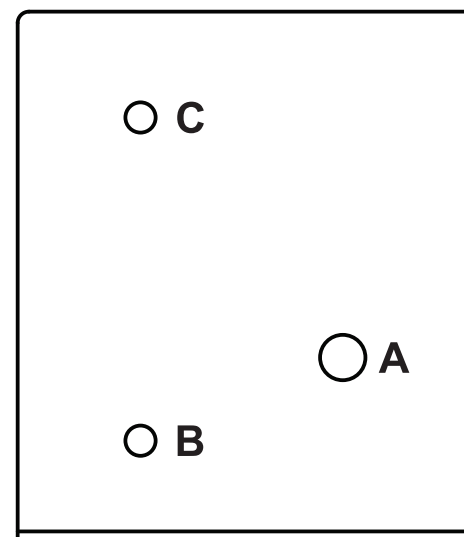

RIGHT

Hole Position	Washer	Dryer
A	835P / 840 / 842	880DL / 870DL
B	835P / 840 / 842	852 / 860
C	822 / 826	848 / 852 / 860 / 866DL