 


ASSEMBLY INSTRUCTIONS

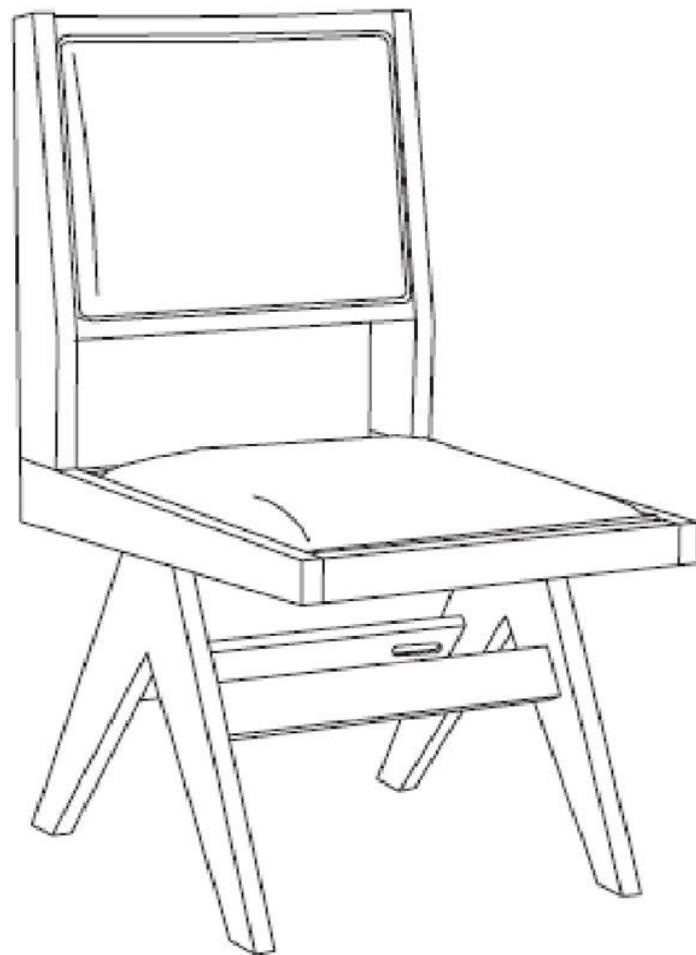

VERSION # 24-05-20

TOOLS REQUIRED



Screwdriver
(Not included)



(Included)
Allen Wrench



2 - People

ASSEMBLY RATING



EASY —————> DIFFICULT

The Assembly Rating is a 5-point system showing the level of effort needed to assemble a specific product.



CHECK BEFORE STARTING

Are you missing anything?
Double-check all parts, hardware and accessories listed are all accounted for.

Should we send any replacements?
Are there any irregularities or flaws in the parts? We can send replacements!

Check out our Quick Tips!
We recommend reviewing the pre-assembly handouts. Even experts need a refresher now and then!

Prep Time!
Please review the assembly instructions and all diagrams prior to assembling.

PRE ASSEMBLY INTRODUCTION

We understand building ready-to-assemble furniture can be a challenging experience for some. To help avoid confusion, we have provided some helpful tips that may speed up the process.



Teamwork

ALWAYS have at least two people to help with transporting and assembling the product to avoid potential injury and/or damage.



Suitable Location

Assembling near the area of the intended location is highly recommended.



Sufficient Space

Make sure you have enough space to move around during the assembly.



Avoid Scratches

Use cardboard, blankets or a carpeted area while assembling furniture to prevent to prevent scratches and damages.



Flat Surface

Make sure the furniture rests on a flat and level surface with each leg evenly touching the floor.

 
ASSEMBLY AND CARE ADVICE



FAILURE TO FOLLOW THE GUIDELINES BELOW MAY RESULT IN INJURY AND/OR PROPERTY DAMAGE.



Position each part correctly and insert screws or bolts into their respective holes.

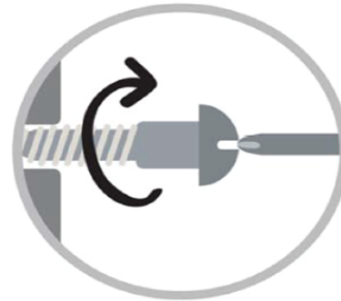

Turn clockwise to tighten and only tighten when step is completed or when instructed to do so.



Use the appropriate hand tools or power tools for assembly. Select steps, such as tightening screws and/or bolts, may require hand tools to avoid causing damage during assembly.



Save the instructions and store any supplied tools for later maintenance.



After two weeks, check and tighten any loose hardware and repeat again every six months thereafter.

IT IS THE USER'S RESPONSIBILITY TO MAINTAIN THE FURNITURE. THE HARDWARE MAY LOOSEN OVER TIME AND MAY CAUSE THE FURNITURE TO BE WOBBLY AND UNABLE TO SUPPORT ITS INTENDED WEIGHT CAPACITY. THIS MAY LEAD TO COLLAPSE AND MAY CAUSE SERIOUS INJURY.

SIDE CHAIR

 


- Please keep instructions for future reference.
- Check the quantity and irregularity of parts and hardware before you start.




PARTS

(P1) - 2 PCS

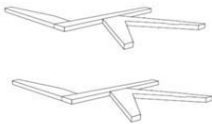


LEG FRAME-RIGHT

 (P2) - 2 PCS

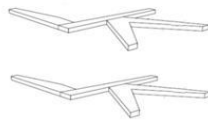


LEG FRAME-LEFT

 (P3) - 4 PCS

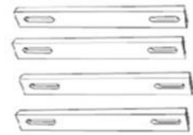


SUPPORT RAIL

 (P4) - 2 PCS



SEAT

 (P5) - 2 PCS



BACKREST

HARDWARE

(H1) - 12 PCS



M6x35mm JCBC SCREW

(H2) - 8 PCS



M6x50mm JCBC SCREW

(H3) - 28 PCS



Spring Washer

(H4) - 12 PCS



Flat Washer (BIG)

(H5) - 8 PCS



Flat Washer (SMALL)

(H6) - 36 PCS



Wood Button M8x30mm

HARDWARE

H7 - 8 PCS



Wood Button

H8 - 1 PCS



Allen Key

H9 - 8 PCS

 


Nail Leg

H10 - 8 PCS



M6 x 30mm JCBC SCREW

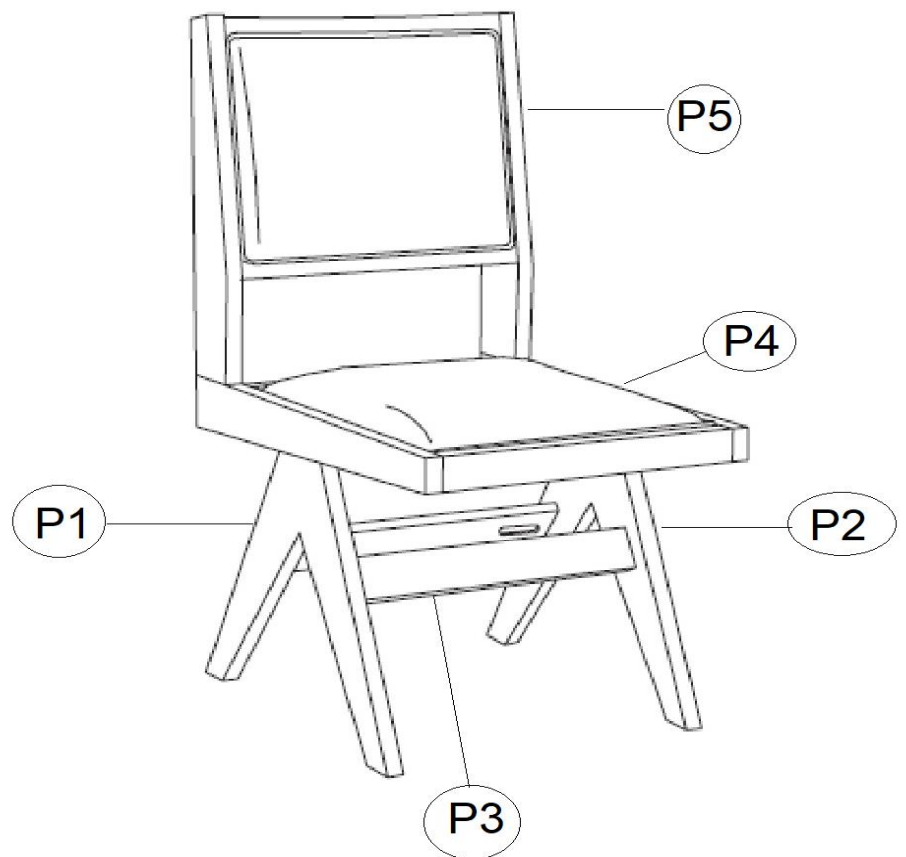

 



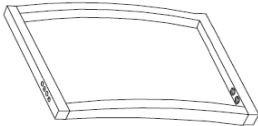 










packed in 1 carton

Please read instructions carefully

Remove all wrapping materials, staples and packing straps from the carton. Refer to Parts List and Hardware List and ensure they are complete before you start assembling. Place all wooden parts on a clean, flat and soft surface (e.g carpet or rug) to prevent parts from being scratched.

- CAUTIONS: 1) DO NOT FULLY TIGHTEN BOLTS AND NUTS UNTIL ALL PARTS HAVE BEEN ASSEMBLED.
 2) DO NOT OVER-TIGHTEN BOLTS AND NUTS .
 3) KEEP ALL HARDWARE PARTS OUT OF REACH OF CHILDREN.

Carton	Designation	Part List	Hardware List
SC	LEG FRAME- P1	 P1 x 2pc	 H1 x 12pc
	LEG FRAME- P2	 P2 x 2pc	M6x35mm JCBC SCREW
	SUPPORT RAIL	 P3 x 4pc	 H2 x 8pc
	SEAT	 P4 x 2pc	M6x50mm JCBC SCREW
	BACKREST	 P5 x 2pc	 H3 x 28pc Spring Washer
			 H4 x 12pc Flat Washer(Big)
			 H5 x 8pc Flat Washer(Small)
			 H6 x 36pc Wood Dowel M8x30mm
			 H7 x 8pc Wood Button
			 H8 x 1pc Allen Key
		 H9 x 8pc NAIL LEG	
		 H10 x 8pc M6x30mm JCBC SCREW	



COMPLETE ASSEMBLY

ASSEMBLY INSTRUCTIONS

SIDE CHAIR


PARTS LIST (FOR 2 CHAIRS)

NO.	COMPONENT	QTY.
P1	LEG FRAME - (P1)	2
P2	LEG FRAME - (P2)	2
P3	SUPPORT RAIL	4
P4	SEAT	2
P5	BACKREST	2



COMPLETE ASSEMBLY

 
HARDWARE LIST (FOR 2 CHAIRS)

NO.	DESCRIPTION	QTY.
H1	JCBC SCREW M6 x 35MM 	12
H2	JCBC SCREW M6 x 50MM 	8
H3	SPRING WASHER 	28
H4	FLAT WASHER (BIG) 	12
H5	FLAT WASHER (SMALL) 	8
H6	WOODEN DOWEL M8 x 30mm 	36
H7	WOOD BUTTON 	8
H8	ALLEN KEY 	1
H9	NAIL LEG 	8
H10	JCBC SCREW M6 x 30MM 	8

 RUBBER MALLET IS NOT PROVIDED.




 



SCREWDRIVER IS NOT PROVIDED.



STEP 1




 Prepare the Seat (P4) by inserting the Wooden dowel (H6) into the desired holes. Then, place the Leg frame-Left (P1) on a clean, soft surface. Attach the Seat (P4) by locating the dowel the Seat into the desired holes in the Leg frame. Align Bolt (H1) together with Spring washer (H3) & Flat washer Big (H4). Tighten the bolts using Allen key (H8).

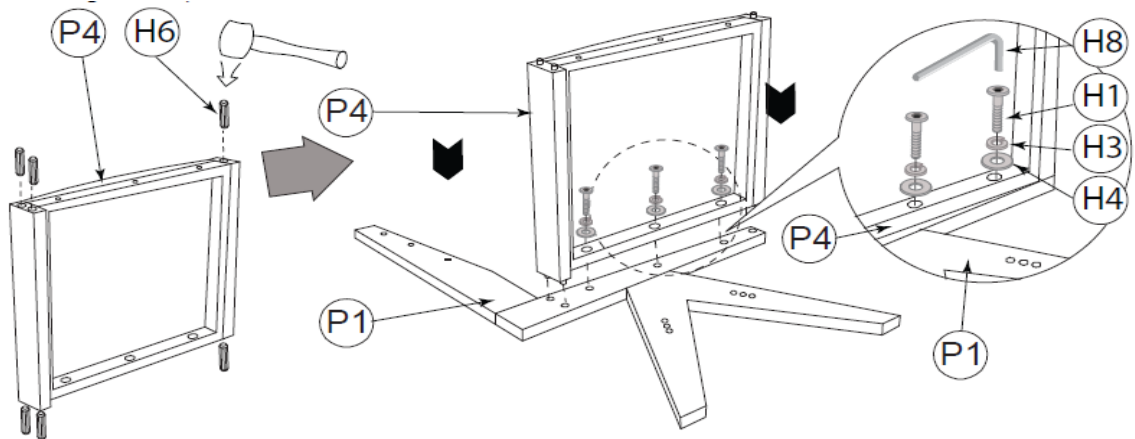
H1 x 3	 M6 x 35mm
H3 x 3	
H4 x 3	
H6 x 6	 M8 x 30mm





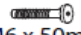 

 
STEP 2

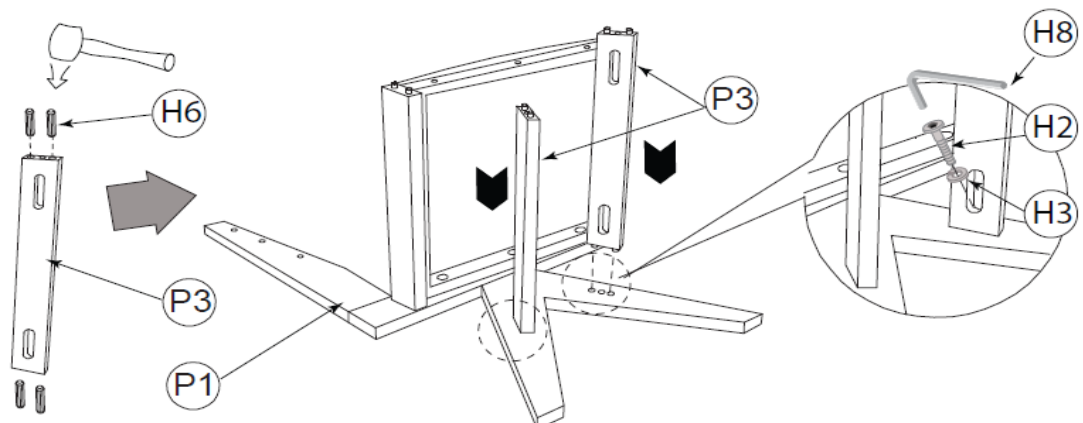Prepare the Stretchers (P3) by inserting the Wooden dowel (H6) into the desired holes. Attach both Stretchers (P3) into the desired holes in the Leg frame-Left (P1). Align Bolt (H2) with Spring Washer (H3) & tighten it using Allen key (H8).


H2 x 2	 M6 x 50mm
H3 x 2	
H6 x 8	 M8 x 30mm



STEP 3


H10 x 2	 M6 x 30mm
H3 x 2	
H5 x 2	
H6 x 4	 M8 x 30mm
H7 x 2	

 Prepare the Backrest (P5) by inserting the Wooden dowel (H6) into the desired holes. Then Attach the Backrest (P5) into the Leg frame. Align Bolt (H10) together with the Spring washer (H3) & the Flat washer Small (H5)
Tighten it using Allen key (H8). Tap the Wood button (H7) to cover the holes.

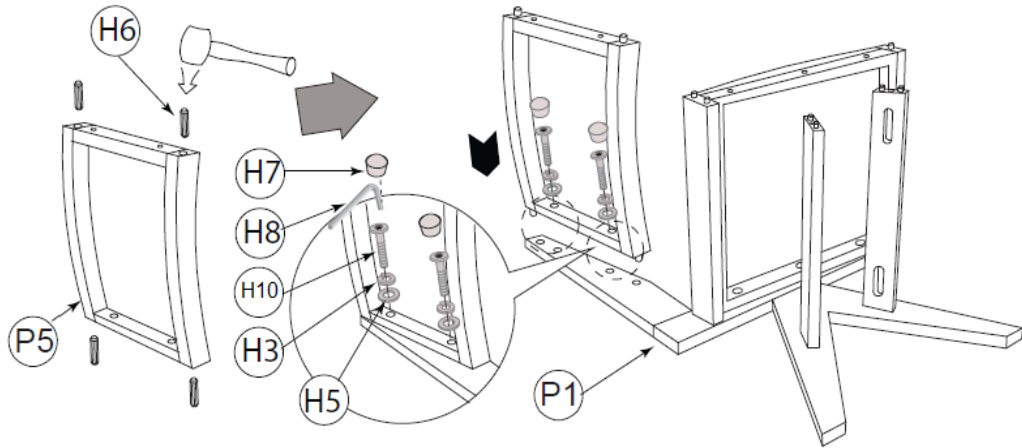



 
STEP 4

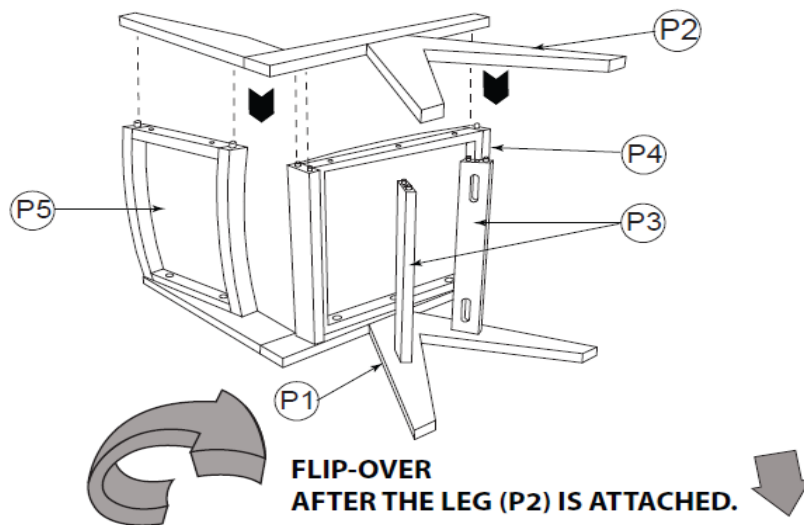
Prepare the other side of the leg: the Leg frame-Right (P2). Attach it to the parts of (Seat P4), Stretchers (P3) & Backrest (P5), by locating the wood dowel at those parts to the desired holes in the Leg (P2).
Use a rubber mallet to tap the leg frame until all the parts are snug to the leg frame.
Then, carefully flip the chair to the other side as a preparation to align the bolts into the respective holes.



STEP 5

H1 x 3	 M6 x 35mm
H3 x 3	
H4 x 3	

 

Start with tting the leg to the seat by aligning Screw (H1) with Spring washer (H3) & Flat washer Big (H4).
Tighten it using Allen key (H8).

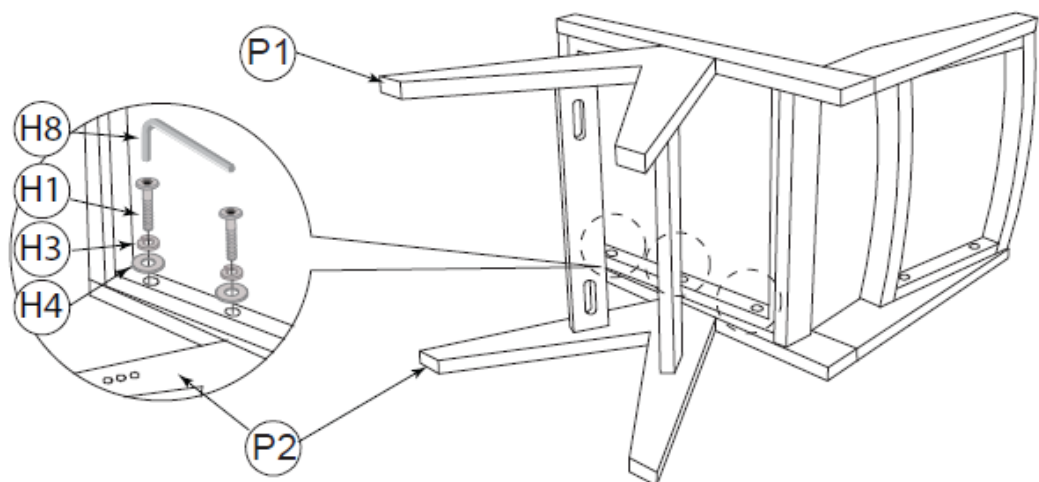


STEP 6

FITTING TO THE STRETCHERS

  Align Bolt (H2) with Spring Washer (H3) & tighten it using Allen key (H8).

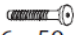

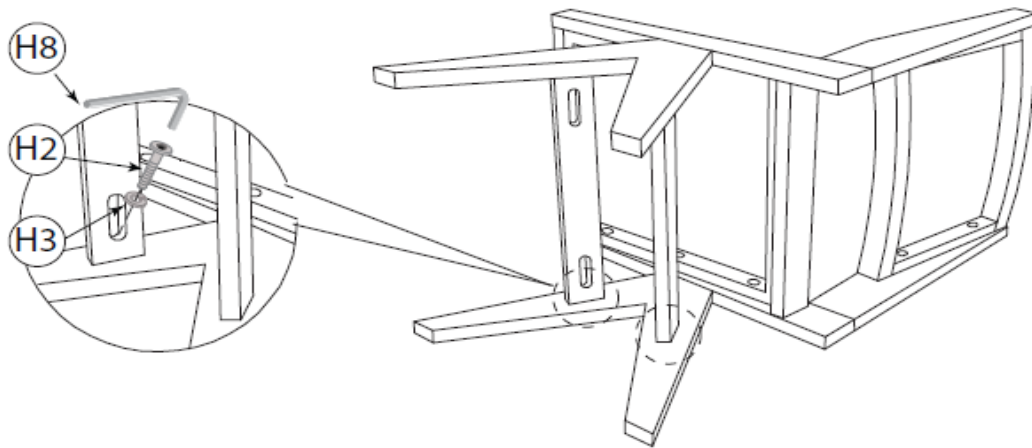

H2 x 2	 M6 x 50mm
H3 x 2	




STEP 7

FITTING TO THE BACKREST

Align Bolt (H10) together with the Spring washer (H3) & the Flat washer Small (H5). Tighten it using Allen key (H8). Tap the Wood button (H7) to cover the holes

H10 x 2	 M6 x 30mm
H3 x 2	
H5 x 2	
H7 x 2	


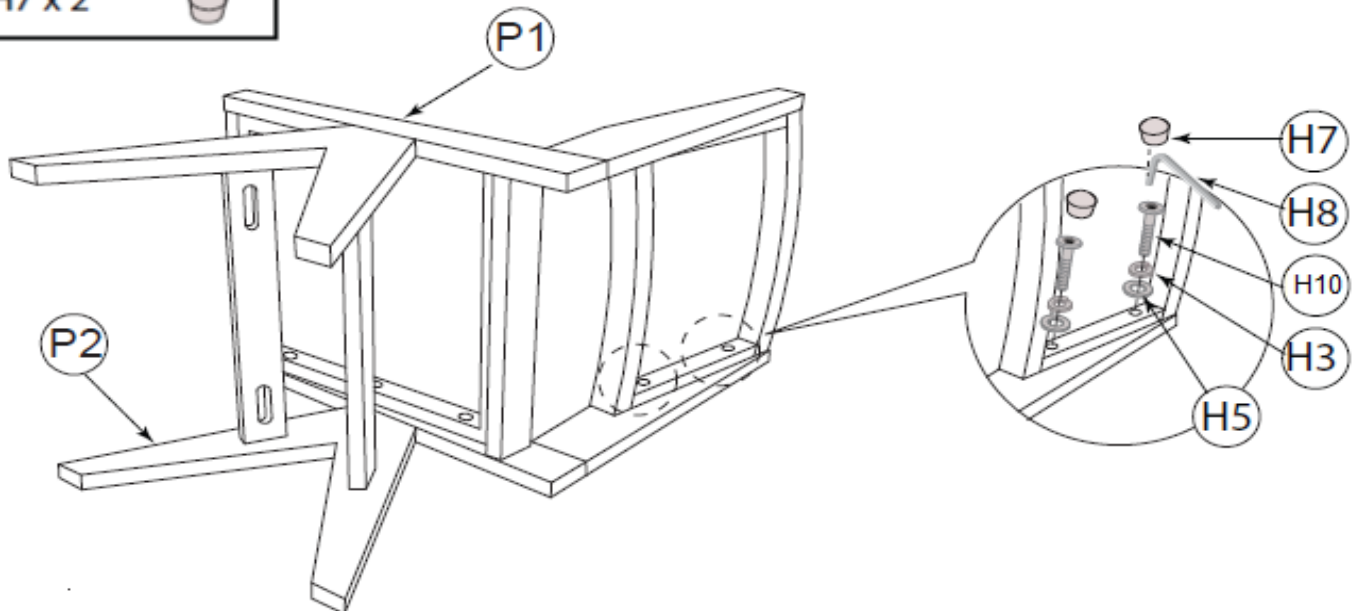 


PLEASE MAKE SURE ALL THE BOLTS ARE FULLY TIGHTEN BEFORE USING THE CHAIR

STEP 8

Before putting the chair upright, tap the nail leg (H9) into the under edge of all the legs .

  H9 x 4

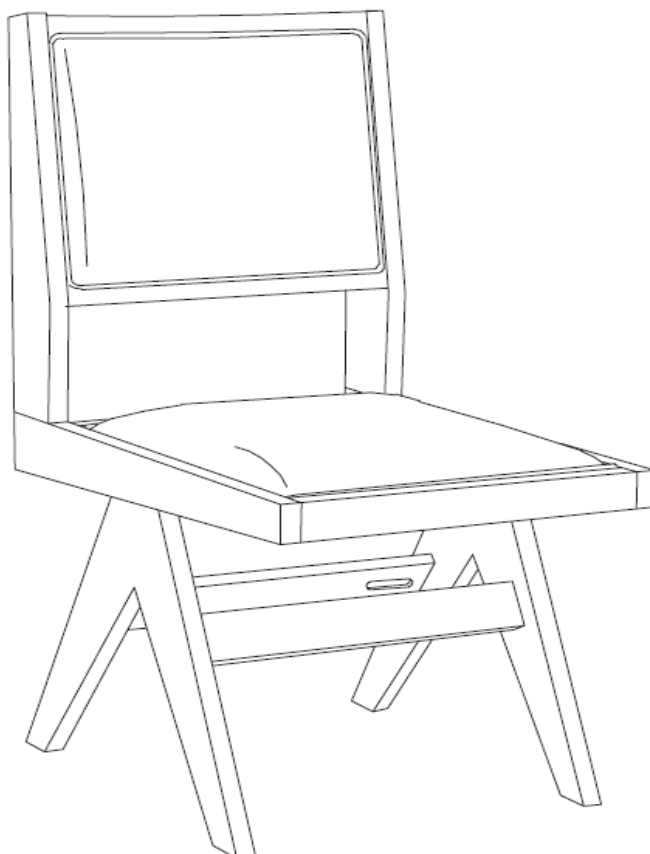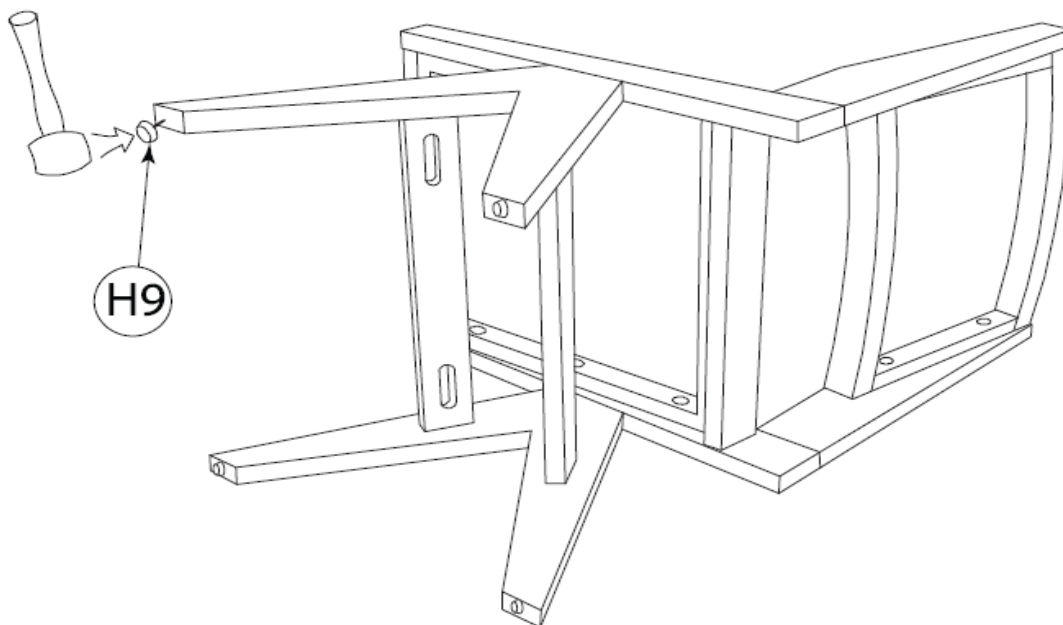


PLEASE MAKE SURE ALL THE BOLTS ARE FULLY TIGHTEN BEFORE USING THE CHAIR

CARE AND MAINTENANCE

SAFETY - To avoid any risk of suffocation to children or animals, dispose off the plastic bags immediately.

CLEANING - Clean with damp cloth and mild detergent. Do not use bleach or abrasive products.

 FITTINGS - Tighten bolts and nuts from time to time to ensure all parts of product are securely fitted.

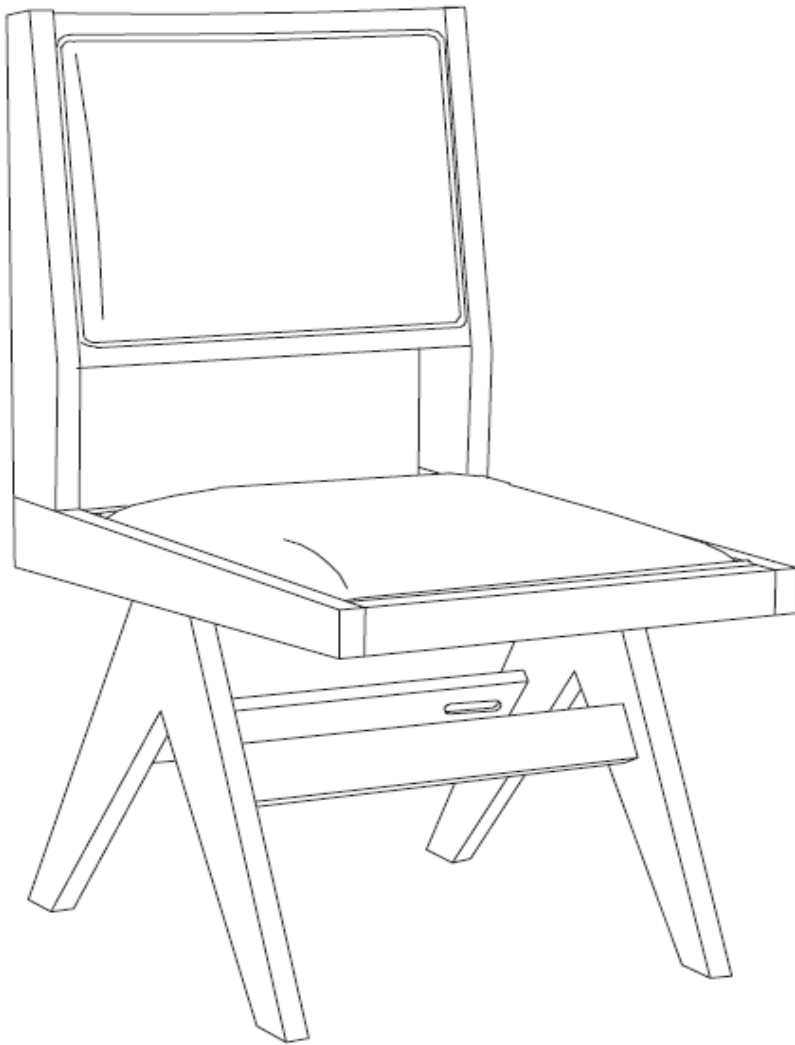

ASSEMBLY COMPLETED



Please ensure the furniture rests on an even and flat surface. If the product wobbles or feels loose, double-check all bolts and/or screws are properly tightened and secured.



Keep this handy!

Please retain this instruction manual and any order-related information for future reference.



Lift, don't drag!

To avoid damage to product please always LIFT the product when transporting or adjusting the placement.

This product is intended for RESIDENTIAL USE ONLY and not for commercial use .

CARE AND MAINTENANCE

SAFETY - To avoid any risk of suffocation to children or animals, dispose off the plastic bags immediately.

CLEANING - Clean with damp cloth and mild detergent. Do not use bleach or abrasive products.

FITTINGS - Tighten bolts and nuts from time to time to ensure all parts of product are securely fitted.

 
ASSEMBLY INSTRUCTIONS



TOOLS REQUIRED



Screwdriver
(Not included)



(Included)
Allen Wrench



2 - People

ASSEMBLY RATING



EASY —————> DIFFICULT

The Assembly Rating is a 5-point system showing the level of effort needed to assemble a specific product.

VERSION # 24-05-20



CHECK BEFORE STARTING

Are you missing anything?

Double-check all parts, hardware and accessories listed are all accounted for.

Should we send any replacements?

Are there any irregularities or flaws in the parts? We can send replacements!

Check out our Quick Tips!

We recommend reviewing the pre-assembly handouts. Even experts need a refresher now and then!

Prep Time!

Please review the assembly instructions and all diagrams prior to assembling.

PRE ASSEMBLY INTRODUCTION

We understand building ready-to-assemble furniture can be a challenging experience for some. To help avoid confusion, we have provided some helpful tips that may speed up the process.



Teamwork

ALWAYS have at least two people to help with transporting and assembling the product to avoid potential injury and/or damage.



Suitable Location

Assembling near the area of the intended location is highly recommended.



Sufficient Space

Make sure you have enough space to move around during the assembly.



Avoid Scratches

Use cardboard, blankets or a carpeted area while assembling furniture to prevent to prevent scratches and damages.



Flat Surface

Make sure the furniture rests on a flat and level surface with each leg evenly touching the floor.

ASSEMBLY AND CARE ADVICE



FAILURE TO FOLLOW THE GUIDELINES BELOW MAY RESULT IN INJURY AND/OR PROPERTY DAMAGE.



Position each part correctly and insert screws or bolts into their respective holes.



Turn clockwise to tighten and only tighten when step is completed or when instructed to do so.



Use the appropriate hand tools or power tools for assembly. Select steps, such as tightening screws and/or bolts, may require hand tools to avoid causing damage during assembly.



Save the instructions and store any supplied tools for later maintenance.



After two weeks, check and tighten any loose hardware and repeat again every six months thereafter.

IT IS THE USER'S RESPONSIBILITY TO MAINTAIN THE FURNITURE. THE HARDWARE MAY LOOSEN OVER TIME AND MAY CAUSE THE FURNITURE TO BE WOBBLY AND UNABLE TO SUPPORT ITS INTENDED WEIGHT CAPACITY. THIS MAY LEAD TO COLLAPSE AND MAY CAUSE SERIOUS INJURY.

59" ROUND TABLE



- Please keep instructions for future reference.
- Check the quantity and irregularity of parts and hardware before you start.



PARTS

(P1) - 1PC

 


TABLE TOP

(P2) - 1PC



PEDESTAL LEG

(P3) - 1PC



MOUNTING PANEL

HARDWARE

(H1) - 8 PCS



M6 X 35MM JCBC SCREW

(H2) - 8 PCS



SPRING WASHER

(H3) - 4 PCS



FLAT WASHER

(H4) - 4 PCS



LEG ADJUSTABLE GLIDE

(H5) - 4 PCS

 


WOOD DOWEL

(H6) - 1 PC



ALLEN KEY

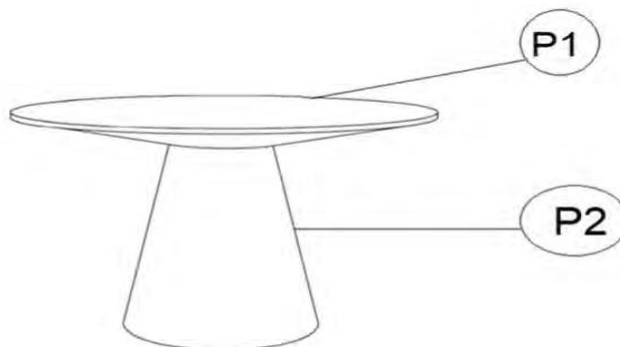

ASSEMBLY INSTRUCTIONS

Packed in 2 cartons

 








Please read instructions carefully


Remove all wrapping materials, staples and packing straps from the carton. Refer to Parts List and Hardware List and ensure they are complete before you start assembling. Place all wooden parts on a clean, flat and soft surface (e.g carpet or rug) to prevent parts from being scratched.

CAUTIONS: 1) DO NOT FULLY TIGHTEN BOLTS AND NUTS UNTIL ALL PARTS HAVE BEEN ASSEMBLED.

2) DO NOT OVER-TIGHTEN BOLTS AND NUTS .

3) KEEP ALL HARDWARE PARTS OUT OF REACH OF CHILDREN.

Carton	Designation	Part List	Hardware List
1	Table Top	 P1 x 1pc	
	Mounting Panel	 P3 x 1pc	
2	Pedestal Leg	 P2 x 1pc	 H1 x 8pc M6x35 JCBC SCREW  H2 x 8pc Spring Washer  H3 x 4pc Flat Washer  H4 x 4pc Legs Adjustable Glide  H5 x 4pc Wood Dowel M8x30mm  H6 x 1pc Allen Key

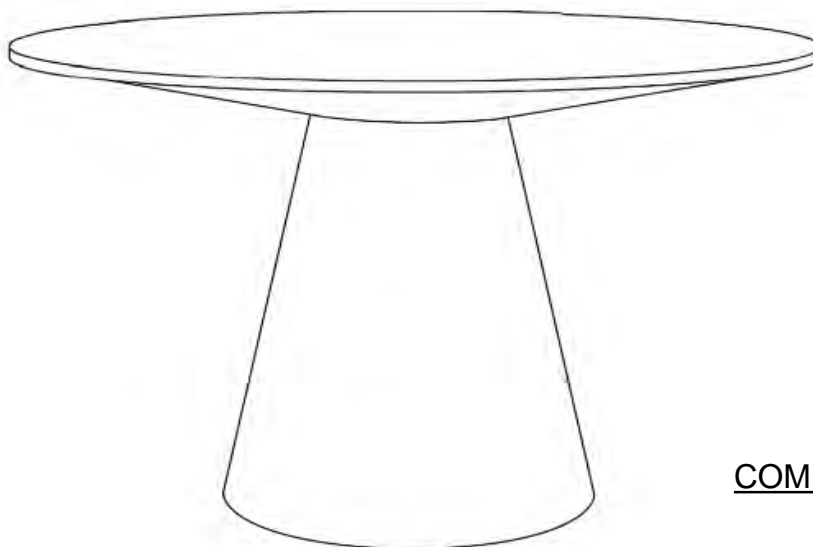 






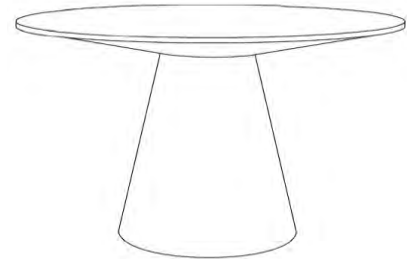 
COMPLETE ASSEMBLY

ASSEMBLY INSTRUCTIONS


59' ROUND TABLE

PART LIST		
No	Description	Qty
P1	Table Top	1
P2	PEDESTAL LEG	1
P3	MOUNTING PANEL	1

HARDWARE LIST		
No	Description	Qty
H1	M6 x 35mm JCBC BOLT 	8
H2	SPRING WASHER 	8
H3	FLAT WASHER 	4
H4	ADJUSTABLE LEG STUD 	4
H5	WOOD DOWEL 	4
H6	ALLEN KEY 	1



 STEP 1

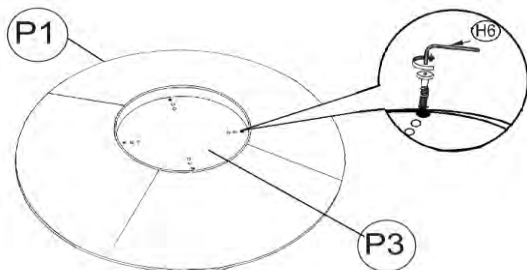


Important: Detach Mounting Panel (P3) from Table Top (P1) before assembly.

STEP 2

H1 x 4	 M6 x 35mm
H2 x 4	

 
Attach mounting plate (P3) to the smaller end of the pedestal leg (P2) by using Bolt (H1) with spring washer (H2).

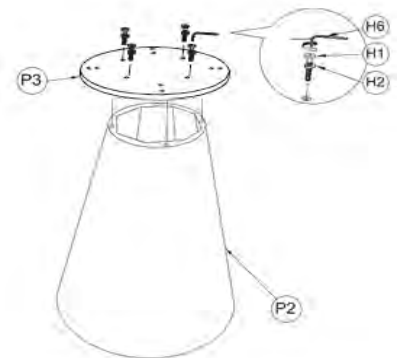

 STEP 3



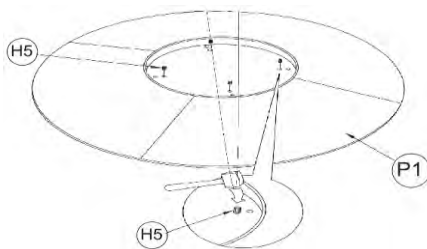

H5 x 4	
--------	---

Install the wooden dowels (H5) to the table top (P1) as shown in the diagram.




(MALLET NOT PROVIDED)

STEP 4

H1 X 4	 M6 x 35mm
H2 X 4	
H3 X 4	
H4 X 4	

 
Flip the pedestal over and align to the table using the dowels as a guidance. Secure by using Bolt (H6) with spring washer (H2) and lock washer (H3). Attach the adjustable leg stud to the pedestal.

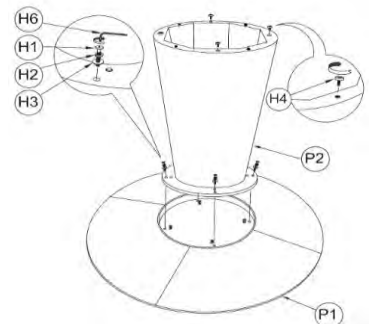

CAUTION ! REQUIRES TWO ADULTS TO TURN THE TABLE UPRIGHT AFTER FINISHED ASSEMBLY.

CARE AND MAINTENANCE

 - SAFETY** - To avoid any risk of suffocation to children or animals, dispose off the plastic bags immediately.
- CLEANING** - Clean with damp cloth and mild detergent. Do not use bleach or abrasive products.
- FITTINGS** - Tighten bolts and nuts from time to time to ensure all parts of product are securely fitted.

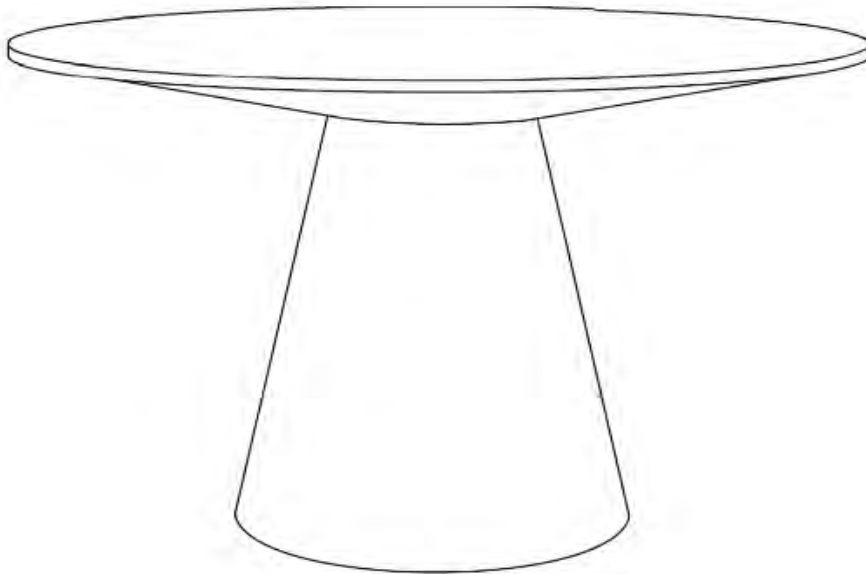

ASSEMBLY COMPLETED



Please ensure the furniture rests on an even and flat surface. If the product wobbles or feels loose, double-check all bolts and/or screws are properly tightened and secured.



Keep this handy!

Please retain this instruction manual and any order-related information for future reference.



Lift, don't drag!

To avoid damage to product please always LIFT the product when transporting or adjusting the placement.

This product is intended for RESIDENTIAL USE ONLY and not for commercial use .

CARE AND MAINTENANCE

SAFETY - To avoid any risk of suffocation to children or animals, dispose off the plastic bags immediately.

CLEANING - Clean with damp cloth and mild detergent. Do not use bleach or abrasive products.

FITTINGS - Tighten bolts and nuts from time to time to ensure all parts of product are securely fitted.