
## **Assembly Instructions**

Caution: You must read this before you proceed

## Bench

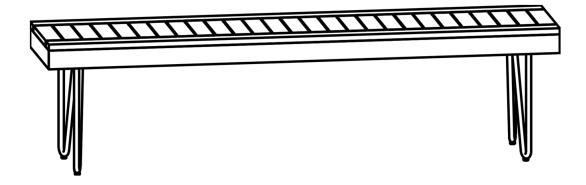



Caution: This Bench is NOT a TOY

Keep your child/ children at bay during the assembly process.


Whenever moving/lifting the Bench and to prevent damage to the Bench, two adults are needed to execute these actions.

Parts List			
Label	Picture	Description	QTY
Α		Bench Seat Panel	1
В		First Iron Leg	2
С		Second Iron Leg	2
<u>Hardware</u>			
Label	Picture	Description	QTY
1)		Bolt (M8x20mm)	9
2		Washer	9
3		Allen Key	1

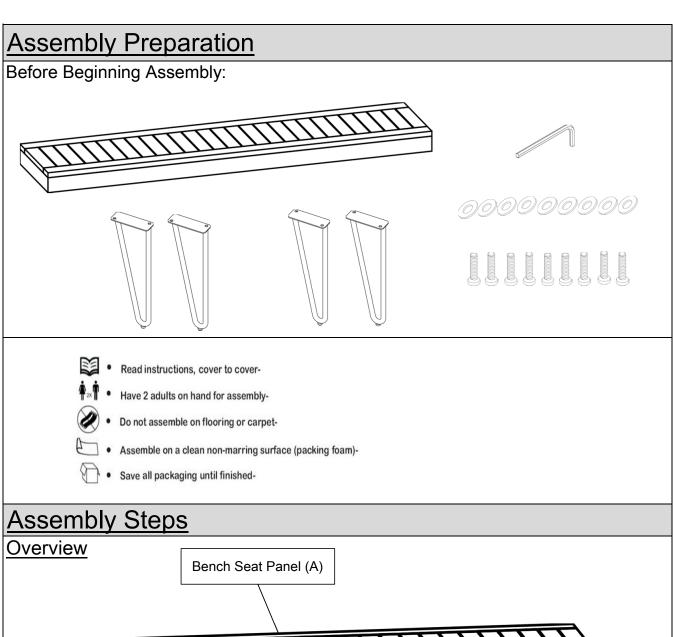


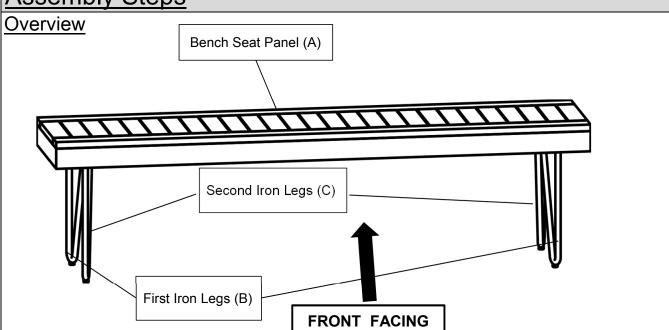


This Bench has multiple parts and may require up to 15 minutes to assemble. To give you an overview of the Bench parts, the above picture is to help you put the various parts into perspective. Please read through the instructions below to familiarise yourself with the parts and steps before assembly.

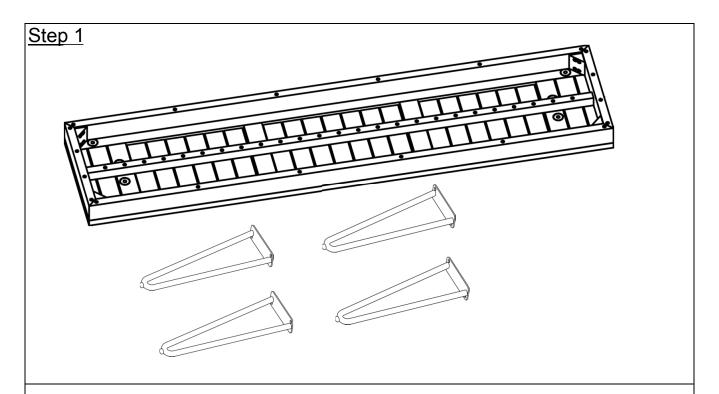

Unpack and place all parts on a clean, non-marring surface.

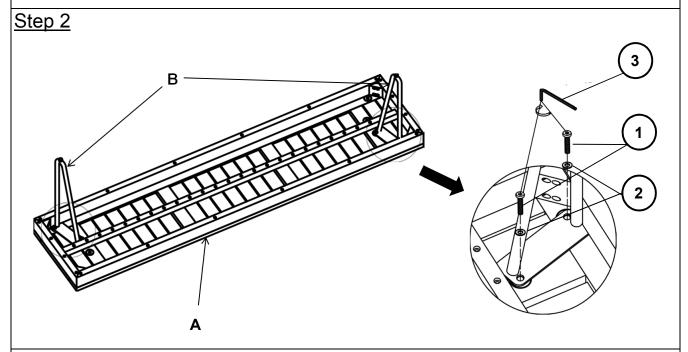

Align First Iron Legs(B) to Bench Seat Panel(A) as pictured above. Attach First Iron Legs(B) to Bench Seat Panel(A) using Bolts(1), and Washers(2) with Allen Key(3). **Do not fully tighten the Bolts.** 

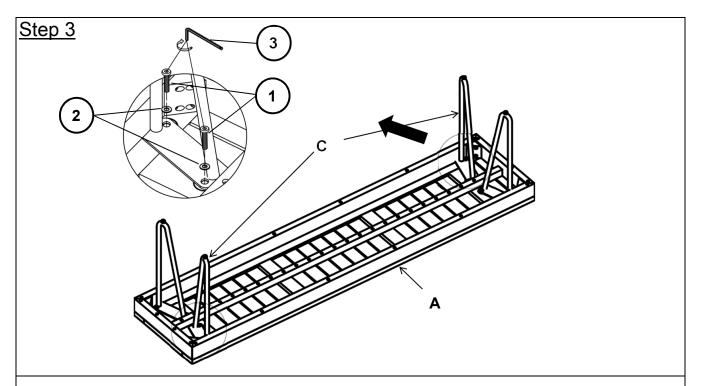


Position the Second Iron Legs(C) to Bench Seat Panel(A) as pictured above.

Secure the Second Iron Legs(C) to Bench Seat Panel(A) using Bolts( $\widehat{1}$ ), and Washers( $\widehat{2}$ ) with Allen Key( $\widehat{3}$ ).

Do not fully tighten the Bolts.

## Step 4

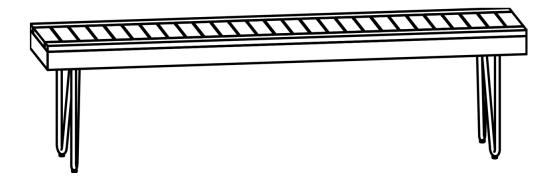

Stand the Bench up.

Place the Bench on a LEVEL surface.

Inspect it and make sure all parts are adequately connected.

Gently and gracefully, sit onto the Bench.

This pressure will help the Legs and Bench reach full alignment status.

Check for wobbles on a LEVEL surface.

If no wobbles are found proceed to tighten the Bolts in a sequential manner, until evenly secured.

When tightening the Bolts tighten sequentially.

Do not tighten any Bolt fully and then move on towards the next one.

If there are still wobbles, loosen the Bolts and excute the same above process.

If the Bench is not Stable it could lead to damage to the product.

Your Bench is ready for use.

This Bench can only be used on a flat, level surface.

## Care & Maintenance



Do not put hot items directly on furniture surface





Do not clean furniture with harsh cleansers or polish.



To obtain the longest lifespan of your outdoor products, minimizing exposure to direct sunlight is recommended.



Children should not climb or jump on the furniture.



Do not write on furniture without a padded barrier to protect the surface.



To obtain the longest lifespan of your outdoor products, avoid extended and lengthy exposure to rain, snow, and direct sunshine. Whenever possible cover the product and /or place under patio or awnings.



Not for commercial use. For residential use only .



Stains may be removed with mild soap solution and damp cloth.



Dust and pick-up spills using a clean, non-colored, lint-free cloth .