 



Assembly Instructions

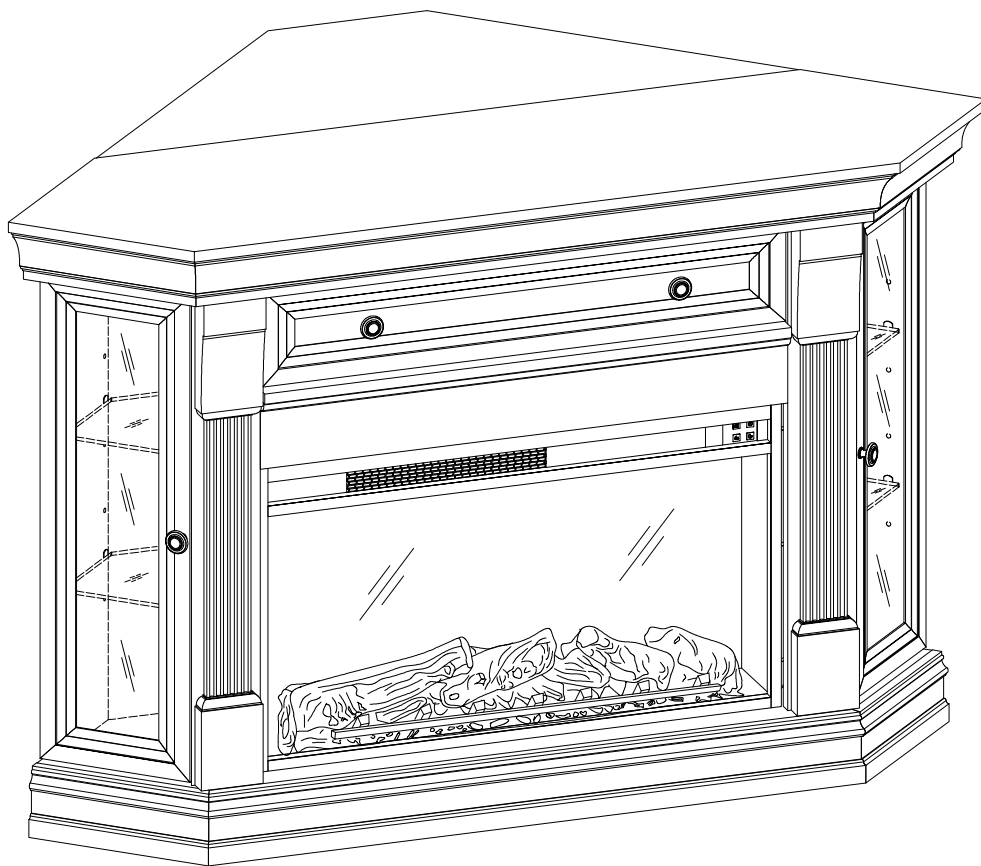


Date 2025-08-20 Rev.01-A

General Assembly Guidelines

 
- I. Ensure that all parts and hardware are available before beginning assembly.
- II. Follow each step carefully to ensure the proper assembly of this product.
- III. Two people are recommended for ease in the assembly of this product.
- IV. A Phillips head screwdriver is required for the assembly of this product .

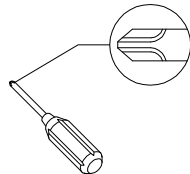

 - V. The provided glue is to secure wood dowels in place . When first inserting dowels , locate the appropriate hole for the dowel , place a small amount of glue in the hole and insert the dowel . Wipe away excess glue immediately.

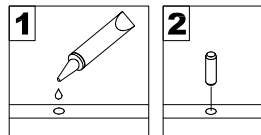


 In future assembly steps when dowels are necessary to attach assembly parts together , place a small amount of glue on the end of the dowel before attaching parts together . Wipe away excess glue immediately.

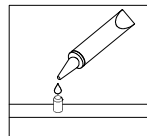


VI HOW THE KNOCK DOWN (KD) ASSEMBLY SYSTEM WORKS

 
- 1.Screw the Cam Bolt into the pre-drilled hole on the panel. Make sure Cam Bolt goes into the pre-drilled hole on the end of panel for Cam Lock.
- 2.Insert the Cam Lock into the pre-drilled large hole on the panel. Make sure the arrow on the face of Cam Lock points towards Cam Bolt.
- 3.Take a Phillips screwdriver and rotate the Cam Lock clockwise to lock the Cam Bolt.
- 4.Use the sticker to conceal the Cam.

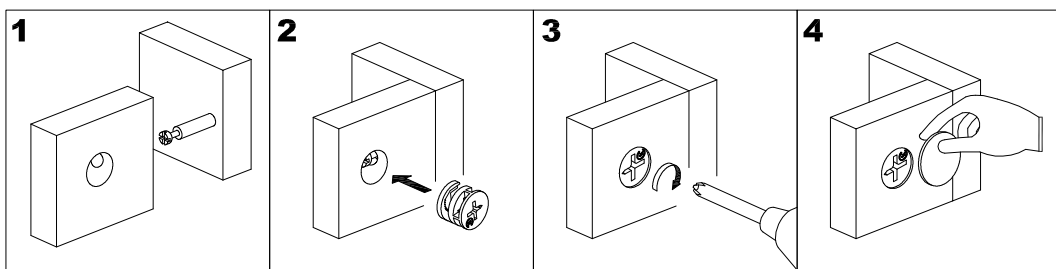





 
- VII. Power tools should not be used to assemble this product .

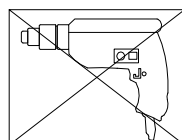





Parts List

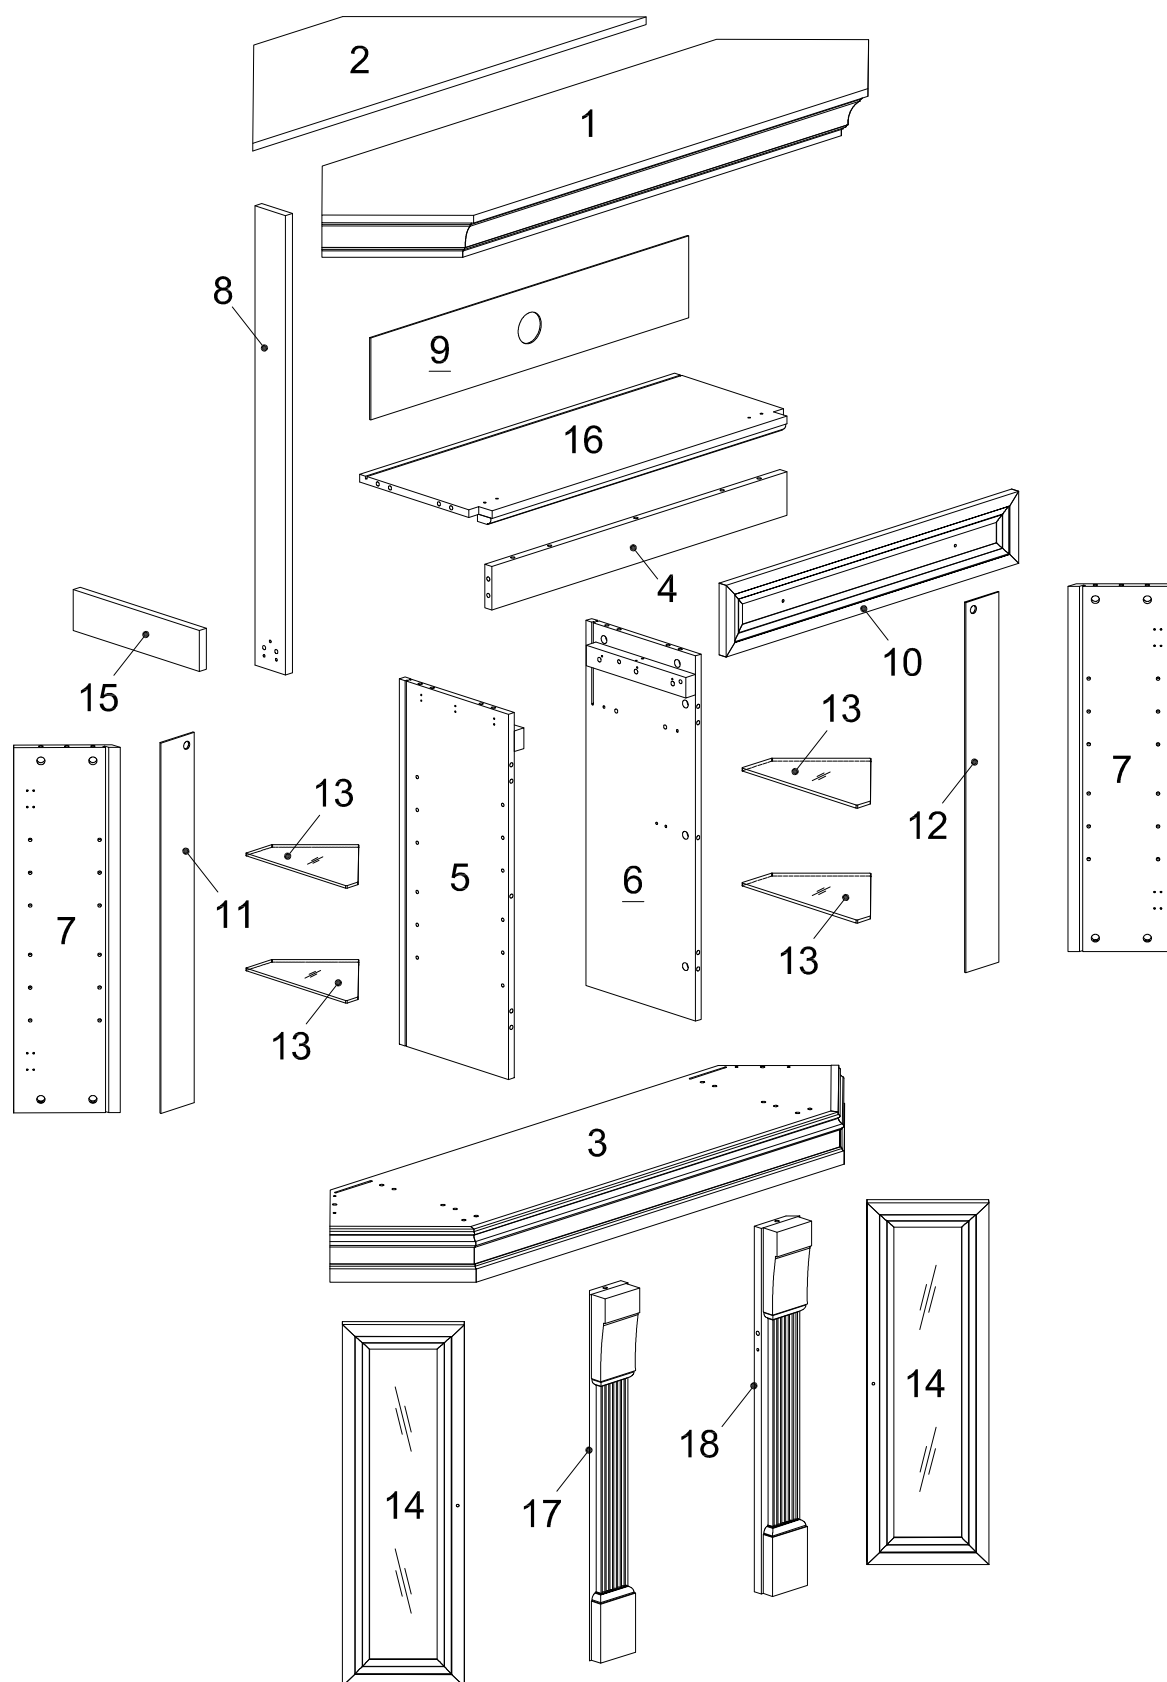 


Hardware List

     A		Ø8x30mm	Wood dowel	28	pcs
B		Ø6x35mm	Cam bolt	27	pcs
C		Ø15x11mm	Cam lock	27	pcs
D			Sticker	18	pcs
E		250mm	Plastic tracking	2	pcs
F		250mm	Shelf support pin	16	pcs
G		Ø6x12mm	Bolt	12	pcs
H			Glue	1	pc
I		Ø6x50mm	Screw	6	pcs
J			Plastic wedge	16	pcs
K		Ø3x17mm	Flat-head screw	20	pcs
L		M4	Hex key	1	pc
M		Ø3x12mm	Screw	16	pcs
N			Clip	6	pcs
O		Ø3.5x20mm	Screw	6	pcs
P			Connector	6	pcs
Q			Door stopper	6	pcs
R		Ø4x15mm	Knob bolt	2	pcs
S		Ø4x25mm	Knob bolt	2	pcs
T			L shape bracket	2	pcs
U		Ø4x12mm	Screw	4	pcs
V		Ø4x30mm	Screw	3	pcs

    
Hardware List

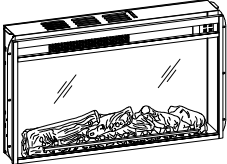X		Ø35mm	Slow-close Euro hinge	4 pcs
Y		Ø3.5x14mm	Hinge screw	28 pcs
Z			Hanger	2 pcs
AA			Led strip light (In the Fire Insert Box)	2 pcs
BB			Knob	4 pcs
CC		Ø6x20mm	Wood dowel (small)	2 pcs
DD			Tipping Restraint Hardware	2 sets
EE		RV30V80L-MT3	Fireplace Insert	1 pc
FF			Straight Metal Bracket	2 pcs

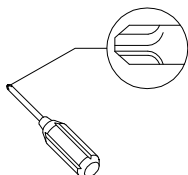 


Philips head screwdriver required for assembly
(not included)

 
Step 1

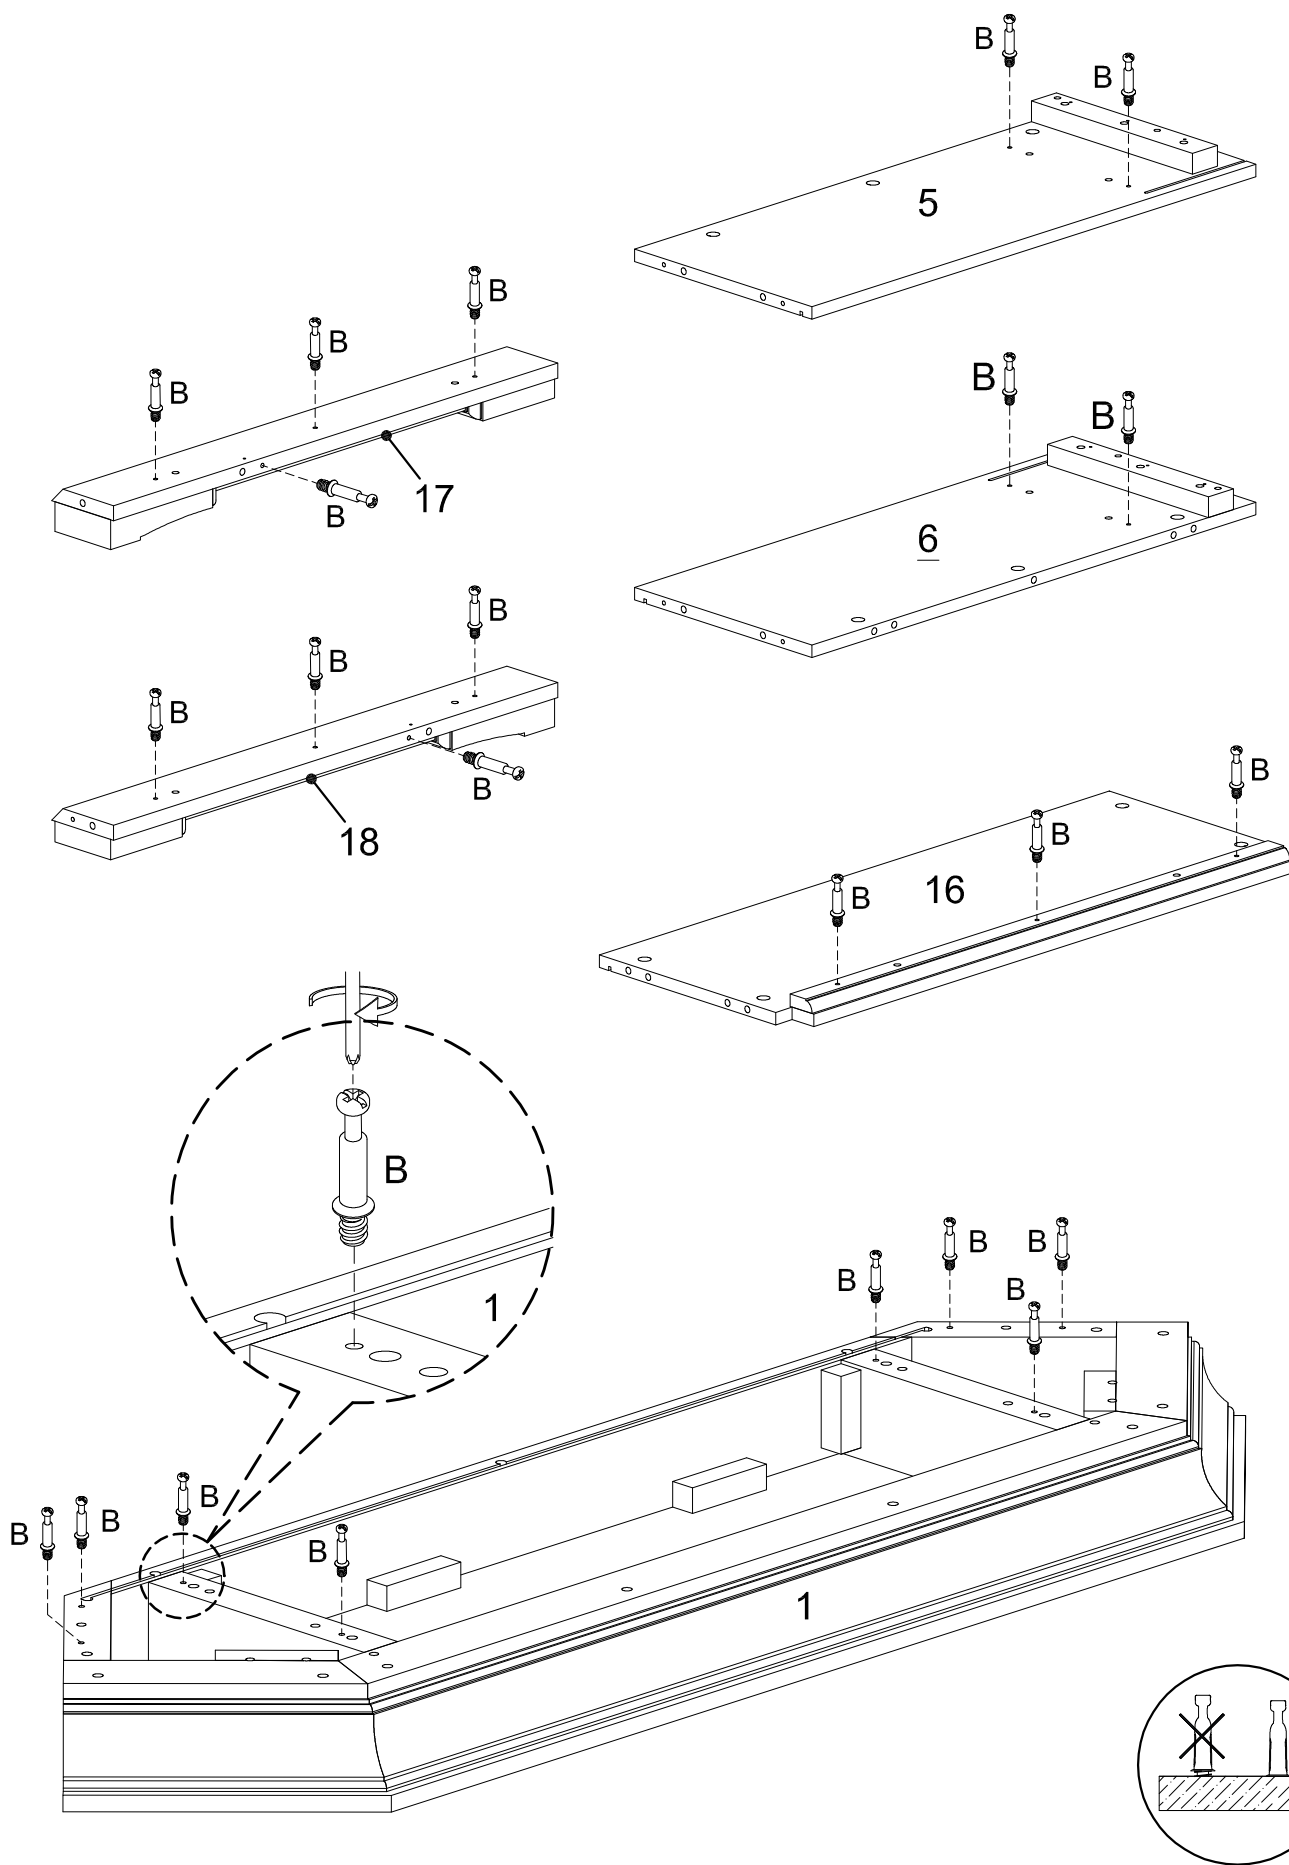

 Step 2

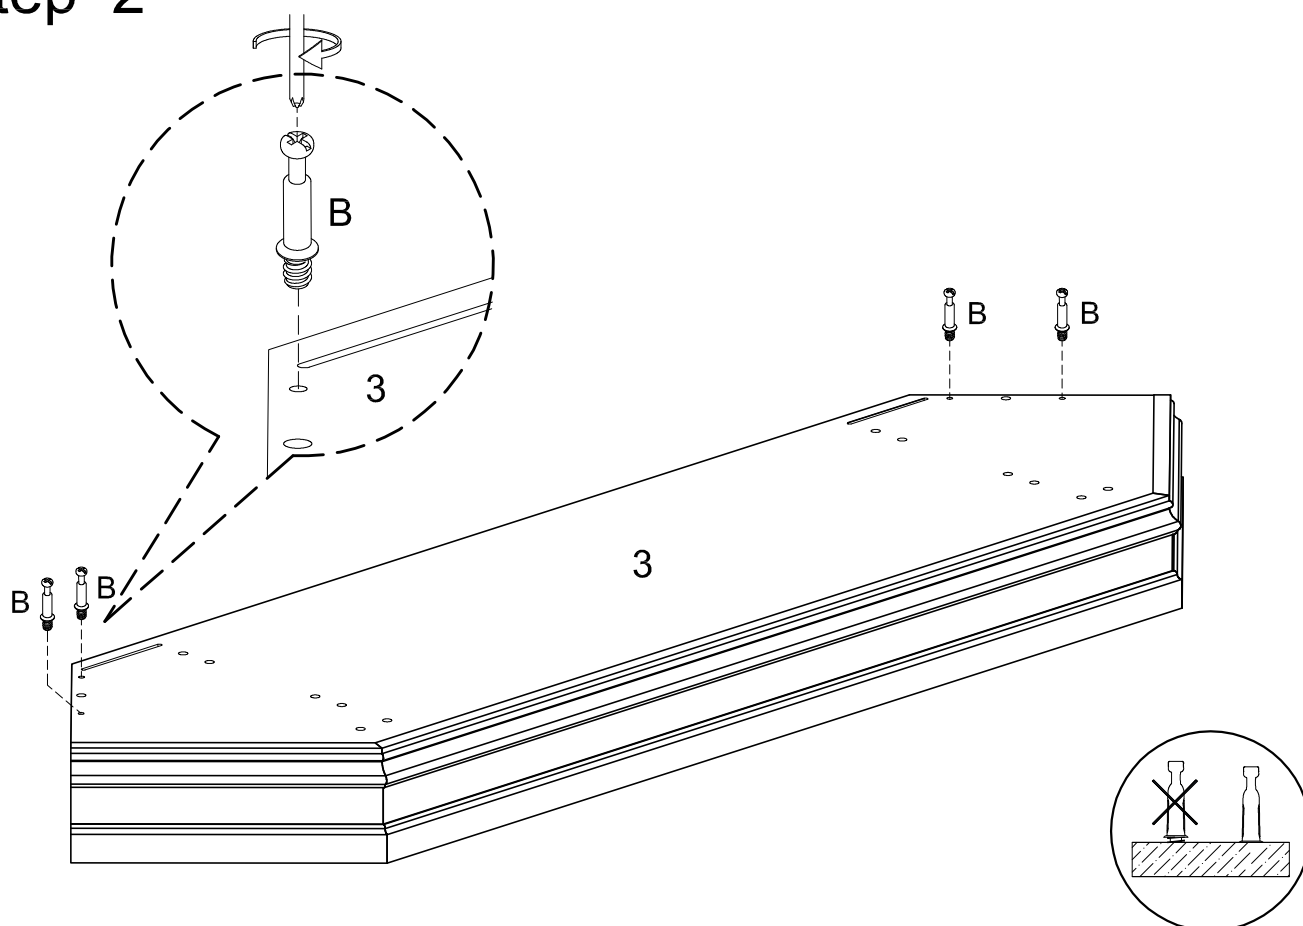


 Step 3

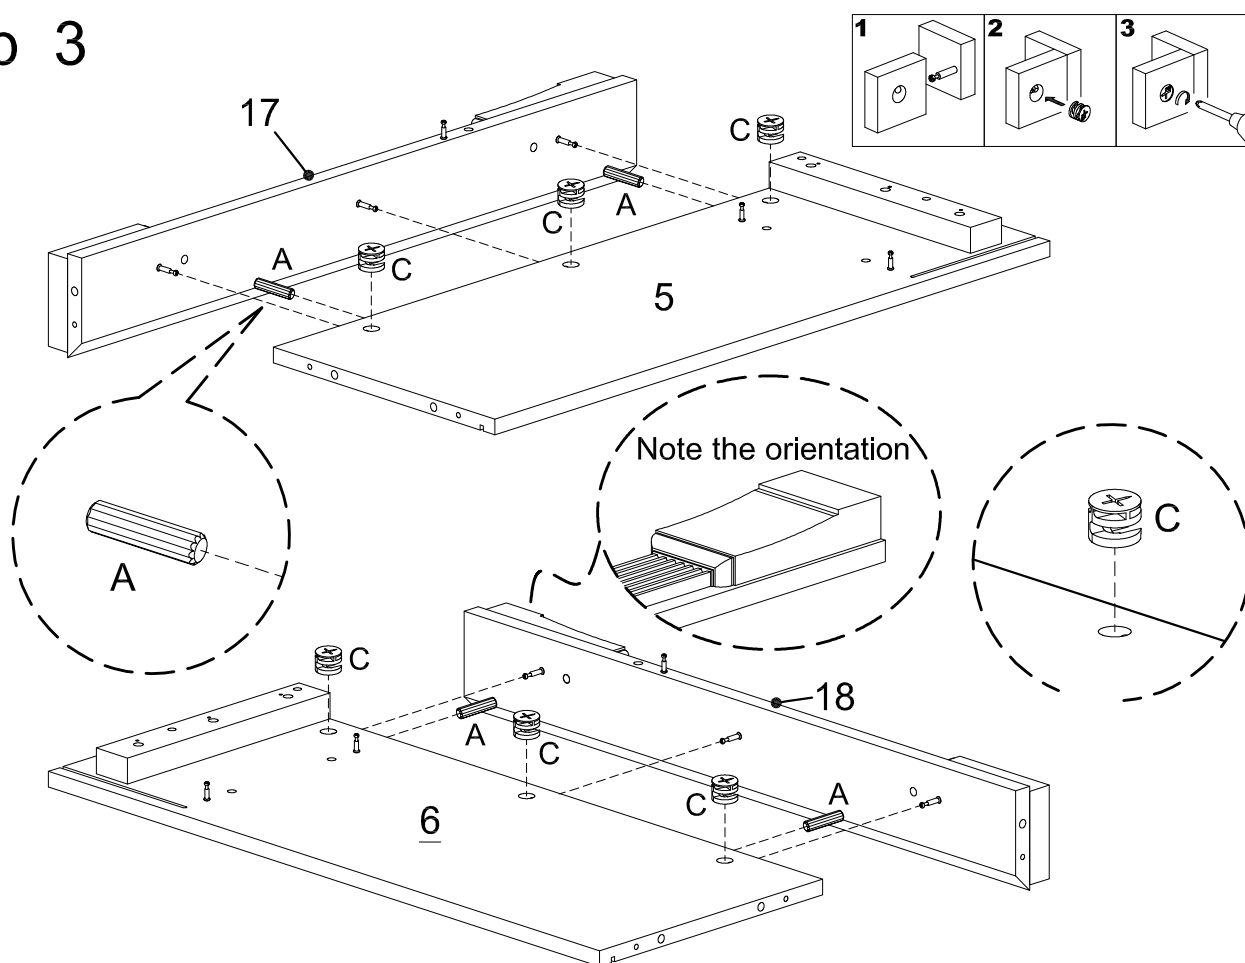


Step 4

 After installing the track,
screw the stopper

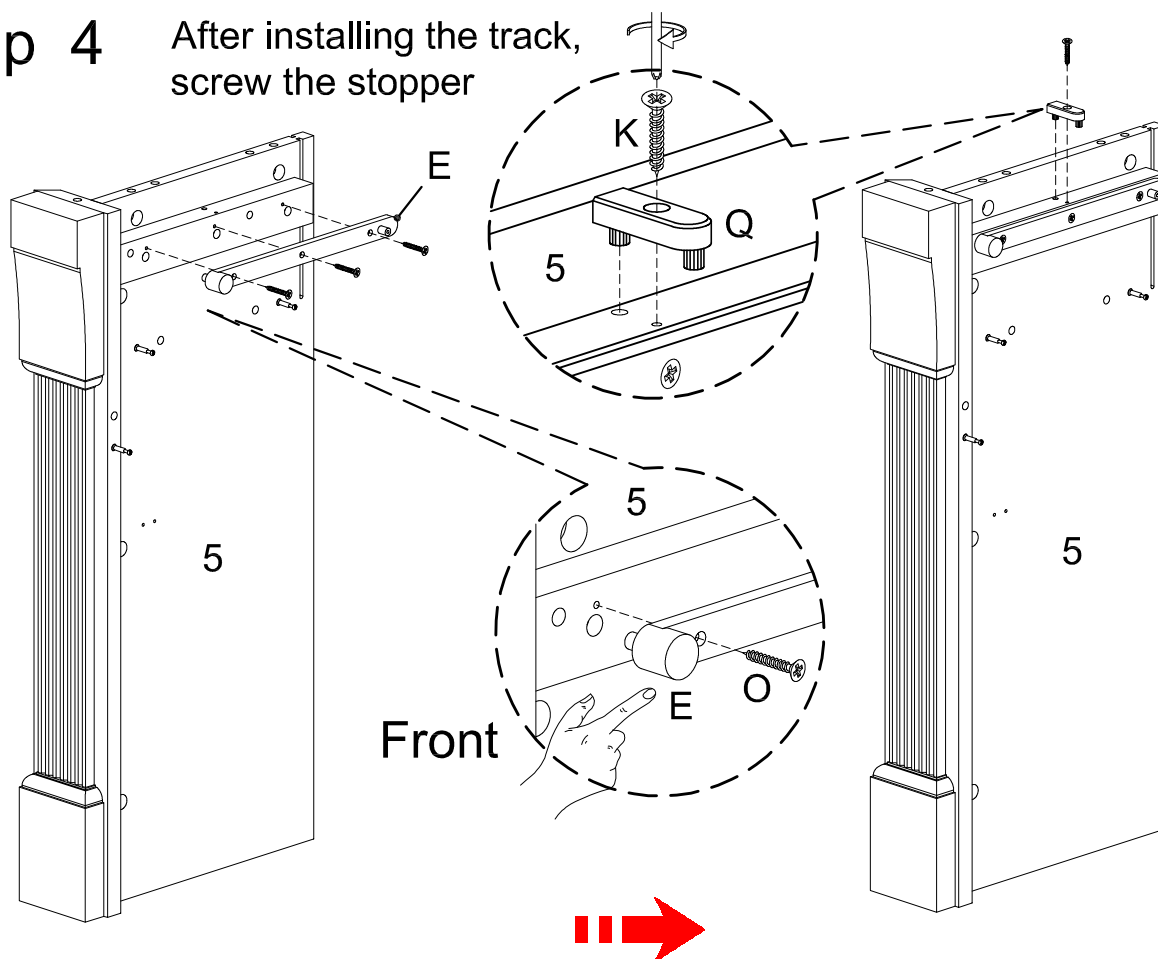


Step 5

 
After installing the track,
screw the stopper

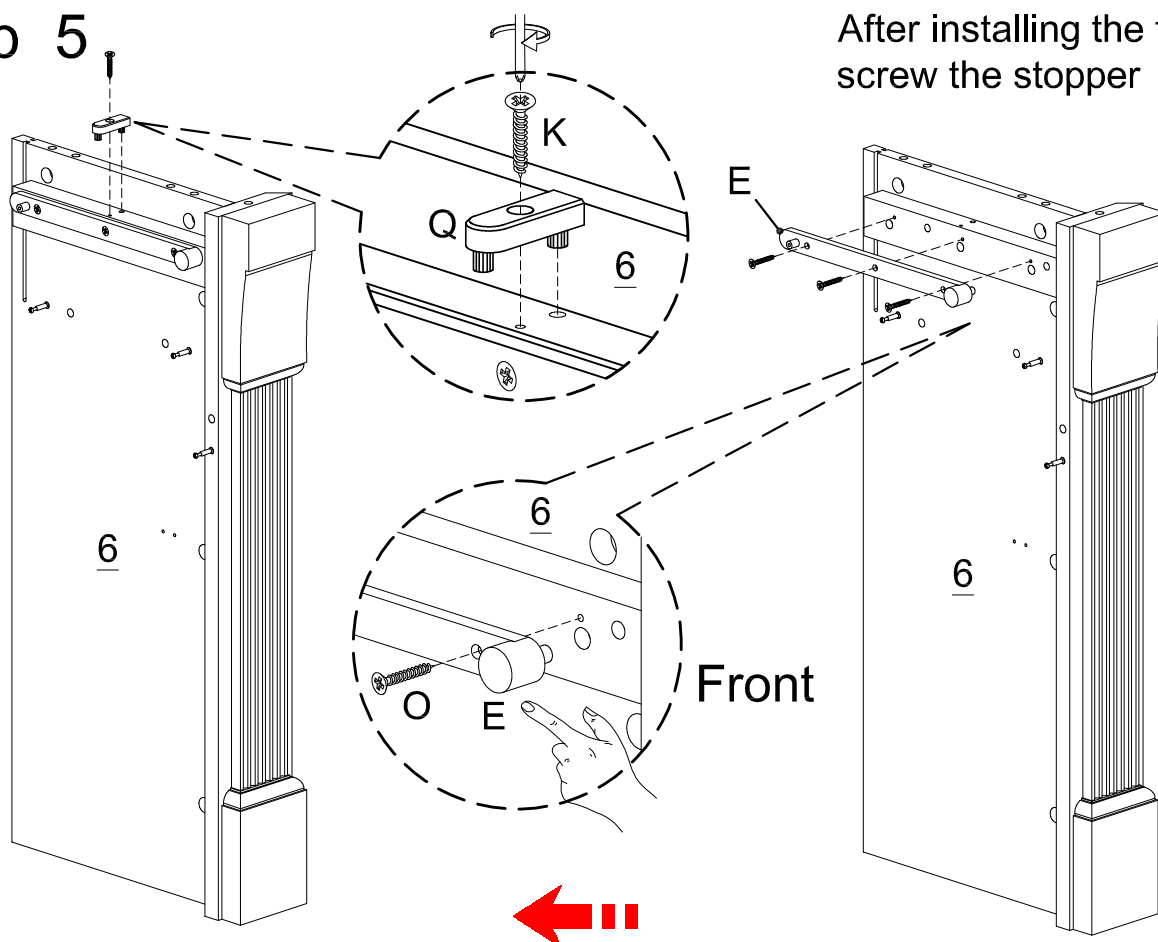

 
Step 6

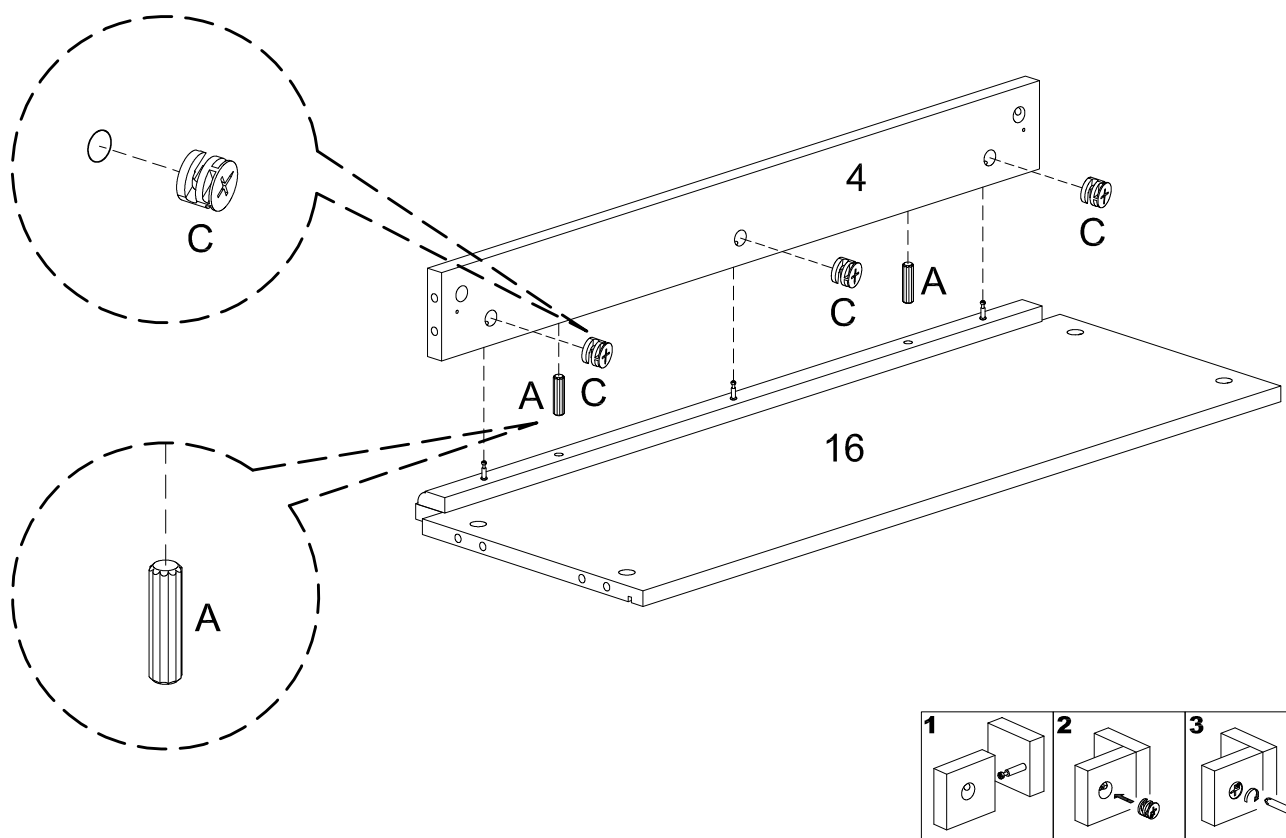

 
Step 7

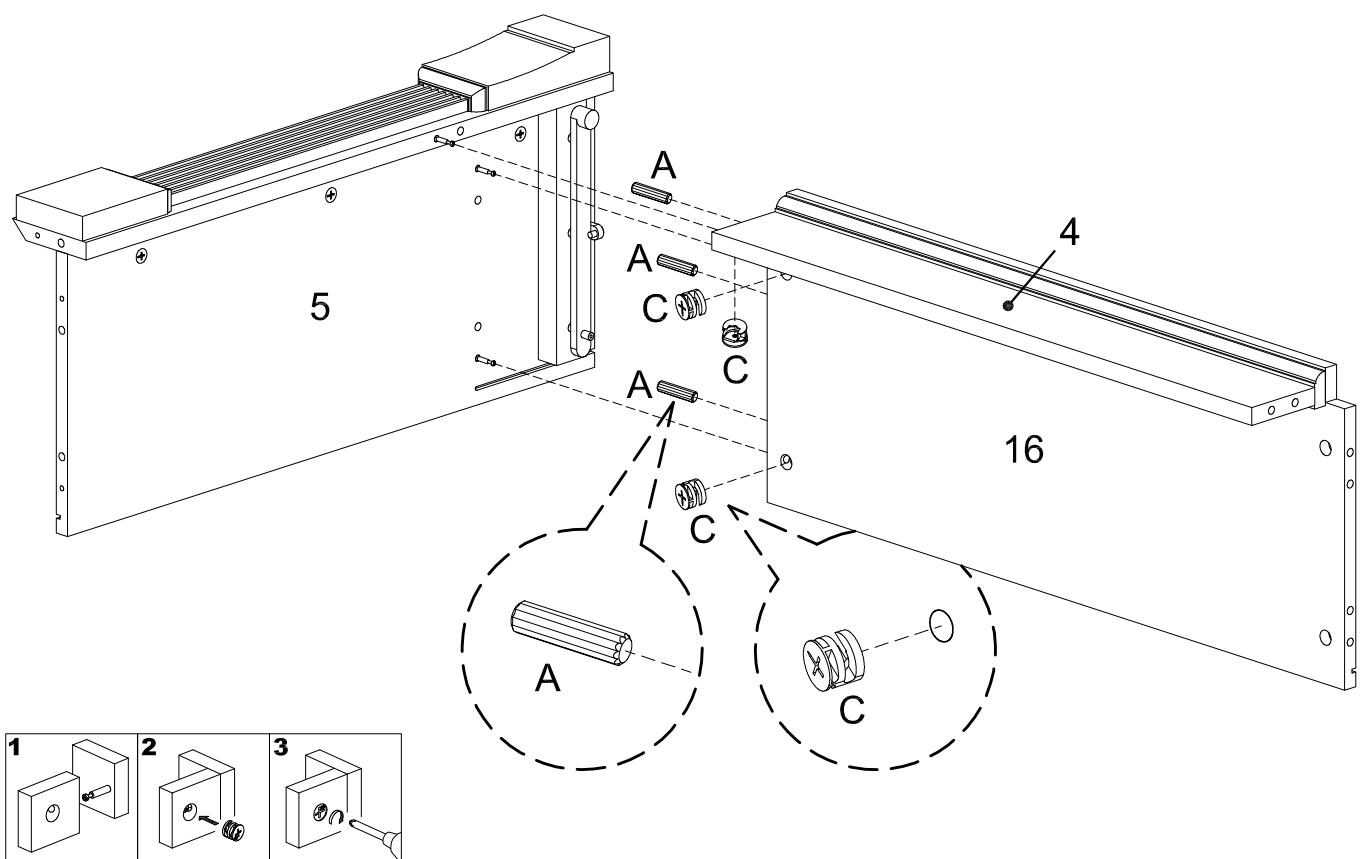

 
Step 8

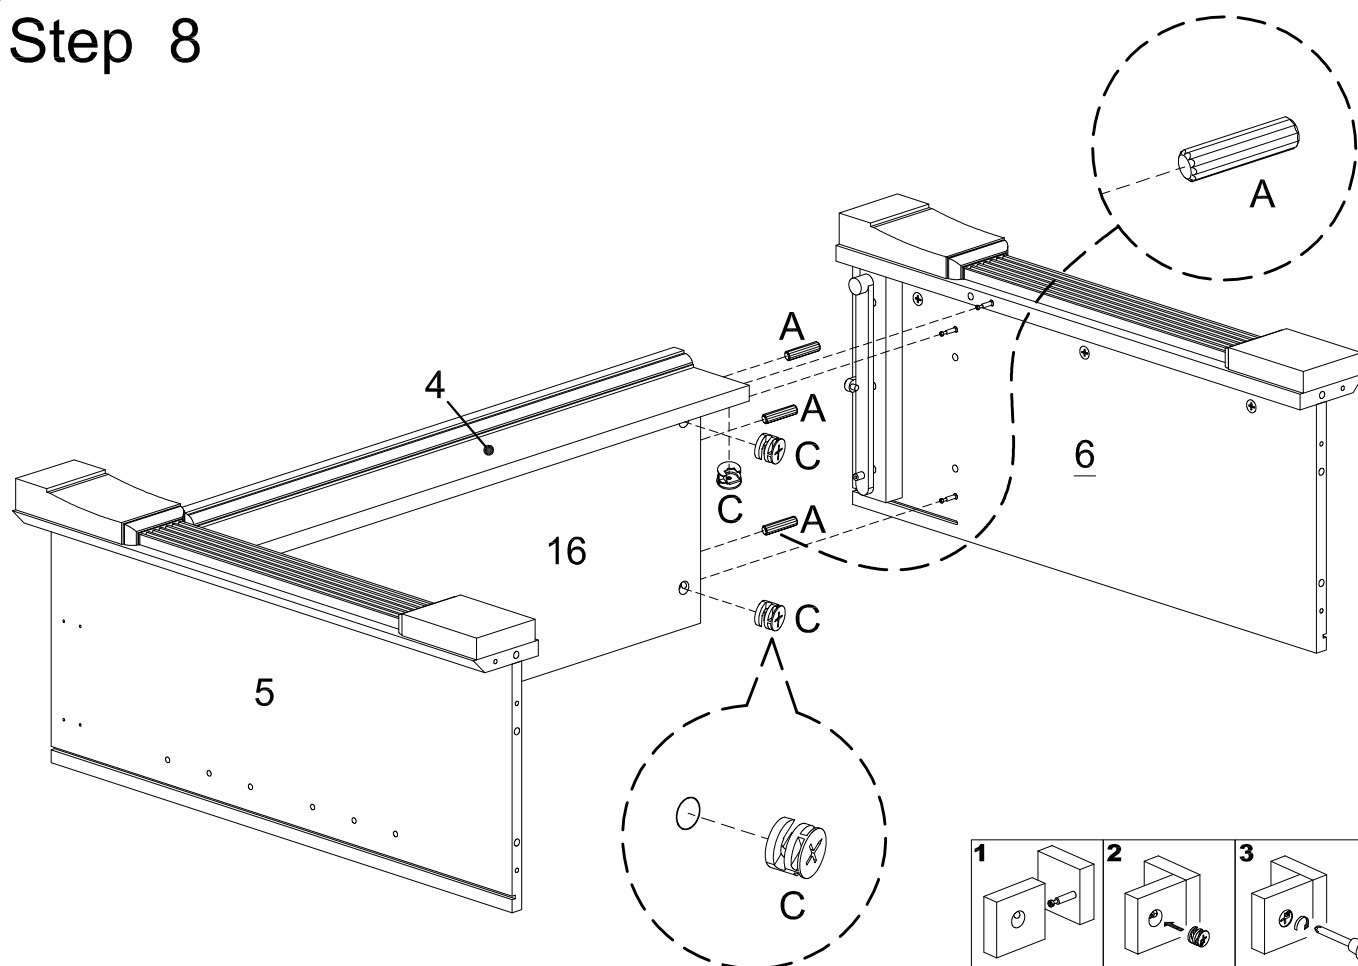

 
Step 9

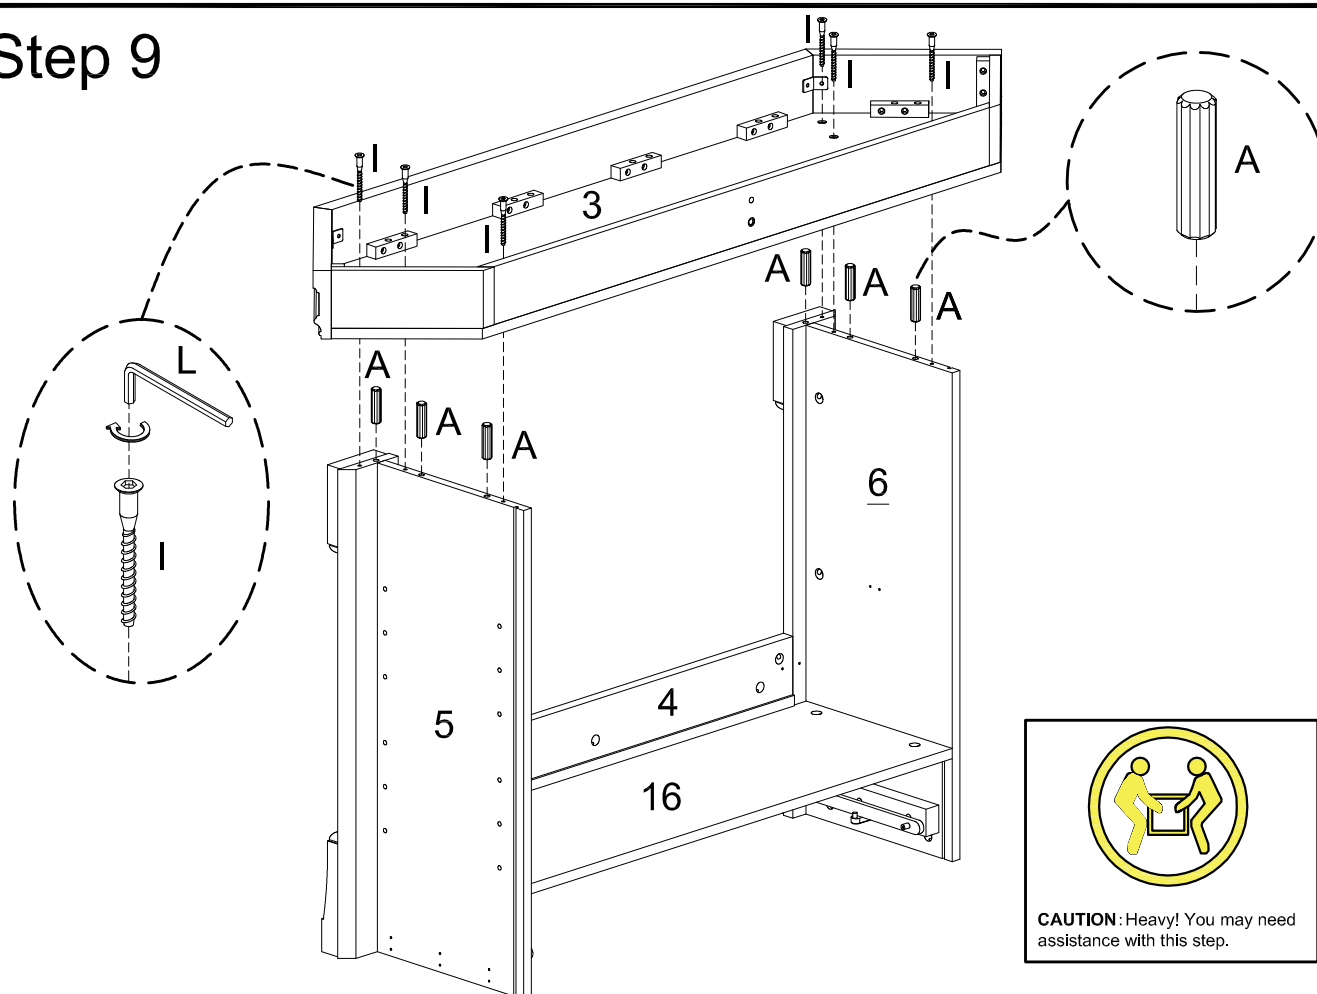


 
Step 10

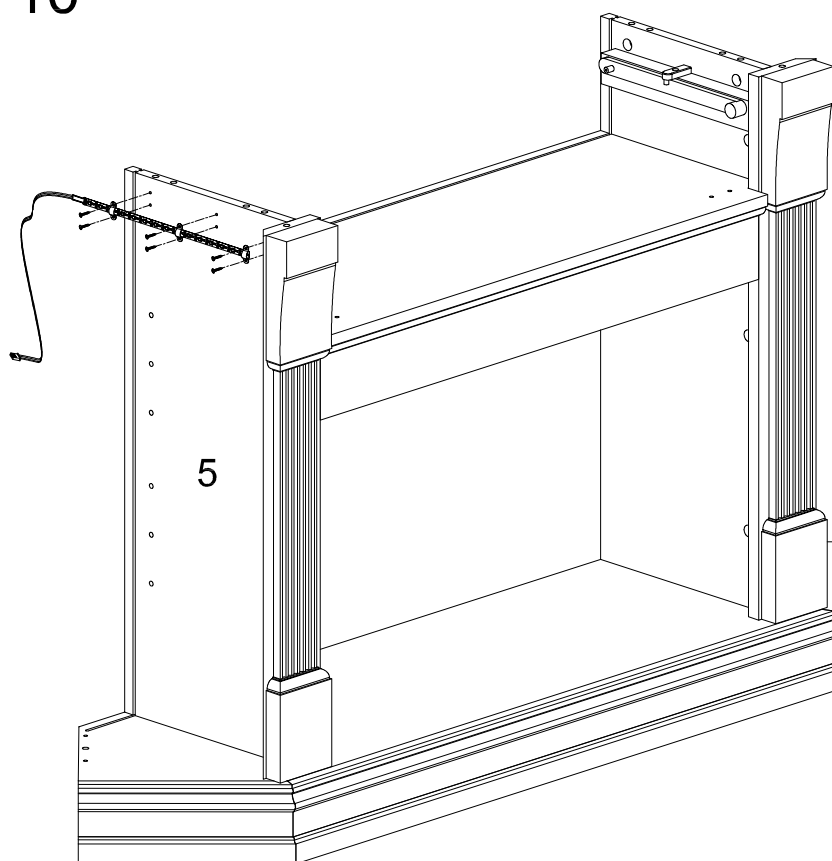


Remove the tape

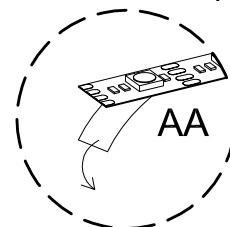 


Press

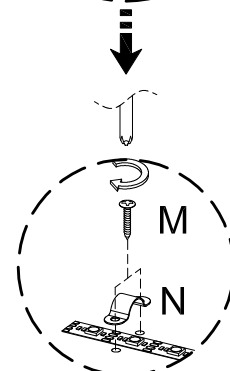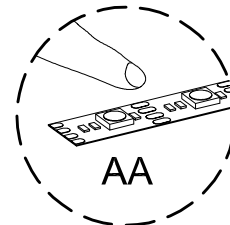  


 
Step 11

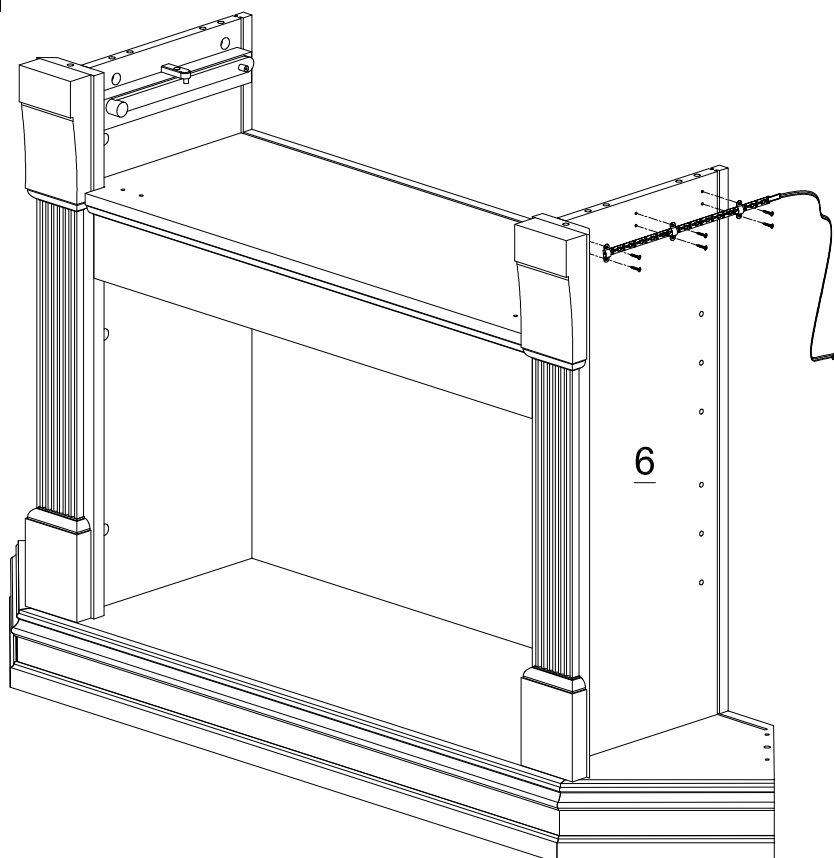


Remove the tape

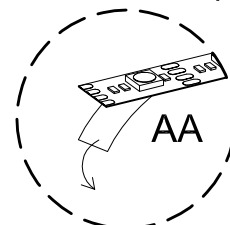 


Press

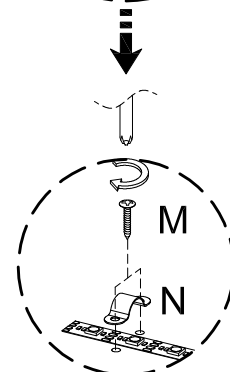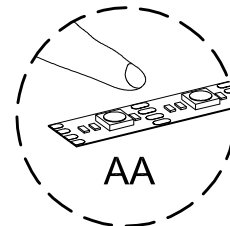  

 Step 12

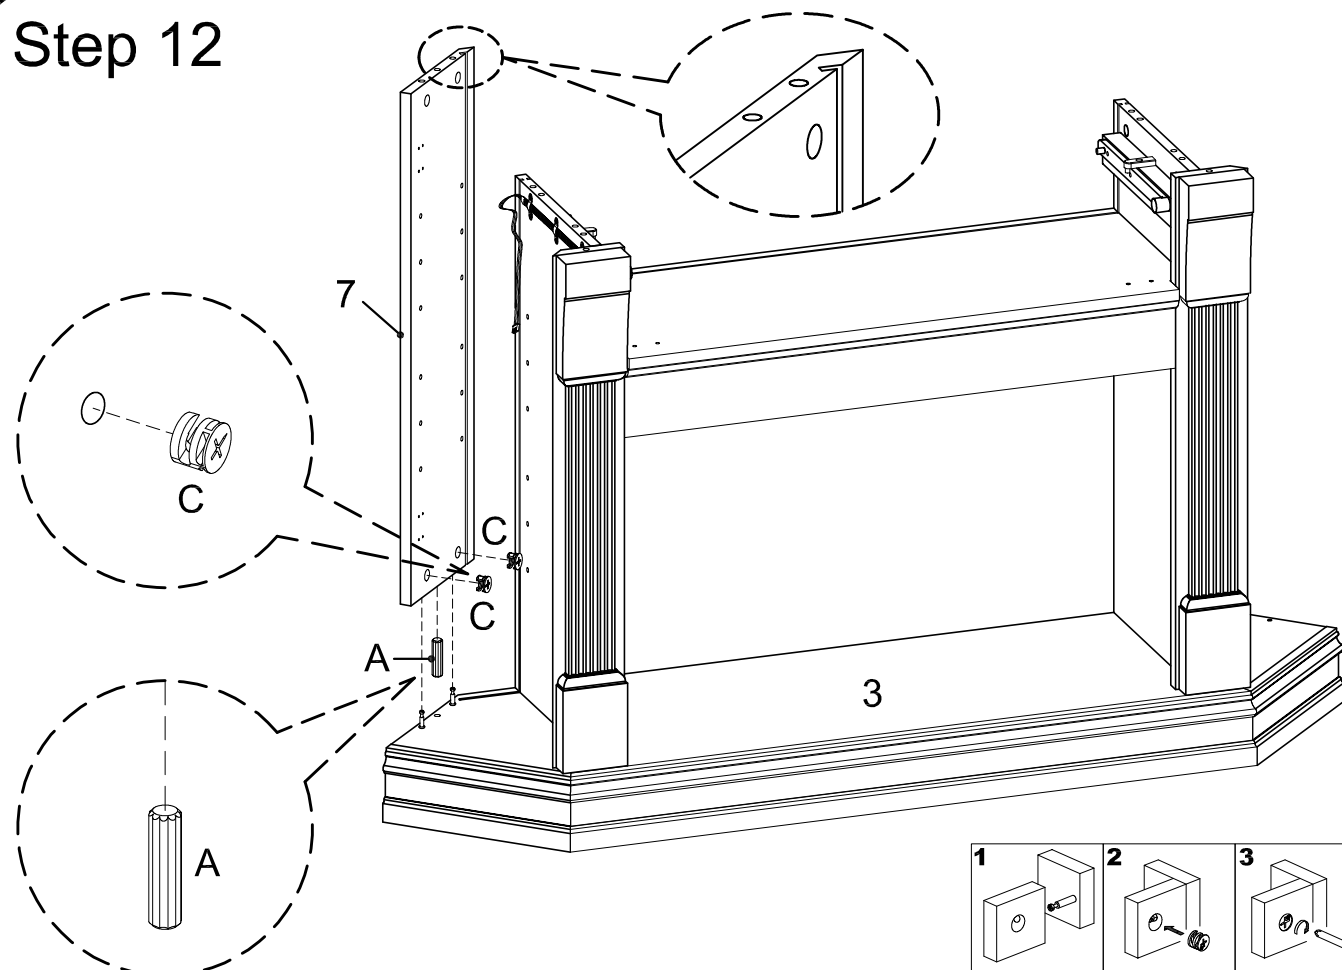


 Step 13

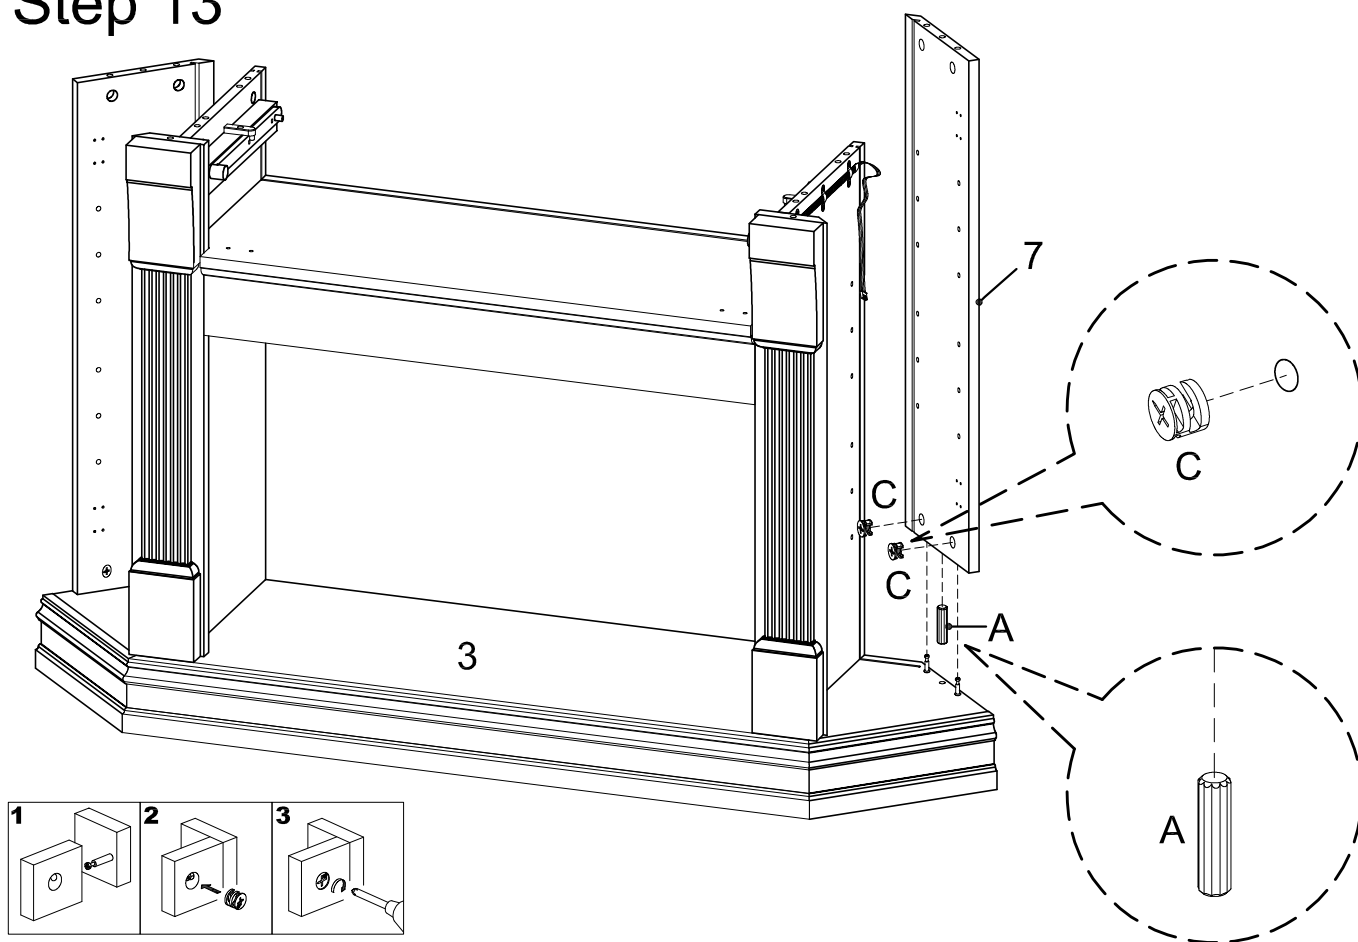


Step 14

 
Caution: Hole Orientation

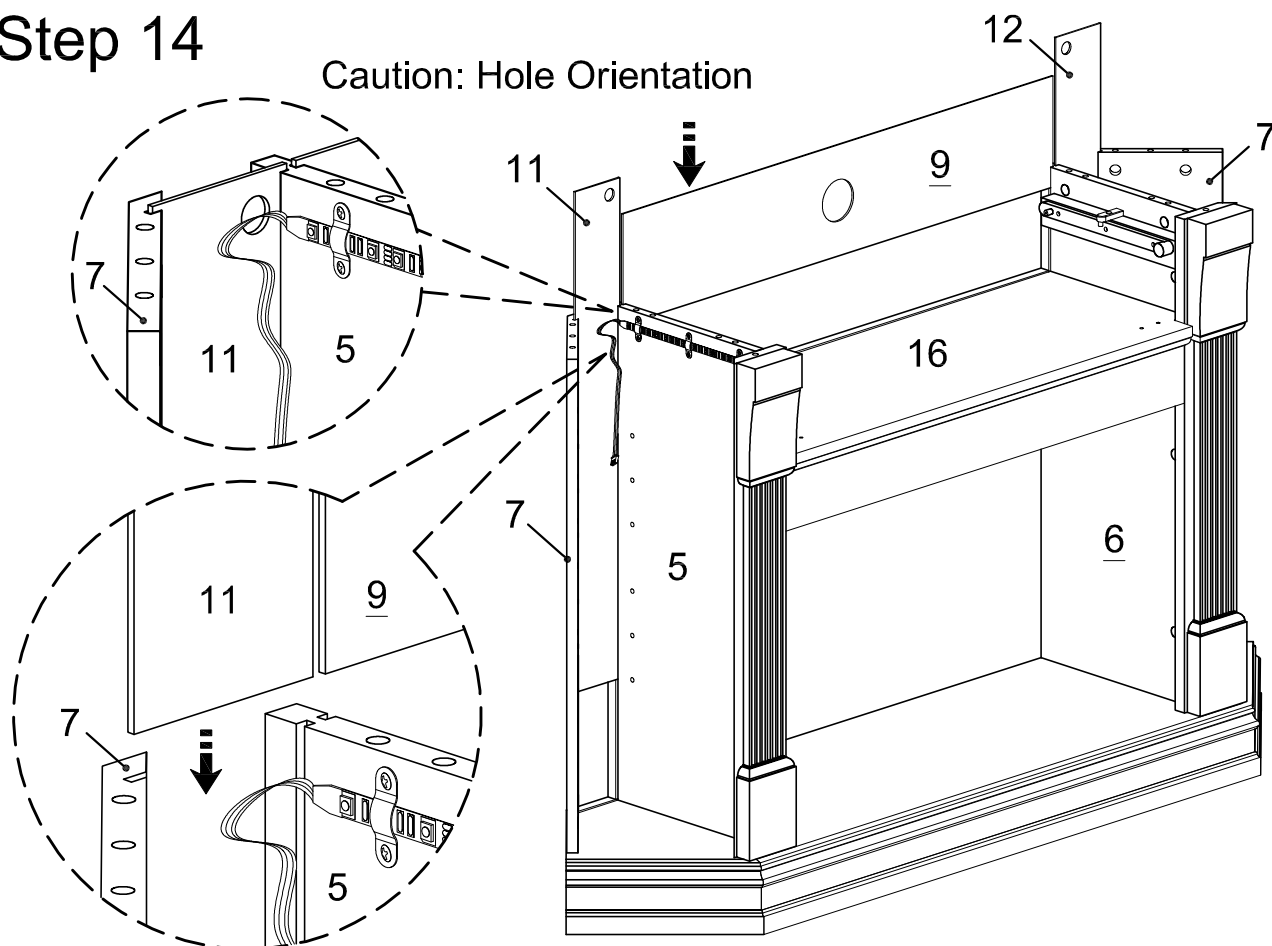

 
Step 15

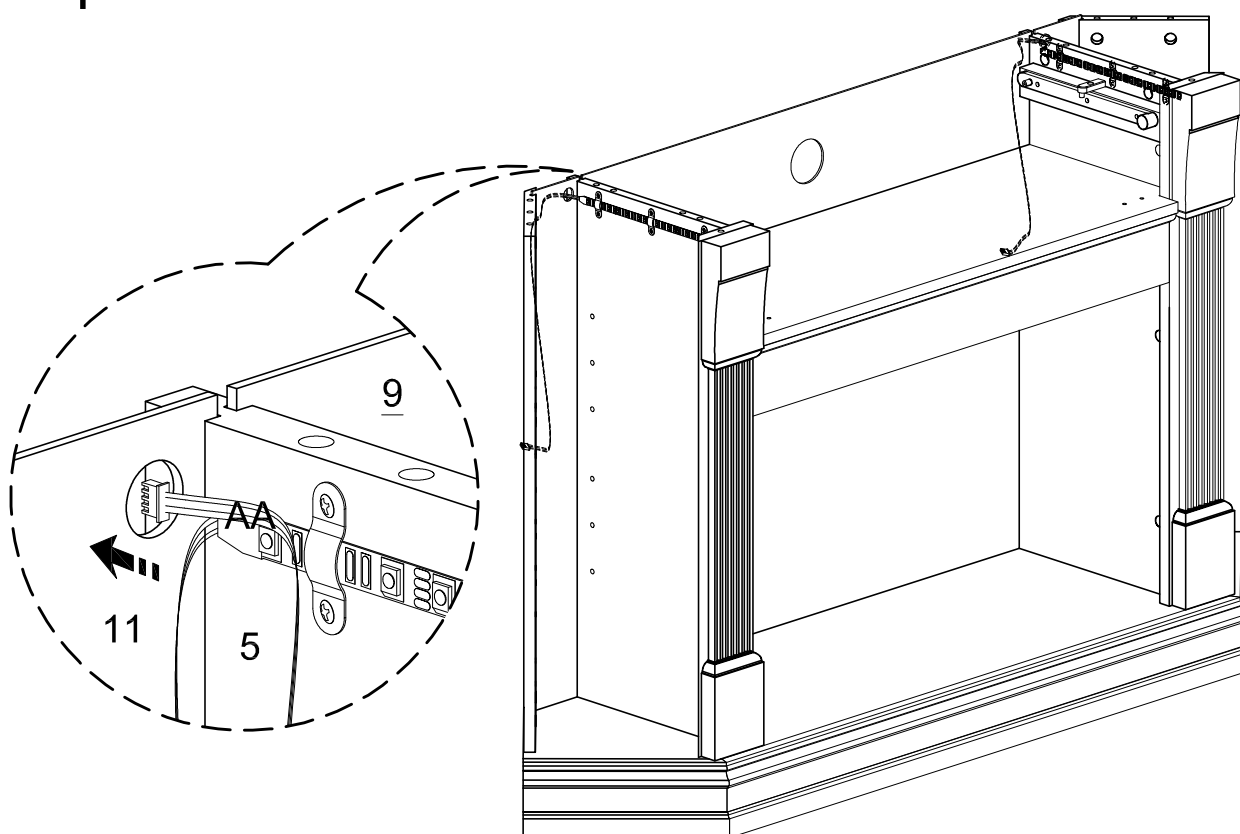

 
Step 16

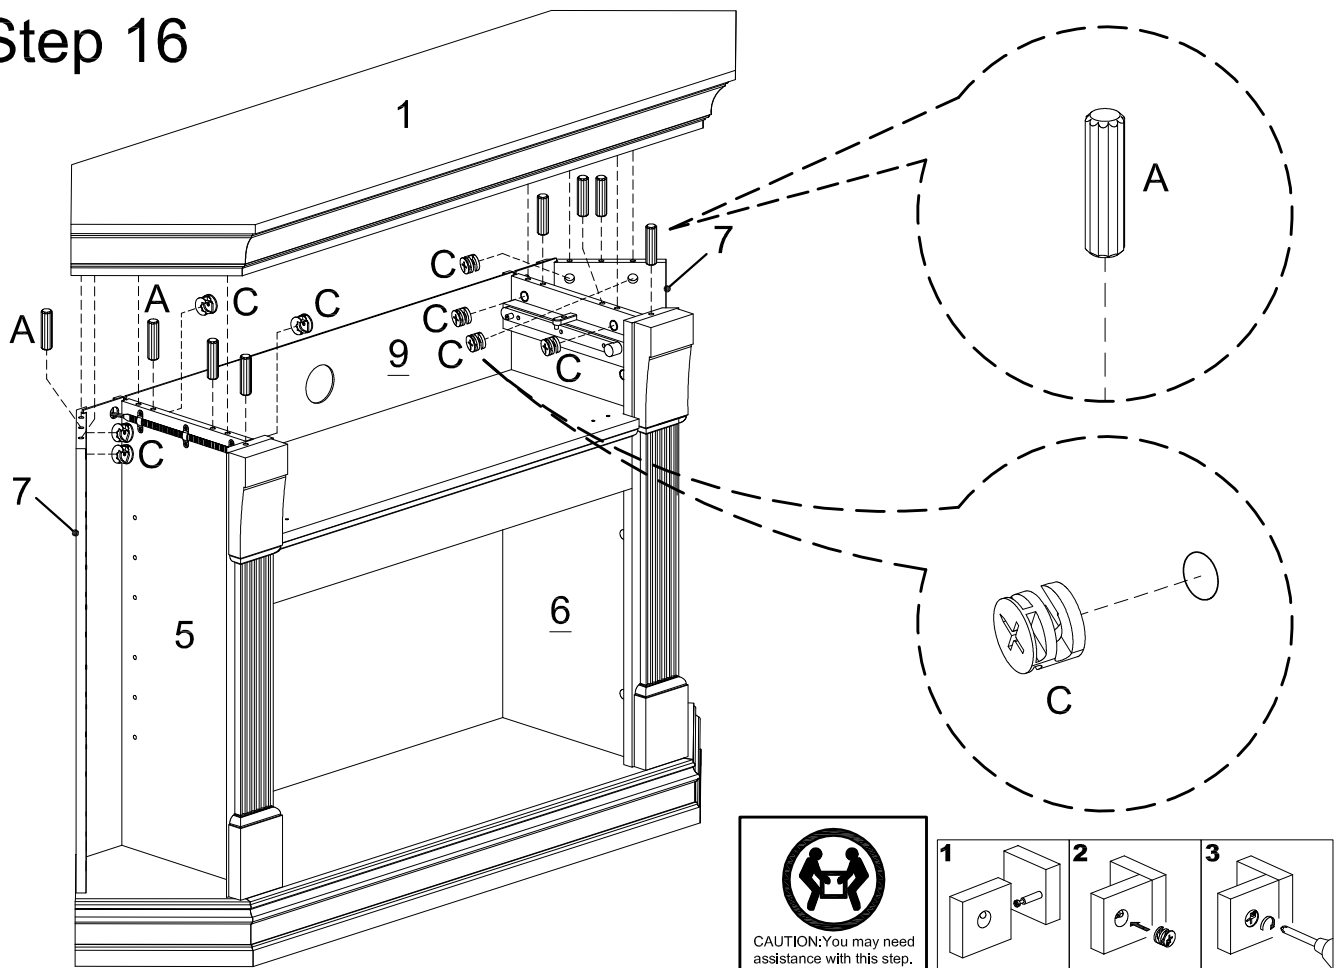

 
Step 17

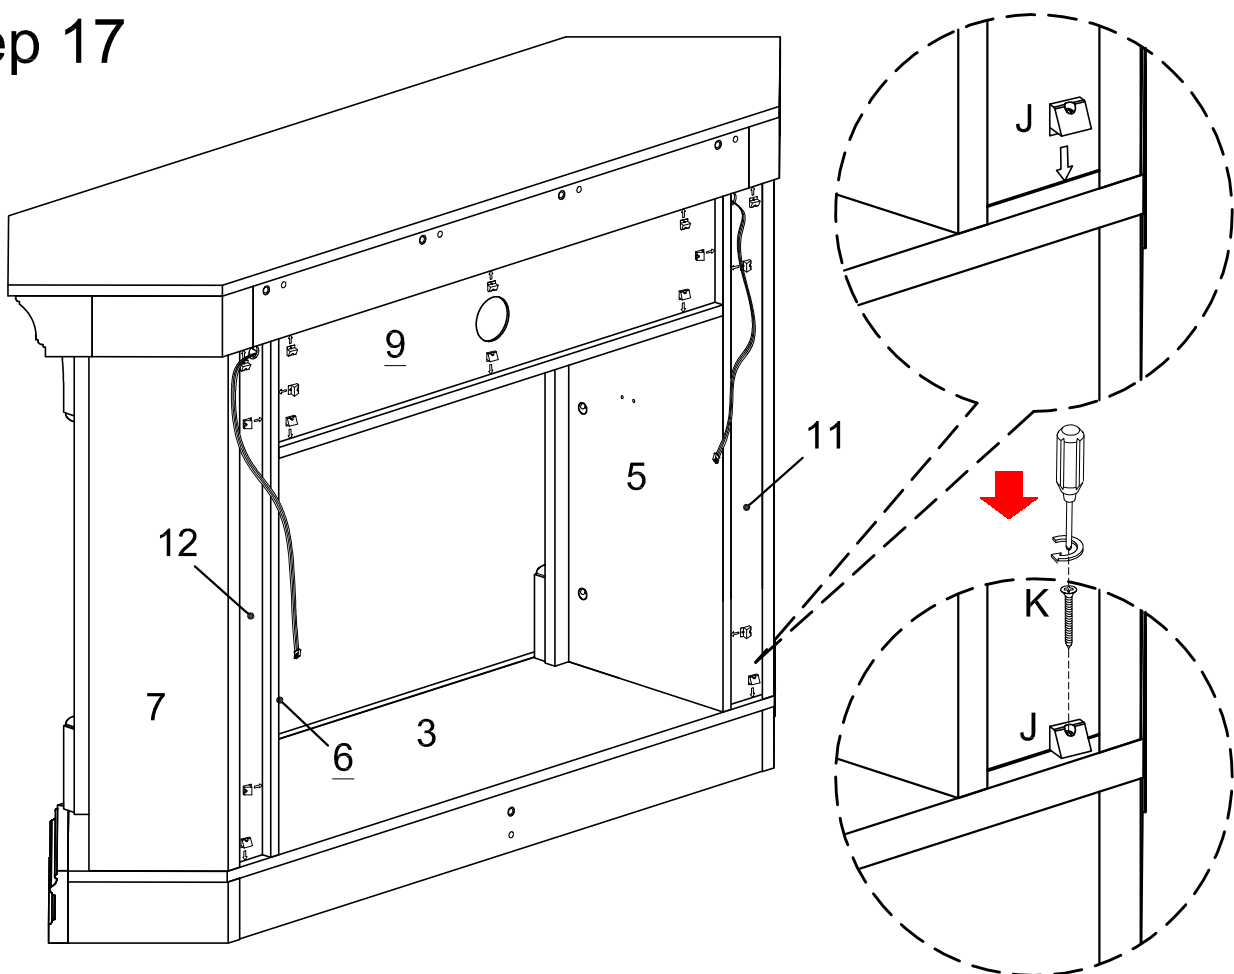

 
Step 18

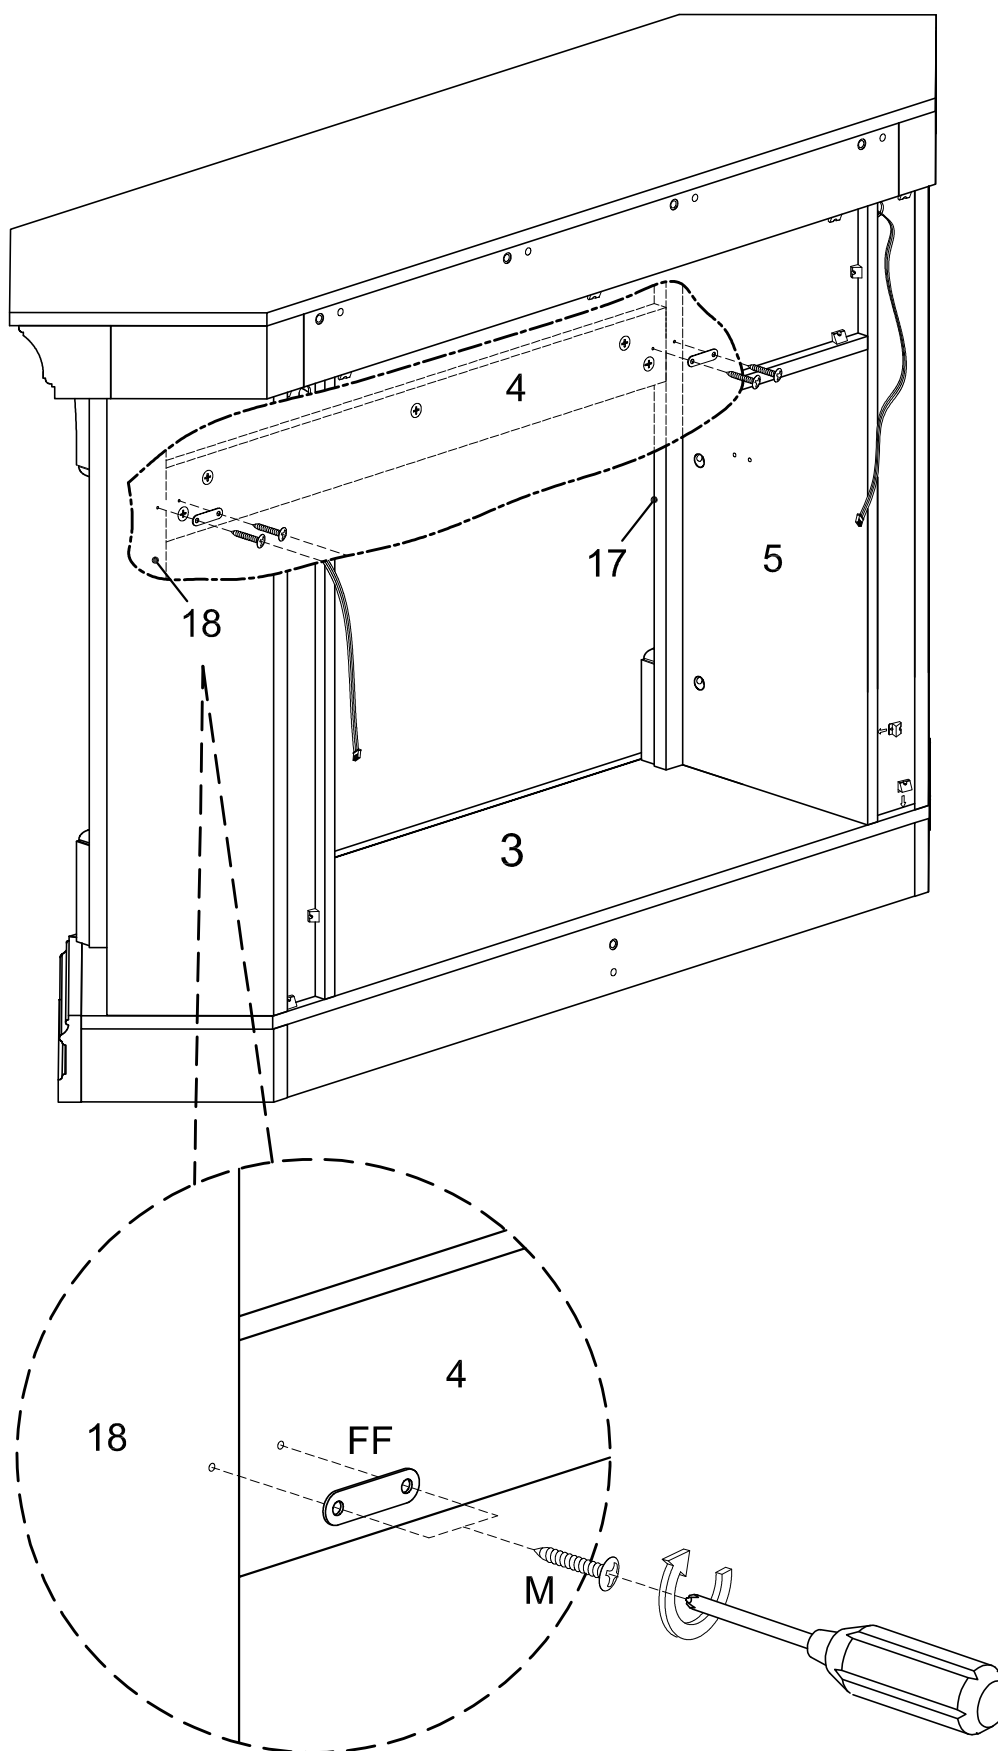

 
Step 19

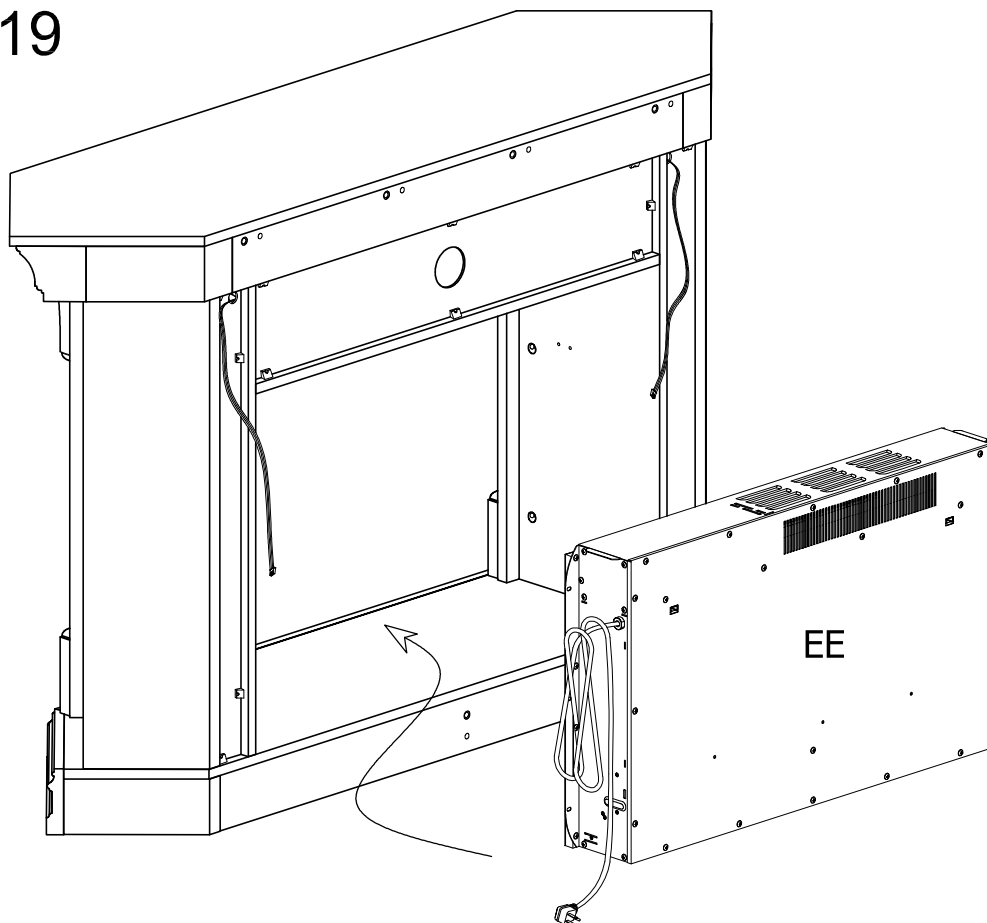

 
Step 20

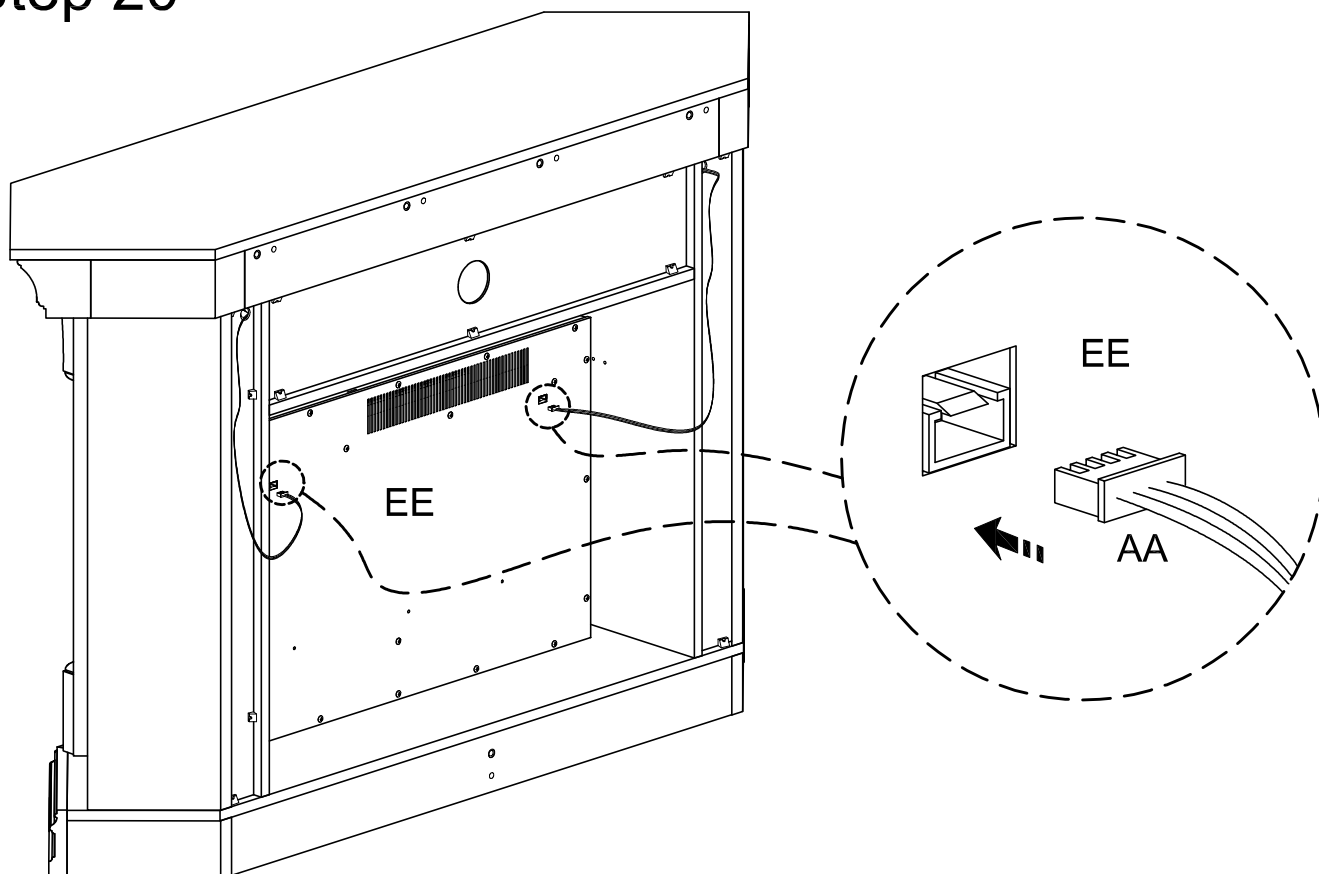

 
Step 21

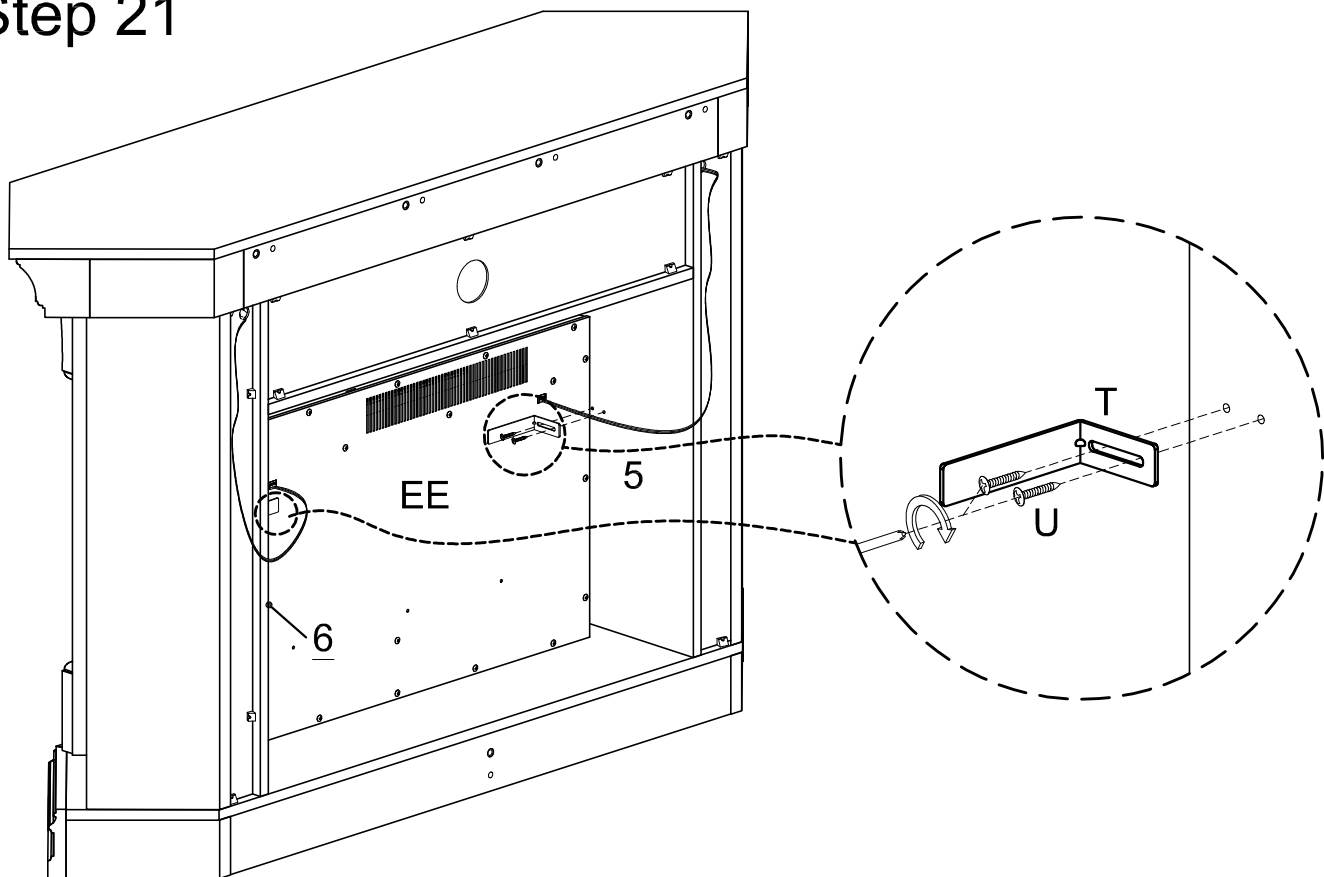

 
Step 22

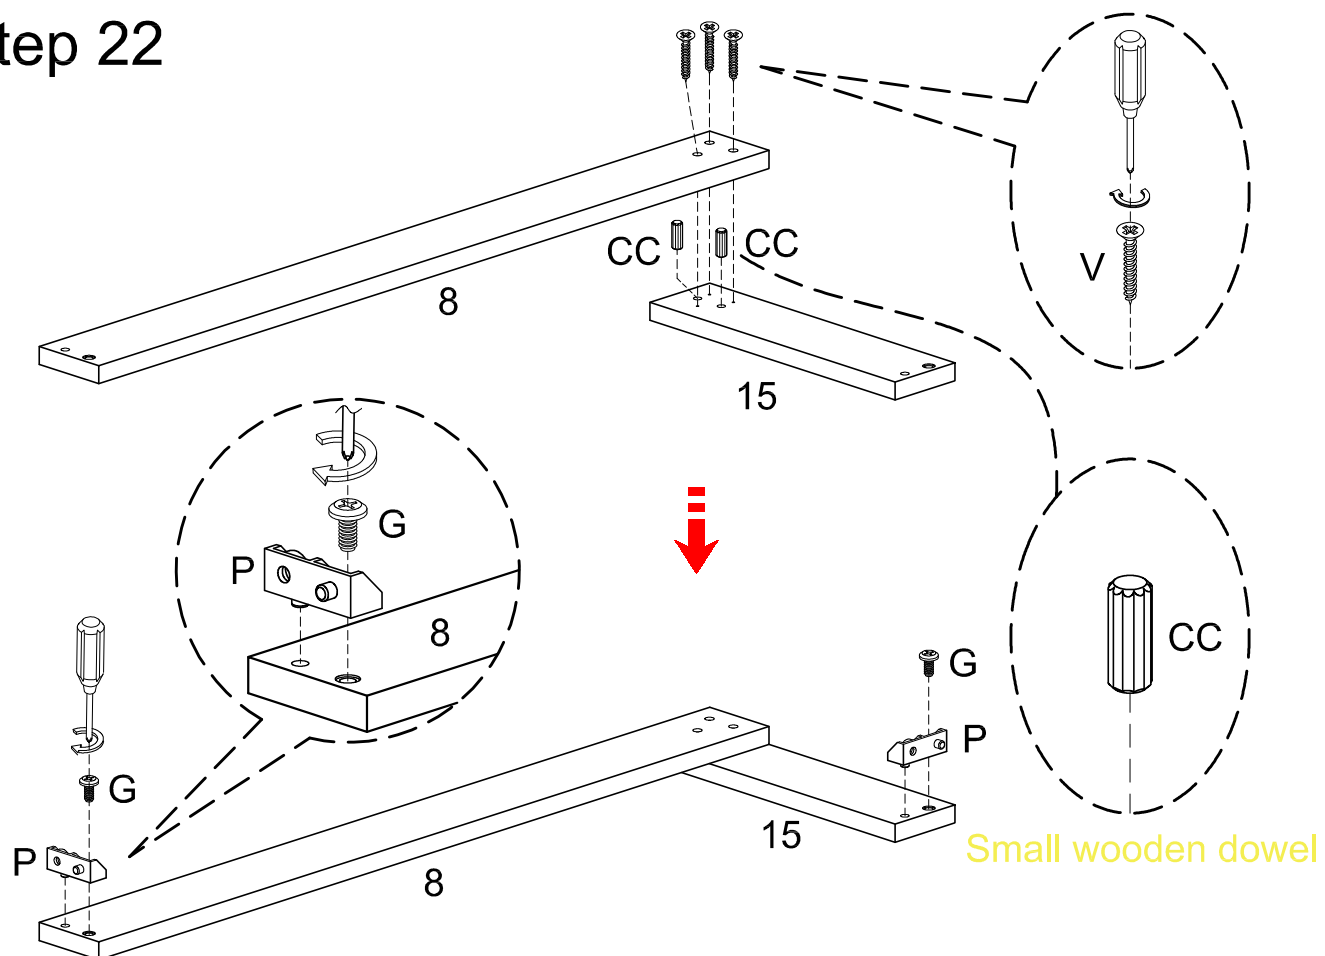



 
Step 23

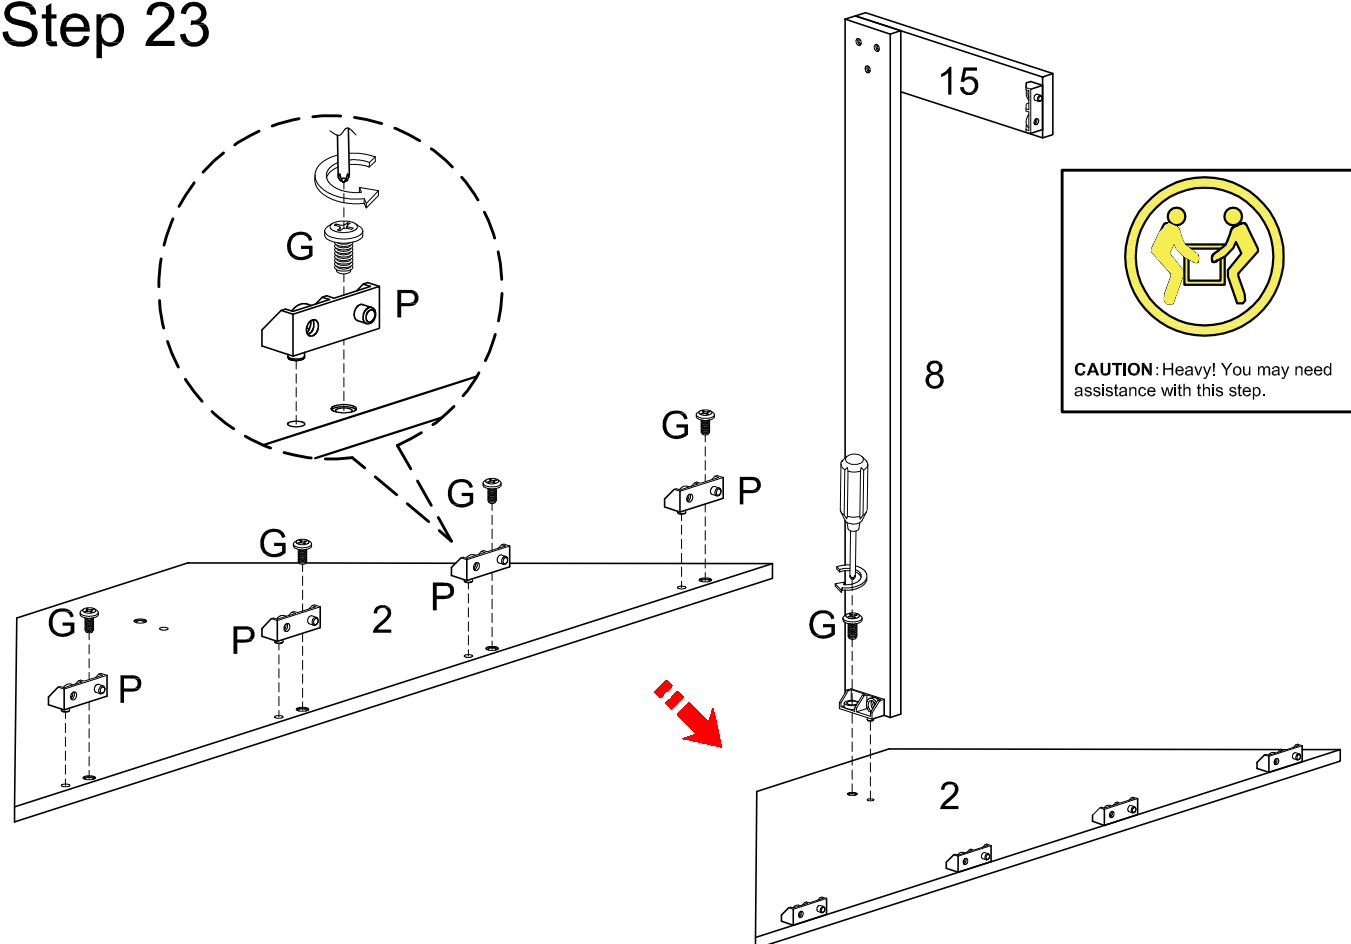


 
Step 24

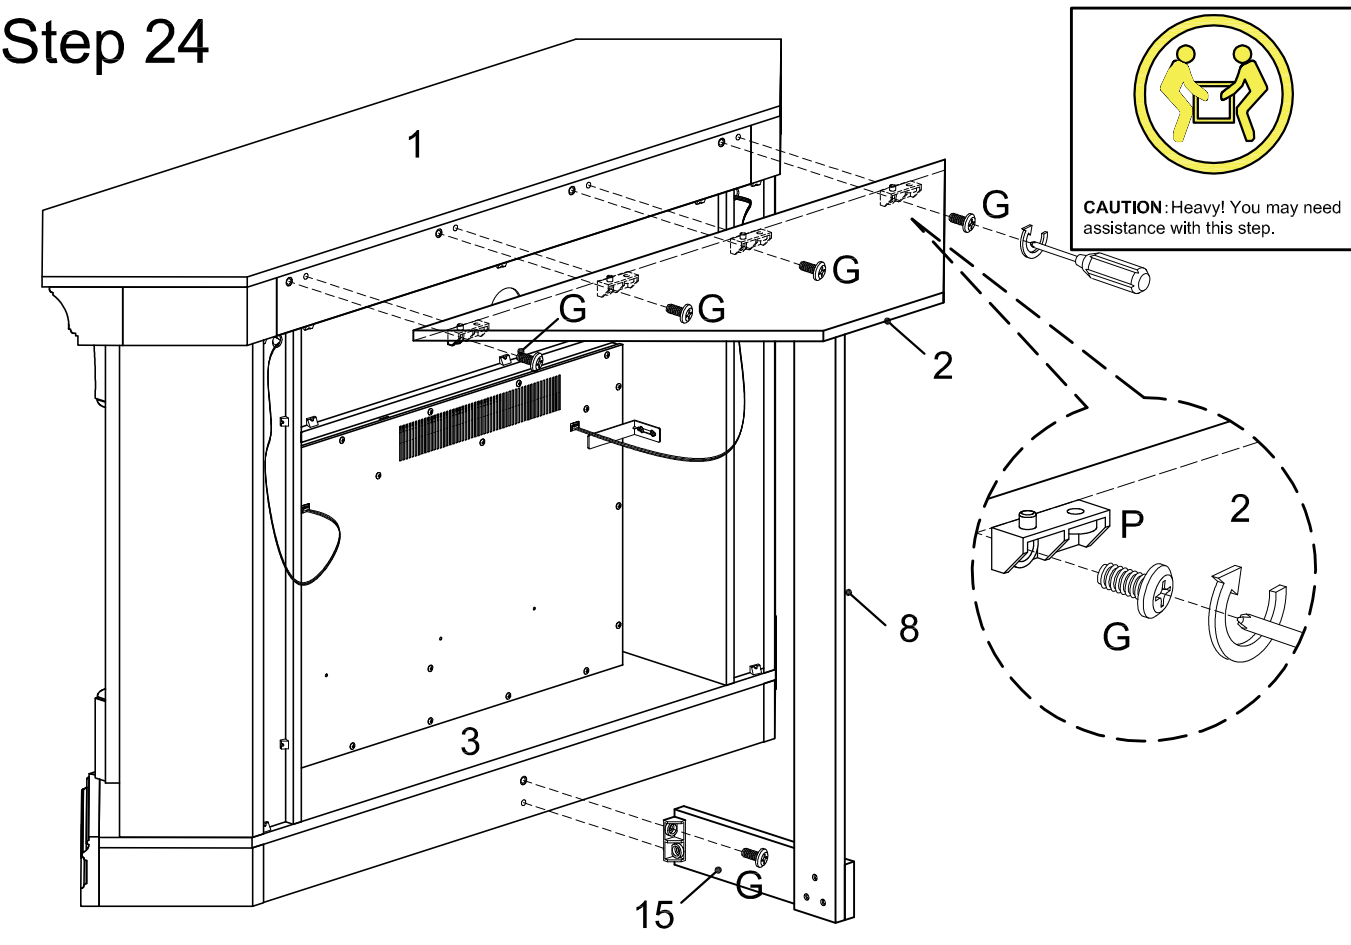

   
Step 25

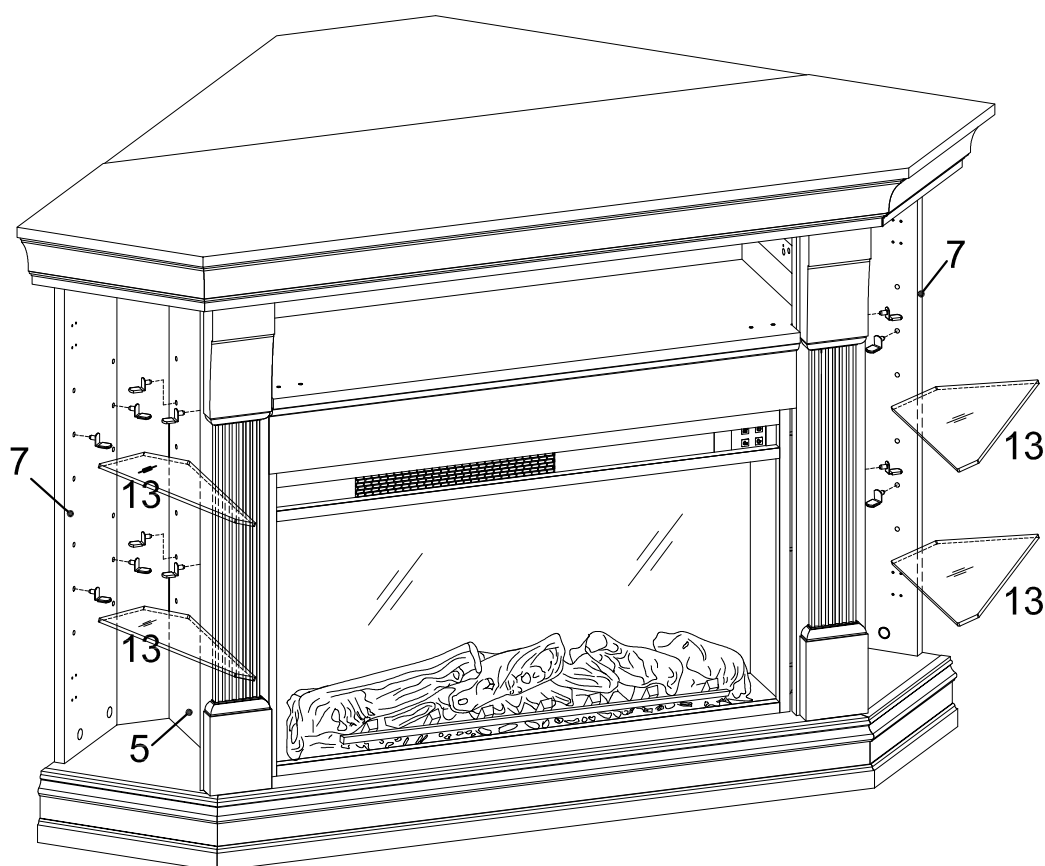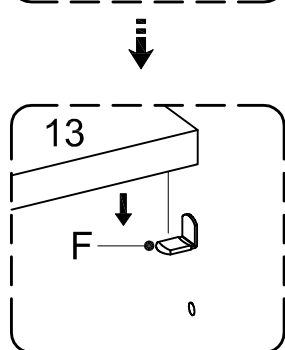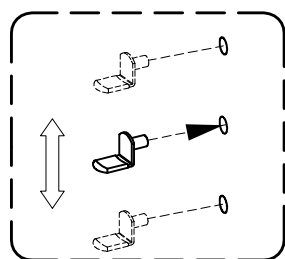

 
 
Step 26

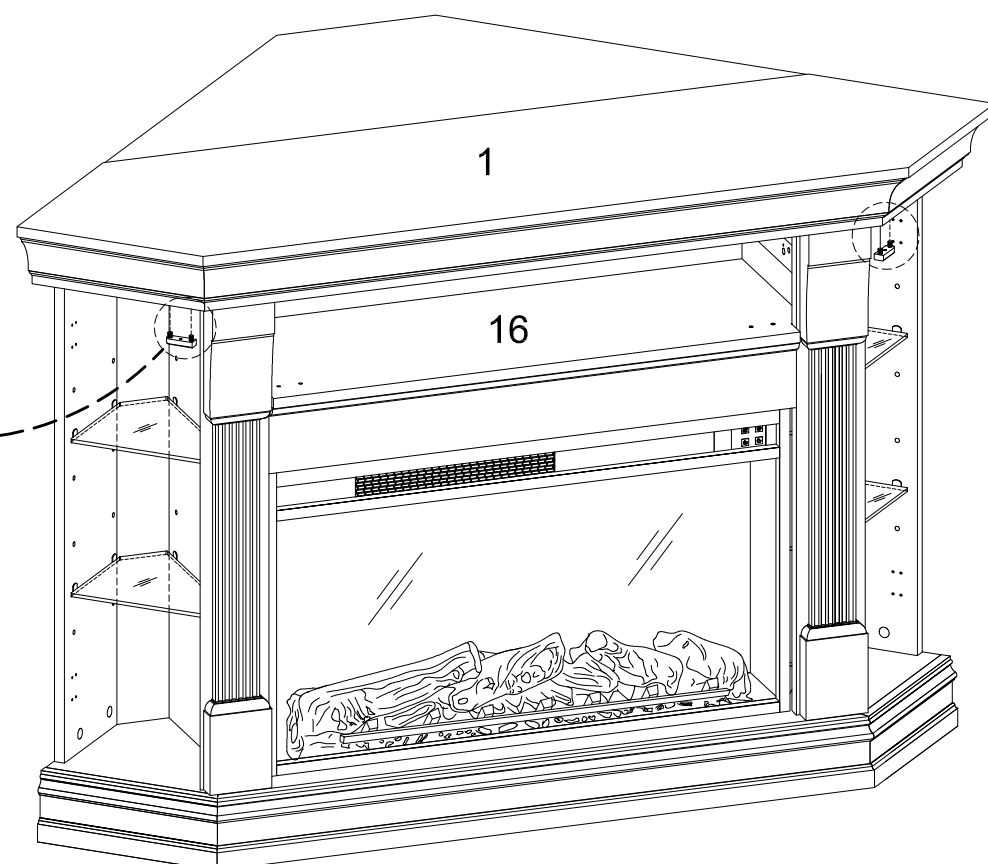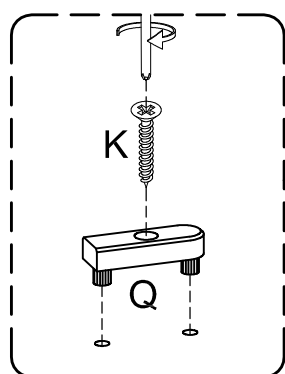

 
Step 27

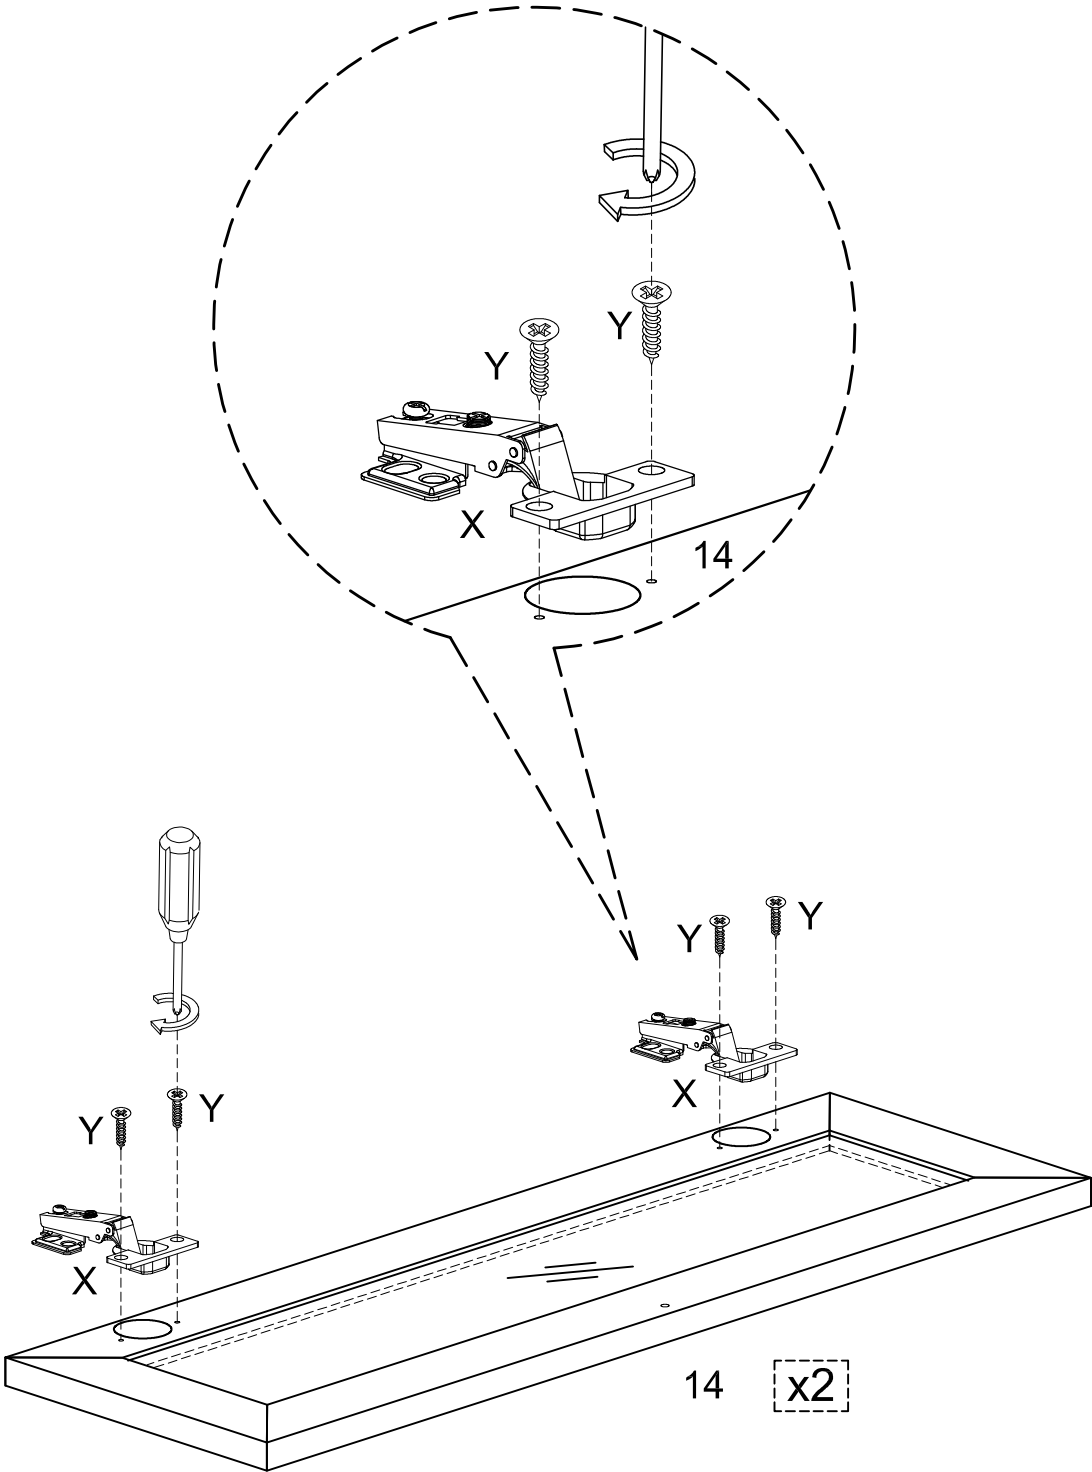

  
Step 28

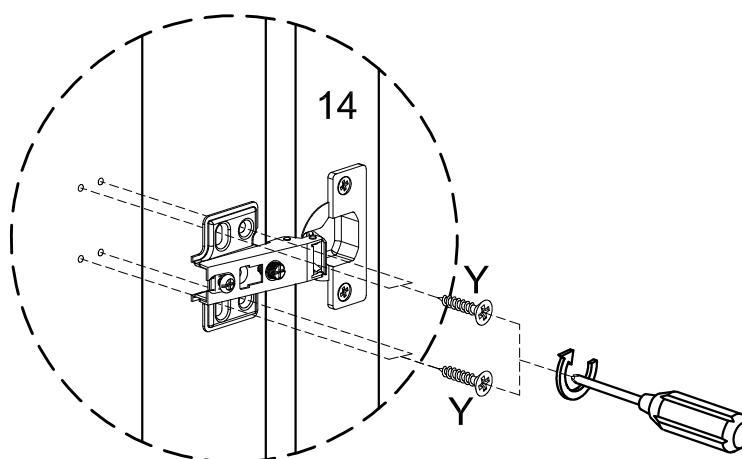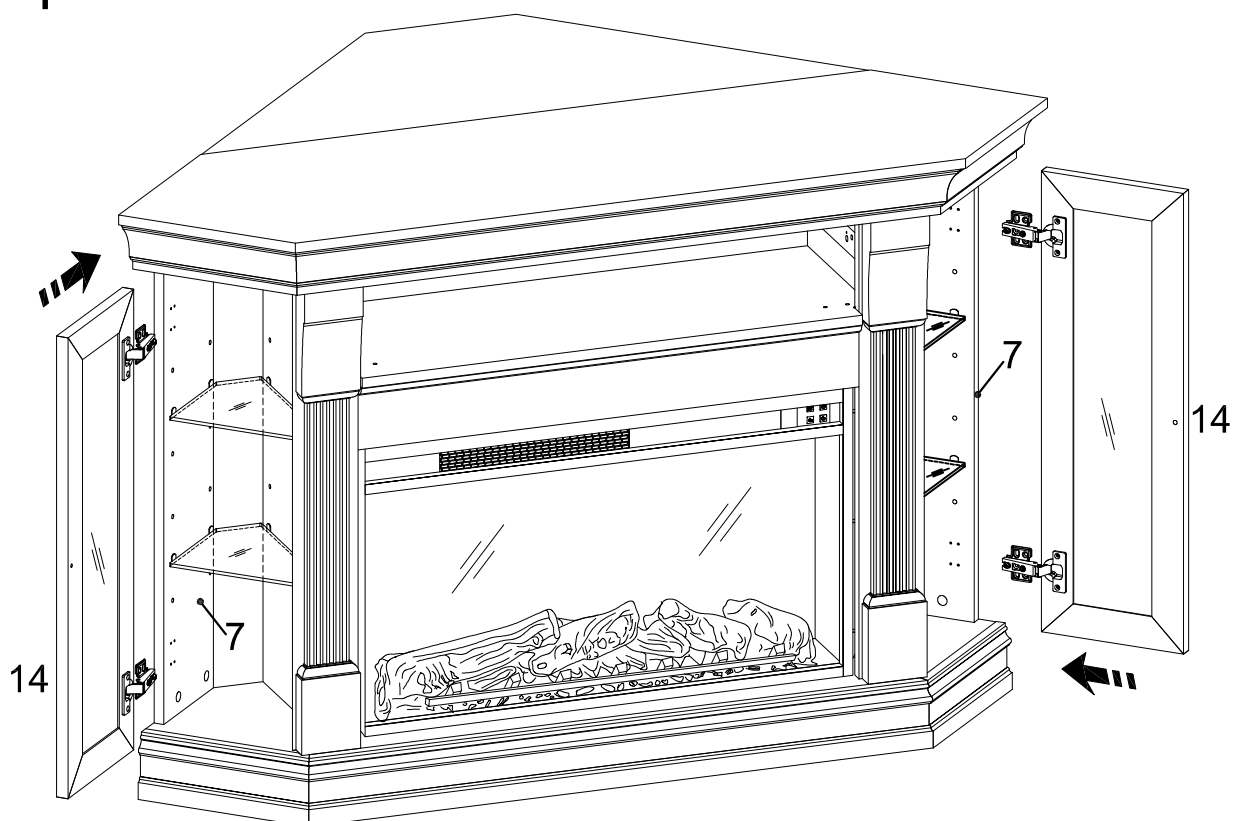

 
Concealed hinges are three-way adjustable.

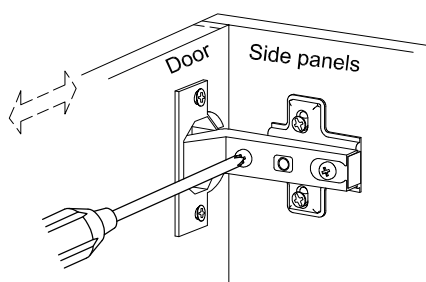

Horizontal
by screw adjustment

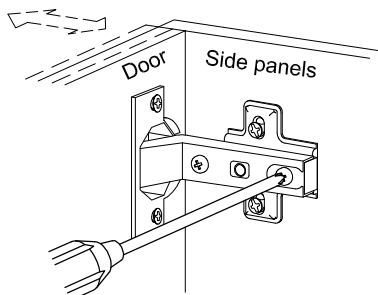 


 In-and-Out
by loosening the hinge-arm
mounting screw or via cam
adjustment

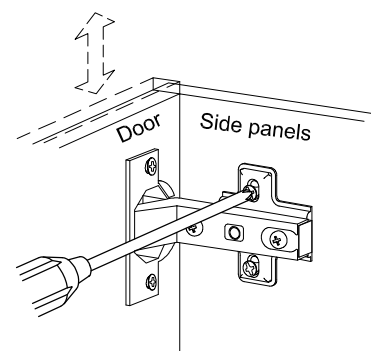


Vertical
Via slots in the mounting
plate or via cam adjustment

 
Step 29

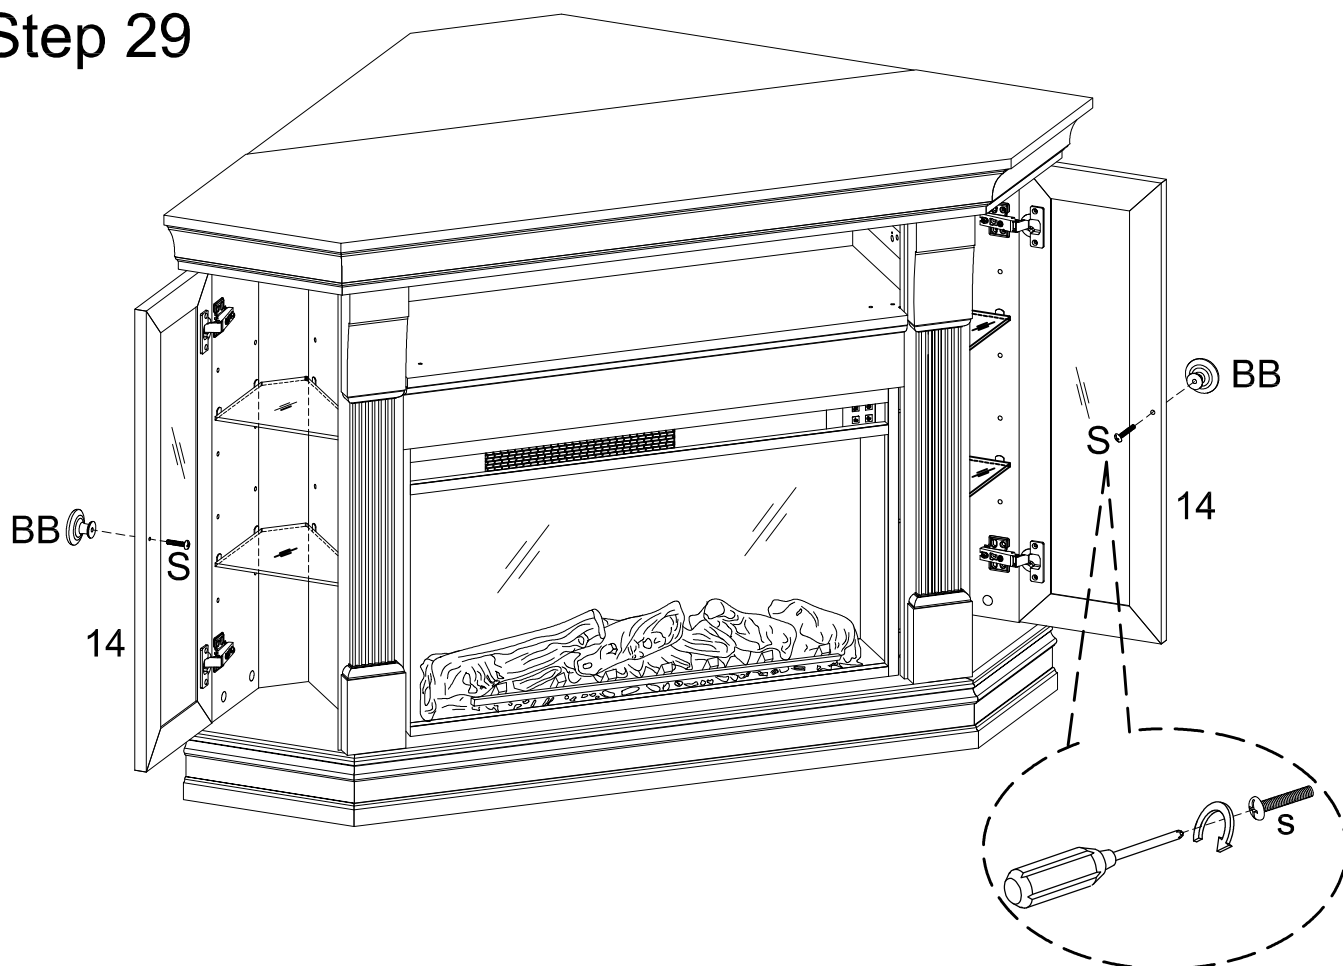

 Step 30


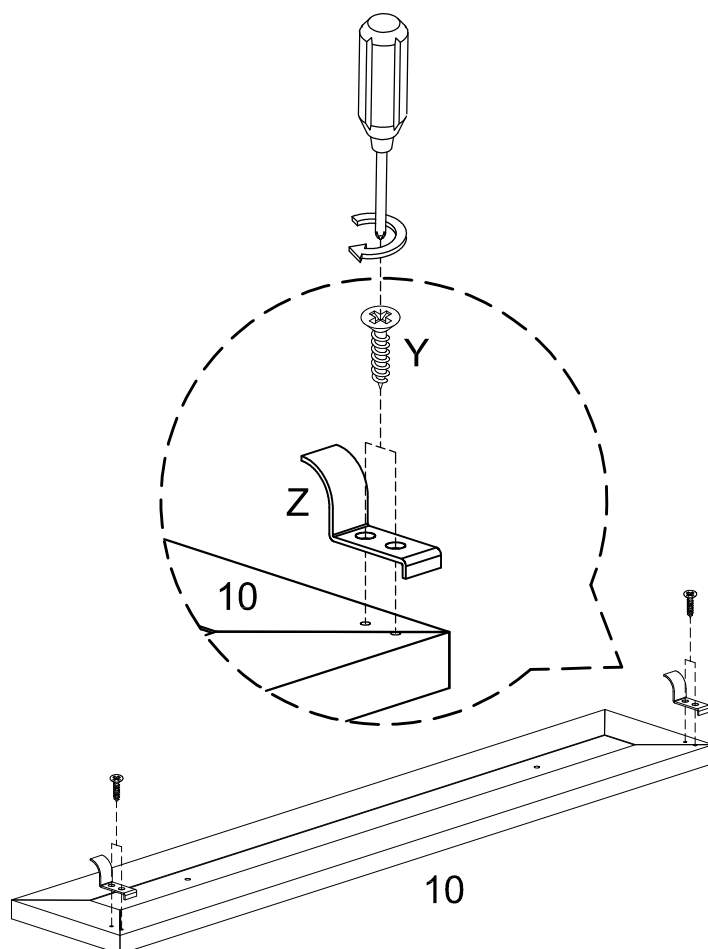


 Step 31

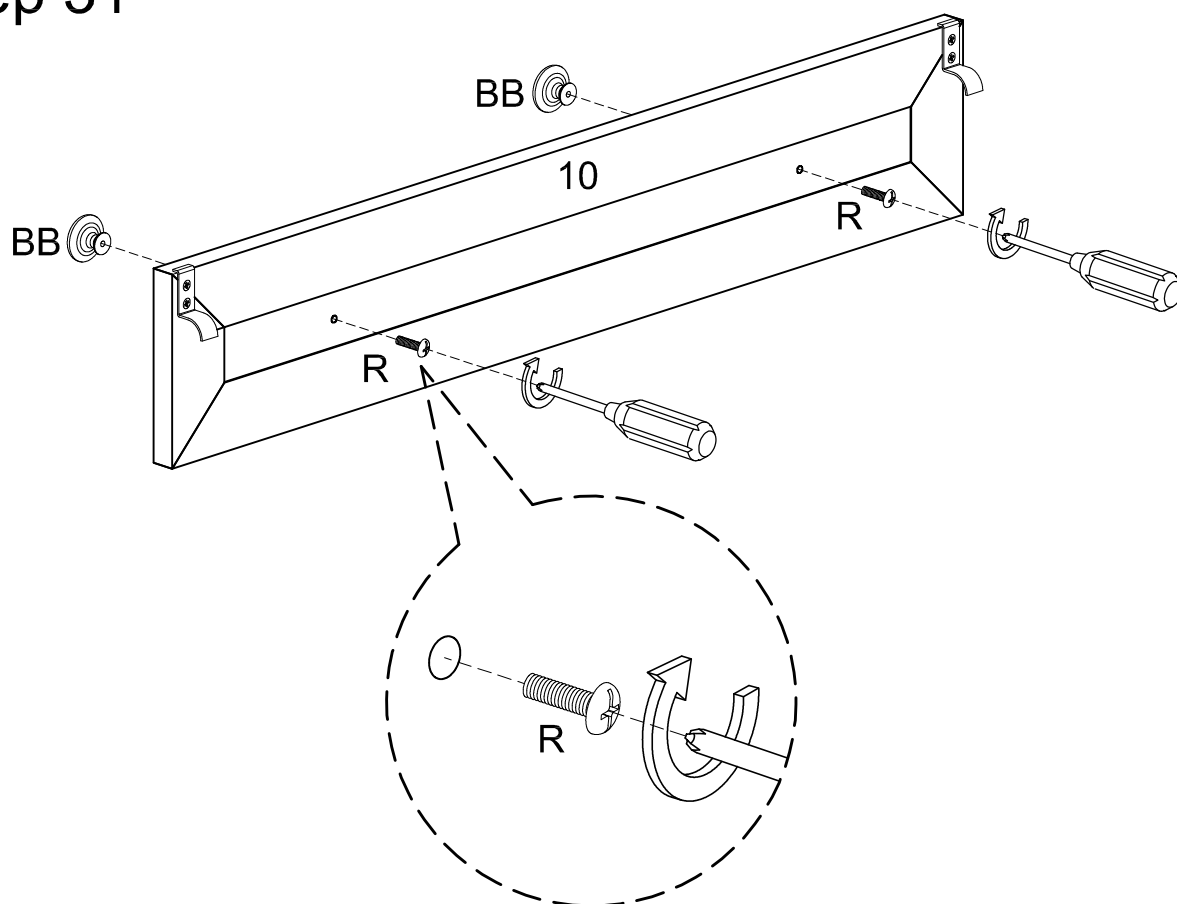



Step 32

  Tilt the door to let the hanger (Z) catch the front end of plastic tracking (E) as shown.

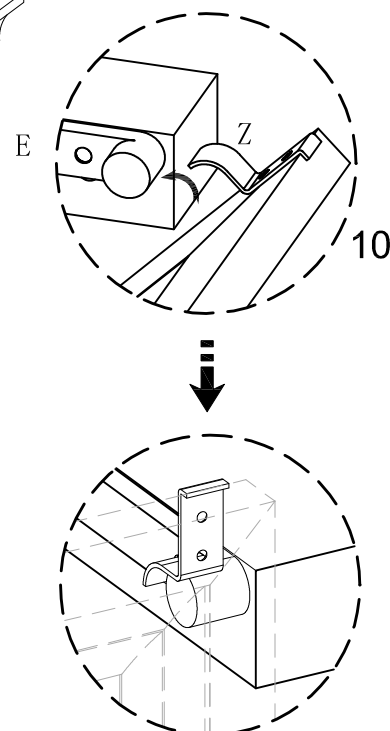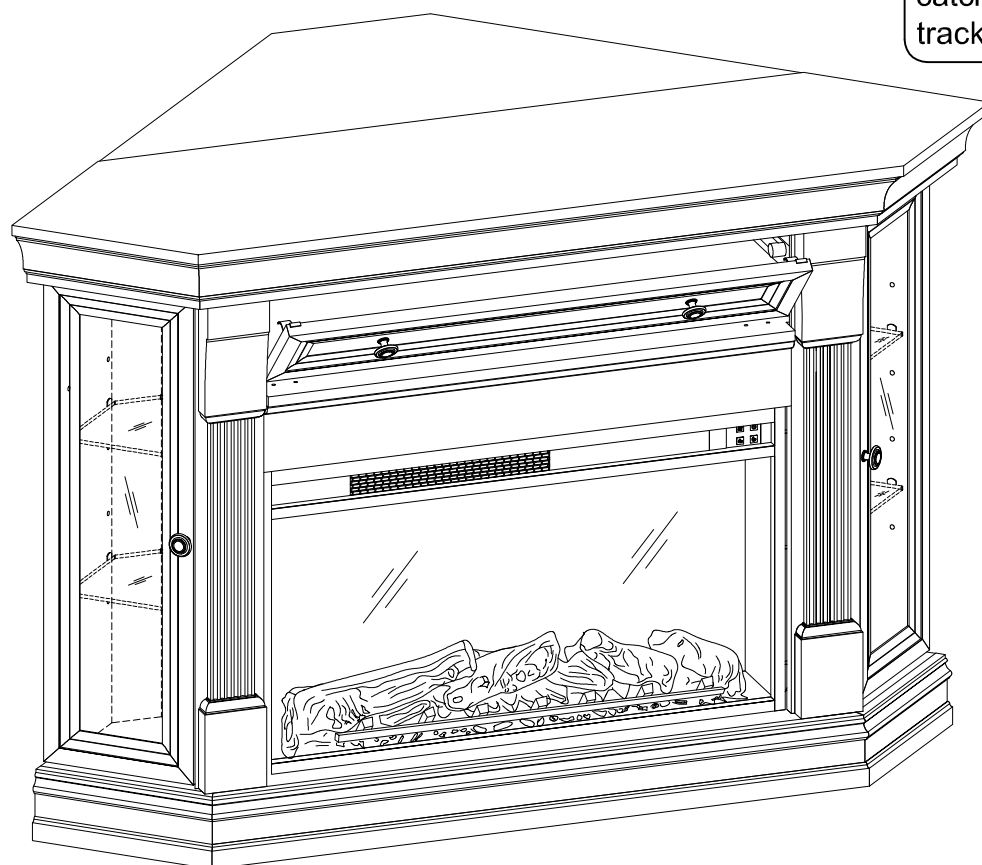


Step 33

  Push doors inside,
then insert door stopper

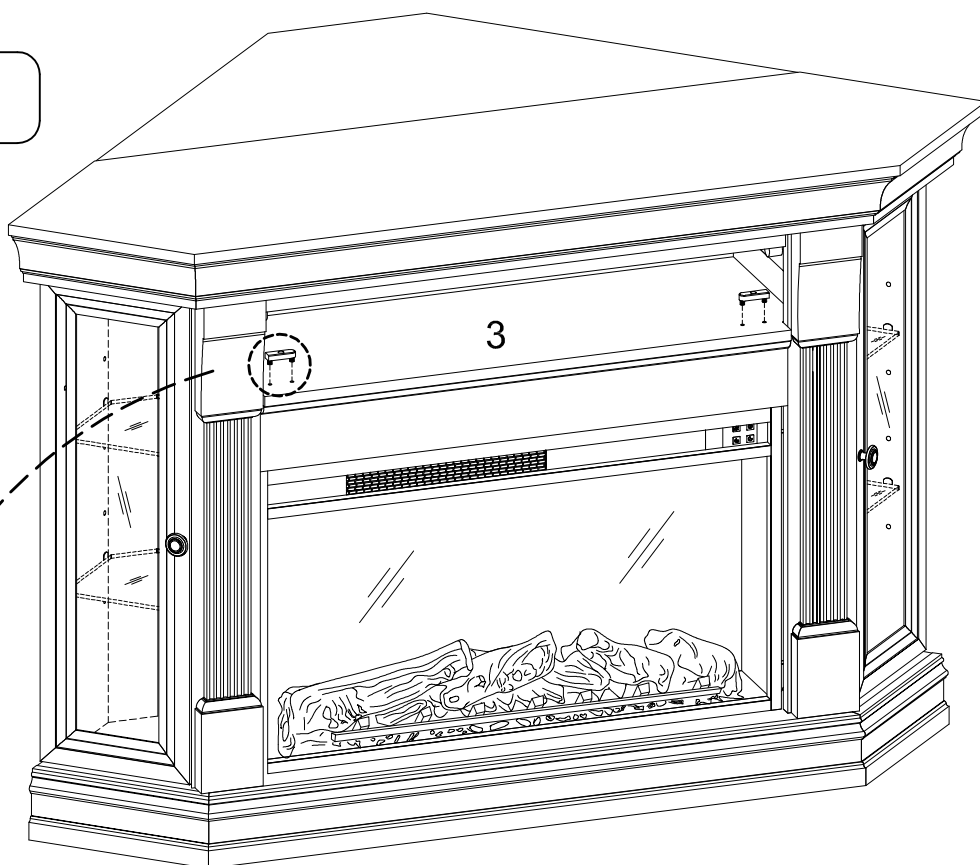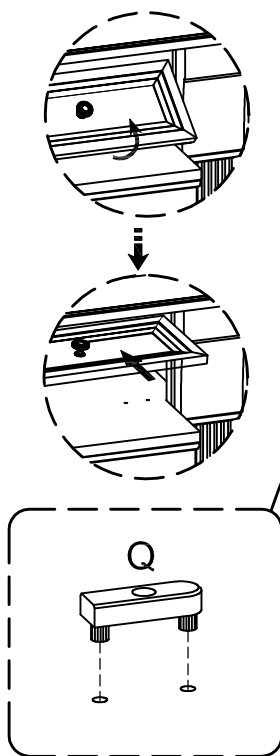

 
Step 34

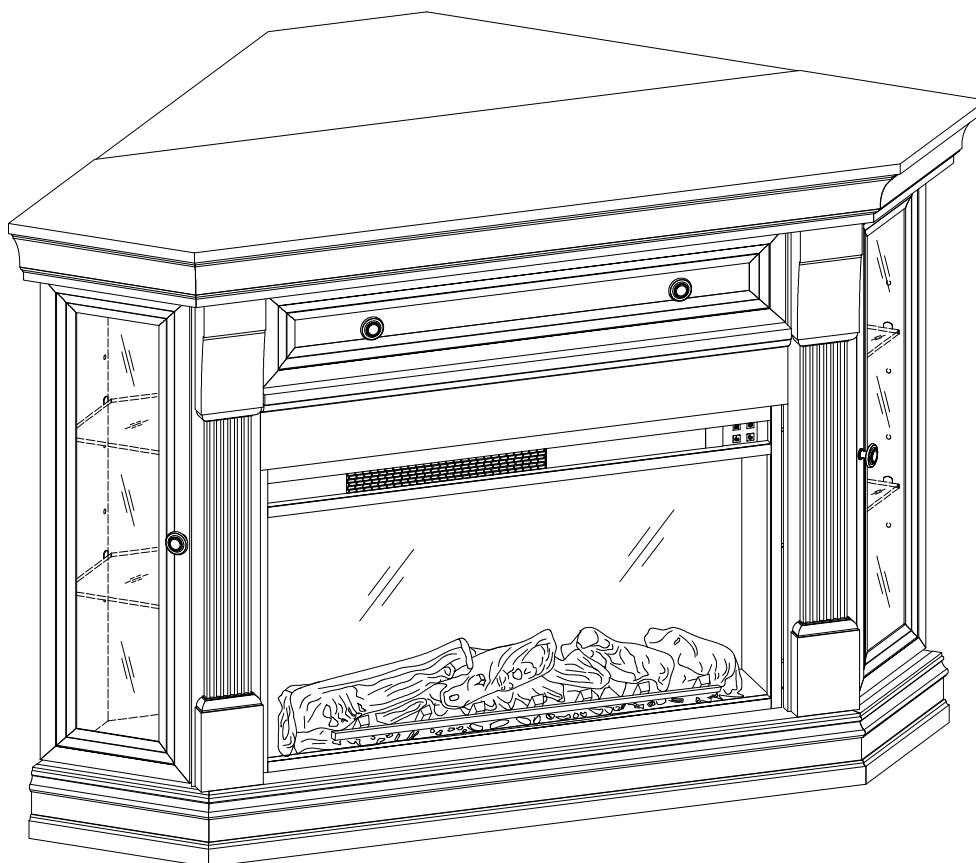

Step 35

WARNING

 Serious or fatal injuries can occur from furniture tipping over. To prevent the furniture from tipping over we recommend that it is permanently fixed to the wall. Wall anchor and hardware are included with this product. Please make sure hardware is suitable for your walls before installing, as different wall materials may require different types of anchors.

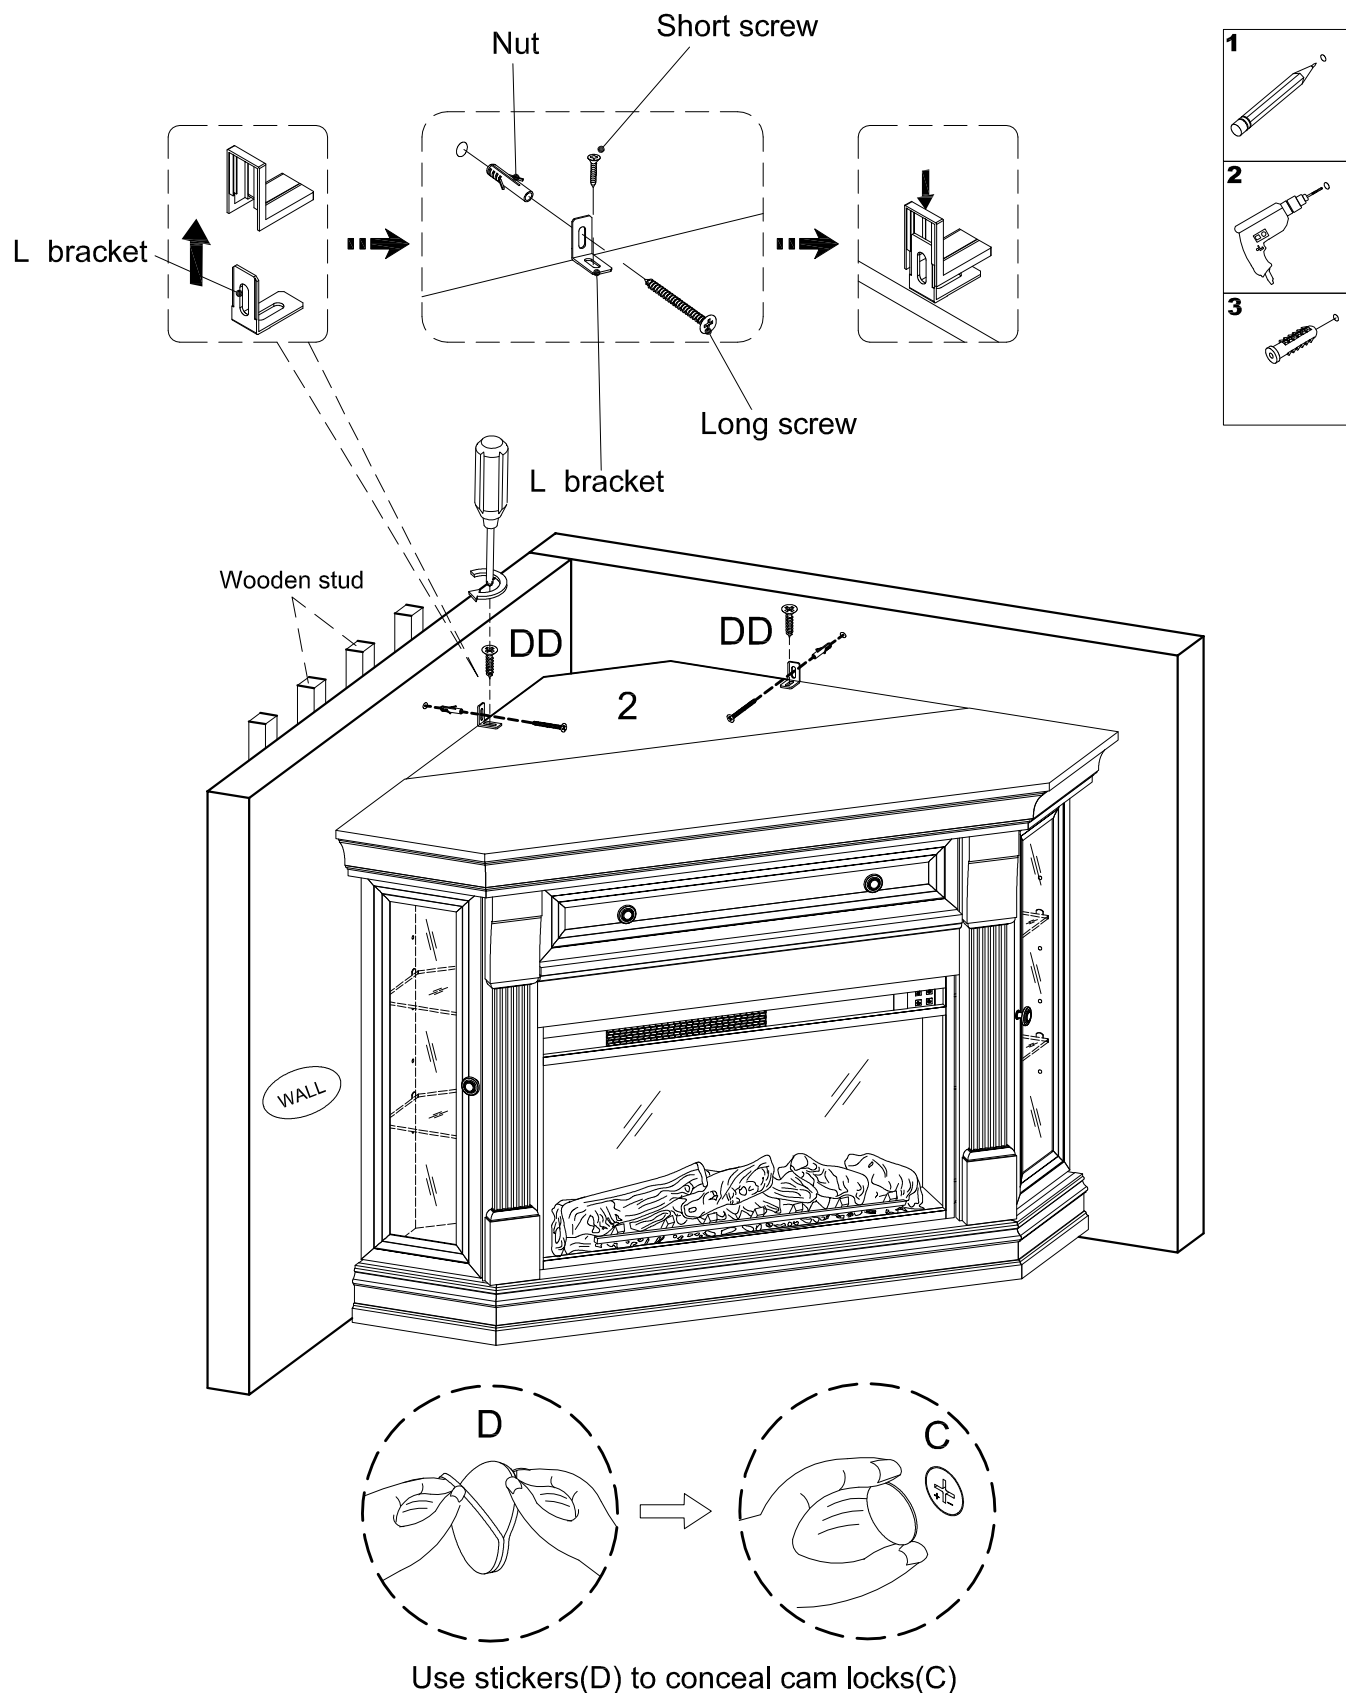

Final Assembly