









Installation Instructions





1. Parts Included



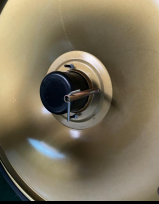

			
Base	Pump Cover	Pump	Step Pedal
			
Backrest	Footrest	Seat	Screws & Tool



2. Installation Instruction

Step 1. Install the pump to the base

1. Parts you will need for this step.

			
Base	Pump Cover	Pump	Step Pedal & Screws

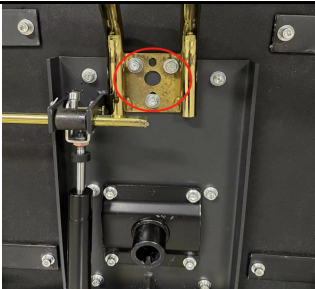
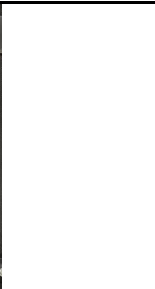

			
1-1. Align the 4 screw holes on the pump and the base, and insert the pump into the base.	1-2. Put the long end of the wrench through the sleeve.	1-3. Tighten the 4 nuts with the tool to secure the base and pump. (Make sure the screws are tightened to avoid wobbly of the chair)	1-4. Insert the step pedal into the pump, and tight the screws on both sides of the pump.

	
1-5. Put on the pump cover to the pump.	1-6. Align the cover with the screw hole of the pump, use the "cross" end of the wrench to tighten the screws to secure the cover.


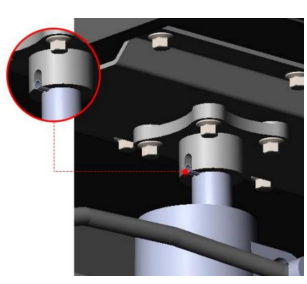

Step 2. Install the footrest to the seat

Parts you will need for this step.

		
Seat	Footrest	Tool

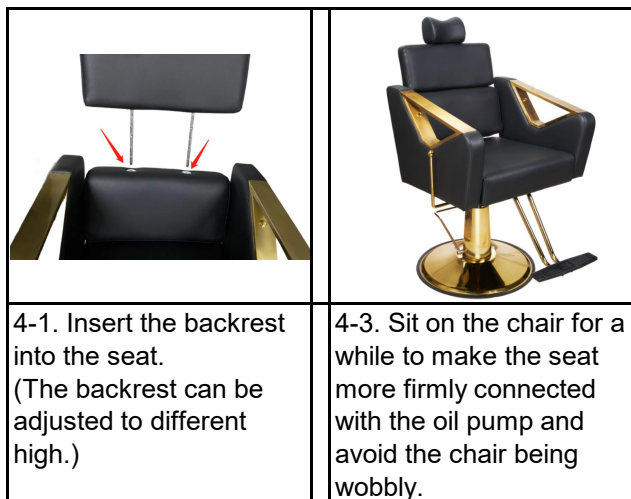
		
<p>2-1. Remove 3 pre-installed screws with the tool provided, keep them for the next step.</p>	<p>2-2. Align the footrest and the 3 screw holes on the seat, insert the screws and tighten.</p>	

Step 3. Install the seat to the pump

		
<p>3-1. Lift the seat to align with the pump and insert to the pump. (Two people is recommended to complete this step)</p>	<p>3-2. Adjust the direction of seat. (Please note the pinon the pump toward the gap of the pump joint).</p>	

Step 4. Install the backrest to the seat

Parts you will need for this step.



Please feel free to contact us if there are any problems with installation or items. We will reply to you within 24 hours.