 
 
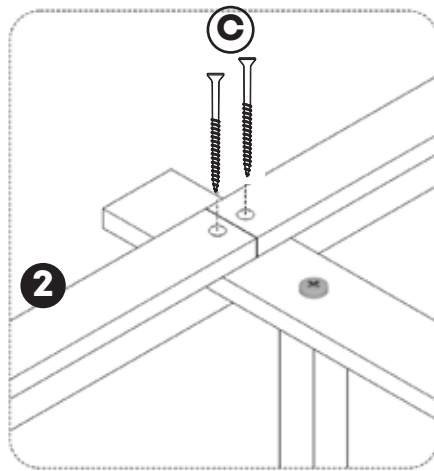 
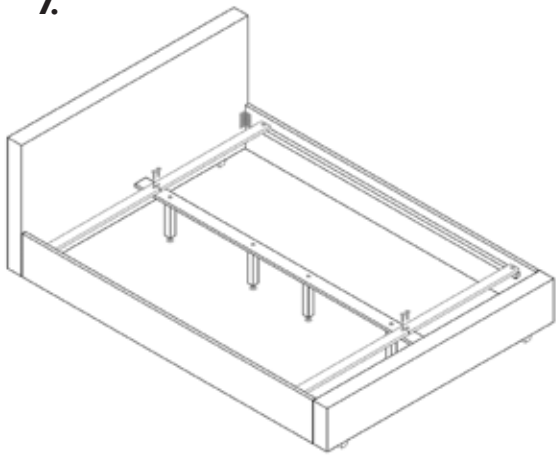 




7.

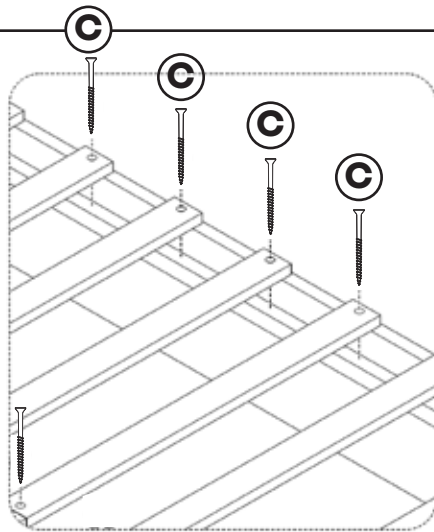

8.

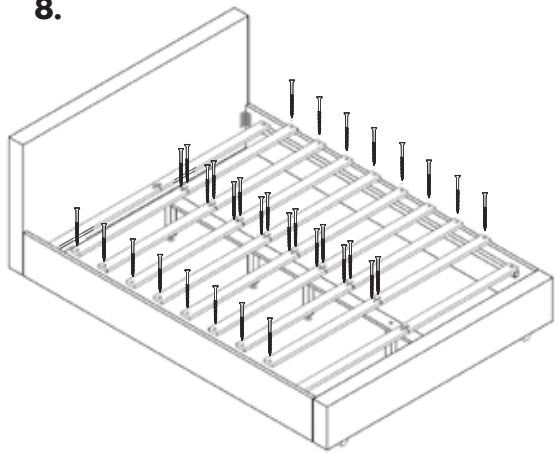

  9.


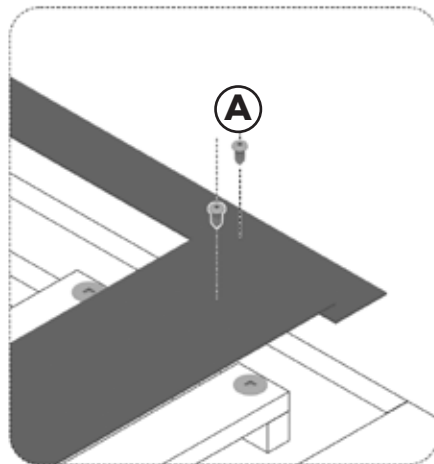
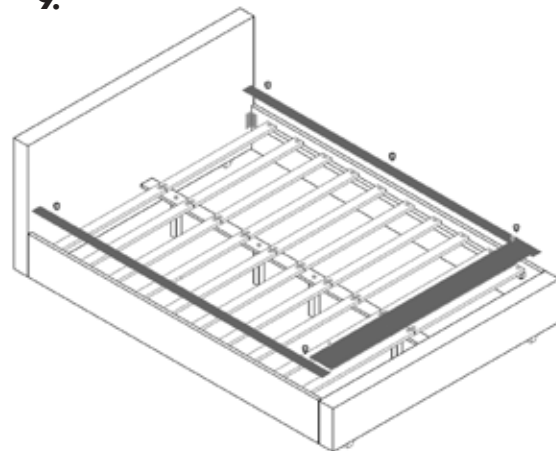


BEFORE ASSEMBLY



Check all parts listed are in box (if any parts are missing, or damaged, contact the store you purchased this item from immediately). Read ALL assembly instructions. Failure to assemble correctly may result in damage to the product.

		S	D	Q	K
①		1	1	1	1
②		13	26	26	13
③		0	1	1	2
④		2	2	2	2
⑥		0	4	4	8
⑦		2	2	2	2
Ⓐ	.5"	12	12	12	12
Ⓑ	.75"	8	8	8	8
Ⓒ	1.5"	26	52	52	52
Ⓓ	3"	0	4	4	8
Ⓔ		0	4	4	8
Ⓕ		2	2	2	2
Ⓖ		4	4	4	4
Ⓕ		0	4	4	8

  
 
1.

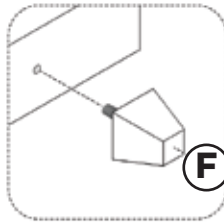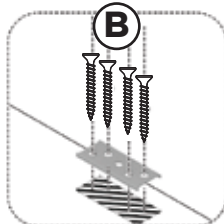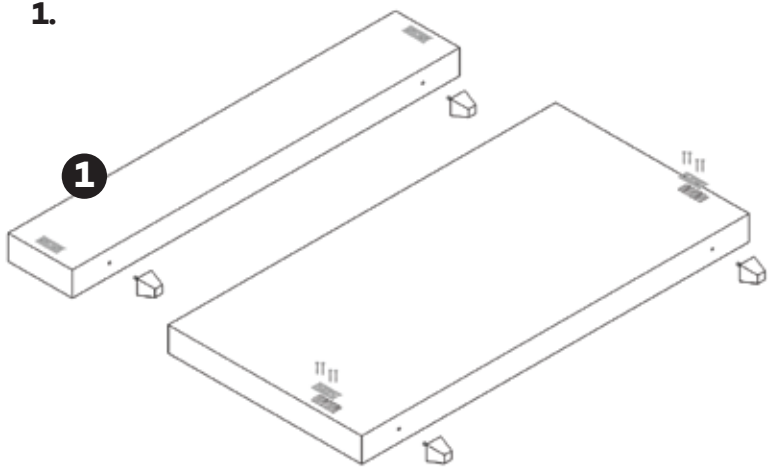

 
 
4.

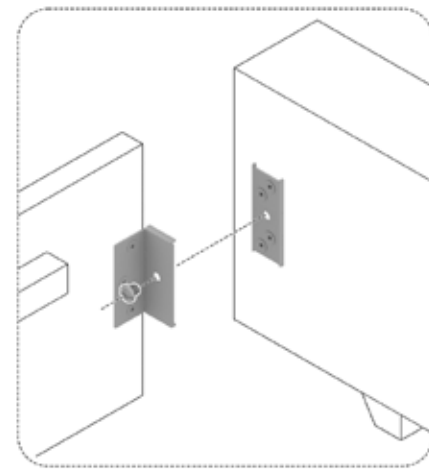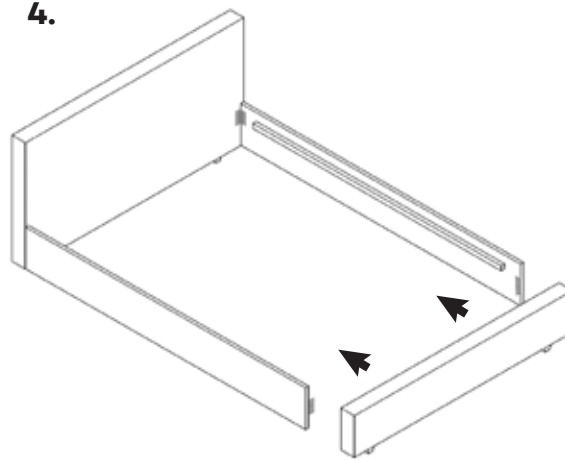

  
2.

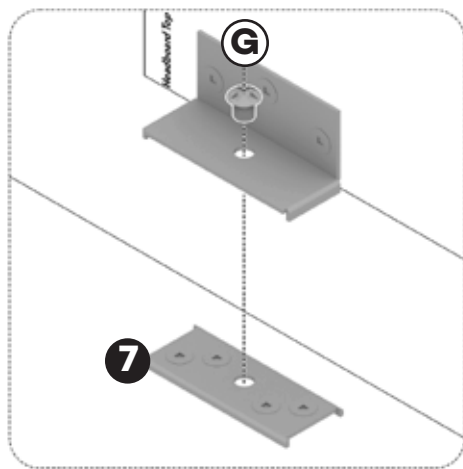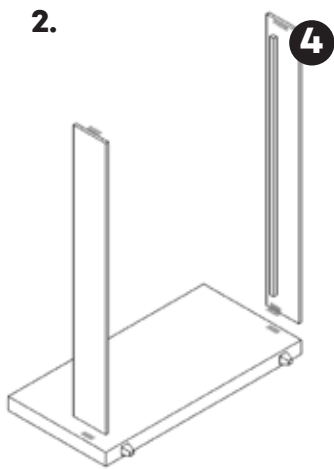

  5.

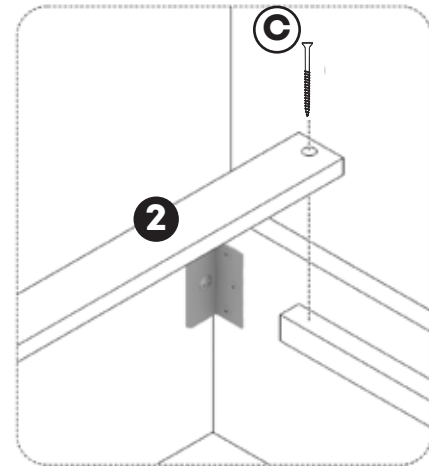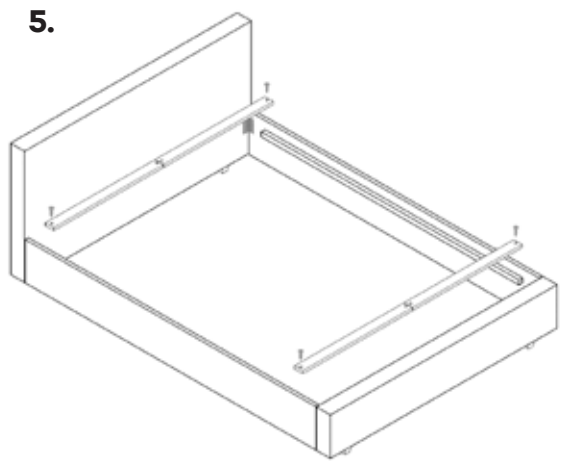

 3.

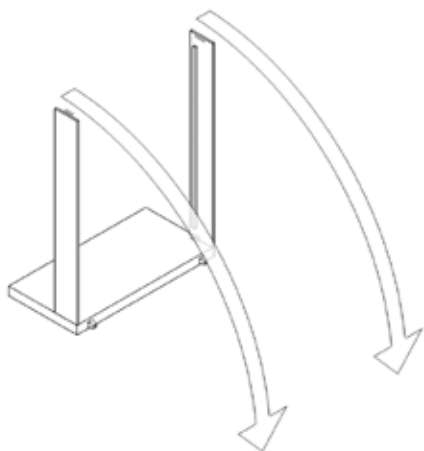

6.

