


THANK YOU FOR PURCHASING OUR PRODUCT

Office Chair

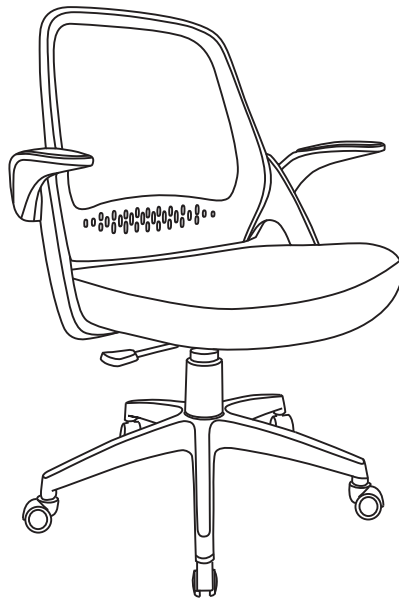

OFFICE CHAIRS LIMITED WARRANTY

office chairs are warranted from the date of purchase against failure due to material and workmanship as follows

- 2 Years on all non-moving metal parts.
- 1 Years on component parts including Control mechanisms, pneumatic cylinders, wood, plastic parts, base and casters.
- 1 Year on upholstery fabric and foam against wear and deterioration.
- We cannot warrant leather against routine scratching and scuffing, as all leather is subject to minor blemishes in normal use.

To make a warranty claim, contact Parts Department. Provide model number, proof of purchase, description of the problem and obtain return authorization. At it's option will:


- (a) Supply compatible components of current manufacture.
- (b) Repair the customer's component. The customer must prepay freight on any components returned to the factory. Return freight on components still in warranty will be paid.

*All warranties are limited to the original purchaser for normal Residential usage by persons weighing 250 lbs. or less. This warranty will not cover labor, freight or damage from misuse, abuse, negligence, alteration, accident, vandalism, rusting, acts of nature or any other event beyond the control . The warranty does not cover cosmetic damage that may result from normal use. Liability for incidental or consequential damages is excluded. The user assumes all risk of injury resulting from use of this product. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.


Our quality standards are among the highest in the industry. Sometimes, no matter how hard we try , there are times when parts are damaged or missing. Our Parts Department will do everything possible to promptly remedy the problem.

Assembly Instructions - Important:


Carefully unpack and identify each component before attempting to assemble. Refer to parts list. Please take care when assembling the unit and always set the parts on a clean, soft surface. If you require any assistance with assembly, parts or information on other products.

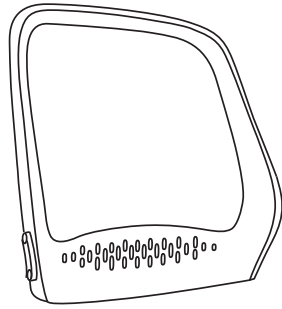


1 - (Backrest) - 1 Piece

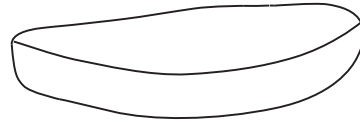


2 - (Seat) - 1 Piece

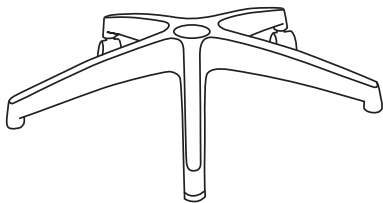

3 - (Base) - 1 Piece

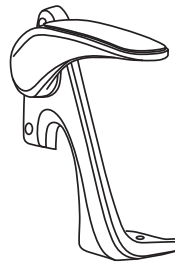

4 - (Arms 4L & 4R) - 2 Pieces

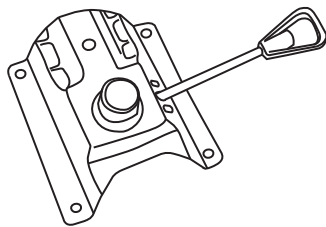


5 - (Seat Plate) - 1 Piece



6 - (Pneumatic Cylinder) - 1 Piece



7 - (Bellows) - 1 Piece

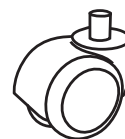


8 - (Caster) - 5 Pieces


HARDWARE LIST

A		SHORT BOLT	4 PCS
B		LONG BOLT	10 PCS
C		PLASTIC CAP	4 PCS
D		ALLEN WRENCH	1 PC


Step 1

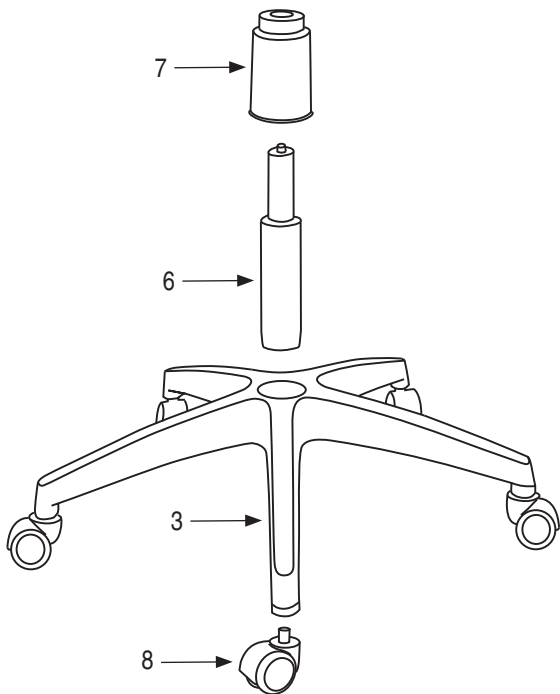


Step 2

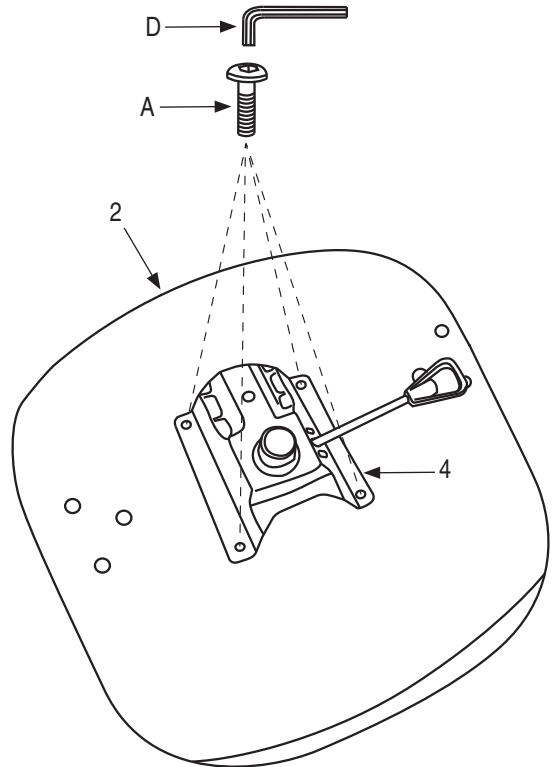


Step 3

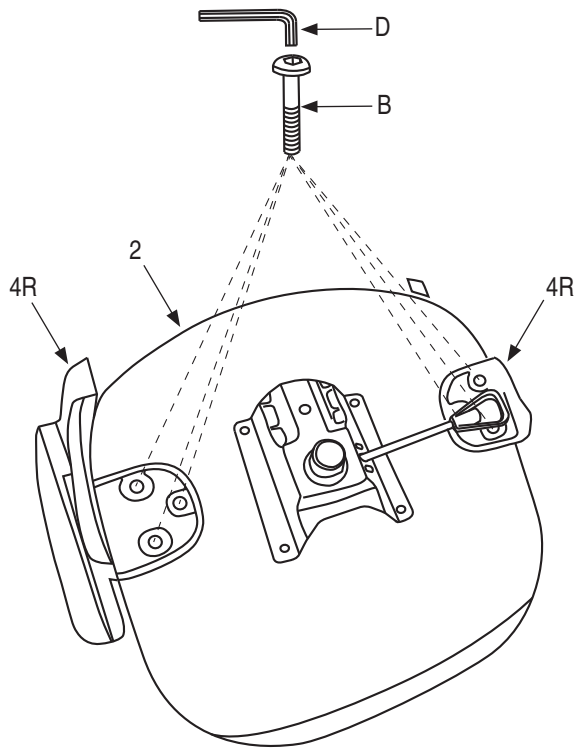

Step 4

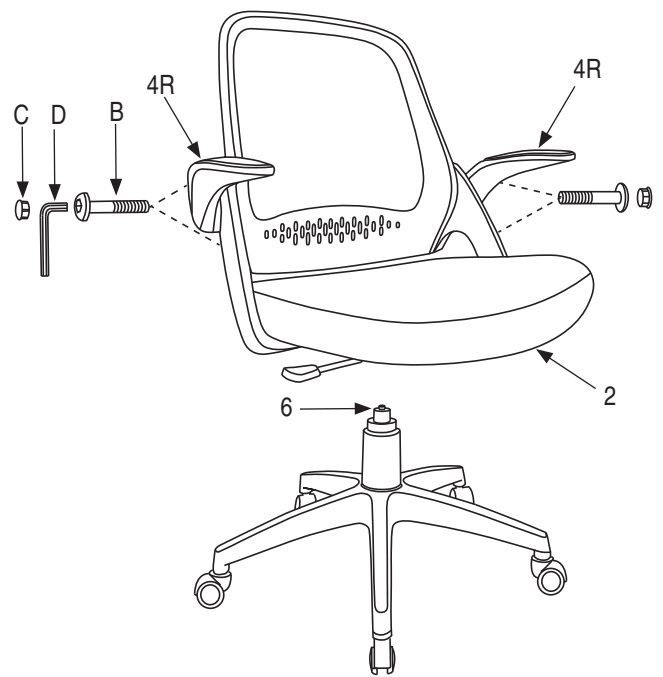

FEATURES

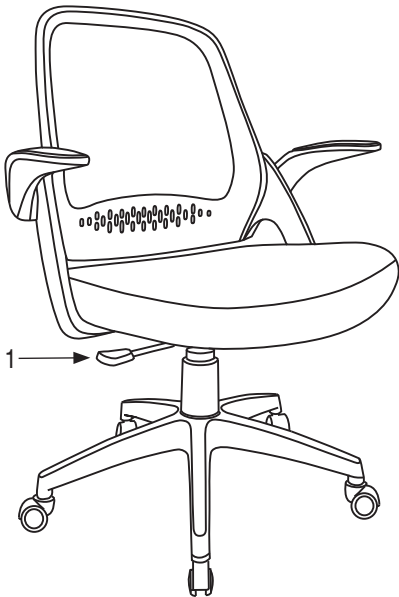

• PNEUMATIC SEAT HEIGHT ADJUSTMENT

To raise seat, remove pressure from seat and pull lever (1) up. To lower seat, sit on chair and pull lever (1) up.

NOTE: It is normal for chair to slightly lower under body weight.

• ARM FLIP UP & DOWN

To flip arms up, simply pull up on arm. To lower arms, simply pull down on arm.