

HOW TO USE STEAMER

1. STEAMER PLACING

- Put steamer at the top of rice cooker's pan.
- Put the prepared food to be steamed on steamer.

2. ADD WATER

- Water level should not be higher than the bottom of steamer.

3. STEAMING TIME

- The time of steaming will vary according to the steam temperature, water and the voltage of power source.
- You can extend steaming time by adding more water.

4. STEAMING ABILITIES

- Steam bread or equivalent.
- Steam vegetables, meat, such as chicken and fish.

HOW TO CLEAN

After cooking is completed, unplug the AC cord. When the body is cooled, clean the body and parts of the cooker as follows.

- Use a clean cloth to wipe the body of cooker.
- Remove the pan and inner lid from the cooker and clean them with dish washer and rinse thoroughly, dry with a soft cloth.
- Wipe the outside of the body and outer lid with a clean damp cloth.
- Do not clean any portion of this cooker with abrasive or harsh cleaners.
- Do not immerse any part of the cooker in water or any liquid, other than the pan, steamer plate, inner lid and dew collector.
- Grains of rice or other foreign matters may stick to the heating plate. These must be removed to prevent improper cooking. To remove the cooked rice on the heating plate you may use a soft steel wool. Then, smooth out and polish the spot for good contact between the heating plate and the bottom of the pan.
- Improper cleaning of the rice cooker may cause unpleasant odours.
- Any residue of vinegar or salt may cause the pan coating to corrode.

Non-stick coated pan


- When serving rice, be sure to use a plastic or wooden rice scoop.
- Do not use a metal scoop, spoon, spatula, nor place spoons, fork, rice bowls, etc in the pan.
- To wash the pan, do not use abrasives or harsh cleaners. Use a sponge or soft cloth.
- The non-stick coating may discolour after repeated uses, but it will not affects the non-stick property.

IMPORTANT :

If the AC cord is damaged, it must be replaced by the manufacturer or its service agent or similarly qualified person in order to avoid any hazard. This rice cooker is fitted with thermal fuse for safety reason. If rice cooker is switch on without cooking, the thermal fuse will cut off after heated for certain time. The rice cooker can only resume function after it cool off.

Operating Manual

Commercial Rice Cooker

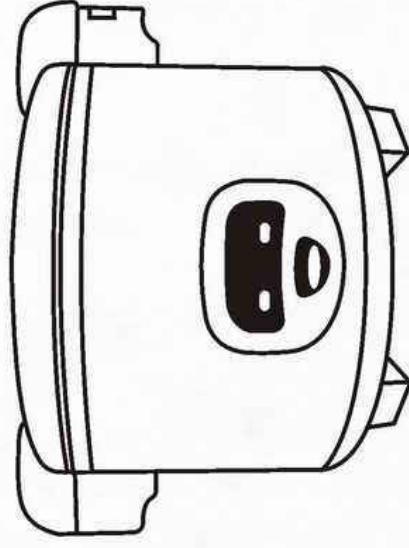

Please read this manual thoroughly before operating this unit.

This unit must only be serviced by the authorized service center.