

# POP-UP CANOPY

## ASSEMBLY INSTRUCTION

Please read this instruction carefully to make proper use of the item and extend service life.

### WARNING - PLEASE READ

- ☒ These canopies are designed for the purpose of temporary shelter only, please put it away indoor when not in use.
- ☒ Put away the canopy during high windy weather and rainy weather.  
The rain may destroy the canopy.  
DO NOT use it during stormy weather. Damage from stormy weather is not covered by the warranty..  
Keep away from fire and heat No fire under the canopy.
- ☒ To extend service life, store in dry place, away from pests and hazardous chemicals.
- ☒ Dry the canopy surface before closing and storage to avoid mildew, stains and mold.  
Clean it by mild soap and plenty of water after use and dry it completely before storage.

### PRODUCT WARRANTY

Free replacement or refund in 1 year for any quality defect from manufacturing process, not covering holes, punctures and other damage from improper installation.  
We offer replacement of the item or components under warranty and for original purchaser only.  
Damage from negligent use, misuse, improper use & repair and so on is not covered by warranty.

A



B1



B1\*4

B2



B2\*8

C


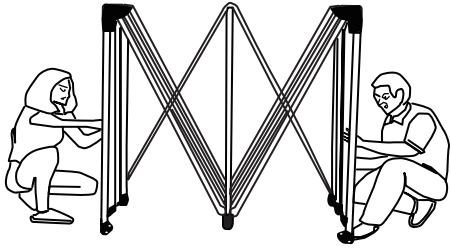
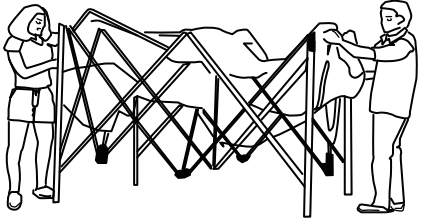
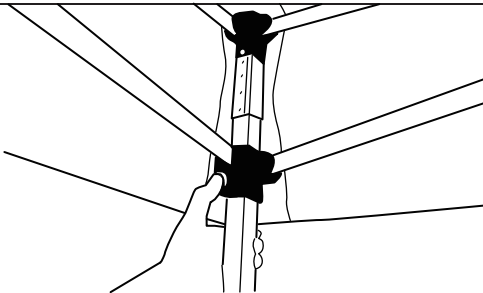
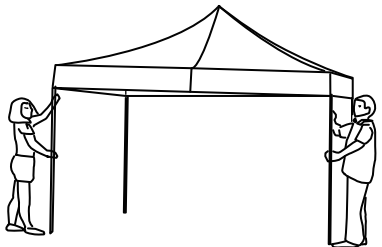
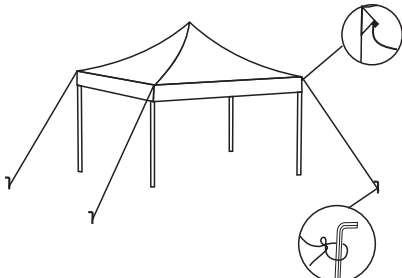


C\*4




D



## INSTALLATION INSTRUCTIONS

		
<p>1. Place the steel frame in the center of the set-up area. With a partner on the opposite side of the frame.</p>	<p>2. Grasp outer legs, lift off the ground, and step backwards - stopping at full arm's length.</p>	<p>3. Gently unfold the fabric top and place it over the open frame. Attach the fabric top to the steel frame by matching hook &amp; loop strips on the top with the hook &amp; loop strips on the frame. Pull the corners down fully.</p>
		
<p>4. Make the frame completely extended. Make sure the legs are straight. Push on the corners until they lock into place. Take care not to pinch your hands or fingers.</p>	<p>5. The adjustable legs offer multiple height levels. Starting on one side of the tent move the slider/thumb lever and lift a leg. The telescopic inner leg pin will pop into the desired height releasing the slider/thumb lever. Repeat on opposite side of the tent.</p>	<p>6. Use the anchors stakes &amp; ropes (for soil) or weights (for hard surfaces) to secure the canopy frame to the ground. Tie the rope to the tab located on each corner of the canopy top then attached the rope to the stake. Repeat on all 4 corners.</p>
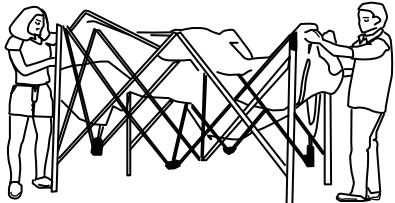
## Take Down Instructions


		
<p>1. It is recommended to remove the top for storage. First push in the locking button on all four corners of the frame and slide the bracket down.</p>	<p>2. Each person goes to the center of opposing sides. Grasps the top trusses of the middle section, lift and walk towards each other until the canopy is at arms length. Each person then grabs two legs and close completely.</p>	<p>3. The canopy should be easily disassembled and can be returned to the bag for storage. Always remember that your pop up canopy should be completely dry for storage to avoid mildew.</p>

## TENT CARE

For maximum life of canopy top fabric, recommends hand washing with a soft brush using mild soap and water. Thorough rinsing and drying is required before storing the fabric. Never use harsh detergents, abrasives or bleach. Do not machine wash.

To improve the opening and closing action of your steel frame you may spray a small amount of silicone lubricant on the legs (silicone not included).

We suggest to take it down in bad weather such as heavy windy or heavy rainy day. If the tent has to be used in wind day, please put **sandbag** or **ground-weight** on each leg of tent as below pics for your reference.

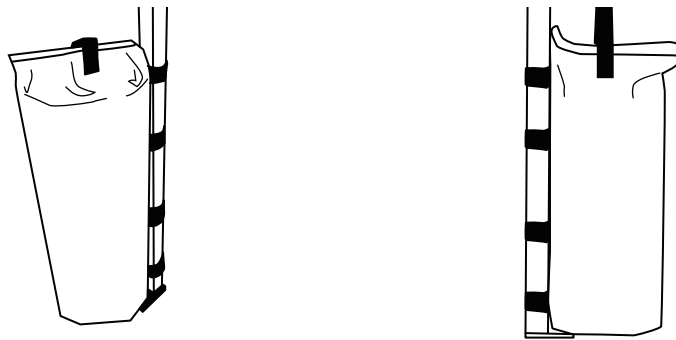

### **Things that will cause premature degradation and may reduce life expectancy of a tent:**

- Improper handling during installation/dismantling on rough surfaces will create pinholes and abrasions. ALWAYS USE A DROP CLOTH/GROUND CLOTH DURING INSTALLATION AND DISMANTLING.
- Walking on the fabric during installation/dismantling will create pinholes and abrasions.
- Extended use of the tent without cleaning.
- Storage of the top cover that has not been dried thoroughly. Even a slightly damp product can promote the growth of mildew when folded and stored. Mold and mildew may require harsh cleaners to remove, which may cause premature wear. The best solution is to take every precaution to keep mold and mildew from growing in the first place. NEVER STORE THE FAST SHADE IN A WET OR DAMP CONDITION.
- High-abrasive cleaners, including wire brushes, power washers and commercial washing machines will result in premature wear and deterioration of tent fabrics.