



## Instruction Manual

Please save this manual for future reference.

|               |                                                                       |
|---------------|-----------------------------------------------------------------------|
| Product Name: | 7.5Ft Pre-lit Green Slender Artificial Christmas Tree with Pine Cones |
| SKU #:        | WHAP2102                                                              |

Thank you for purchasing this LuxenHöme product. This product has been manufactured with the highest standards of safety and quality.

### PLEASE READ ALL INSTRUCTIONS BEFORE ASSEMBLY.

Unpack all parts from inside the carton to ensure there are no missing or damaged parts. If any parts are missing or damaged, do not attempt to assemble or use the product.

### CARTON CONTENTS:

| Description             | Quantity |
|-------------------------|----------|
| Tree top (Section C)    | 1        |
| Medium Tree (Section B) | 1        |
| Bottom Tree (Section A) | 1        |
| Metal folding stand     | 1        |

### Before You Start

- Decide on an appropriate location for your product, please read assembly and Instruction procedure carefully.  
Note: These trees are for indoor use only.
- Retain the instructions for future use and save the carton for storing your tree.

### Assembly and Instruction Procedure (no tools required for assembly):

**Step 1:** Locate the tree stand or pot. If your tree has a metal stand, unfold it and insert the eye bolt. Remove packing material from ends of poles. Put bottom section pole into tree stand making sure it is seated properly (Fig. 1). Tighten eye bolt.

**Step 2:** Locate the bottom tree section "A" that is labeled with letter "A". Remove any protective pole caps from ends of the pole (they can be saved and reused for storage). Put bottom tree section "A" into tree stand or pot. Make sure the pole is seated properly. If your stand has eye bolts, then tighten eye bolt until bottom section is held securely. Insert the top tree section into the green plastic opening of the lower tree assembly. There may be a "pole cap" which keeps tree top section securely in place (Fig. 3). For larger tree with middle section, carefully insert middle section pole(s) into bottom section pole (Fig.4). Then insert top section into pole cap. If you have three (3) tree sections, then "A" is bottom section, "B" is middle section, "C" is top section. Note: Each tree section is tagged with a letter, and "A" is always the bottom section that goes in tree stand, then B, C, D, etc. CAUTION: Two people may be needed to balance and assemble the tree's upper sections. Please use a ladder if needed, and follow the ladder's safety instructions.

**Step 3: HINGED TREES:** Branches should fall into place during assembly. If any branches remain upright, gently lower them into proper position (Fig. 5). Each branch must be shaped to a natural position by spreading out the

Commented [SC1]: Bottom or top?

Commented [A2R1]: Bottom is A, top is C

Commented [SC3]: Conflicting info description

Commented [A4R3]: I revised the description already.




## Instruction Manual

Please save this manual for future reference.

|                      |                                                                       |
|----------------------|-----------------------------------------------------------------------|
| <b>Product Name:</b> | 7.5Ft Pre-lit Green Slender Artificial Christmas Tree with Pine Cones |
| <b>SKU #:</b>        | WHAP2102                                                              |

left and right tips away from the center tip (See Shaping Instructions in the next section). Continue to lower branches on upper section(s) in the same manner, make sure not to place undue pressure on the brackets.


**Step 4:** Connect the plug(s) from each tree section into the section below securely. The light sets have a male/female plug with colored tags which are numbered. For example, the plugs from A Section to B Section will have a  red label. The color labels on your light sets will help you to easily find the plug and connect for future use. Remove them at your discretion. Once all the light sets are connected in the tree, locate the power cord, and insert adaptor into a 120volt power outlet or into a UL approved extension cord or power strip (not included). (NOTE: If your tree has an On/Off Foot Pedal, then tap the switch to turn the lights on.) The tree should now be lit. If light set does not light, please read TROUBLESHOOTING GUIDE FOR LIGHT SETS.

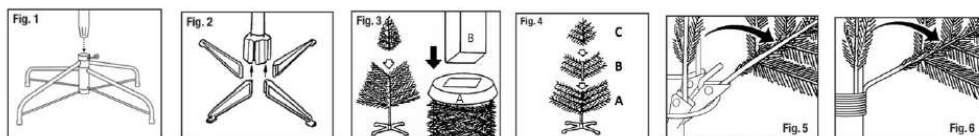

### SHAPING INSTRUCTIONS

Shaping the tree branches is the last step of assembly. The care and attention given to this final process will result in genuinely beautiful, full, and appealing holiday centerpiece. Every tree style is shipped from the factory with the tips of each branch compressed to the center (Fig. 7).

 1. Each branch tip must be shaped to its proper position to give the tree a natural look. This is done by gently grasping the left and right wing tips and spreading them out away from the center tip (Fig. 8).
2. Each individual tip should then be spread out separately. Tips should then be bent slightly upward to add a more natural looking appearance. (Fig. 9) shows a typical tree branch after shaping.
3. As you shape closer to the top, the branches will not have wing tips, but will otherwise shape in the same manner as lower sections.



### TROUBLESHOOTING GUIDE FOR LIGHT SETS:

If your lights are not working, then try the following steps to solve:

1. Check if the plugs are properly connected to the outlet or other power source.
2. Check if there is power to the outlet or power source.
3. Check that all the connectors within different sections of the tree are securely connected and positioned correctly



## Instruction Manual

Please save this manual for future reference.

|                      |                                                                       |
|----------------------|-----------------------------------------------------------------------|
| <b>Product Name:</b> | 7.5Ft Pre-lit Green Slender Artificial Christmas Tree with Pine Cones |
| <b>SKU #:</b>        | WHAP2102                                                              |

### STORAGE:

1. Unplug light string from the power source. Remove any ornaments and decorations that did not come with the tree. Gently press tips back into center branch.
2. Place the tree and all of its components back into the storage box. When packing up the tree, please ensure that there is no strain or stress on the light sets so as to ensure they do not get cut, frayed, or damaged. Tape the box shut to keep out any dust or insects.
3. Store the tree in a cool, dry area away from sunlight. Exposing your tree to excessive heat or humidity may damage your tree.

**DO NOT STORE TREE IN A DAMP AREA OR IN AN AREA WHERE THE TEMPERATURE EXCEEDS 100°F.**

**DO NOT STORE THE CARTON VERTICALLY ON ITS SHORT END. STORE THE CARTON FLAT.**