

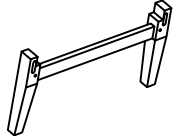

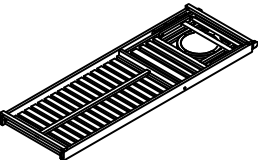




 
## CARE AND MAINTENANCE

Store outdoor furniture indoors or cover well when it is not in use.  
Dust regularly with small brush or vacuum. Spills should be taken care of immediately before they harden or stain with a slightly dampened sponge.

## NOTICE

Please make sure that you have all parts indicated before you begin assembly of this item.

## Part List and Hardware List

PIECE	DESCRIPTION	PICTURE	QUANTITY
<b>A</b>	Front leg		<b>1X</b>
<b>B</b>	Rear leg		<b>1X</b>
<b>C</b>	Seat		<b>1 X</b>
<b>D1</b>	Allen bolt	 M6x80	<b>4 X</b>
<b>D2</b>	Allen nut	 M6x90	<b>4 X</b>
<b>D3</b>	Bolt extra	 M6x50	<b>1 X</b>
<b>D4</b>	Wrench		<b>1 X</b>
<b>D5</b>	Allen key		<b>1 X</b>

Product Dimension: 60.63"Wx34.65"Dx15"H

Weight capacity : 600 lbs.

Warning : Do not stand on the lounger

Warning : Do not torque bolts / screws

