

Product Instruction Manual

■ Specification:

Voltage: 110-130v

Material: Base-Wood;Lampshade-Paper

Color: Base-burlywood;Lampshade-White

Wattage: 60 Watt Max

Bulb info: TYPE A19-9w-2700k×2 Three-color
light bulb(bulbs included)

Switch Type: Pedal Switch

Item Weight : 2.2 KG

Dimensions:10in/254mm ×10in/254mm
×65.75in/1670mm

Shade Size: D10in/254mm×50.75in/1290mm

Wire Length: 70.87in/1800mm

Usage:Indoor Use Only

■ Package Includes:

1x Paper Lamp shade
4x Lamp Poles
1x Lamp Base
1x Finial
2xTYPE A19-9w Bulbs
1x Simple screwdriver
1xUser manual

■ EASYINSTALLATION

- 1.Put the base on the ground and tighten the pole and base.
- 2.Connect other poles one by one along the wire extending from the base, and pull the cord gently when you screw.
- 3.Remove the screws from the pole.
- 4.Fix the lamp shade on the lamppole.
- 5.Screw the ring back to steady the lamp shade.
- 6.Install the bulb(Bulb included).
- 7.Attach the bottom of the lampshade to the pole.

■ Attention:

1. If you want to change the 2700K vintage Led bulb included,incandescent light bulbs less than 60W are greatly recommended.
2. The bulb will increase the brightness when it is reaching its lifespan or has partial short circuit. At that moment, please switch off ,change a bulb and use it as you would normally.
3. Please shut off the power and unplug it before you screw in a new bulb.
4. Don't put the lamp in overheating working condition or cast it into fire.



