



Water pump



Air bubble pump

## ⚠ Note

- 1.To prevent electric shock, ensure that a leakage protection switch is installed.
- 2.Ensure that the electrical appliance is earthed, and the equipment must be fitted with an effective earthing device.
- 3.This equipment is only used for massage bathtubs.
- 4.Explanation: The above accessories can be provided according to customer needs.

## What is the electrical requirements?

Input voltage: 110V, Current:8A, Power:800 W.

External circuitry need to equip with high sensitive and fast type leakage protection switch. (Induced current rating below 15mA, trip time should less than 0.1 second, rated current is above 30A)

## What size is the water inlet connection?What is the length of the shower hose?

Please reserve the connectors of 1/2" external thread cold/hot water hoses(Out-stand the wall 1.18 ). Reserve the drainage hole> 1.97 inch.

Drain pipe length: 31 .

Power cord length: 59

What is the dimensions and the soaking depth?

Exterior dimensions: 66.93"L\*31.5"W\*23.62"H

Interior Size: 44 L\*17 W\*16 H

Depth to overflow drain: 15

## Important Notes:

- 1.Children, persons with reduced physical, sensory or mental capabilities, and those lacking experience and knowledge shall not use this appliance unless they are under supervision or have received instructions. Meanwhile, children must be supervised to prevent them from playing with the appliance. Children are strictly prohibited from using this product alone and must be accompanied by an adult.
- 2.Users shall ensure that the grounding facilities are effective and comply with national safety standards. Install the earth leakage protector properly and keep the switch away from areas accessible to water.
- 3.Parts containing live components (except for parts supplied with safety extra-low voltage not exceeding 12V) must be inaccessible to a person in the bath.
- 4.Earthed appliances must be permanently connected to fixed wiring.
- 5.For stationary appliances not equipped with a device for disconnection from the main power supply (where the contact separation in all poles of the device provides full disconnection under overvoltage category III), the instruction manual specifies that the disconnection device must be incorporated into the fixed wiring in accordance with wiring regulations.
- 6.Do not allow water to drip into the impeller of the water pump; otherwise, the pump may short-circuit and burn out.
- 7.The power supply must be cut off when troubleshooting, and maintenance work must be carried out by professionals.
- 8.The maximum permissible inlet water pressure is 600 kPa.
- 9.This appliance shall be supplied through a residual current device (RCD) with a rated tripping current not exceeding 30 mA.

**If the power cord is damaged, it must be replaced by the manufacturer, its service agent, or persons with similar qualifications to avoid hazards.**

