

# User Manual

T5414

## Welcome

Thanks for purchasing this **Camping Gas Stove**.



### Caution:

**Improper use of this product may cause injury or property damage. Please read and follow these instructions carefully before using the camping gas stove.**

## Package List

Upon opening the package, please check for the following items:

- \* 1 × Camping Gas Stove with Flexible Tube
- \* 1 × Carry Bag
- \* 1 × HDPE Storage Box
- \* 1 × User Manual

## Specification

- \* Materials: High Carbon Steel, Stainless Steel, Copper, HDPE Storage Box
- \* Output Power: Stepless Adjustment 13000W
- \* Power Source: Gas Powered
- \* Load Bearing: 20kg/44.09 lbs
- \* Compatible Fuel Tank: ISO-butane, Propane, Butane
- \* Piezo Ignition: Support
- \* Fit For Canister Adapter Diameter: 6mm(1/4 in)
- \* Boil Time for 1L Water: 2Mins
- \* Flexible Tube: 85cm/33.46in Length, 6mm(1/4 in) Diameter

## Safety Precautions

### Use Outdoors Only



1. Always use the stove in a well-ventilated area. Inadequate ventilation can lead to the accumulation of gas and cause a fire or explosion hazard. Do not use it indoors or in enclosed spaces to avoid the risk of carbon monoxide poisoning.
2. It is strictly forbidden to ignite or use indoors, in tents, in vehicles or other enclosed spaces, which will cause carbon monoxide poisoning and may cause injury or death.

### Check for Leaks



1. Before use, check all connections for gas leaks by applying soapy water. Bubbles indicate a leak—tighten connections or replace damaged parts.
2. Before using the stove, the connection between the stove and the gas tank must be checked to ensure that it is properly assembled.
3. Before ignition, you must first check whether the stove is in good condition and whether there is any leakage of the trachea. If any abnormality is found, please do not continue to use the stove.
4. Regularly check the condition of the flexible tube for any signs of wear or damage. Replace it if necessary.



## Keep Flammable Materials Away

1. Keep the stove away from flammable materials such as tents, sleeping bags, and dry grass.
2. In the process of using the stove, it is strictly forbidden to place the head or other parts of the body above the stove. Foreign bodies and other flammable substances should be away from the stove. The distance between combustible substances is at least 12 meters on the top and 0.3 meters on the side.
3. When the stove is burning or near any flame heat source, do not disconnect the stove from the gas tank.



## Supervise While Cooking

1. Never leave the stove unattended during use. For burning stove or still hot stove must be watched to prevent burns.
2. It is forbidden to plug the ventilation hole of the stove body or the fire hole of the stove head. The continuous use time of the stove is not recommended to exceed 2 hours.
3. Dry burning is prohibited, which may cause damage to the pot and even cause a fire.
4. If the stove overheats, turn it off immediately and let it cool down.



## Children and Pets

It is prohibited for minors to use. Keep children and pets away from the stove when it is in use. The stove can get very hot and may cause burns.



## Avoid Overloading

It is forbidden to place heavy or oversized cookware on the stove. The maximum load-bearing capacity of the stove is 20kg, and the maximum diameter of the cookware is 30cm.



## Other Warnings

1. High-Altitude Use: The preheating copper tube ensures performance in low-pressure environments, but always monitor flame stability.
2. Infrared Energy-saving Stove: Please don't use stainless steel cookers (or with mirror reflective appliances). Otherwise, it will cause abnormal combustion.
3. The stove should be used on a horizontal surface.
4. Only use the specified compatible fuel tanks (ISO-Butane, Propane, Butane). Using other fuels may cause damage to the stove and pose a safety hazard.
5. In case of a gas leak, immediately turn off the fuel valve, move the stove to a well-ventilated area, and do not use any ignition sources.
6. Do not use in very strong wind. If used, please use wind shield equipment safely.
7. It is forbidden to use it directly to heat charcoal or wood for fire.
8. It is forbidden to change the surface of the stove or any other disassembly and modification.
9. Store the stove in a dry and cool place, away from direct sunlight and high temperatures.
10. Pay attention to the high temperature of the stove surface, do NOT contact directly. When igniting, please carry out under small gas volume to prevent deflagration.
11. It is prohibited to use the stove in other ways not described in this instruction.

## Product Structure



Flame Control Valve



Canister Connector



Piezo Ignition Switch



5 Fire Nozzles



Foldable Stove Stand



Foldable Pot Rack

 


Circular Pre-Heating Copper Tube




## Installation

The following steps use a high-altitude gas canister as an example. Before setup, check the flame regulator to ensure it is in the closed position (clockwise closed).

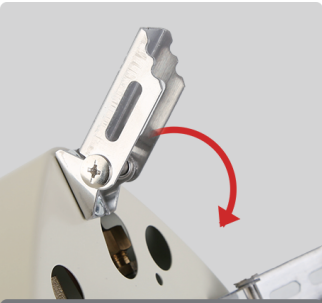

1 Unfold the gas stove stand

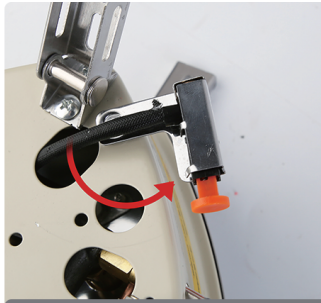 


2 Rotate the piezo ignition switch out.




3 Tighten the fuel tank against the valve



 4 Open the flame control valve to rotate

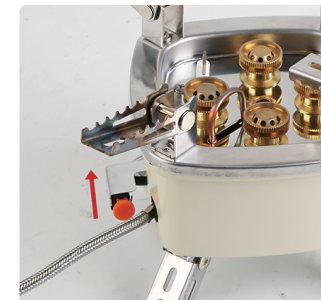

 5 Press the piezo ignition switch to ignite.

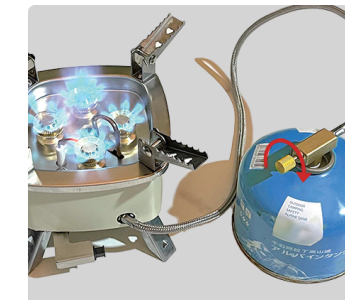

6 Rotate the flame control valve to adjust the flame size.

## Note:

- The installation of the cartridge-type gas canister requires an adapter(not included), while the high-altitude gas canister does not need one. Connect the gas tank to the stove using the appropriate adapter. Ensure a secure connection to prevent gas leakage.
- Place your cookware on the stove, ensuring it's centered for stability.
- Adjust the flame as needed for boiling, simmering, or frying. Rotate the flame control valve to make the flame size meet the requirements. The flame starts out blue and orange, and the flame can be adjusted smoothly from large to small.
- After the stove is used, turn the flame control valve to the closed position, and disassemble the connection between the gas tank and the pipe interface counterclockwise. When the gas tank is out of the valve, a small amount of gas may overflow.
- After ensuring that the flame control valve is in the closed position and the stove has cooled, fold the stove and fit it into the storage bag or box.
- Package does not include fuel canisters.

## Maintenance & Care

- Cleaning:** After each use, let the stove cool down completely. Wipe the stove with a damp cloth to remove any food residue or dirt. Do not use abrasive cleaners as they may damage the surface.
- Storage:** Store the stove in its included bag or box in a cool, dry place. Make sure the gas tank is disconnected and stored separately in a safe location.
- Inspection:** Regularly inspect the hose, connectors, and stove for wear or damage. Replace any damaged parts immediately.

## Troubleshooting

Issue	Solution
No flame or weak flame	Check gas canister level and connections. Ensure the tube is not kinked.
No flame or weak flame	Use a lighter or match to ignite manually. Replace the igniter if needed.
Gas leak	Tighten connections or replace damaged parts. Do not use if leaks persist.
Flame instability	Ensure the stove is on a flat surface. Adjust flame control knob.

## Disposal

Dispose of gas canisters and stove components responsibly. Recycle materials where possible to minimize environmental impact.

