 
 
 
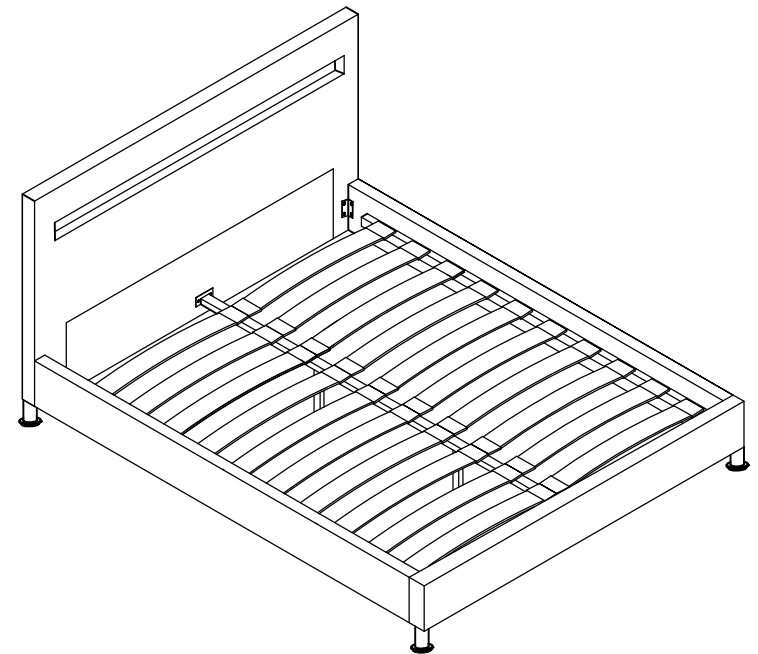 
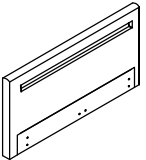 



 


 


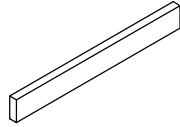 



 






Thank you for purchasing the product. All products are carefully engineered and factory tested for durability under normal conditions. The item will be come in multiple packages that may not arrive at the same time. Please kindly wait for it. Following this instructions, you will install the item much simpler and faster.



Part List


Ax1 	Bx1 	
Cx2 	Dx1 	
Ex1 	Fx 2  15.5cm	
Gx22  (M6*20)	Hx10  (M6*50)	
Ix4  10cm	Jx12 	
Kx24 	Lx24 	
Mx16  (Φ4*20)	Nx1 	Ox1 
Px1 	Qx2 	Rx4 
Sx2 	Tx32  (Φ6*18)	Ux2  (M8*45)

 1

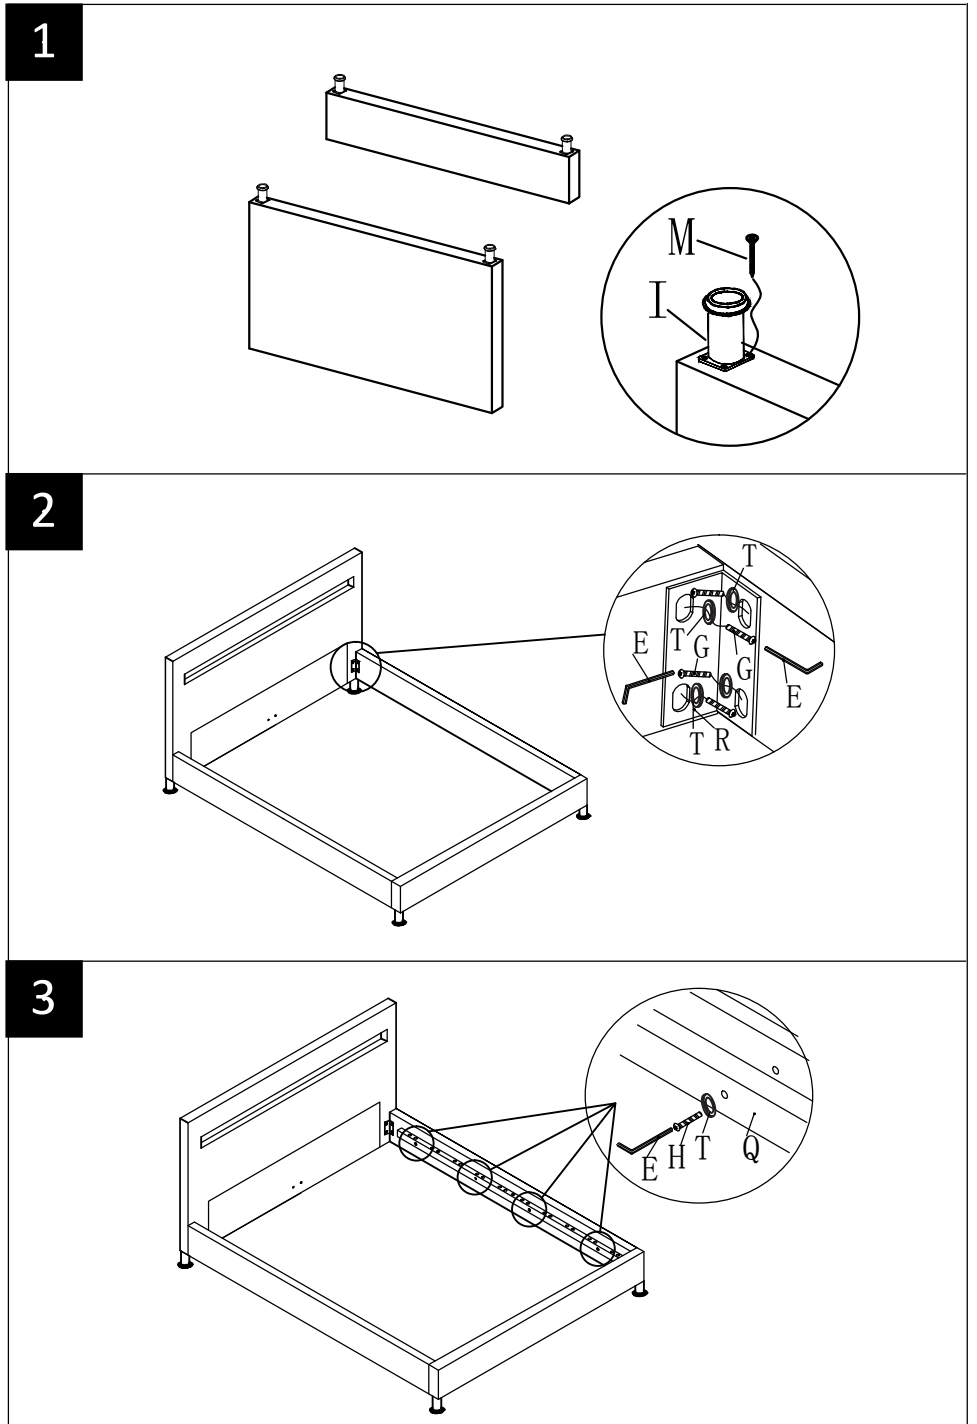 


2

 
4

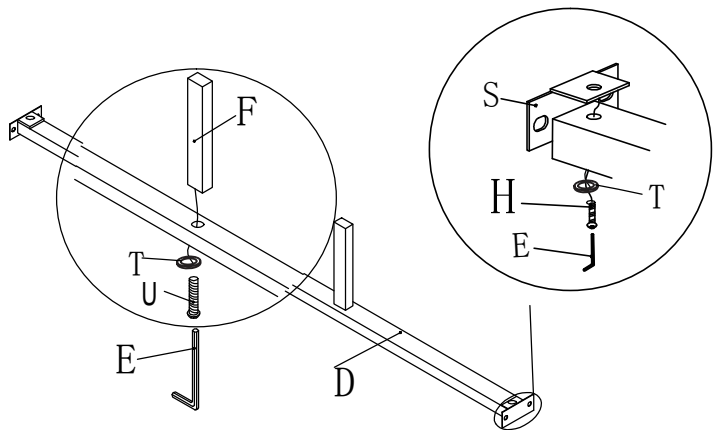

5

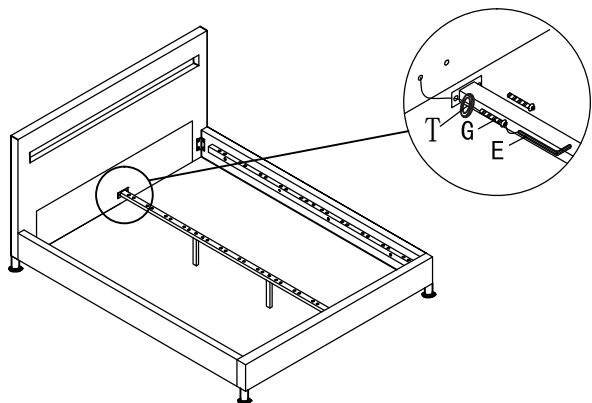 


6



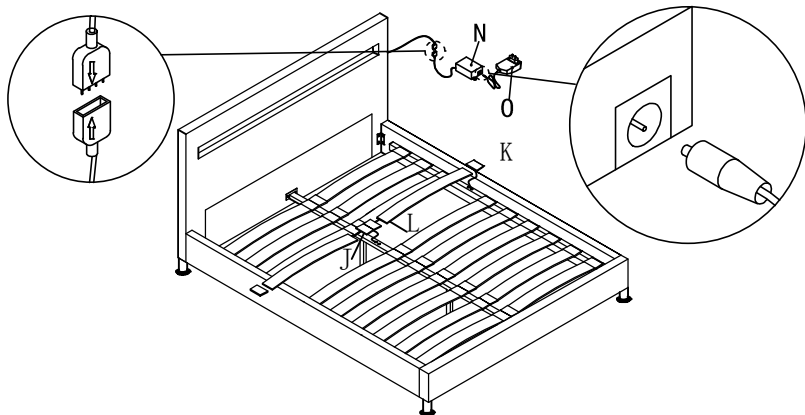 


3


 
7

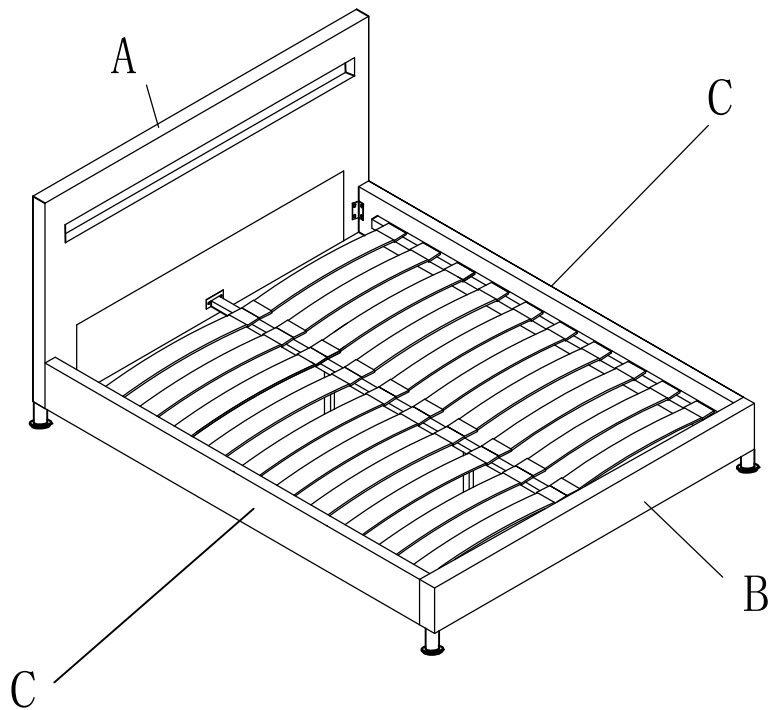


4

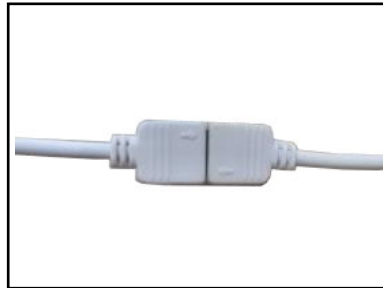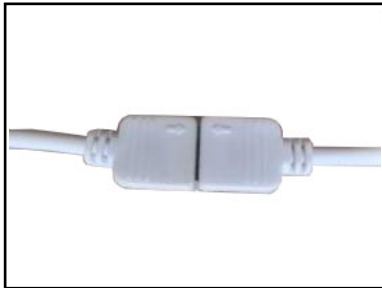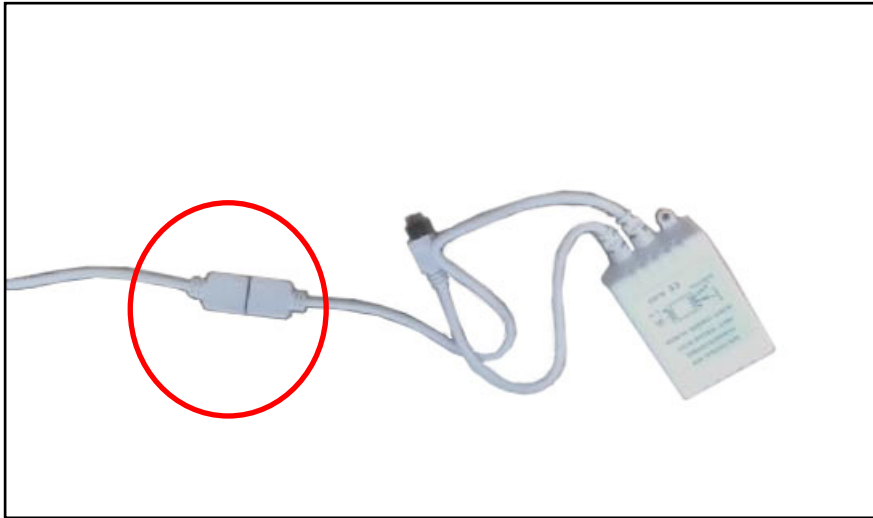   

  1. When you connect LED light with the LED control, pls make sure the plugs remain arrow to arrow.

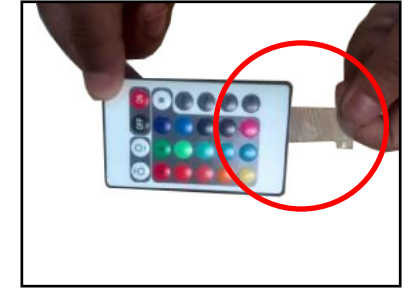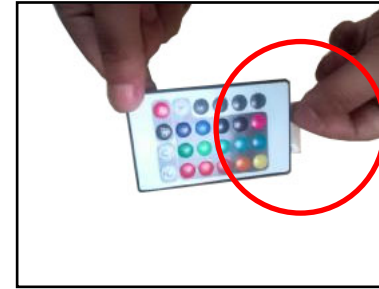

 2. Before you using the remote controller, pls remove the transparent plastic, which is designed to disconnect the battery.

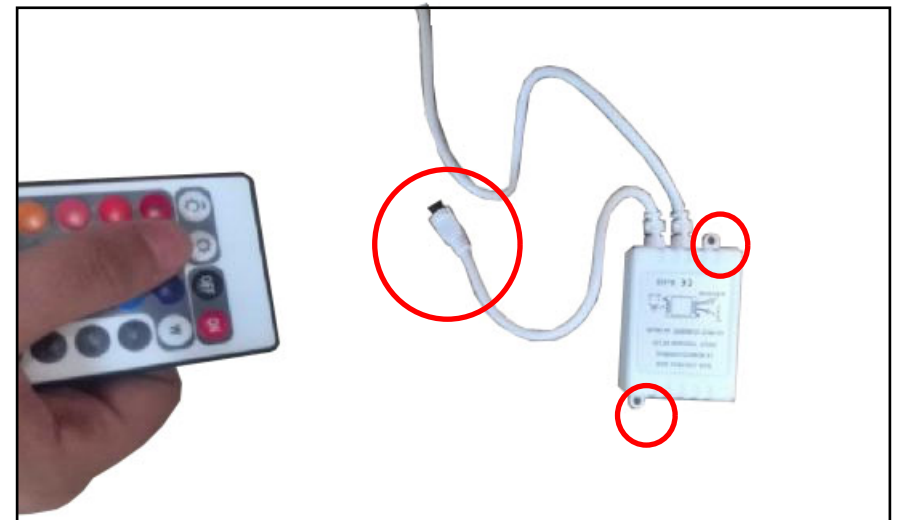

3. Remote controller should be aim at the black receiver unit. when you switch colours, you can also fix the control box. on the nearby wall with 2 screws, for more convenient using.