



ASSEMBLY INSTRUCTION

SKU CODE: WF303599/WF303600

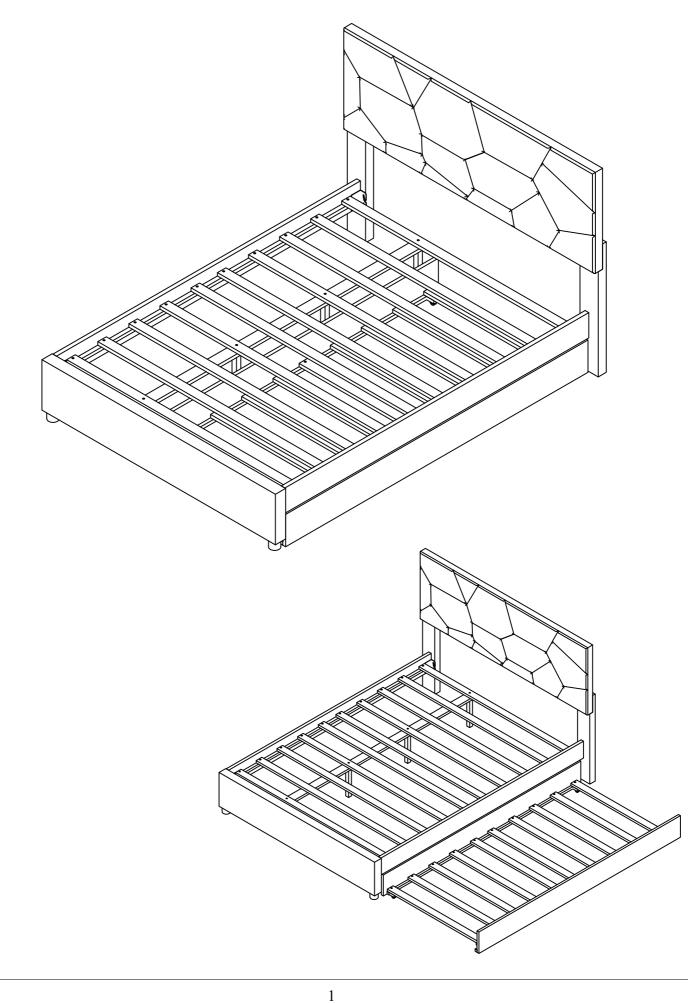

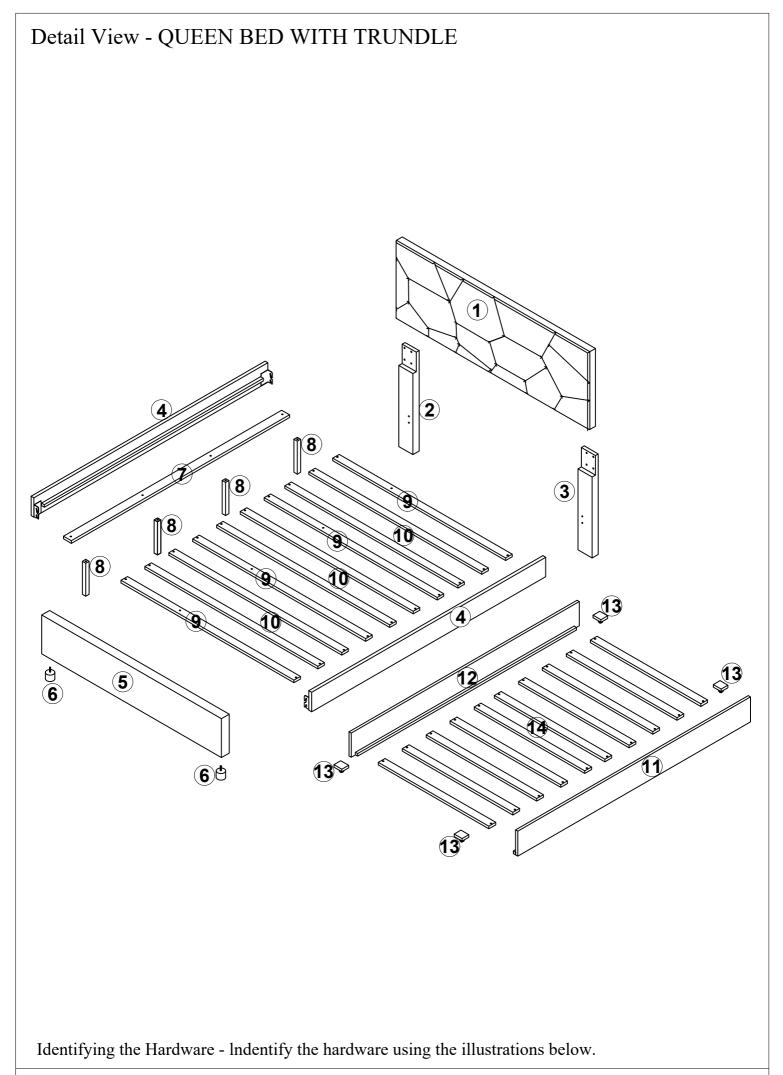

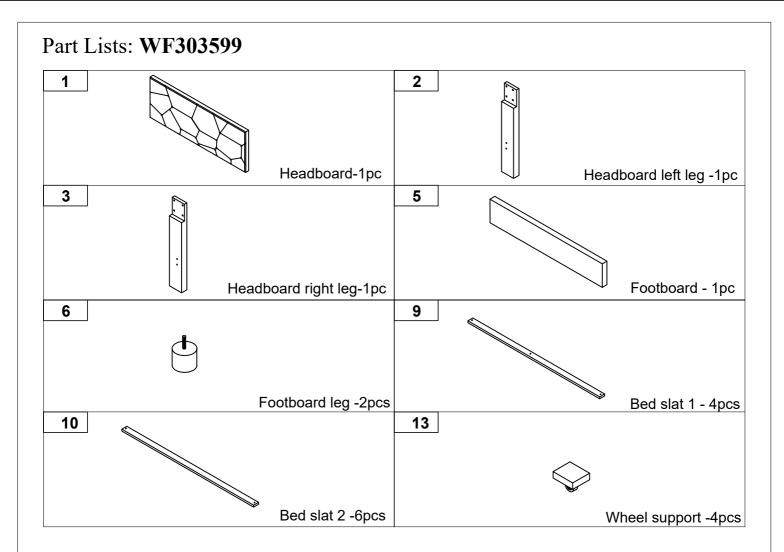

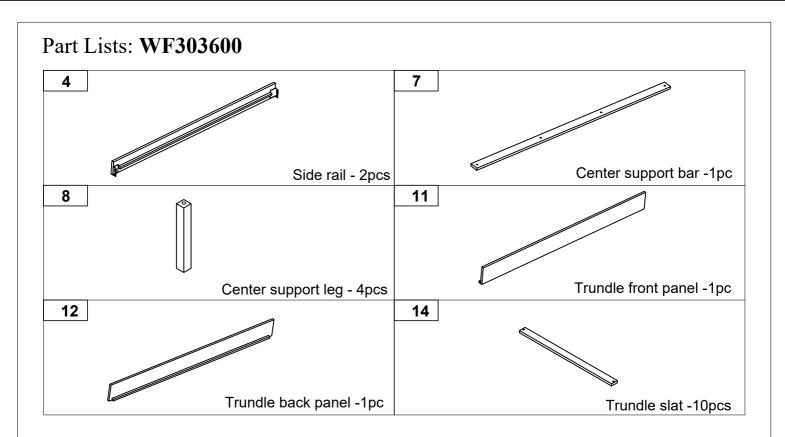

	В
4mm	Ø5/16" x 20mm
Allen key (1pc)	Hex-head bolt (8pcs)
	D
Ø5/16" x 40mm	Ø5/16"
Hex-head bolt (4pcs)	Spring washer (12pcs)
\bigcirc	
Ø5/16"	Ø1/4" x 45mm
Flat washer(12pcs)	Hex-head bolt (4pcs)
<u> </u>	H O
Ø1/4"	Ø1/4"
Spring washer (4pcs)	Flat washer(4pcs)
Ø4 x 30mm Wood screw (48pcs)	
ASSEMBLY TOOLS RE	QUIRED (NOT INCLUDED)

Follow the figure to start assembling.

CAUTIONS :

- 1. Do not FULLY TIGHTEN the nut or nut bolt until all nut or bolt is ready assembled.
- 2. Do not OVER TIGHTEN the nut or bolt to avoid causing damages to the thread.
- 3. Keep all hardware parts out of reach of children.
- NOTE : THE LIST AND QUANTITY SHOWN ARE FOR 1 UNIT ASSEMBLY.

