

# INSTRUCTION MANUAL



## PATIO WICKER SOFA

---

IF YOU PURCHASED THE SOFA ONLINE AND HAVE ANY  
QUESTIONS OR CONCERNS  
PLEASE CONTACT US WITH EMAIL, TEXT OR PHONE

---

Date of Manufacture: 25W03

## Warnings and Cautions

Thank you for choosing our furniture. Please read and understand this entire manual before attempting to assemble or install the product.

### GENERAL BEST PRACTICES FOR ASSEMBLY

1. Familiarize yourself with the product and check all parts against the packing list. If any parts are missing or damaged, do not install. Contact us immediately.
2. Some parts may contain sharp edges. Wear protective gloves if necessary, during assembly.
3. Check all nuts and bolts periodically for tightness and, when required, tighten them again.
4. Pay attention to the parts orientation.
5. Save all packing materials until assembly is complete to avoid accidentally discarding smaller parts or hardware.

### IMPORTANT

And take care to place the washer on the screw before placing the screw in the screw hole.

In order to adjust the entire product to the best condition, loosely assemble before tightening.

Tighten all screws after all parts are assembled.

### WARNINGS



**Keep children and pets away from the working area during assembly and adjustments.**

1. Keep assembly area at least 6 feet from any obstruction such as a fence, garage, house, overhanging branches, laundry line or electrical wires.
2. When assembling and using this product, basic safety precautions should always be followed to reduce the risk of personal injury and damage to the product. Please read all instructions before assembly and use.
3. Check all bolts for tightness before use. **IMPORTANT**-check and tighten bolts often to keep them secure!
4. The product is not to be used for standing purposes and will not function as a stool or step-ladder. Use on even surfaces only.
5. The product use at weight of 990lbs (450kgs). Improper use of this product or failure to use as directed may result in injury. Not intended for commercial use.

## WARRANTY

- **WHAT IS COVERED?**

- The limited warranty is extended to the original purchaser and applies to material and manufacturer's defect provided the item is maintained with care and used only for personal residential purposes.
- Warranty: 180 DAYS
- Lost Accessories or Parts Policy :  
Lost accessories or parts costs will be incurred after 90 days of the date of purchase.


## MAINTENANCE

- **.STAIN RESISTANT CUSHIONS CARE:** Keep cushions in storage on rainy days.
- **.SPILLS:** Immediately wipe up spills using a white damp cloth. Repeat if necessary until the stain is gone. Allow cushions to air dry.
- **.FABRIC CARE:** Hand wash cold, non-chlorine bleach when needed, lay flat to dry. Cool iron if necessary. Do not dry clean.
- **.RESIN WICKER PRODUCT CARE:**
  - 1.General Cleaning: Before using, clean the product completely with a soft, dry towel. When not in use, wipe off any dirt or loose objects. Use a mild soap and water solution for regular cleaning, rinse thoroughly, and dry completely.
  - 2.Weather Protection: To prolong the life of your resin wicker, avoid prolonged exposure to intense sunlight or heavy rain. Whenever possible, use a protective cover when the furniture is not in use, especially during extreme weather conditions.
  - 3.Avoid Harsh Cleaners: Do not use strong detergents or abrasive cleaners, as these may damage the finish.
- **Regular Maintenance:** Over time, nuts and bolts may loosen. Occasionally check and re-tighten nuts and bolts on all products and tables if necessary.

## Tools Needed (Not Included)



Pistol drill

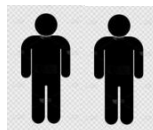



















2 People





APPROXIMATELY  
30 MIN TO ASSEMBLY

# Parts List

<b>A x 1</b>		<b>B x 1</b>		<b>C x 1</b>		<b>D x 1</b>			
									
<b>Left arm</b>		<b>Right</b>		<b>Right back</b>		<b>Left back</b>			
<b>E x 1</b>		<b>F x 1</b>		<b>G x 2</b>		<b>H x 1</b>			
									
<b>Front</b>		<b>Front</b>		<b>Seat</b>		<b>Seat mid</b>			
<b>I x 1</b>		<b>J x 5</b>		<b>K x 20</b>		<b>L x 4</b>		<b>M x 5</b>	
									
<b>leg</b>		<b>M6*55mm</b>		<b>M6*35mm</b>		<b>M6*18mm</b>		<b>Nut</b>	
<b>N x 1</b>		<b>O x 1</b>		<b>P x 34</b>		<b>R x 3</b>		<b>X x 3</b>	
									
<b>Allen wrench</b>		<b>wrench</b>		<b>Washer</b>		<b>Seat cushion</b>		<b>Back cushion</b>	




# Assembly Instructions

1. Secure two sofa backs (C&D) to each other with 6 washers (P), 3 nuts(M) and 3 screws (J); attach two front aprons (E&F) to each other with 4 washers (P), 2 nuts(M) and 2 screws (J) by using allen wrench (N). **Fully tighten all screws now.**

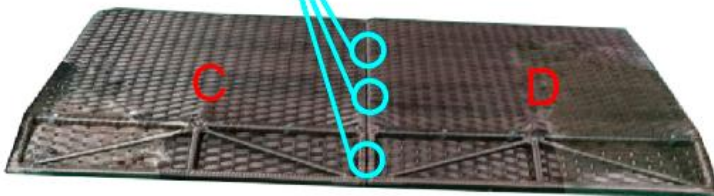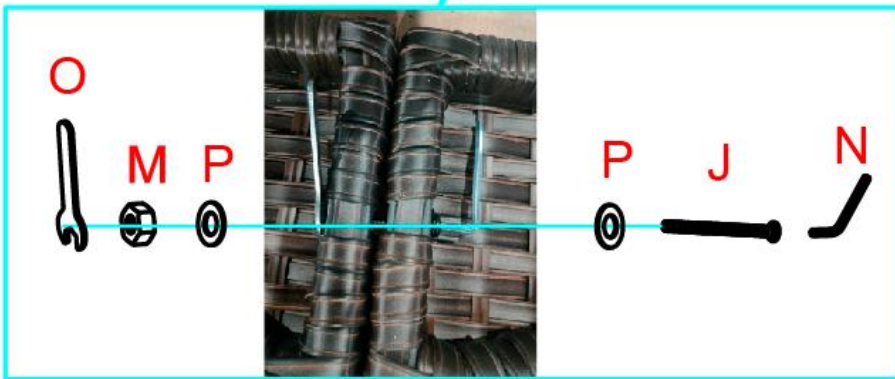



M		M6	5
J		M6*55	5
P		16* 6.5*1	10

2. Secure seat panel (G&H) to sofa backs (C&D) with 6 washers (P) and 6 screws (K) by using allen wrench (N). Do not tighten all screws now.

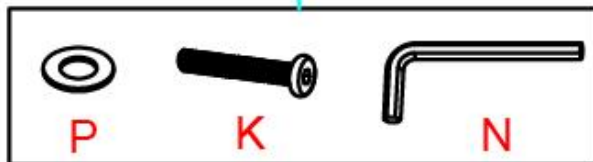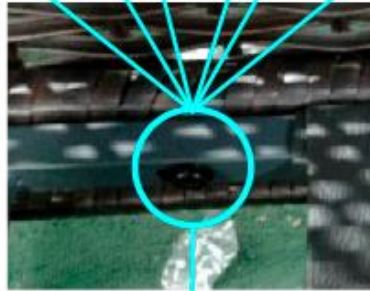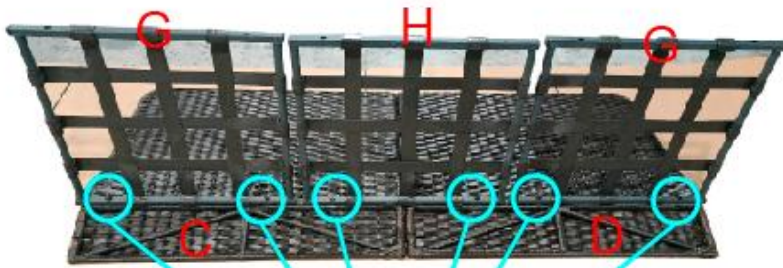




K		M6*35	6
P		16* 6.5*1	6

3. Attach assembled sofa back(C&D) to seat panel (G&H) with 6 washers (P) and 6 screws (K) by using allen wrench (N). Do not tighten all screws now.

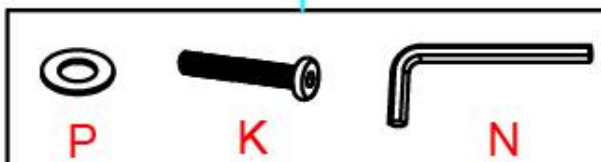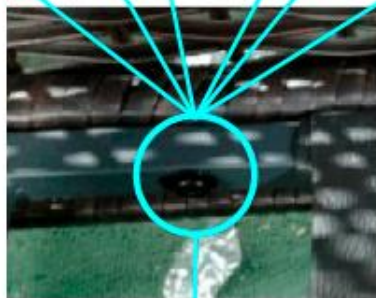




K		M6*35	6
P		16* 6.5*1	6

4. Secure assembled sofa back (C&D) to sofa arms (A&B) with 8 washers (P) and 8 screws (K) by using allen wrench (N). Do not tighten all screws now.

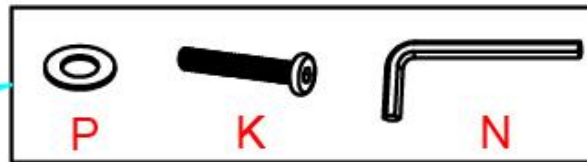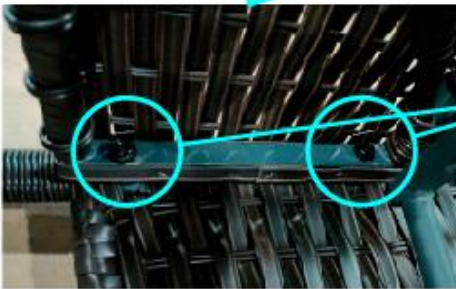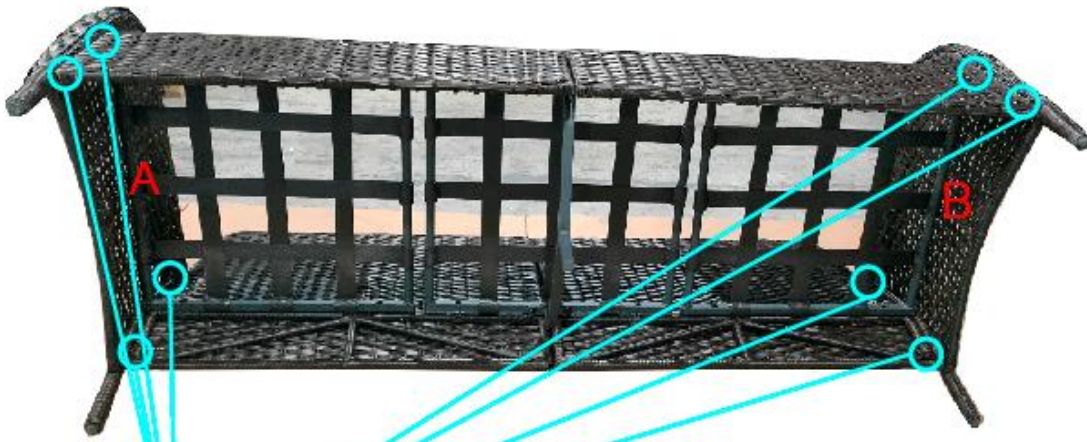

K		M6*35	8
P		16* 6.5*1	8

5. Secure support leg (I) to seat panel with 4 washers (P) and 4 screws (L) by using allen wrench (N). **Fully tighten all screws now.**

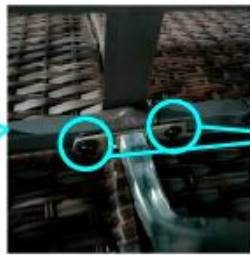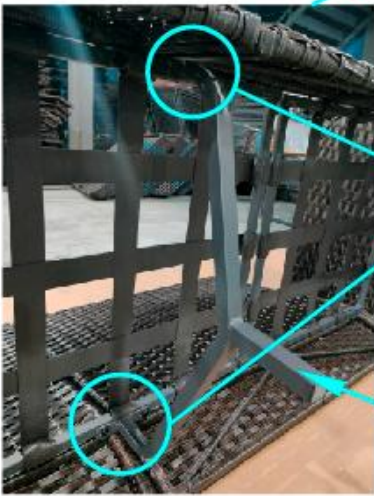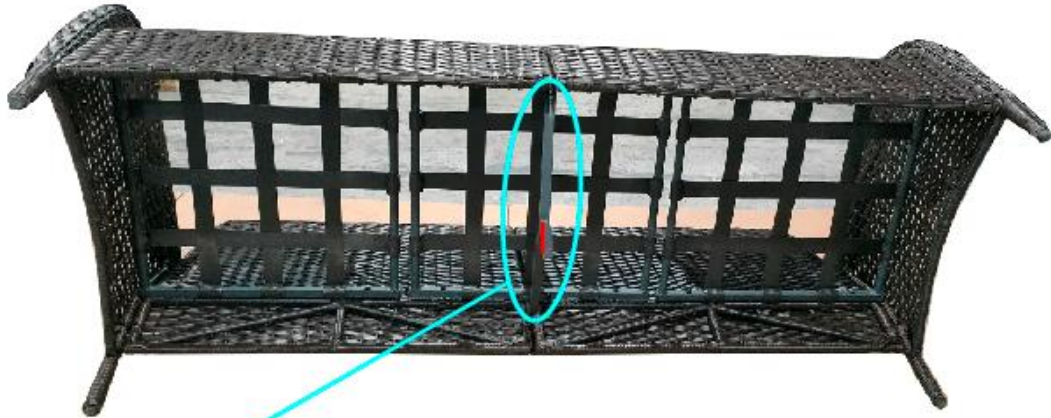

L		M6*18	4
P		16* 6.5*1	4

6. Put cushion (X&R) onto sofa and it is ready to use now.

