



ASSEMBLY INSTRUCTION

1

Open The Corrugated Box

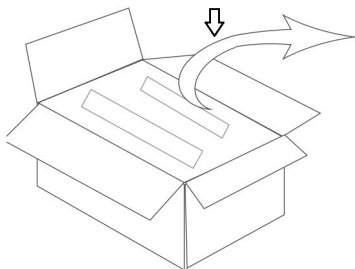


Remove The Wooden
Base & Unwrap it

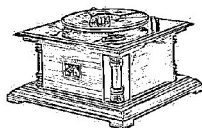

X1


(F)
Remove & unwrap the
Brass Horn

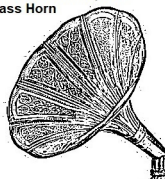


X1

2

Open the lid of the wooden base.

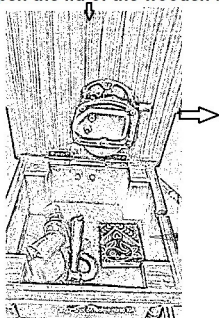

After unwrapping you will find these
Accessories

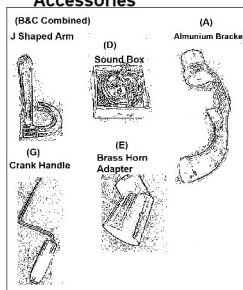

3

Attach (A) Alm. Bracket to wooden box with two screws and nuts. Tighten the nuts inside the box.

Put Brass Arm (B&C) on to (A) Alm. Bracket and adjust threaded screw to raise brass arm flush with top.

Put Sound box (D) onto Brass Arm (B&C) & Put the needle by unwinding the nut anti Clock wise and tighten the nut by rotating the nut clock wise.

Put Brass Horn Adapter (E) onto (A) Alm. Bracket

Put crank handle (G) into thread opening on the right side of the Machine Fix on the base of the lid of wooden box. Turn it Clock wise to fix the crank handle.



4

Put the Horn (F) Sleeve into (E)




1.
Slide silver lever on right side of turn table
all the way up to the locked position.

3.

Move sound box over record
& put needle about 1/4" from
edge.

4.

Slide silver lever on left side of turn table
to the unlocked position. Now you can
hear the Music.

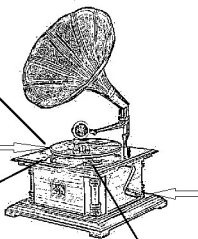

2.

Turn handle clock wise until you
feel a slight resistance.

You can adjust the speed by moving long
arm (Nickel Finished) right/left.