



WARRANTY

Register your product within 30 days of purchase to activate its one-year limited manufacturer's warranty at ovente.com/register

WARRANTY IS ONLY VALID IF YOU REGISTERED WITHIN 30 DAYS AFTER PURCHASE.

LIMITED ONE (1) YEAR WARRANTY

Your product has a one (1) year warranty period from the date of purchase from an authorized retailer. In the event that the product is defective, feel free to contact us to arrange for a replacement. This warranty only covers defects in workmanship and materials. The warranty does not include damage due to abuse or misuse, any commercial use or accidents.

LIMITATIONS

The warranty stated above is the only warranty applicable to this product. Other expressed or implied warranties are hereby disclaimed. No verbal or written information given by the Manufacturer, its agents or employees shall create a guarantee or in any way increase the scope and duration of this warranty. Repair or replacement as provided under this warranty is the exclusive remedy of the consumer. The manufacturer shall not be liable for incidental or consequential damages resulting from the use of this product. Any implied warranty of merchantability or fitness for a particular purpose on this product is limited to the applicable warranty period set forth above except to the extent prohibited by law. Consumer rights may vary from state to state.

Customer Support: ovente.com/support

Visit us at ovente.com



Facebook.com/ovente



[@OventeTweets](https://twitter.com/OventeTweets)



[@Ovente](https://www.instagram.com/Ovente)

OVENTE®


3-Speed Professional Ionic Salon Hair Dryer Stand HDS223 Series



Before using please read the instruction manual and keep it for future use.

VISOR INSTALLATION

- Unpacked the hair dryer head and visor from its packaging.
- Unscrew the bolt from the hinge (refer to figure 1)
- Align visor on top of the hinge (refer to figure 2)
- Insert the bolt into the hole of the visor and hinge and place the nut on the end of the bolt. While holding the head of the bolt stationary spin the nut clockwise while applying gentle pressure against the nut toward the bolt (refer to figure 3 and 4)
- Gently and securely tighten the bolt and nut with a screw driver (not included) to avoid breakage (refer to figure 5)

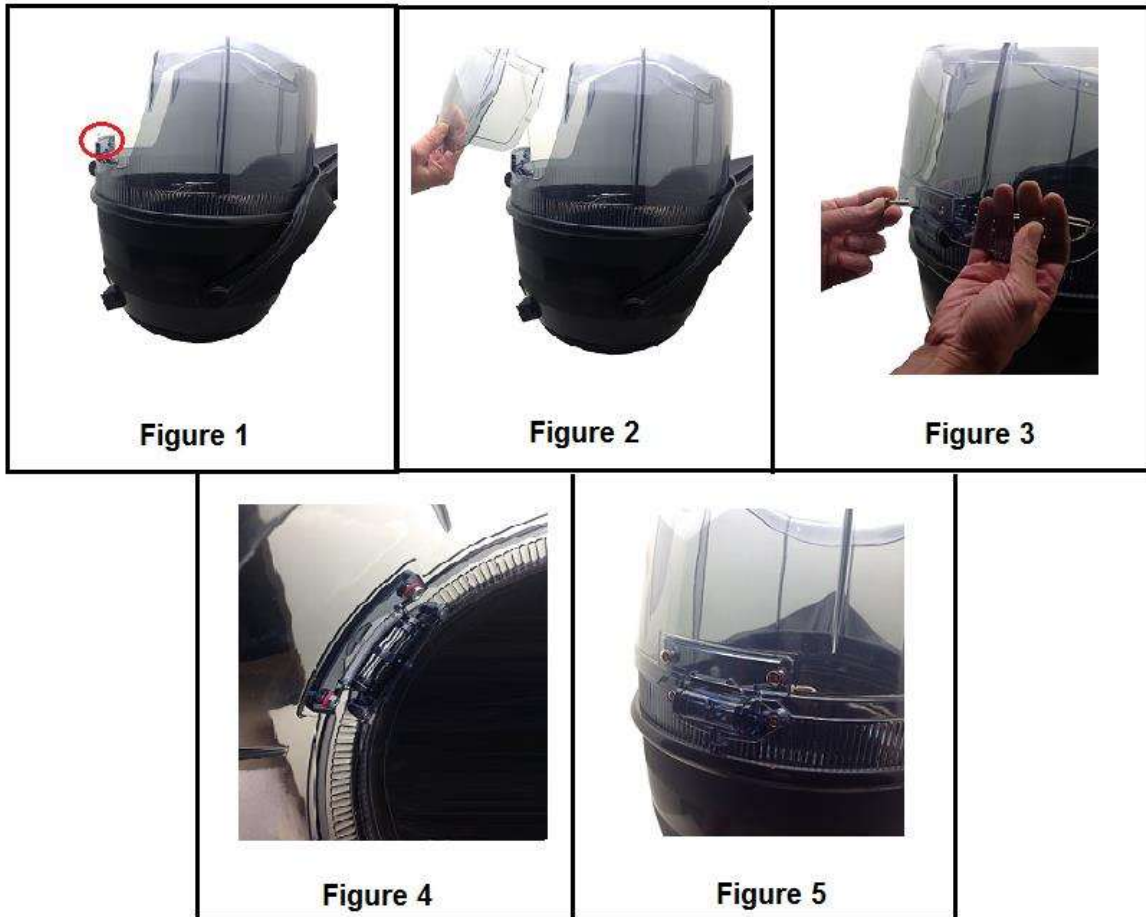

ELECTRICAL REQUIREMENTS


Voltage: 120V

Power: 1000W

Hertz: 60Hz

HAIR DRYER INSTALLATION

- Unpacked the hair dryer stand from its packaging.
- Connect the adjustable tube to the supporting column. Slide on the black plastic height adjusting knob and lock it in place.
- Connect the supporting column into the middle of five plastic feet, install the screw with spacer on the bottom of the plastic feet and tighten the screw.
- Install the screw with spacer above the support frame, then insert to adjustable tube.
- Install the machine.

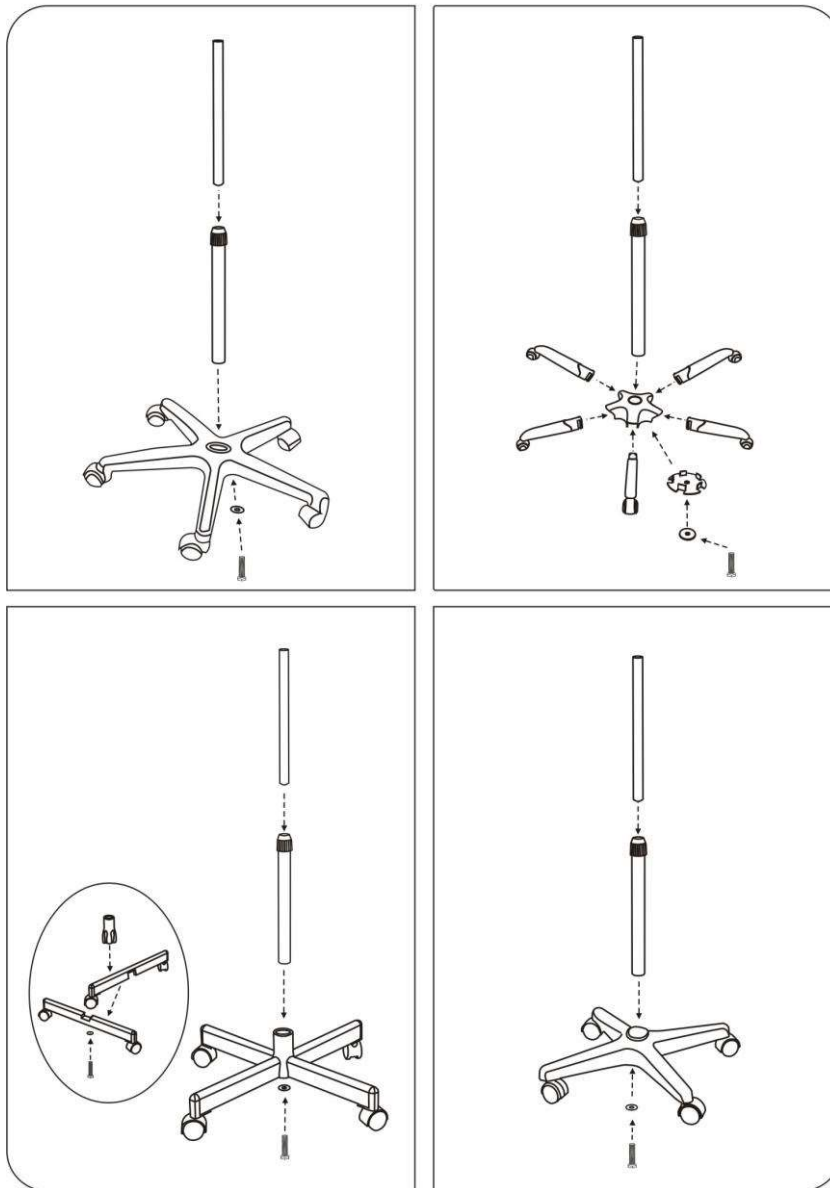



IMPORTANT SAFEGUARDS

When using your hair dryer stand, basic safety precautions should always be followed, including the following:

- Read all instructions carefully before use.
- Before using, check if any of the parts are loose, if so, tighten it accordingly it make sure that the structure is stable.
- Before plugging in the appliance, check that the socket and power matched those of the appliance. Attention shall be paid to whether the rated value of input supply voltage is according to that of rated input value or not.
- **DO NOT IMMERSE THE HAIR DRYER ONTO WATER OR ANY OTHER LIQUIDS.**
- Hair Dryer should never be left unattended when plugged or in use. Do not pull, twist or wrap power cord around the dryer.
- To disconnect, turn the control OFF, then remove plug from wall outlet.
- Do not use the appliance for other than its intended use.
- Always remove the plug from the socket when the hot plate is not in use. Allow it to cool before putting on or taking off parts. Do not touch or insert plug with wet hand to avoid electric shock.
- This appliance should not be used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they are supervised by the person who is responsible for their safety.
- Keep the hair dryer out of the reach of children. Do not leave children unsupervised with the hair dryer.

- Do not use attachments that are not recommended by the manufacturer. Any damage due to use of unsupported accessories will not be covered by warranty.
- Do not use extension cords or other accessories; otherwise, stated herewith.
- Never operate the appliance if it has a damaged cord/plug, has been dropped, or damaged or immersed onto any water surfaces.
- Keep the cord away from the heated surfaces.
- Do not use this dryer to dry a wig or items that are made of materials that may cause fire easily.
- Do not use outdoors or operate where aerosol (spray) products are being used or when oxygen was being administered.
- While using the appliance, keep hair away from the inlets to prevent irritation and burning.
- Unplug immediately after using.
- Do not place or store appliance where it can fall or be pulled into a tub or sink.
- If by any chance, the hair dryer stopped working, please contact your service provider for assistance.
- Turn the temperature knob to "COOL" position for at least one minute before turn off the "POWER" switch (red switch in the middle)

NOTE: This appliance is intended for professional use only.

HAIR DRYER PARTS

